



MODEL:

TANK-XM811 Series

Embedded System with 12th /13th/14th Generation Intel® Core™ Processor,
Two DDR4 Slot, Digital I/O, HDMI, DP, Two 2.5 GbE LAN, RS-232/422/485,
RoHS Compliant

User Manual

Revisions

Date	Version	Changes
April 2, 2026	1.02	Added BIOS Section
October 9, 2025	1.01	Modified Section: Title overview; 1.3 Features; 1.4 Technical Specifications
July 18, 2022	1.00	Initial release

Copyright

COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Manual Conventions



WARNING

Warnings appear where overlooked details may cause damage to the equipment or result in personal injury. Warnings should be taken seriously.



CAUTION

Cautionary messages should be heeded to help reduce the chance of losing data or damaging the product.



NOTE

These messages inform the reader of essential but non-critical information. These messages should be read carefully as any directions or instructions contained therein can help avoid making mistakes.



HOT SURFACE

This symbol indicates a hot surface that should not be touched without taking care.

Table of Contents

1 INTRODUCTION.....	1
1.1 OVERVIEW.....	2
1.2 MODEL VARIATIONS	3
1.3 FEATURES.....	3
1.4 TECHNICAL SPECIFICATIONS	4
1.5 FRONT PANEL.....	6
1.6 REAR PANEL.....	7
1.7 PHYSICAL DIMENSIONS	8
2 UNPACKING	9
2.1 ANTI-STATIC PRECAUTIONS	10
2.2 UNPACKING PRECAUTIONS.....	10
2.3 UNPACKING CHECKLIST	11
3 INSTALLATION	16
3.1 INSTALLATION PRECAUTIONS	17
3.2 BACK COVER REMOVAL.....	18
3.3 CPU INSTALLATION	18
3.4 MEMORY INSTALLATION.....	21
3.5 STORAGE INSTALLATION	21
3.5.1 M.2 SSD Installation.....	22
3.5.2 2.5-inch SSD Installation.....	22
3.6 BACK COVER INSTALLATION.....	23
3.7 WI-FI MODULE INSTALLATION (OPTIONAL).....	23
3.8 MOUNTING THE SYSTEM WITH MOUNTING BRACKETS	24
3.9 EXTERNAL PERIPHERAL INTERFACE CONNECTORS.....	25
3.9.1 AT/ATX Power Mode Selection.....	26
3.9.2 System Fan Connector	26
3.9.3 Digital Input / Output Connector.....	27
3.9.4 HDMI/DP Connector.....	27

3.9.5 LAN Connectors.....	28
3.9.6 Power Input, 4-pin Terminal Block.....	29
3.9.7 Power Input, 4-pin DIN Connector	29
3.9.8 DB-9 RS-232/422/485 Serial Port Connectors.....	30
3.9.9 Remote Power Connector	31
3.10 POWERING ON/OFF THE SYSTEM	31
3.11 POWER	32
3.12 AVAILABLE DRIVERS	33
3.12.1 Driver Download	33
3.13 MAINTENANCE.....	35
3.13.1 Flash Descriptor Security Override Jumper.....	35
4 SYSTEM MOTHERBOARD	37
4.1 OVERVIEW.....	38
4.1.1 Layout	38
4.2 INTERNAL PERIPHERAL CONNECTORS	40
4.2.1 EC Programmer Connector (EC_SPII).....	40
4.2.2 Clear CMOS Switch (J_CMOSI).....	41
4.2.3 BIOS Programming Connector (JSPII)	41
4.2.4 EC Debug Card Connector (DEBUG_SPII).....	41
4.2.5 System Fan Connector (SYS_FAN1)	41
4.2.6 Battery Connector (BAT1)	41
4.3 EXTERNAL INTERFACE PANEL CONNECTORS	42
4.3.1 Power Input Connector, DC Jack (PWR1)	43
4.3.2 Power Input Connector, Terminal Block (PWR2).....	43
4.3.3 External HDMI and DP++ Combo Connector (HDMI1_DP1).....	43
4.3.4 External USB 3.2 Gen 2 Connectors (USB_CN1/USB_CN2)	45
4.3.5 External LAN&USB Connectors (LAN1_USB1/LAN2_USB)	45
4.3.6 External Dual RS-232/422/485 Serial Port Connectors (CN3).....	46
4.3.7 External RS-232 Connectors (COM1 ~ COM4).....	47
4.3.8 Remote Power BTN Connector (JP1).....	47
4.3.9 AT/ATX Power Mode Setting (J_ATX_AT1)	47
5 BIOS.....	48
5.1 INTRODUCTION.....	49

TANK-XM811

5.1.1 Starting Setup.....	49
5.1.2 Using Setup	50
5.1.2.1 Keyboard Navigation	50
5.1.2.2 Touch Navigation	51
5.1.3 Getting Help.....	52
5.1.4 Unable to Reboot after Configuration Changes	52
5.1.5 BIOS Menu Bar.....	52
5.2 MAIN.....	53
5.3 ADVANCED.....	57
5.3.1 CPU Configuration	58
5.3.2 AMT Configuration	62
5.3.3 Intel(R) Time Coordinated Computing.....	63
5.3.3.1 Intel(R) TCC Authentication.....	66
5.3.4 Trusted Computing.....	67
5.3.5 RTC Wake Settings	68
5.3.6 F81966 Super IO Configuration	69
5.3.6.1 Serial Port 1 Configuration	70
5.3.6.2 Serial Port 2 Configuration	71
5.3.6.3 Serial Port 3 Configuration	72
5.3.6.4 Serial Port 4 Configuration	73
5.3.6.5 Serial Port 5 Configuration	74
5.3.6.6 Serial Port 6 Configuration	75
5.3.7 EC KB9068 H-W Monitor.....	76
5.3.7.1 Smart Fan Mode Configuration	78
5.3.8 Serial Port Console Redirection	80
5.3.8.1 Console Redirection Settings	82
5.3.9 NVMe Configuration.....	84
5.4 CHIPSET	85
5.4.1 System Agent (SA) Configuration	86
5.4.1.1 Memory Configuration	87
5.4.1.2 Graphics Configuration.....	88
5.4.1.3 VMD Configuration/RAID Mode Configuration	90
5.4.1.4 PCI Express Configuration	91
5.4.1.4.1 PCI Express Root Port	91
5.4.2 PCH-IO Configuration	93

5.4.2.1 PCI Express Configuration	95
5.4.2.1.1 PCIe Slot Configuration	95
5.4.2.2 SATA Configuration.....	97
5.4.2.3 HD Audio Configuration.....	98
5.5 SECURITY.....	99
5.6 BOOT.....	100
5.6.1 <i>Boot Configuration</i>	100
5.6.2 <i>Boot Option Priorities</i>	101
5.7 SAVE & EXIT	102
5.8 MEBX.....	103
A REGULATORY COMPLIANCE	104
B SAFETY PRECAUTIONS	109
B.1 SAFETY PRECAUTIONS.....	110
B.1.1 <i>General Safety Precautions</i>	110
B.1.2 <i>Anti-static Precautions</i>	111
B.1.3 <i>Product Disposal</i>	112
B.2 MAINTENANCE AND CLEANING PRECAUTIONS	112
B.2.1 <i>Maintenance and Cleaning</i>	113
B.2.2 <i>Cleaning Tools</i>	113
C BIOS OPTIONS	114
D ERROR BEEP CODE	118
D.1 PEI BEEP CODES	119
D.2 DXE BEEP CODES	119
E HAZARDOUS MATERIALS DISCLOSURE	120
E.1 RoHS II DIRECTIVE (2015/863/EU).....	121
E.2 CHINA RoHS	122

List of Figures

Figure 1-1: TANK-XM811 Series.....	2
Figure 1-2: Front Panel	6
Figure 1-3: Rear Panel.....	7
Figure 1-4: Physical Dimensions	8
Figure 3-1: Remove the Cover.....	18
Figure 3-2: Motherboard Removal	18
Figure 3-3: CPU Installation.....	19
Figure 3-4: CPU Thermal Pad Installation	19
Figure 3-5: Motherboard Installation	20
Figure 3-6: Memory Installation	21
Figure 3-7: M.2 Installation.....	22
Figure 3-8: HDD Installation	22
Figure 3-9: Back Cover Installation	23
Figure 3-10: Wi-Fi Module and Wi-Fi Antenna Installation	23
Figure 3-11: Wi-Fi Module and Wi-Fi Antenna Installation	24
Figure 3-12: Mounting Bracket Retention Screws	25
Figure 3-13: AT/ATX Power Mode Switch	26
Figure 3-14: SYS_FAN Connector.....	26
Figure 3-15: DIO Connector.....	27
Figure 3-16: HDMI/DP Connection	27
Figure 3-17: LAN Connection	28
Figure 3-18: RJ-45 Ethernet Connector.....	28
Figure 3-19: 4-pin Terminal Block.....	29
Figure 3-20: Power Input Connector.....	29
Figure 3-21: DB-9 RS-232/422/485 Serial Port Connector.....	30
Figure 3-22: Serial Device Connection	30
Figure 3-23: Remote Power Connector	31
Figure 3-24: Power Button.....	31
Figure 3-25: Power Connectors	32
Figure 3-26: IEI Resource Download Center.....	33

Figure 3-27 Flash Descriptor Security Override Jumper Location.....35

Figure 4-1: System Motherboard (Front).....38

Figure 4-2: System Motherboard (Rear).....39

Figure 4-3: HDMI Connector44

Figure 4-4: DP++ Connector44

Figure 4-5: USB 3.2 Gen 2 Connectors.....45

Figure 4-6: RS-232/422/485 Serial Port Connectors.....47

List of Tables

Table 1-1: TANK-XM811 Series Model Variations	3
Table 1-2: Technical Specifications.....	5
Table 3-1: Digital I/O Connector Pinouts.....	27
Table 3-2: RJ-45 Ethernet Connector LEDs	29
Table 3-3: RS-232 (COM1~COM4) & RS-232/422/485 (COM5~COM6) Connector Pinouts	30
Table 3-4: Power LED Indicators Description.....	32
Table 3-5: Flash Descriptor Security Override Jumper Settings	35
Table 4-1: Peripheral Interface Connectors	40
Table 4-2: EC Programmer Connector Pinouts	40
Table 4-3: Clear CMOS Switch (J_CMOS1).....	41
Table 4-4: BIOS Programming Connector Pinouts (JSPI1).....	41
Table 4-5: EC Debug Card Connector (DEBUG_SPI1).....	41
Table 4-6: System Fan Connector (SYS_FAN1)	41
Table 4-7: Battery Connector (BAT1).....	41
Table 4-8: Rear Panel Connectors	42
Table 4-9: Power Input Connector, DC Jack Pinouts.....	43
Table 4-10: Power Input Connector, Terminal Block Pinouts.....	43
Table 4-11: HDMI Connector Pinouts	43
Table 4-12: DP++ Connector Pinouts	44
Table 4-13: USB 3.2 Gen 2 Connectors Pinouts.....	45
Table 4-14: 2.5 GbE RJ45 Connector.....	45
Table 4-15: USB 3.2 Gen 2 Connectors Pinouts.....	46
Table 4-16: RS-232/422/485 Serial Port Connector Pinouts	46
Table 4-17: RS-232 Connector Pinouts	47
Table 4-18: Remote Power BTN Connector Pinouts	47
Table 4-19: AT/ATX Power Mode Switch Pinouts.....	47
Table 5-1: BIOS Navigation Keys	50
Table 5-2: BIOS On-screen Navigation Keys	51
Table 5-3: BIOS Options and Configured USB Ports.....	94

Chapter

1

Introduction

1.1 Overview



Figure 1-1: TANK-XM811 Series

The TANK-XM811 Series is an embedded system for wide range temperature environments. It is powered by 12th/13th/14th generation Intel® Core™ processor with Intel® Q470 chipset, and has two 260-pin DDR4 SO-DIMM slots supporting up to 64GB memory (8GB preinstalled). The TANK-XM811 Series include one digital I/O port, one HDMI, one DP, two GbE LAN, eight USB 3.2 Gen 2, two RS-232/422/485 and four RS-232 connectors.

TANK-XM811

1.2 Model Variations

The model variations of the TANK-XM811 Series are listed below.

Model No.	CPU
TANK-XM811-i5AC-R10	Intel® Core™ i5-12500TE 1.9GHz (Up to 4.3GHz, 6-core, TDP 35W)
TANK-XM811-i7AC-R10	Intel® Core™ i7-12700TE 1.4GHz (Up to 4.6GHz, 12-core, TDP 35W)
TANK-XM811-i9AD-R11	Intel® Core™ i9-12900TE 1.1GHz (Up to 4.8GHz, 16-core, TDP35W)

Table 1-1: TANK-XM811 Series Model Variations

1.3 Features

The TANK-XM811 Series features are listed below:

- 12th/13th/14th Gen. Intel® Core™ processor platform with Intel® R680E chipset and DDR4 memory
- 2 x 2.5G Ethernet ports
- Multiple USB ports and serial ports
- Multiple internal expansion boards for flexible selection
- Various optional backplanes and chassis
- CE/FCC compliant

1.4 Technical Specifications

The TANK-XM811 Series technical specifications are listed in [错误!未找到引用源。](#)

Specifications	
Chassis	
Color	Black C
Dimensions (WxDxH) (mm)	230.6 x 256.04 x 76.2
System Fan	Fanless
Chassis Construction	Extruded aluminum alloy
Motherboard	
CPU	12 th /13 th /14 th Gen. Intel® Core™ CPU: Intel® Core™ i9-12900TE 1.1GHz (up to 4.8GHz, 16-core, TDP 35W) Intel® Core™ i7-12700TE 1.4GHz (up to 4.6GHz, 12-core, TDP 35W) Intel® Core™ i5-12500TE 1.9GHz (up to 4.3GHz, 6-core, TDP 35W)
Chipset	Intel® R680E
System Memory	2 x SO-DIMM DDR4 3200MHz (up to 64GB)
Storage	
Hard Drive	1 x 2.5" HDD/SSD SATA 6Gb/s bay
I/O Interfaces	
USB 3.2 Gen 2 (10Gb/s)	8
RS-232/422/485	2 x RS-232/422/485 4 x RS-232
Ethernet	1 x 2.5 GbE by Intel® I226LM controller 1 x 2.5 GbE by Intel® I226-V controller
Digital I/O	12-bit (6-in/6-out) DB15
Display	HDMI/DP++
Expansions	
M.2	1 x 2280 M key (PCIe x4) 1 x 2230 A-key (USB+PCIe x1, supports vPRO)

TANK-XM811

Specifications	
Chassis	
Backplane	Optional
Power	
Power Input	DC jack: 12 V~28 V DC Terminal block: 12 V~28 V DC
Power Consumption	12V @ 8.8A (Intel® Core™ i9-12900TE with 16GB memory)
Remote Power	1 x 2-pin
Reliability	
Mounting	Wall mount
Operating Temperature	-20°C ~ 60°C with air flow (CPU TDP 35W & SSD) -20°C ~ 50°C with air flow (CPU TDP 65W & SSD), 10% ~ 95% non-condensing
Storage Temperature	-40°C ~ 85°C, 10% ~ 95%, non-condensing
Operating Shock	Half-sine wave shock 5G, 11ms, 100 shocks per axis (SSD)
Operating Vibration	MIL-STD-810G 514.6C-1 (with SSD)
Weight (Net/Gross)	3.33 kg / 3.7 kg
Safety/EMC	CE/FCC/UKCA
Watchdog Timer	Programmable 1~255 sec/min
OS	
Supported OS	Microsoft Windows 10 IoT Enterprise / Windows 11 Linux

Table 1-2: Technical Specifications

1.5 Front Panel

The front panel of the TANK-XM811 Series has the following features (See Figure 1-2):

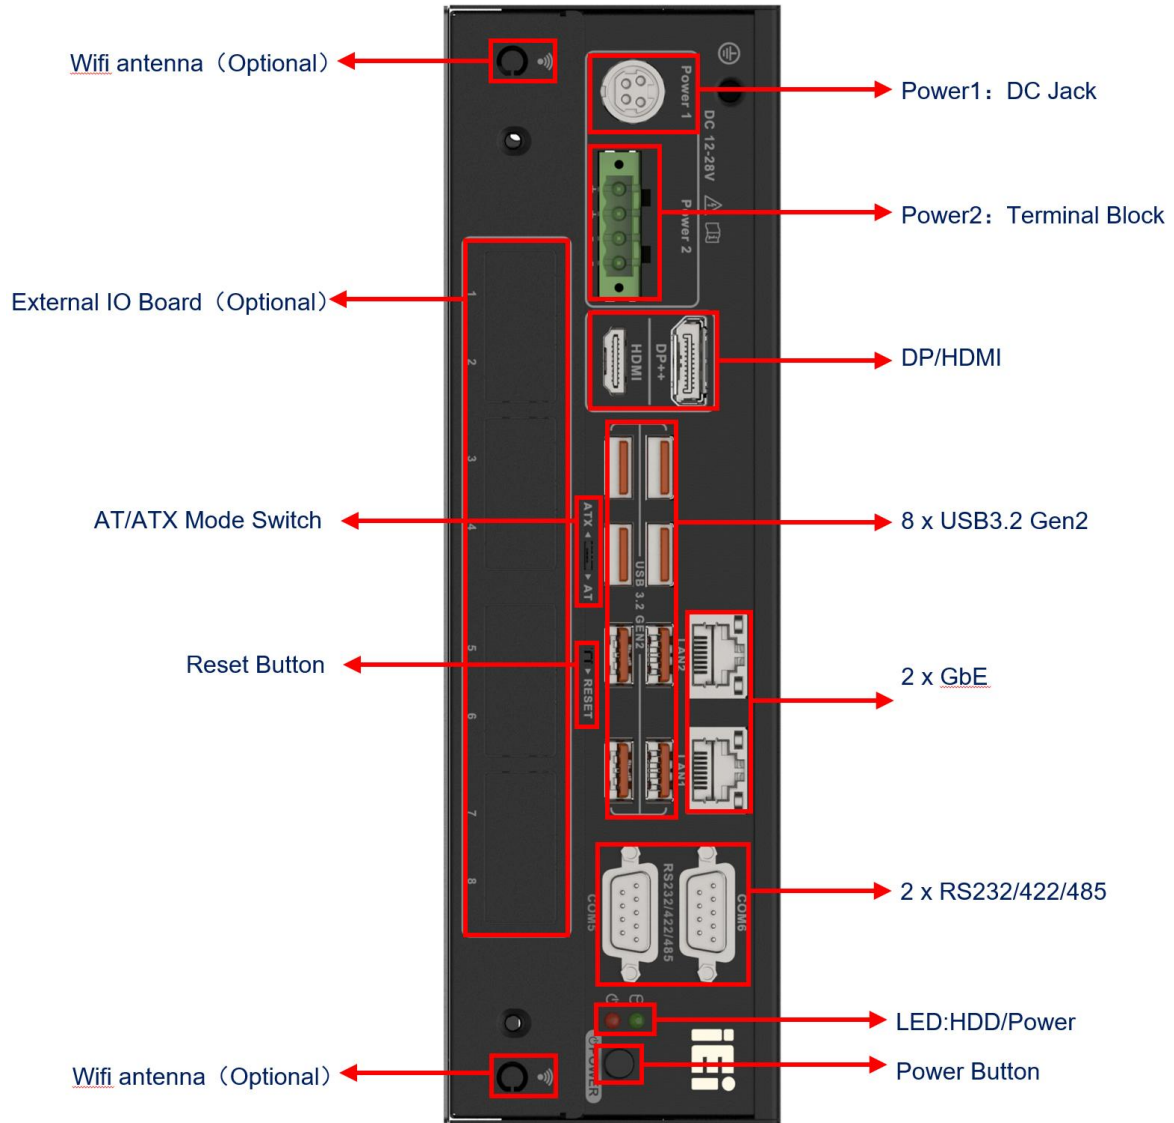


Figure 1-2: Front Panel

TANK-XM811

1.6 Rear Panel

The rear panel of the TANK-XM811 Series is shown below (See Figure 1-3).

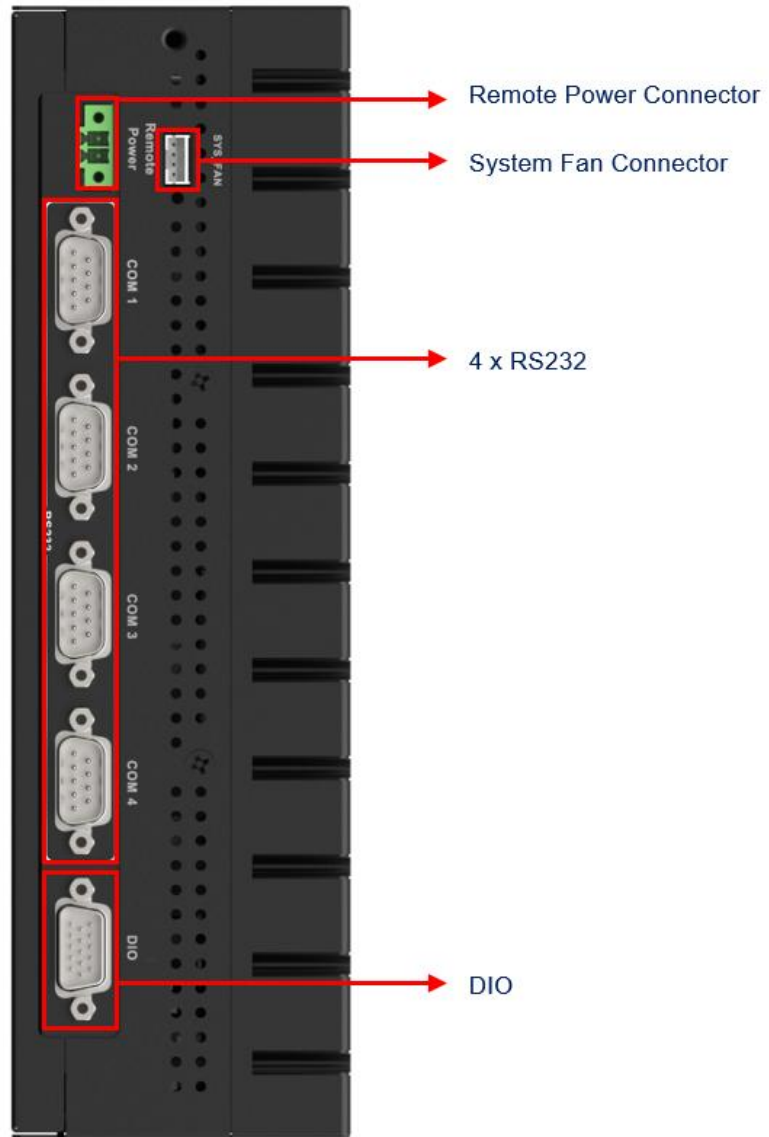


Figure 1-3: Rear Panel

1.7 Physical Dimensions

The physical dimensions of the TANK-XM811 are shown in **Figure 1-4**.

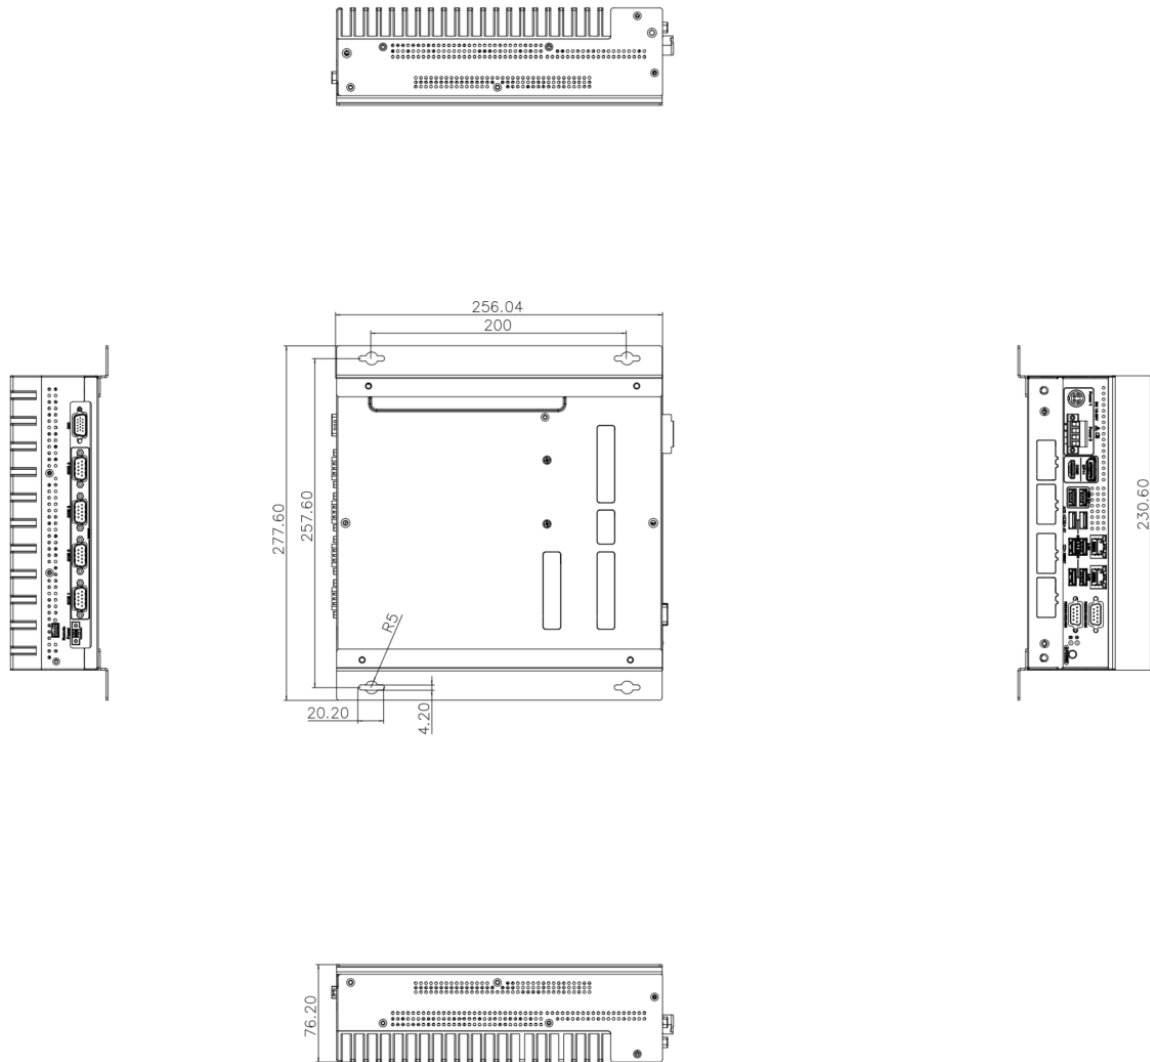


Figure 1-4: Physical Dimensions

Chapter

2

Unpacking

2.1 Anti-static Precautions



WARNING:

Failure to take ESD precautions during installation may result in permanent damage to the TANK-XM811 Series and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the TANK-XM811 Series. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the TANK-XM811 Series or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- **Self-grounding:** Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- **Use an anti-static pad:** When configuring the TANK-XM811 Series, place it on an anti-static pad. This reduces the possibility of ESD damaging the TANK-XM811 Series.

2.2 Unpacking Precautions

When the TANK-XM811 Series is unpacked, please do the following:

- Follow the anti-static precautions outlined in **Section 2.1**.
- Make sure the packing box is facing upwards so the TANK-XM811 Series does not fall out of the box.
- Make sure all the components shown in **Section 2.2** are present.

TANK-XM811



2.3 Unpacking Checklist



NOTE:


If some of the components listed in the checklist below are missing, please do not proceed with the installation. Contact the IEI reseller or vendor you purchased the TANK-XM811 Series from or contact an IEI sales representative directly. To contact an IEI sales representative, please send an email to sales@ieiworld.com.

The TANK-XM811 Series is shipped with the following components:







Quantity	Item and Part Number	Image
Standard		
1	TANK-XM811 Series	
2	Mounting brackets	

Quantity	Item and Part Number	Image
Standard		
1	2-pin terminal block	
1	4-pin terminal block	
1	Chassis screws	

The following table lists the optional items that can be purchased separately.






Optional	
Wi-Fi module (P/N: EMB-WIFI-KIT0213-R10)	

TANK-XM811

Optional	
Power adapter (P/N: 63040-010180-200-RS)	
Power cord (P/N: 32000-000002-RS)	
8-Port POE LAN card (P/N: GPOE-XM81-8P-R10)	
M.2 & PCIe mini expansion card (P/N: TXIOB-XM81-A-R10)	
2-slot backplane (PCIe x16 & PCIe x4) (P/N: TXCBP-XM81-2A-R10)	
2-slot backplane (two PCIe x8) (P/N: TXCBP-XM81-2B-R10)	

Optional	
<p>4-slot backplane (PCIe x16 & two PCIe x4 & PCIe x1) (P/N: TXCBP-XM81-4A-R10)</p>	
<p>4-slot backplane (two PCIe x8 & two PCIe x4) (P/N: TXCBP-XM81-4B-R10)</p>	
<p>4-slot backplane (PCIe x16 & PCIe x4 & two PCI) (P/N: TXCBP-XM81-4C-R10)</p>	
<p>4-slot backplane (PCIe x16 & two PCIe x4 & PCIe x1) (P/N: TXCBP-XM81-G1-PW-R10)</p>	
<p>4-slot backplane (two PCIe x8 & two PCIe x4) (P/N: TXCBP-XM81-G2-PW-R10)</p>	
<p>Expansion power board (P/N: IDD-X1228150-R10)</p>	

TANK-XM811

Optional	
3-slot chassis (P/N: TXC-XM81-3S-R10)	
4-slot chassis (P/N: TXC-XM81-4S-R10)	
4-slot chassis (full-length graphics card support) (P/N: TXC-XM81-G1-R10)	
6-slot chassis (two full-length graphics card support) (P/N: TXC-XM81-G2-R10)	
Expansion fan module (P/N: SF-TANK-XM81-R10)	

NOTE:

1. *TXCBP-XM81 series backplane needs to be used with TXC-XM81 series chassis*

Chapter

3

Installation

3.1 Installation Precautions

**CAUTION:**

The TANK-XM811 Series has more than one power supply connection point.

To reduce the risk of electric shock, disconnect all power sources before installing or servicing the TANK-XM811 Series.

During installation, be aware of the precautions below:

- **Read the user manual:** The user manual provides a complete description of the TANK-XM811 Series, installation instructions and configuration options.
- **DANGER! Disconnect Power:** Power to the TANK-XM811 Series must be disconnected during the installation process, or before any attempt is made to access the rear panel. Electric shock and personal injury might occur if the rear panel of the TANK-XM811 Series is opened while the power cord is still connected to an electrical outlet.
- **Qualified Personnel:** The TANK-XM811 Series must be installed and operated only by trained and qualified personnel. Maintenance, upgrades, or repairs may only be carried out by qualified personnel who are familiar with the associated dangers.
- **Air Circulation:** Make sure there is sufficient air circulation when installing the TANK-XM811 Series. The TANK-XM811 Series's cooling vents must not be obstructed by any objects. Leave at least 5 cm of clearance around the TANK-XM811 Series to prevent overheating.
- **Grounding:** The TANK-XM811 Series should be properly grounded. The voltage feeds must not be overloaded. Adjust the cabling and provide external overcharge protection per the electrical values indicated on the label attached to the back of the TANK-XM811 Series.

3.2 Back Cover Removal

Before installing or maintaining the internal components, the back cover must be removed from the TANK-XM811. Follow the steps below to complete the task.

Step 1: Turn the TANK-XM811 over and remove the 6 screws on the back cover.

Step 2: Take off the back cover (See Figure 3-1).

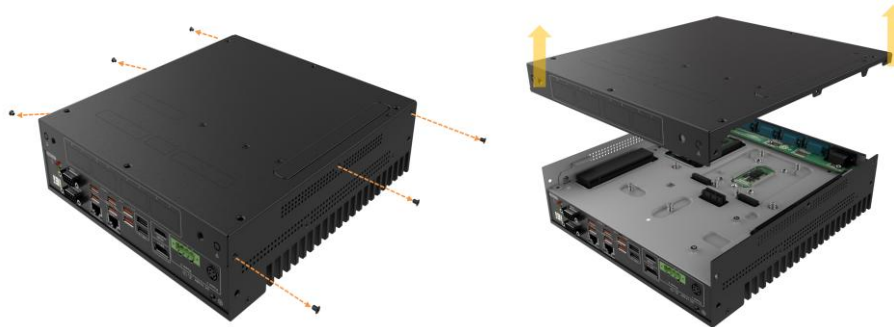


Figure 3-1: Remove the Cover

3.3 CPU Installation

To replace the CPU, you need to remove the motherboard first. Follow the steps below to complete the task.

Step 1: Remove the 11 spring screws on the motherboard, and then take out the motherboard (including the motherboard holder) (See Figure 3-2).

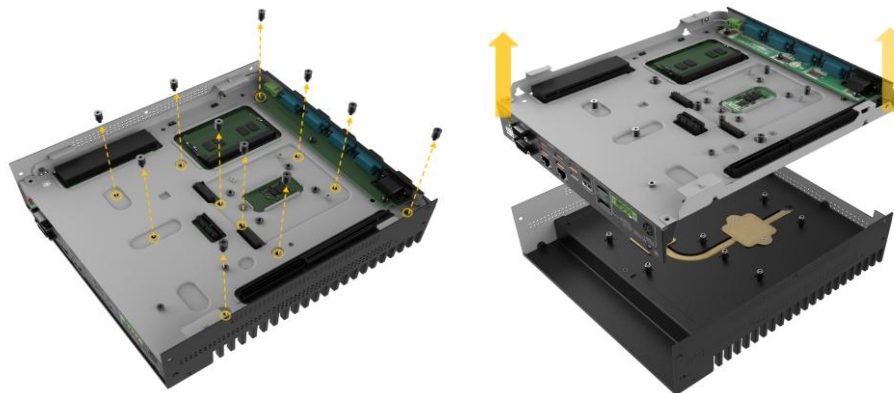


Figure 3-2: Motherboard Removal

TANK-XM811

Step 2: Pull the lever of the CPU buckle, remove the CPU protection cover, install the CPU at the notch, and fasten the lever down in the buckle (**Figure 3-3**).

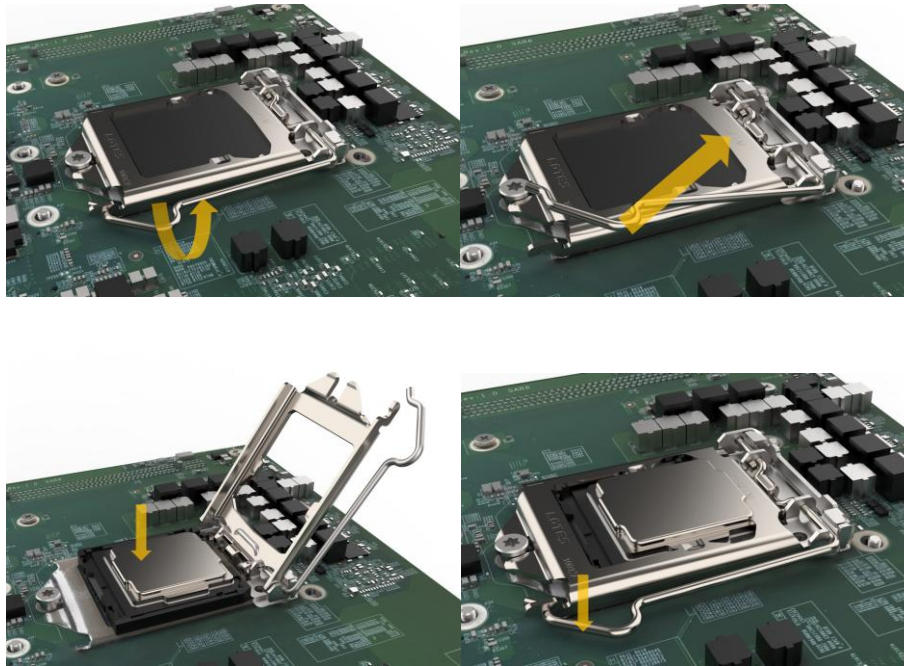


Figure 3-3: CPU Installation

Step 3: Place a thermal pad on the heat conductive block of CPU (**Figure 3-4**).

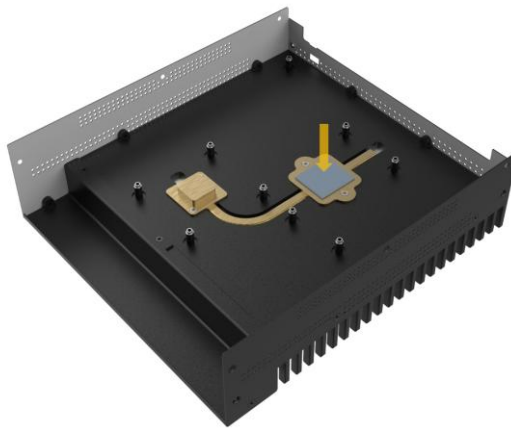


Figure 3-4: CPU Thermal Pad Installation

Step 4: Align the motherboard (together with the motherboard holder) with the 4 positioning rods on the 2 sides, place it on the heat sink, and lock the motherboard with 11 spring screws. **(See Figure 3-5)**



Figure 3-5: Motherboard Installation

TANK-XM811

3.4 Memory Installation

The TANK-XM811 is pre-installed with an 8GB or 16GB memory module. Users can add or replace memory with different capacity by themselves, the installation procedures are described below.

Step 1: Open the two handles of the memory slot.

Step 2: Remove the old memory module and insert a new memory module. Carefully align the memory module so the notch on the memory lines up with the notch on the memory socket.

Step 3: Once aligned, press down until the memory module is properly seated and the two handles fully clip into place **(See Figure 3-6)**

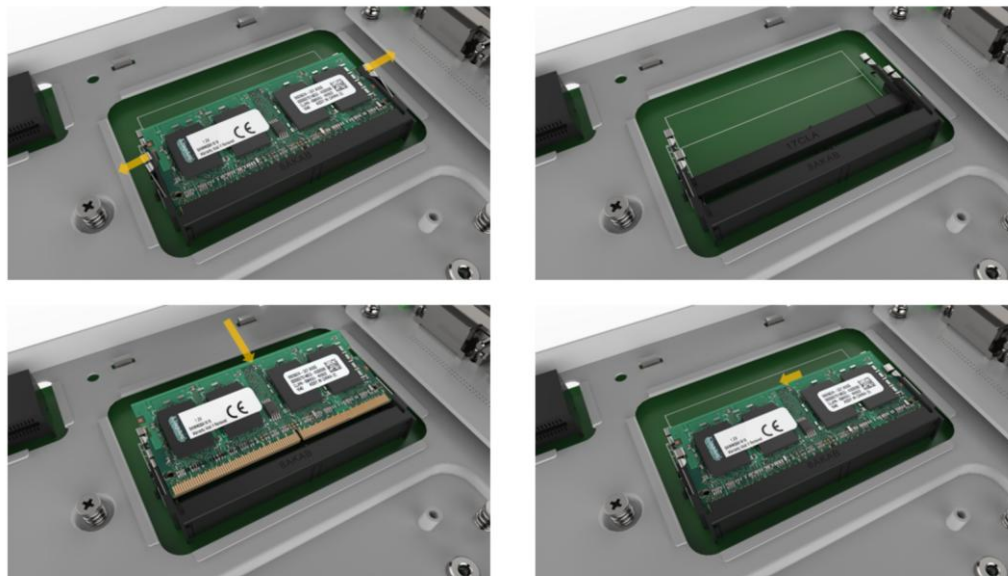


Figure 3-6: Memory Installation

3.5 Storage Installation

The TANK-XM811 supports two types of storage, one M.2 M Key & one 2.5" SSD

3.5.1 M.2 SSD Installation

Remove the M.2 2280 reserved screws, install the M.2 2280 NVME card, and secure the card with the retention screw removed previously (**Figure 3-7**)

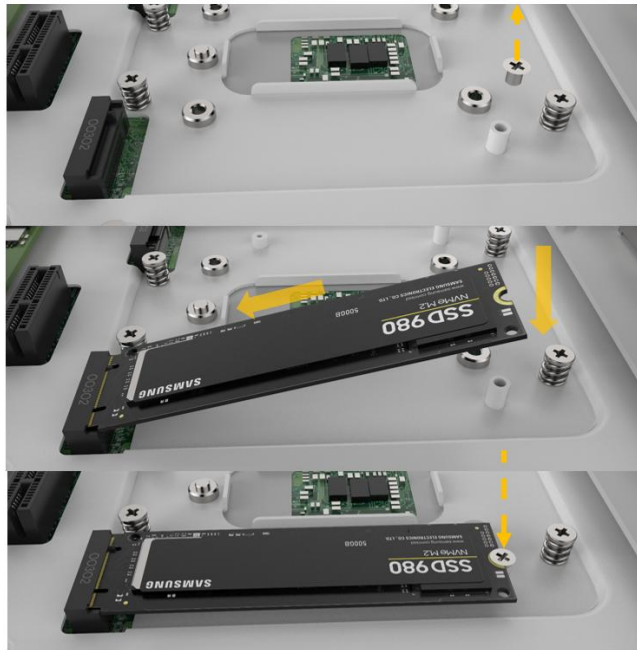


Figure 3-7: M.2 Installation

3.5.2 2.5-inch SSD Installation

Place the hard drive into the hard drive bracket and secure the HDD bracket with the hard drive using four screws (**See Figure 3-8**)

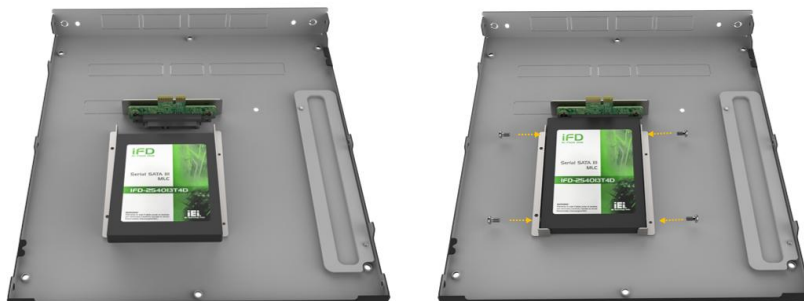


Figure 3-8: HDD Installation

3.6 Back Cover Installation

Install the back cover, and fasten the 6 screws on the side (See Figure 3-9)



Figure 3-9: Back Cover Installation

3.7 Wi-Fi Module Installation (Optional)

The Wi-Fi module is an optional accessory. You can purchase it from IEI or other providers. Note that you have to purchase Wi-Fi module, internal antenna and external antenna. It is suggested to purchase an internal antenna longer than 200mm. To install the Wi-Fi module, follow the steps below.

Step 1: Remove the M.2 A key retention screw.

Step 2: Insert the Wi-Fi module (IEI P/N: **EMB-WIFI-KIT02I3-R10**, including one Intel AX210 wireless Bluetooth function module, two 300mm internal antennas and two 108mm external antennas) and secure the screw.

Step 3: Secure one end of the internal antenna to the Wi-Fi module.

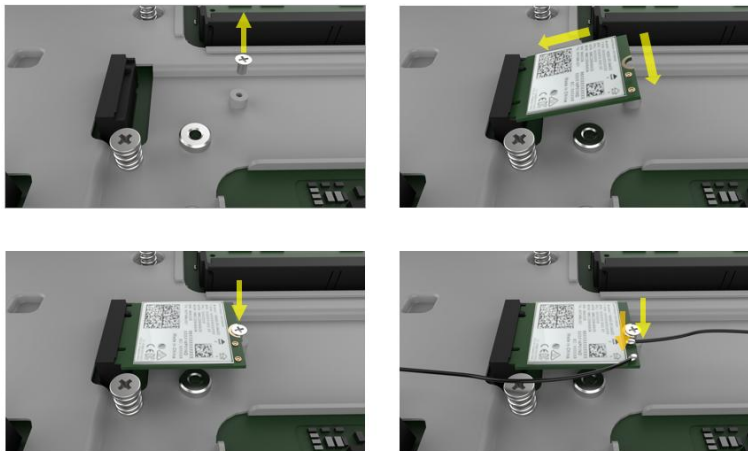


Figure 3-10: Wi-Fi Module and Wi-Fi Antenna Installation

Step 4: Knock out the reserved antenna holes on the chassis, and secure the other end of the internal antenna on the chassis.

Step 5: Install the external antennas (**See Figure 3-11**)

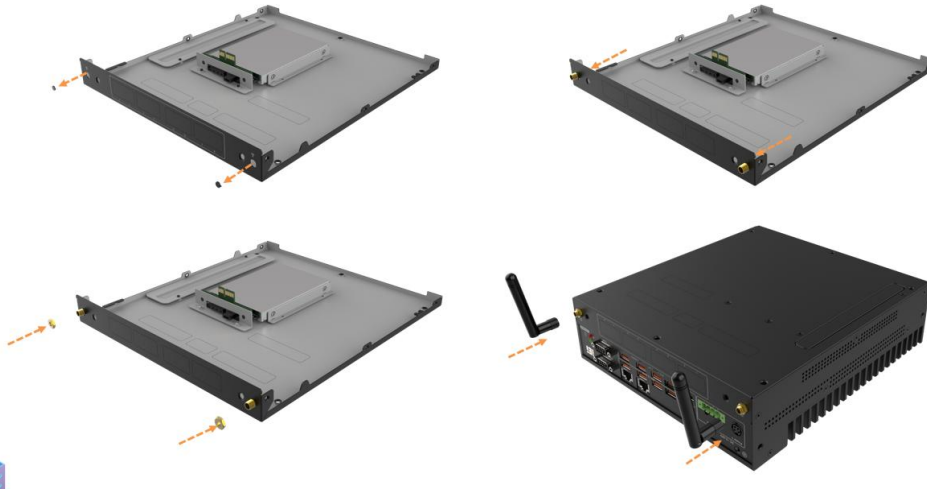


Figure 3-11: Wi-Fi Module and Wi-Fi Antenna Installation

3.8 Mounting the System with Mounting Brackets

To mount the embedded system onto a wall or some other surface using the two mounting brackets, please follow the steps below.

Step 1: Turn the embedded system over.

Step 2: Align the retention screw holes in each bracket with the corresponding retention screw holes on the bottom surface

Step 3: Secure the brackets to the system by inserting retention screws into each bracket (**See Figure 3-12**).

Step 4: Drill holes in the intended installation surface.

Step 5: Align the mounting holes in the sides of the mounting brackets with the predrilled holes in the mounting surface.

TANK-XM811



Figure 3-12: Mounting Bracket Retention Screws

Step 6: Insert four retention screws, three in each bracket, to secure the system to the wall.

3.9 External Peripheral Interface Connectors

The TANK-XM811 Series has the following connectors. Detailed descriptions of the connectors can be found in the subsections below.

- AT/ATX power mode switch
- Digital I/O
- Ethernet
- Power button
- Power DC jack
- Power terminal block
- HDMI
- DP++
- RS-232/422/485
- USB

3.9.1 AT/ATX Power Mode Selection

The TANK-XM811 Series supports AT and ATX power modes. The setting can be made through the AT/ATX power mode switch on the external peripheral interface panel as shown below (See Figure 3-13).

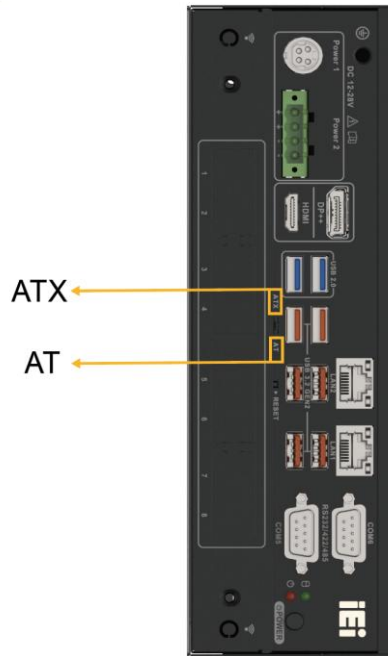


Figure 3-13: AT/ATX Power Mode Switch

3.9.2 System Fan Connector

The system fan connector can be connected to an external expansion fan (Figure 3-14).

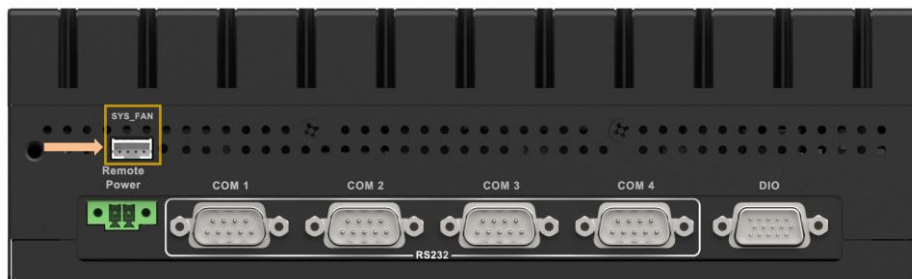


Figure 3-14: SYS_FAN Connector

3.9.3 Digital Input / Output Connector

The digital I/O connector provides programmable input and output for external devices. The pinouts for the digital I/O connector are listed in the table below (See Table 3-1 & Figure 3-15).

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	DIN0
3	DIN1	4	DIN2
5	DIN3	6	DIN4
7	DIN5	8	GND
9	DOUT0	10	DOUT1
11	DOUT2	12	DOUT3
13	DOUT4	14	DOUT5
15	+5VS		

Table 3-1: Digital I/O Connector Pinouts

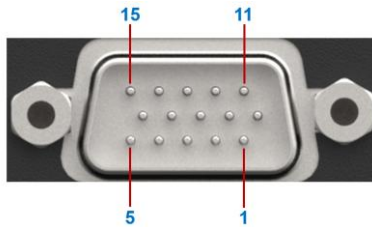


Figure 3-15: DIO Connector

3.9.4 HDMI/DP Connector

To connect the HDMI/DP devices, please plug in HDMI/DP connector in the right direction as shown below:



Figure 3-16: HDMI/DP Connection

3.9.5 LAN Connectors

The LAN connectors allow connection to an external network.

Step 1: **Locate the RJ-45 connectors.** The locations of the RJ-45 connectors are shown in **Figure 3-18**.

Step 2: **Align the connectors.** Align the RJ-45 connector on the LAN cable with one of the RJ-45 connectors on the TANK-XM811 Series. **(See Figure 3-17)**.

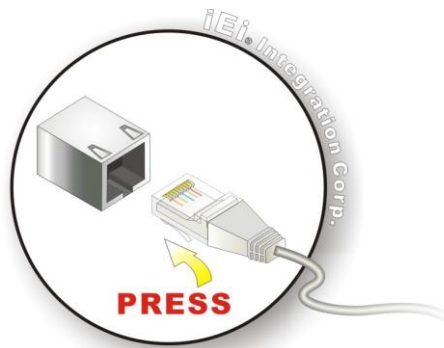


Figure 3-17: LAN Connection

Step 3: **Insert the LAN cable RJ-45 connector.** Once aligned, gently insert the LAN cable RJ-45 connector into the on-board RJ-45 connector.



Figure 3-18: RJ-45 Ethernet Connector

The RJ-45 Ethernet connector has two status LEDs, one green and one yellow. The green LED indicates activity on the port and the yellow LED indicates the port is linked. See Table 3-2

TANK-XM811

Activity/Link LED		Speed LED	
STATUS	DESCRIPTION	STATUS	DESCRIPTION
Off	No link	Off	100 Mbps connection
SSYellow	Linked	Orange	1 Gbp connection
Blinking	TX/RX activity	Green	2.5 Gbps connection

Table 3-2: RJ-45 Ethernet Connector LEDs

3.9.6 Power Input, 4-pin Terminal Block

The power connector connects the leads of a 12 V~28 V DC power supply into the terminal block. Make sure that the power and ground wires are attached to the correct sockets of the connector (See Figure 3-19).

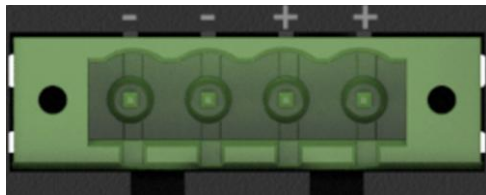


Figure 3-19: 4-pin Terminal Block

3.9.7 Power Input, 4-pin DIN Connector

The power connector connects to the 12 V~28 V DC power adapter (See Figure 3-20).

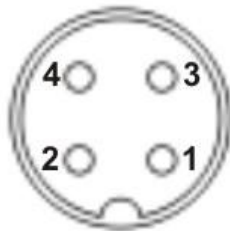


Figure 3-20: Power Input Connector

3.9.8 DB-9 RS-232/422/485 Serial Port Connectors

The system has two RS-232/422/485 & four RS232 serial port connectors. The pinouts for the serial ports are listed in the table below (See Table 3-3 & Figure 3-21).

PIN NO.	RS232	RS422	RS485
1	DCD#	TX-	TX-
2	RXD	TX+	TX+
3	TXD	RX+	
4	DTR#	RX-	
5	GND		
6	DSR#		
7	RTS#		
8	CTS#		
9	RI#		

Table 3-3: RS-232 (COM1~COM4) & RS-232/422/485 (COM5~COM6) Connector Pinouts

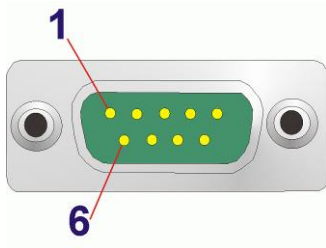


Figure 3-21: DB-9 RS-232/422/485 Serial Port Connector

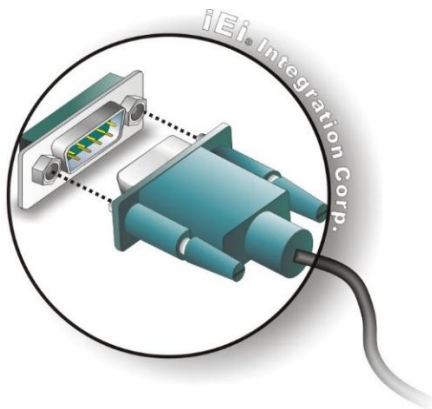


Figure 3-22: Serial Device Connection

3.9.9 Remote Power Connector

This remote power switch connector can be connected to an external switch for remote control of power on and off (See Figure 3-23).



Figure 3-23: Remote Power Connector

3.10 Powering On/Off the System



WARNING:

Make sure a power supply with the correct input voltage is being fed into the system. Incorrect voltages applied to the system may cause damage to the internal electronic components and may also cause injury to the user.

- **Power on** the system: press the power button for 3 seconds
- **Power off** the system: press the power button for 6 seconds
- The power of this system can be less than 250w-20A.

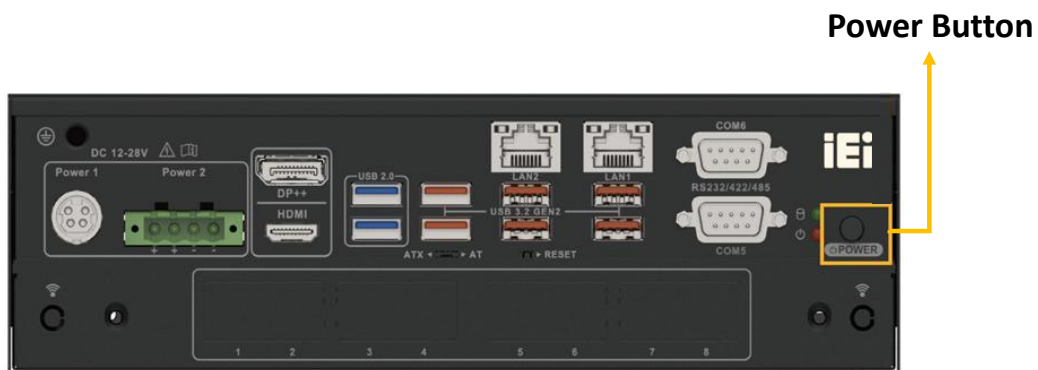


Figure 3-24: Power Button

3.11 Power

There are two power connectors on the rear panel. Power 1 connector is a 4-pin terminal block that supports ACC On signal. Power 2 connector is a DIN connector that can directly connect to a power adapter. The supported power input voltages are:

- **Power 1 (Terminal block):** 12 V ~ 28 V
- **Power 2 (DC jack):** 12 V ~ 28 V

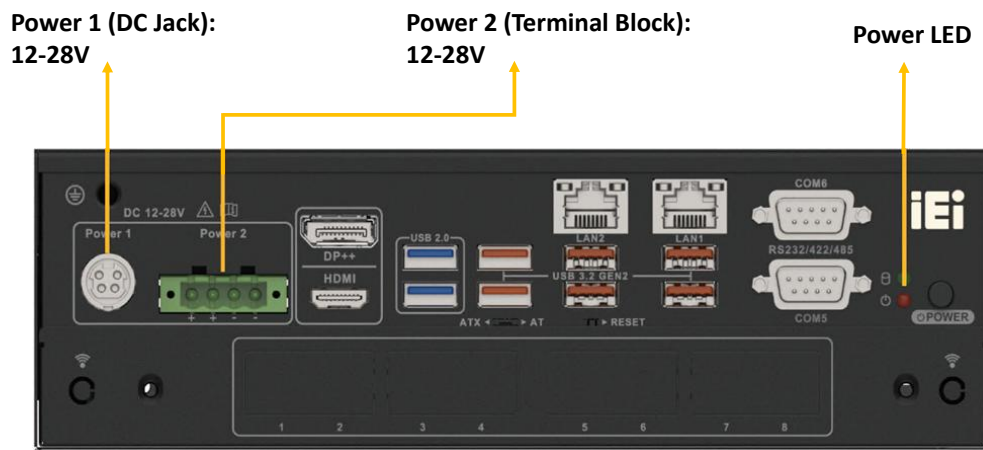


Figure 3-25: Power Connectors

LED Indicator	Description
Power LED1 (Breathing Orange)	Standby mode.
Power LED2 (Solid blue)	Power-on mode.

Table 3-4: Power LED Indicators Description



NOTE:

The power LED turns off when the power cable is unplugged from the system.

TANK-XM811

3.12 Available Drivers

All the drivers for the TANK-XM811 Series are available on IEI Resource Download Center (<https://download.ieiworld.com>). Type TANK-XM811 Series and press Enter to find all the relevant software, utilities, and documentation.


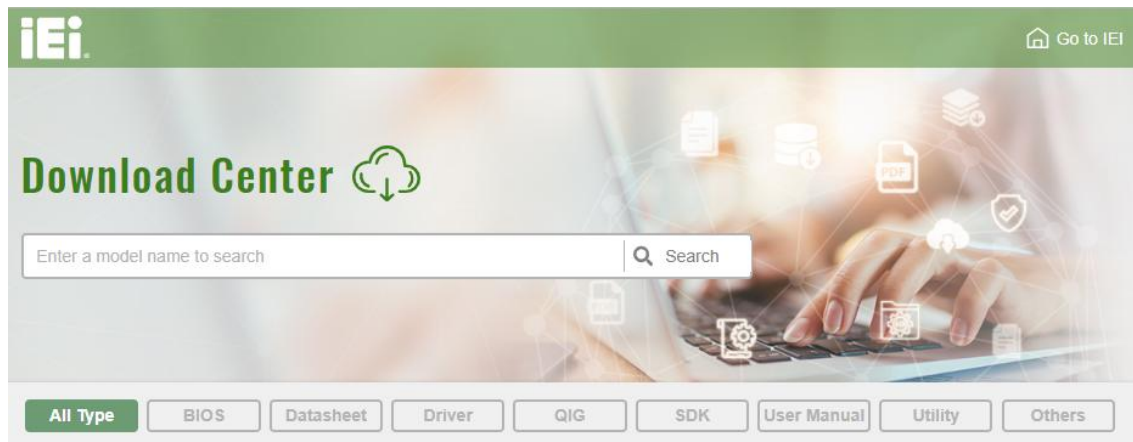


Figure 3-26: IEI Resource Download Center

3.12.1 Driver Download

To download drivers from IEI Resource Download Center, follow the steps below.

Step 1: Go to <https://download.ieiworld.com>. Type TANK-XM811 Series and press Enter.

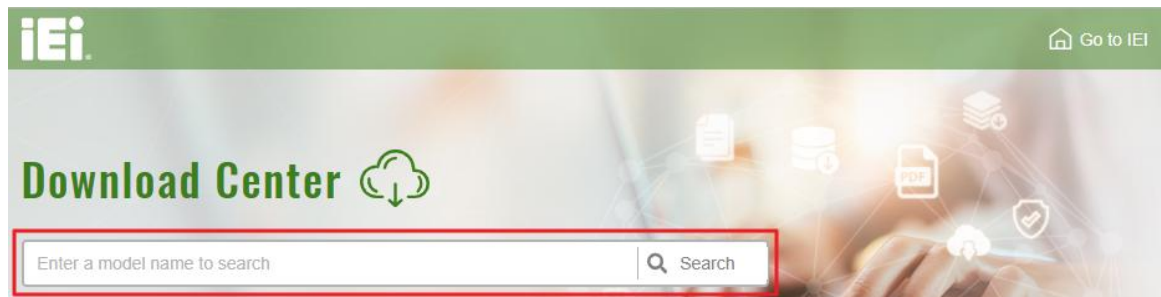

Step 2: All product-related software, utilities, and documentation will be listed. You can choose **Driver** to filter the result.

[All Type](#)
[BIOS](#)
[Datasheet](#)
[Driver](#)
[QIG](#)
[SDK](#)
[User Manual](#)
[Utility](#)
[Others](#)

WAFER-BT-i1 Product Info ▶

[Embedded Computer](#) ▶ [Single Board Computer](#) ▶ [Embedded Board](#)
 3.5" SBC with Intel® 22nm Atom™/Celeron® on-board SoC

Driver

File Name	Published	Version	File Checksum
7B000-001033-RS V2.3.iso (2.23 GB)	2017/10/03	2.30	3B2DB1F792779A93A8F50DDBC3943E30

Step 3: Click the driver file name on the page and you will be prompted with the following window. You can download the entire ISO file (❶), or click the small arrow to find an individual driver and click the file name to download (❷).

7B000-001168-RS_V1.4.iso

❶ [Click here to download entire ISO file. \(2.99 GB\)](#)

* Download individual file *

- Docs
 - 1.Chipset
 - 10.1.1.12.zip (2.7 MB)
 - 2.VGA
 - 3.Audio
 - 4.Lan
 - 5.USB 3.0
 - 6.Serial IO
 - 7.TXE
 - 8.Manual

❷



NOTE:

To install software from the downloaded ISO image file in Windows 10 (or later), double-click the ISO file to mount it as a virtual drive to view its content.

TANK-XM811

3.13 Maintenance

To configure the jumper settings, please follow the steps below.

Step 1: Remove the top cover. See Figure 3-2.

Step 2: Locate the jumper on the embedded motherboard.

Step 3: Make the jumper settings in accordance with the settings described and defined in the following sections.

3.13.1 Flash Descriptor Security Override Jumper

The Descriptor Security Override jumper (J_FLASH1) allows users to enable or disable the ME firmware update. Refer to Figure 3-27 and Table 3-5 for the jumper location and settings.

Setting	Description
Short 1-2	Disabled (default)
Short 2-3	Enabled

Table 3-5: Flash Descriptor Security Override Jumper Settings

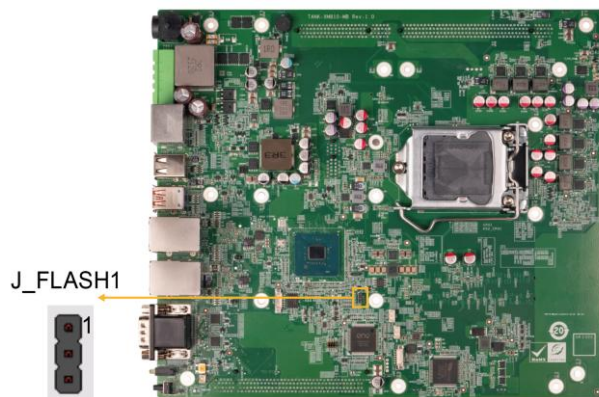


Figure 3-27 Flash Descriptor Security Override Jumper Location

To update the ME firmware, please follow the steps below.

TANK-XM811

- Step 1:** Before turning on the system power, short the Flash Descriptor Security Override jumper.
- Step 2:** Update the BIOS and ME firmware, and then turn off the system power.
- Step 3:** Remove the metal clip on the Flash Descriptor Security Override jumper or return to its default setting (open).
- Step 4:** Restart the system. The system will reboot to complete the ME firmware update.

Chapter

4

System Motherboard

4.1 Overview

This chapter details all the jumpers and connectors of the system motherboard.

4.1.1 Layout

The figures below show all the connectors and jumpers of the system motherboard.

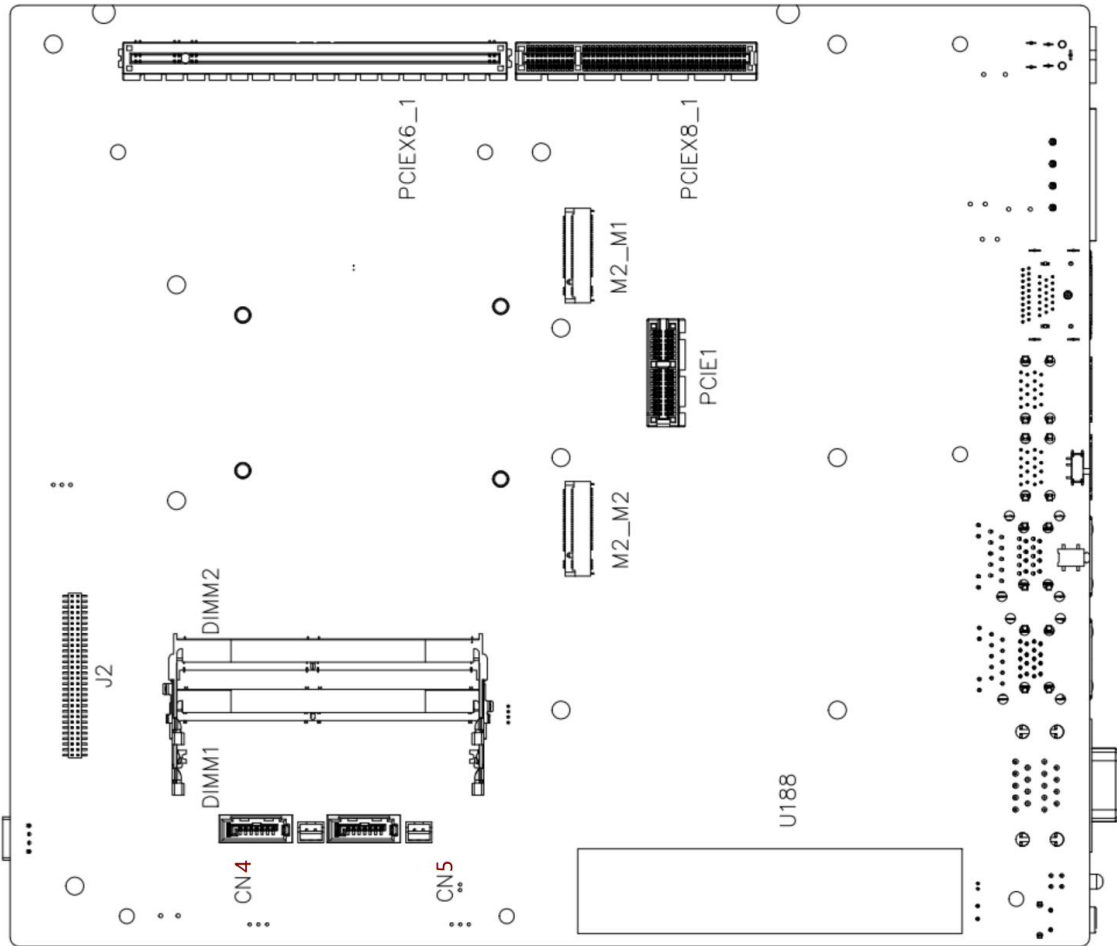


Figure 4-1: System Motherboard (Front)

TANK-XM811

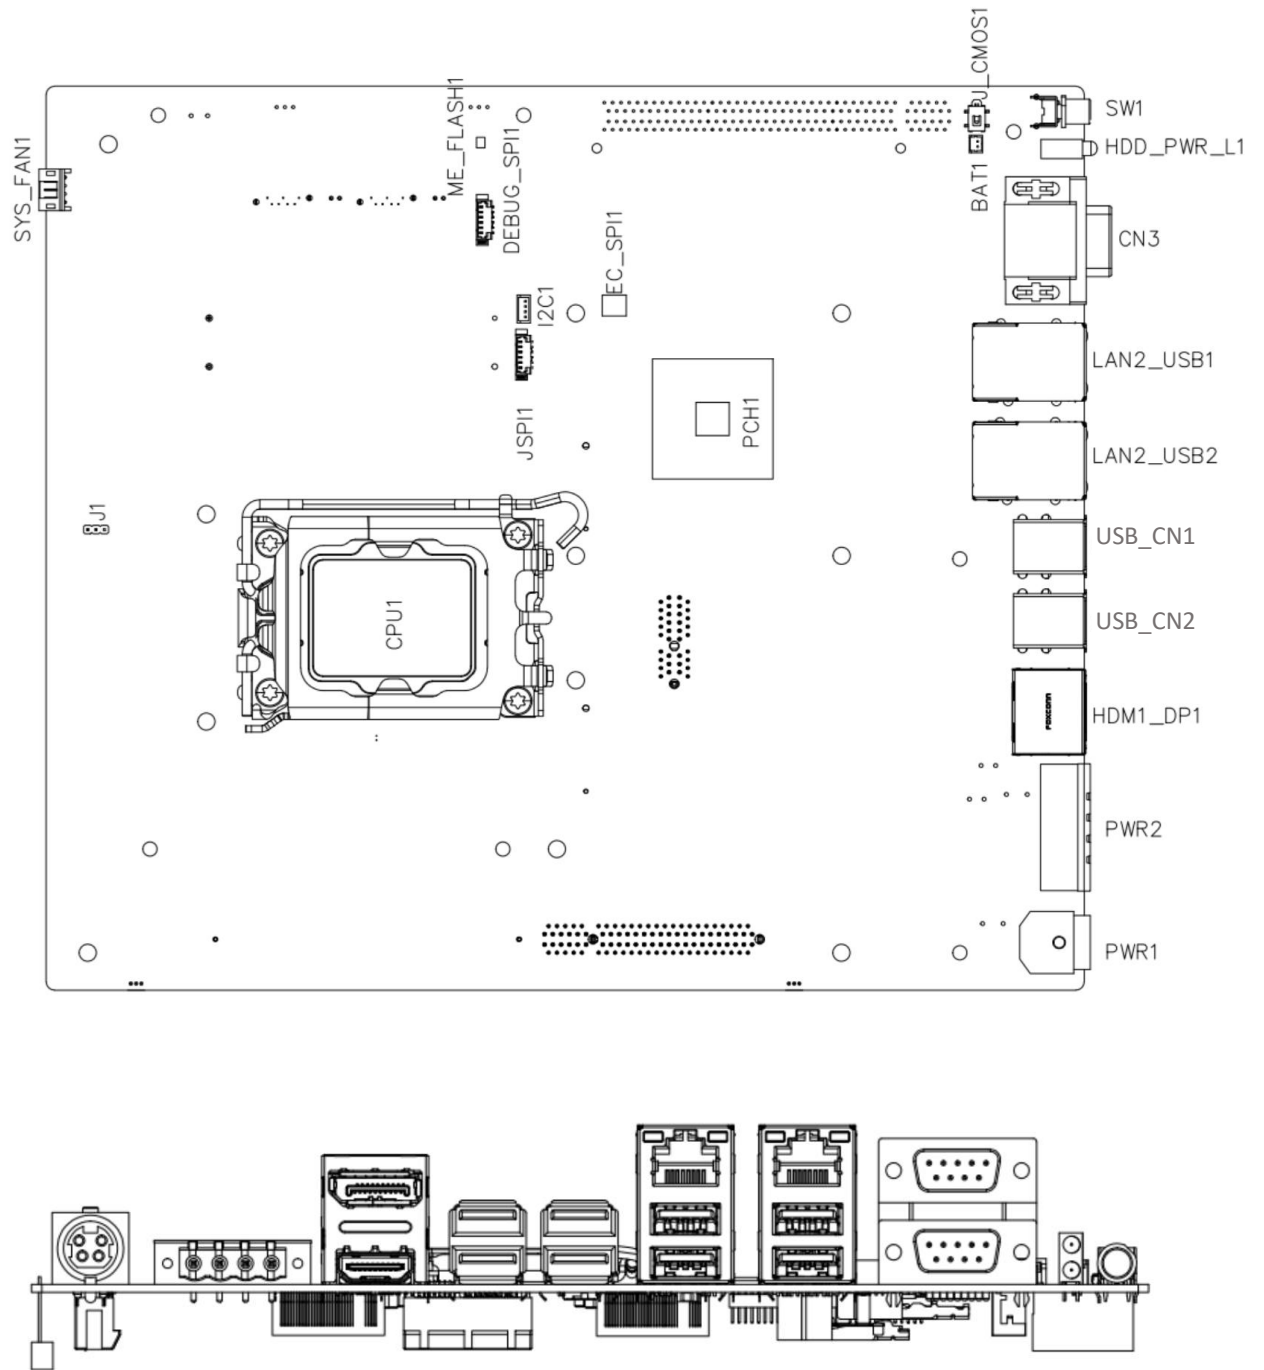


Figure 4-2: System Motherboard (Rear)

4.2 Internal Peripheral Connectors

The table below shows a list of the internal peripheral interface connectors on the system motherboard. Pinouts of these connectors can be found in the following sections.

Connector	Type	Label
Clear CMOS switch	4-pin Switch	J_CMOS1
Battery connector	2-pin header	BAT1
BIOS programming connector	6-pin box header	JSPI1
EC programming connector	8-pin header	EC_JSP1
EC debug card connector	6-pin box header	DBG _JSP1
Flash override jumper	3-pin header	ME_FLASH1
I ² C BUS connector	4-pin box header	I2C1
M.2 slot (PCIe x2 interface)	M.2 M-key slot	M2_M1
M.2 slot (PCIe x1/USB2.0 interface)	M.2 A-key slot	M2_M2
HDD backplane connector	PCIe x1 slot	PCIEX1_1
DDR4 memory slot	DDR4 memory slot	DIMM1, DIMM2
PCIe backplane connector	backplane connector	PCIEX16_1, PCIEX8_1
PCIe IO board connector	PCIe x16 slot	U188
Thermal sensor connector	3-pin Connector	CN4, CN5

Table 4-1: Peripheral Interface Connectors

4.2.1 EC Programmer Connector (EC_SPI1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	EC_SPI_CS#_R	2	+V3.3A_EC
3	EC_SPI_MISO_R	4	NC
5	EC_DET_FLASH	6	EC_SPI_CLK_R
7	GND	8	EC_SPI_MOSI_R

Table 4-2: EC Programmer Connector Pinouts

TANK-XM811

4.2.2 Clear CMOS Switch (J_CMOS1)

PIN NO.	DESCRIPTION
Open	Normal Operation (Default)
Push	Clear CMOS Setup

Table 4-3: Clear CMOS Switch (J_CMOS1)

4.2.3 BIOS Programming Connector (JSPI1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	+V3.3M_SPI_CON	2	SPI_CS#0_SW
3	SPI_SO_SW	4	SPI_CLK_SW
5	SPI_SI_SW	6	GND

Table 4-4: BIOS Programming Connector Pinouts (JSPI1)

4.2.4 EC Debug Card Connector (DEBUG_SPI1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	NC	2	EDICS
3	EDIDO	4	EDICLK
5	EDIDI	6	GND

Table 4-5: EC Debug Card Connector (DEBUG_SPI1)

4.2.5 System Fan Connector (SYS_FAN1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	VCC12V
3	FANIO	4	PWM

Table 4-6: System Fan Connector (SYS_FAN1)

4.2.6 Battery Connector (BAT1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	VBATT	2	GND

Table 4-7: Battery Connector (BAT1)

4.3 External Interface Panel Connectors

The table below shows a list of the external interface panel connectors on the system motherboard. Pinouts of these connectors can be found in the following sections.

Connector	Type	Label
Power input connector	4-pin DC jack	PWR1
Power input connector	4-pin terminal block	PWR2
DP and HDMI connector	DisplayPort, HDMI	HDMI1_DP1
USB 3.2 Gen 2 connectors	USB 3.2 Gen 2	USB_CN1, USB_CN2
Ethernet and USB 3.2 Gen 2 combo connectors	RJ-45, USB 3.2 Gen 2 Type A	LAN1_USB1, LAN1_USB2,
RS-232/422/485 connector	DB-9	CN3
HDD+System LED	HDD+system LED	HDD_PWR_L1
Power button connector	4-pin switch	SW1
RESET switch	4-pin switch	RST1
AT/ATX mode switch	2-pin switch	J_ATX_AT1
RS-232 connector	DB-9	COM1, COM2, COM3, COM4
System fan connector	4-pin box header	FAN1
Digital I/O connector	DB-15	DIO1
Remote power connector	2-pin terminal block	JP1

Table 4-8: Rear Panel Connectors

4.3.1 Power Input Connector, DC Jack (PWR1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	DC_IN1	2	GND
3	DC_IN1	4	GND
5	GND		

Table 4-9: Power Input Connector, DC Jack Pinouts

4.3.2 Power Input Connector, Terminal Block (PWR2)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	DC_IN2	2	DC_IN2
3	GND	4	GND

Table 4-10: Power Input Connector, Terminal Block Pinouts

4.3.3 External HDMI and DP++ Combo Connector (HDMI1_DP1)

HDMI1: HDMI Connector			
PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	HDMI_DATA2	13	N/C
2	GND	14	N/C
3	HDMI_DATA2#	15	HDMI_SCL
4	HDMI_DATA1	16	HDMI_SDA
5	GND	17	GND
6	HDMI_DATA1#	18	+5V
7	HDMI_DATA0	19	HDMI_HPD
8	GND	20	HDMI_GND
9	HDMI_DATA0#	21	HDMI_GND
10	HDMI_CLK	22	HDMI_GND
11	GND	23	HDMI_GND
12	HDMI_CLK#		

Table 4-11: HDMI Connector Pinouts

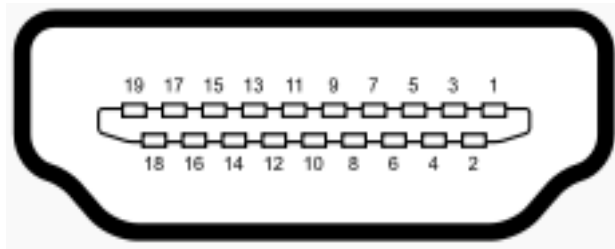


Figure 4-3: HDMI Connector

DP1 : DP++ Connector			
PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	LANE0P	11	GND
2	LANE0N	12	LANE3N
3	GND	13	DP_EN_DT
4	LANE1P	14	EN
5	LANE1N	15	AUXP
6	GND	16	GND
7	LANE2P	17	AUXN
8	GND	18	HPD
9	LANE2N	19	GND
10	LANE3P	20	+3.3V

Table 4-12: DP++ Connector Pinouts

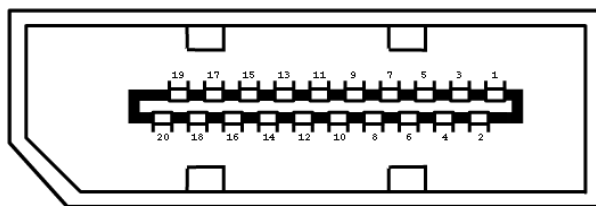


Figure 4-4: DP++ Connector

4.3.4 External USB 3.2 Gen 2 Connectors (USB_CN1/USB_CN2)

USB_CN1 /USB_CN2: USB 3.2 Gen 2 Connectors			
PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	VCC	10	VCC
2	USB_DATA-	11	USB_DATA-
3	USB_DATA+	12	USB_DATA+
4	GND	13	GND
5	USB3_RX-	14	USB3_RX-
6	USB3_RX+	15	USB3_RX+
7	GND	16	GND
8	USB3_TX-	17	USB3_TX-
9	USB3_TX+	18	USB3_TX+

Table 4-13: USB 3.2 Gen 2 Connectors Pinouts

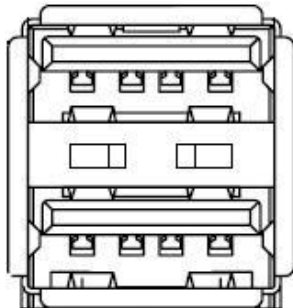


Figure 4-5: USB 3.2 Gen 2 Connectors

4.3.5 External LAN&USB Connectors (LAN1_USB1/LAN2_USB)

LAN1 /LAN2: 2.5 GbE RJ45 Connector			
PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	MDIA3-	5	MDIA1+
2	MDIA3+	6	MDIA2+-
3	MDIA2-	7	MDIA0-
4	MDIA1-	8	MDIA0+

Table 4-14: 2.5 GbE RJ45 Connector

USB1 /USB2: USB 3.2 Gen 2 Connectors			
PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	VCC	10	VCC
2	USB_DATA-	11	USB_DATA-
3	USB_DATA+	12	USB_DATA+
4	GND	13	GND
5	USB3_RX-	14	USB3_RX-
6	USB3_RX+	15	USB3_RX+
7	GND	16	GND
8	USB3_TX-	17	USB3_TX-
9	USB3_TX+	18	USB3_TX+

Table 4-15: USB 3.2 Gen 2 Connectors Pinouts

4.3.6 External Dual RS-232/422/485 Serial Port Connectors (CN3)

Mode	RS-232	RS-422	RS-485
PIN NO.	DESCRIPTION	DESCRIPTION	DESCRIPTION
1	DCD#	TX-	TX-
2	RXD	TX+	TX+
3	TXD	RX+	
4	DTR#	RX-	
5	GND		
6	DSR#		
7	RTS#		
8	CTS#		
9	RI#		

Table 4-16: RS-232/422/485 Serial Port Connector Pinouts

TANK-XM811

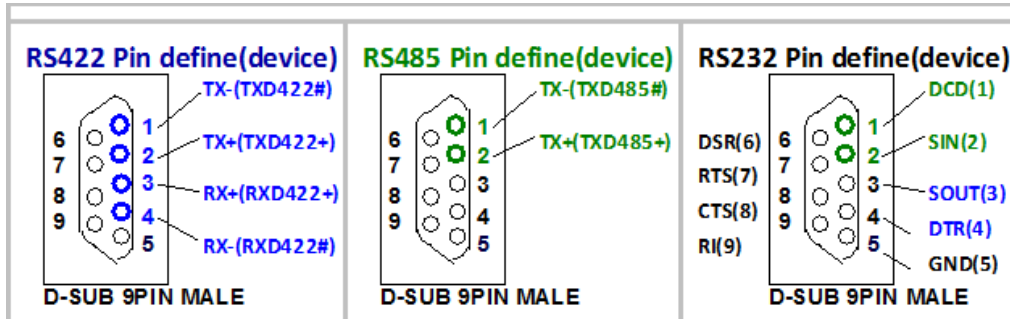


Figure 4-6: RS-232/422/485 Serial Port Connectors

4.3.7 External RS-232 Connectors (COM1 ~ COM4)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	NDCCD	2	NDSR
3	NRX	4	NRTS
5	NTX	6	NCTS
7	NDTR	8	NRI
9	GND	10	GND

Table 4-17: RS-232 Connector Pinouts

4.3.8 Remote Power BTN Connector (JP1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	PWRBTN_SW#	2	GND

Table 4-18: Remote Power BTN Connector Pinouts

4.3.9 AT/ATX Power Mode Setting (J_ATX_AT1)

Use the J_ATX_AT1 switch to specify the systems power mode as AT or ATX

PIN NO.	DESCRIPTION
1-2 (Right)	ATX Power Mode (default)
2-3 (Left)	AT Power Mode

Table 4-19: AT/ATX Power Mode Switch Pinouts

Chapter

5

BIOS

TANK-XM811

5.1 Introduction

The BIOS is programmed onto the BIOS chip. The BIOS setup program allows changes to certain system settings. This chapter outlines the options that can be changed.



NOTE:


Some of the BIOS options may vary throughout the life cycle of the product and are subject to change without prior notice.

5.1.1 Starting Setup

The UEFI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. **Using keyboard:** Press the **DEL** or **F2** as soon as the system is turned on.
2. **Using touchscreen:** Press the **Setup** button on the upper right corner of the BIOS Starting Menu.

If the message disappears before the **DEL** or **F2** key is pressed, restart the computer and try again, then the BIOS Starting Menu will appear. Select "Setup" and press Enter to get into the BIOS Setup.

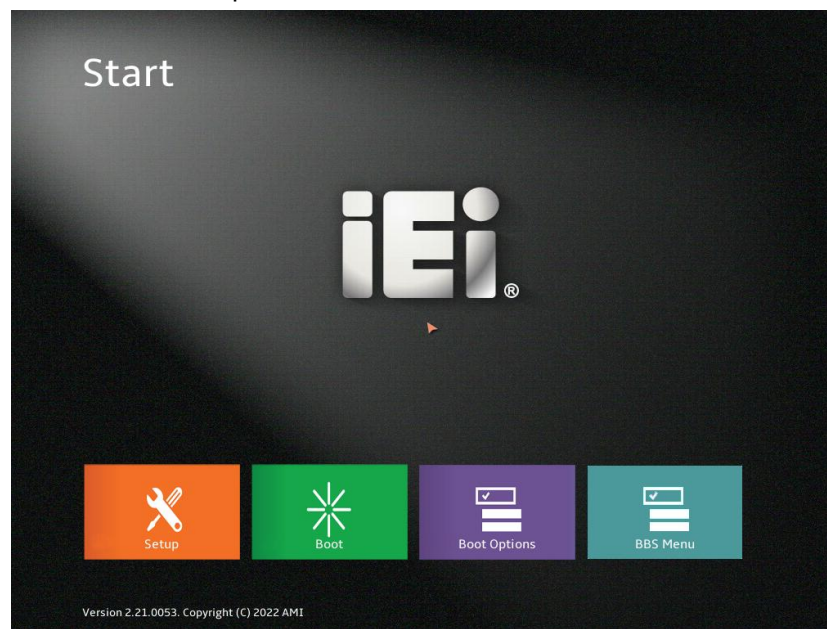

BIOS Menu 1: BIOS Starting Menu

5.1.2 Using Setup

The BIOS Setup menu can be navigated by using a keyboard or a touchscreen.

5.1.2.1 Keyboard Navigation


For keyboard navigation, use the navigation keys shown in **Table 5-1**.

Key	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
+	Increase the numeric value or make changes
-	Decrease the numeric value or make changes
Page Up	Move to the previous page
Page Dn	Move to the next page
Esc	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
F1	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2	Load previous values
F3	Load optimized defaults
F4	Save changes and Exit BIOS
<K>	Scroll help area upwards
<M>	Scroll help area downwards

Table 5-1: BIOS Navigation Keys

5.1.2.2 Touch Navigation

For touchscreen navigation, use the on-screen navigation keys shown below.

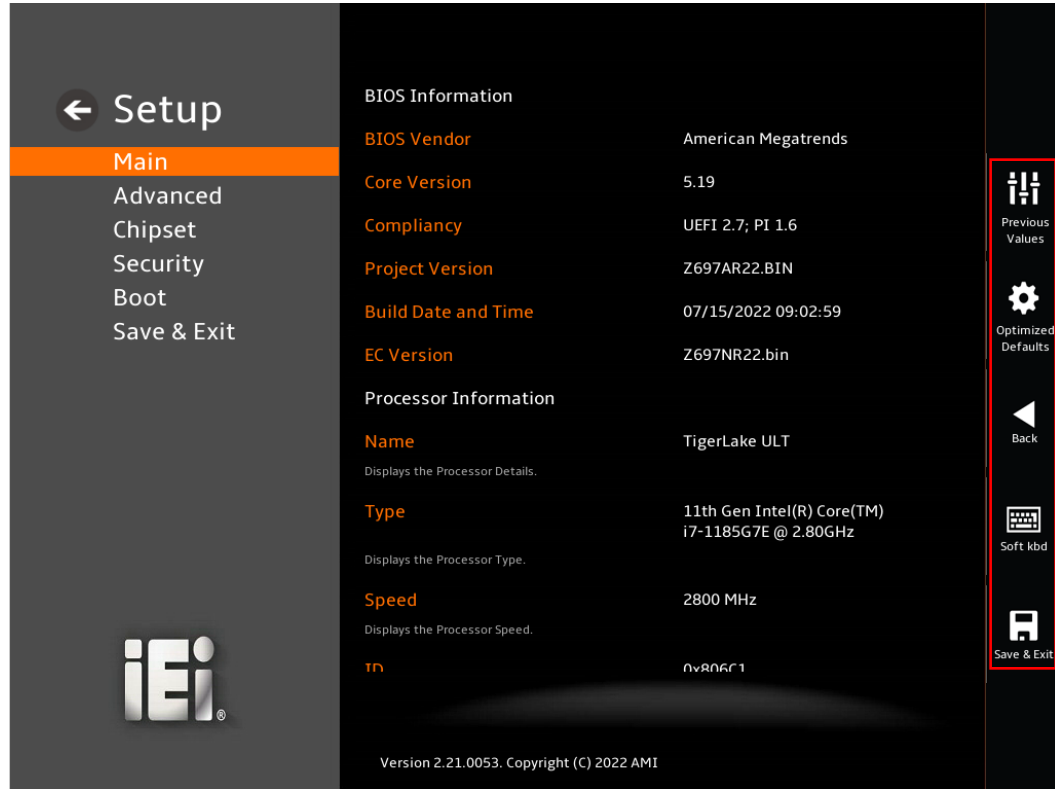

BIOS Menu 2: Touch Navigation

On-screen Button	Function
Previous Values	Load the last value you set.
Optimized Defaults	Load the factory default values in order to achieve the best performance.
Back	Return to the previous menu.
Soft kbd	Display the on-screen keyboard.
Save & Exit	Save the changes made to the BIOS options and reset the system.

Table 5-2: BIOS On-screen Navigation Keys

5.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window, press the **Esc** key.

5.1.4 Unable to Reboot after Configuration Changes

If the computer cannot boot after changes to the system configuration is made, CMOS defaults. Use the clear CMOS button described in **Chapter 4**.

5.1.5 BIOS Menu Bar


The **menu bar** on top of the BIOS screen has the following main items:

- Main – Changes the basic system configuration.
- Advanced – Changes the advanced system settings.
- Chipset – Changes the chipset settings.
- Security – Sets User and Supervisor Passwords.
- Boot – Changes the system boot configuration.
- Save & Exit – Selects exit options and loads default settings
- MEBx – Sets the MEBx Login Passwords.

The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.

5.2 Main


The **Main** BIOS menu appears when the **BIOS Setup** program is entered. The **Main** menu gives an overview of the basic system information.

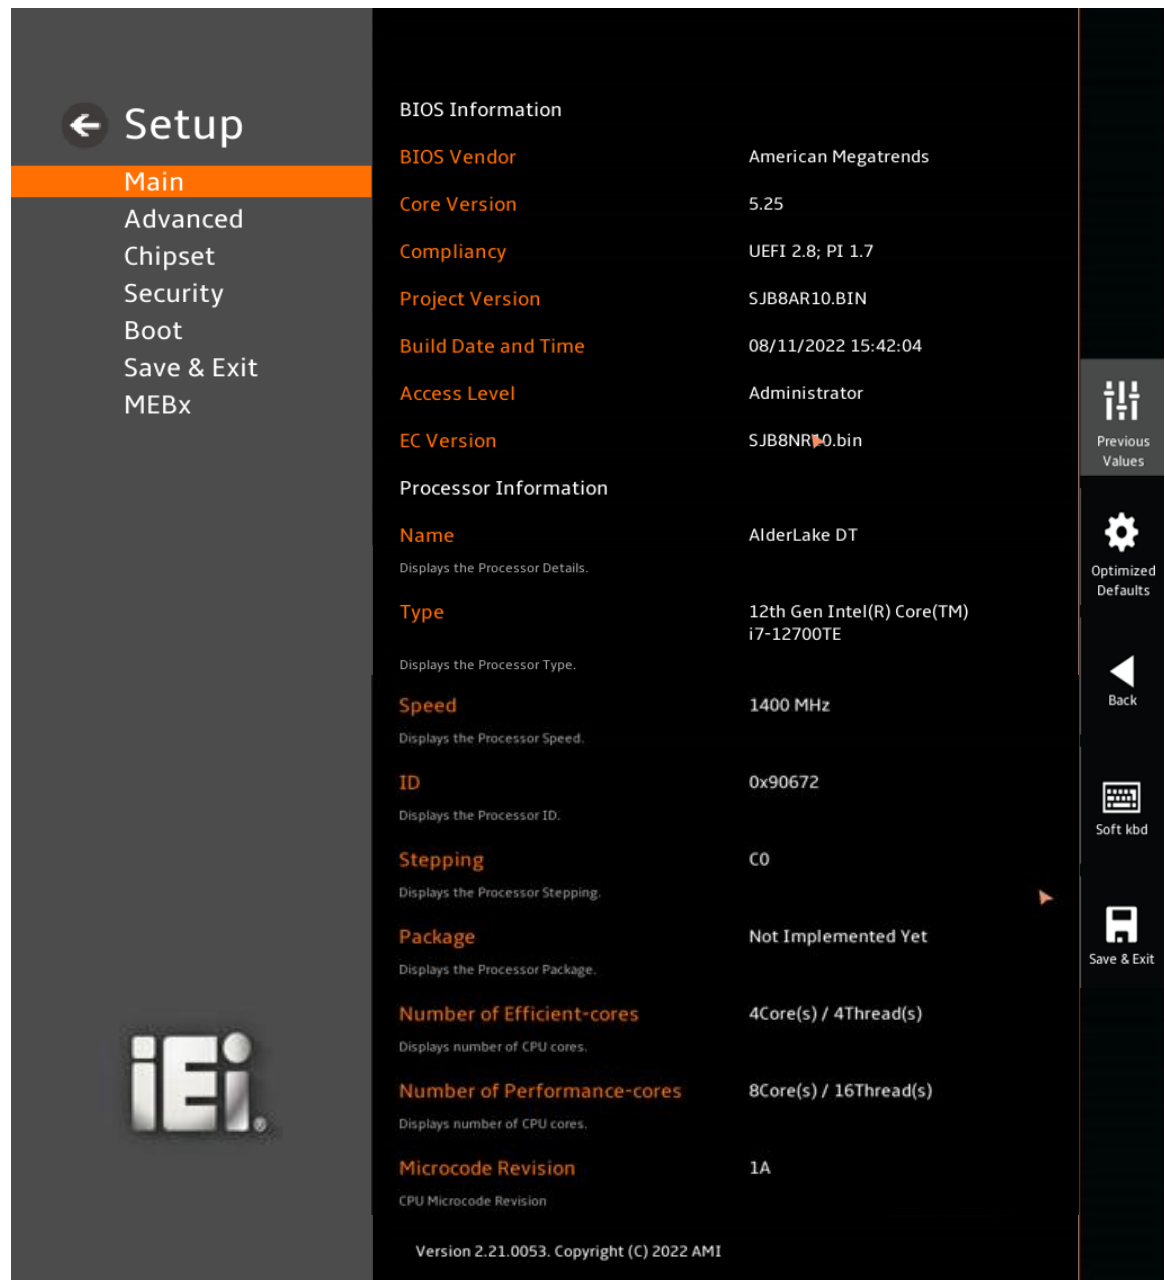

BIOS Menu 3: Main (1/2)

← Setup

- Main
- Advanced
- Chipset
- Security
- Boot
- Save & Exit
- MEBx



Number of Performance-cores	8Core(s) / 16Thread(s)
<small>Displays number of CPU cores.</small>	
Microcode Revision	1A
<small>CPU Microcode Revision</small>	
IGFX GOP Version	17.0.1073
<small>IGFX GOP Version</small>	
Total Memory	16384 MB
<small>Total Memory in the System.</small>	
Memory Frequency	3200 MHz
<small>Displays the Frequency of Memory</small>	
PCH Information ▶	
Name	PCH-S
<small>PCH Name</small>	
PCH SKU	R680E
<small>PCH SKU</small>	
Stepping	B1
<small>PCH Stepping</small>	
TXT Capability of Platform/PCH	Supported
<small>Platform/PCH TXT capability</small>	
Production Type	Production
<small>Platform Production Type</small>	
ME FW Version	16.0.15.1620
<small>ME Firmware Version</small>	
ME Firmware SKU	Corporate SKU
<small>ME Firmware SKU</small>	
PMC FW Version	160.2.0.1036
<small>PMC Firmware Version</small>	
System Date	07/30/2027
<small>Set the Date. Use Tab to switch between Date elements. Default Ranges: Year: 2005-2099 Months: 1-12 Days: Dependent on month Range of Years may vary.</small>	
System Time	13:08:46
<small>Set the Time. Use Tab to switch between Time elements.</small>	

BIOS Menu 4: Main (2/2)

→ BIOS Information

The **BIOS Information** lists a brief summary of the BIOS. The fields in **BIOS Information** cannot be changed. The items shown in the system overview include:

- **BIOS Vendor:** Installed BIOS vendor
- **Core Version:** Current BIOS version
- **Compliance:** Current UEFI & PI version
- **Project Version:** the board version
- **Build Date and Time:** Date the current BIOS version was made
- **Access Level:** Current Access Level version
- **EC Version:** Current EC version

→ Processor Information

The **Processor Information** lists a brief summary of the Processor. The fields in **Processor Information** cannot be changed. The items shown in the system overview include:

- **Name:** Displays the processor details
- **Type:** Displays the processor type
- **Speed:** Displays the processor speed
- **ID:** Displays the processor ID
- **Stepping:** Displays the processor stepping
- **Package:** Displays the processor package
- **Number of Efficient-cores:** Displays the numbers of CPU efficient-cores
- **Number of Performance-cores:** Displays the numbers of CPU performance-cores
- **Microcode Revision:** Displays the CPU Microcode revision
- **IGFX GOP Version:** Displays the IGFX GOP version
- **Total Memory:** Displays the install memory in the system
- **Memory Frequency:** Displays the frequency of memory

→ PCH Information

The **PCH Information** lists a brief summary of the PCH. The fields in **PCH Information** cannot be changed. The items shown in the system overview include:

- **Name:** Displays the PCH name
- **PCH SKU:** Displays the PCH SKU
- **Stepping:** Displays the PCH stepping
- **TXT Capability of Platform/PCH:** Displays the Platform/PCH TXT capability
- **Production Type:** Displays the platform production type
- **ME FW Version:** Displays the ME firmware version
- **ME Firmware SKU:** Displays the ME firmware SKU
- **PMC FW Version:** Displays the PMC firmware version

The System Overview field also has two user configurable fields:

→ **System Date [xx/xx/xx]**

Use the **System Date** option to set the system date. Manually enter the day, month and year.

→ **System Time [xx:xx:xx]**

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.

TANK-XM811

5.3 Advanced

Use the **Advanced** menu (**BIOS Menu 5**) to configure the CPU and peripheral devices through the following sub-menus:

**WARNING!**


Setting the wrong values in the sections below may cause the system to malfunction. Make sure that the settings made are compatible with the hardware.




BIOS Menu 5: Advanced

5.3.1 CPU Configuration

Use the **CPU Configuration** menu (**BIOS Menu 6 & BIOS Menu 7**) to view detailed CPU specifications or enable the Intel Virtualization Technology.

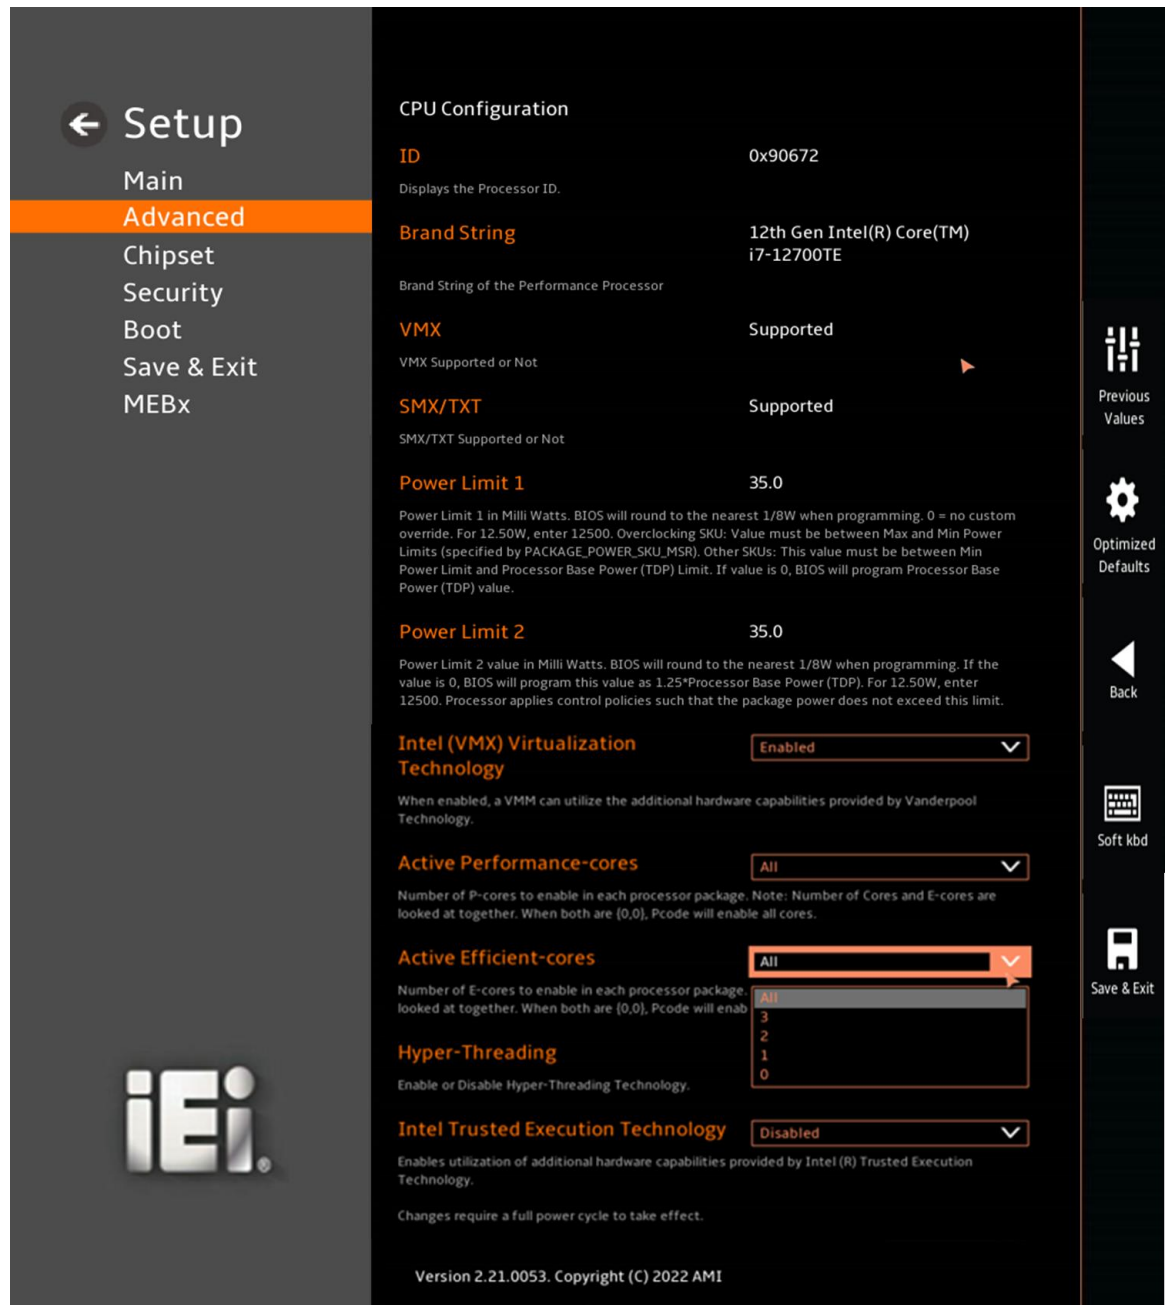

BIOS Menu 6: CPU Configuration (1/2)

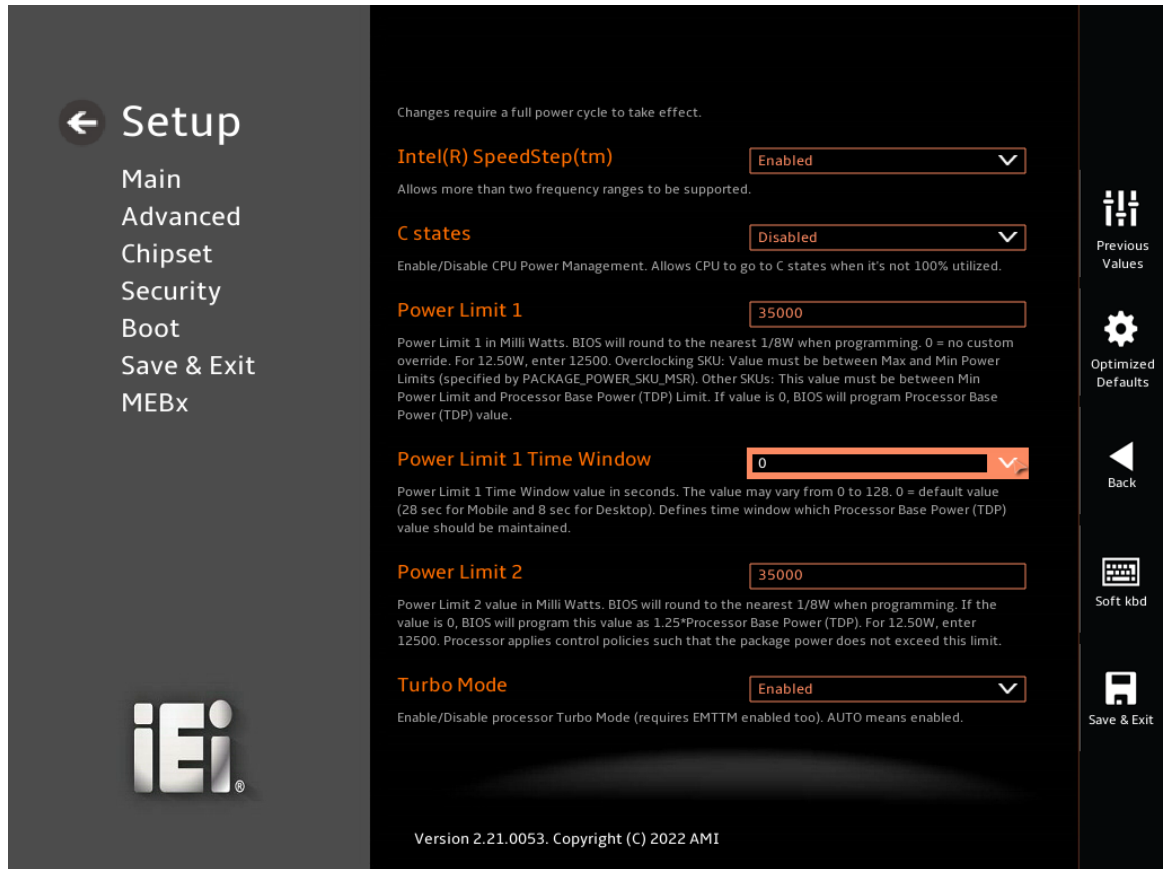

BIOS Menu 7: CPU Configuration (2/2)

➔ **Intel (VMX) Virtualization Technology [Enabled]**

Use the **Intel (VMX) Virtualization Technology** option to enable or disable virtualization on the system. When combined with third party software, Intel® Virtualization technology allows several OSs to run on the same system at the same time.

- ➔ **Disabled** Disables Intel Virtualization Technology.
- ➔ **Enabled** **DEFAULT** Enables Intel Virtualization Technology.

➔ **Active Performance-cores [All]**

Use the **Active Performance-cores** BIOS option to enable numbers of P-cores in each processor package.

- ➔ **All** **DEFAULT** Enable all the performance processor package.

- 1 Enable one core in the performance processor package.
- 2 Enable two cores in the performance processor package.
- 3 Enable three cores in the performance processor package.

→ **Active Efficient-cores [All]**

Use the **Active Efficient-cores** BIOS option to enable numbers of E-cores in each processor package.

- **All** **DEFAULT** Enable all the efficient processor package.
- 1 Enable one core in the efficient processor package.
- 2 Enable two cores in the efficient processor package.
- 3 Enable three cores in the efficient processor package.

→ **Hyper-Threading [Enabled]**

Use the **Hyper-Threading** option to enable or disable the **Hyper-Threading** Technology.

- **Disabled** Disables Hyper-Threading Technology
- **Enabled** **DEFAULT** Enables Hyper-Threading Technology

→ **Intel(R) Trusted Execution Technology [Disabled]**

Use the **Intel Trusted Execution Technology (Intel® TXT)** option to enable or disable utilization of additional hardware capabilities provided by Intel (R) Trusted Execution Technology.

- **Disabled** **DEFAULT** Disables Intel® TXT Technology
- **Enabled** Enables Intel® TXT Technology

→ **Intel(R) SpeedStep(tm) [Enabled]**

Use the **Intel(R) SpeedStep(tm)** option to enable or disable the Intel® SpeedStep Technology which allows more than two frequency ranges to be supported.

TANK-XM811

- **Disabled** Disables Intel® SpeedStep Technology
- **Enabled** **DEFAULT** Enables Intel® SpeedStep Technology

→ **C states [Disabled]**

Use the **C states** option to enable or disable CPU power management which allows CPU to go to C states when it is not 100% utilized.

- **Disabled** **DEFAULT** Disables CPU power management
- **Enabled** Enables CPU power management

→ **Power Limit 1**

Use the + or – key to change the **Power Limit 1** value. BIOS will program the default values for Limit 1 and Power Limit 1 Time Window. For 12.50W, enter 12500.

→ **Power Limit 1 Time Window [0]**

Use the **Power Limit 1 Time Window** option to select the PL1 time duration. The value may vary from 0 to 128. For 0 is the default value

→ **Power Limit 2**

Use the + or – key to change the **Power Limit 2** value. BIOS will round to the nearest 1/8W when programming. 0 = no custom override. For 12.50W, enter 12500.


→ **Turbo Mode [Enabled]**

Use the **Turbo Mode** option to enable or disable Turbo Mode which requires Intel Speed Step or Intel Speed Shift to be available and enabled.

- **Disabled** Disables Turbo Mode Technology
- **Enabled** **DEFAULT** Enables Turbo Mode Technology

5.3.2 AMT Configuration

The **AMT Configuration** menu (**BIOS Menu 8**) allows Intel® Active Management Technology (AMT) options to be configured.

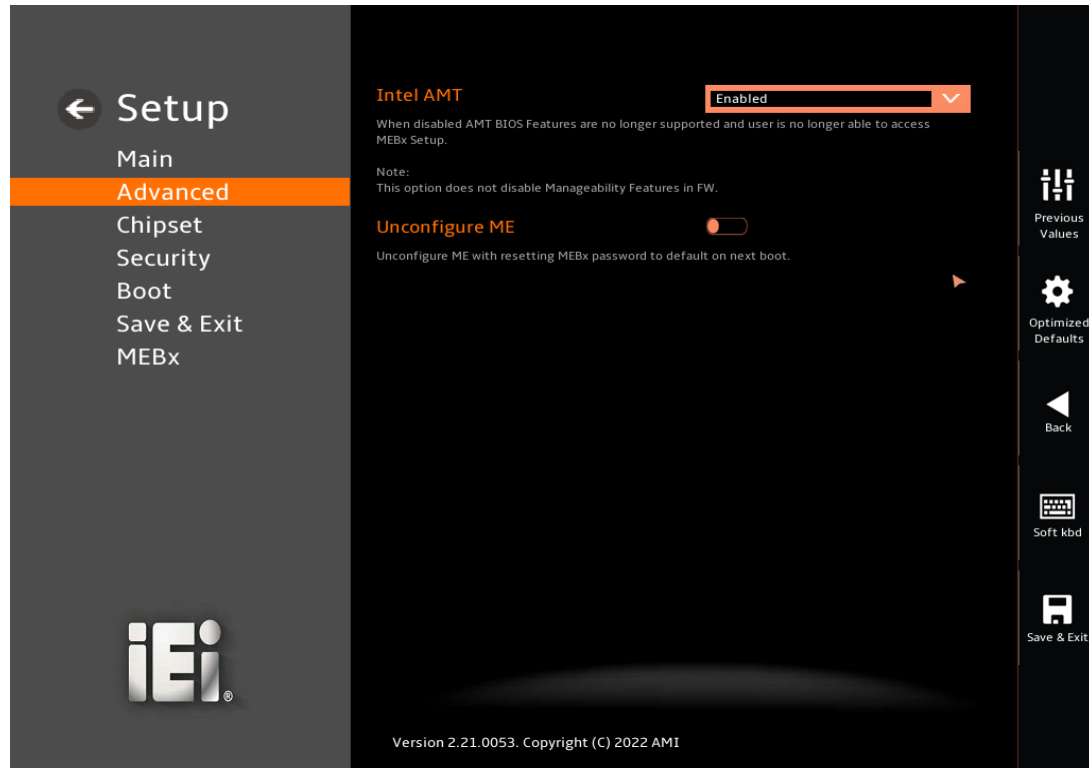

BIOS Menu 8: AMT Configuration

➔ **Intel AMT [Enabled]**

Use **Intel AMT** option to enable or disable the Intel® AMT function.

- ➔ **Disabled** Intel® AMT is disabled
- ➔ **Enabled** **DEFAULT** Intel® AMT is enabled


➔ **Unconfigure ME [Disabled]**

Use the **Unconfigure ME** option to perform AMT/ME unconfigure without password operation.

- ➔ **Disabled** **DEFAULT** Not perform ME unconfigure
- ➔ **Enabled** To perform ME unconfigure

5.3.3 Intel(R) Time Coordinated Computing

Use the **Intel(R) Time Coordinated Computing** menu (**BIOS Menu 9**) to configure settings related to the Intel TCC options

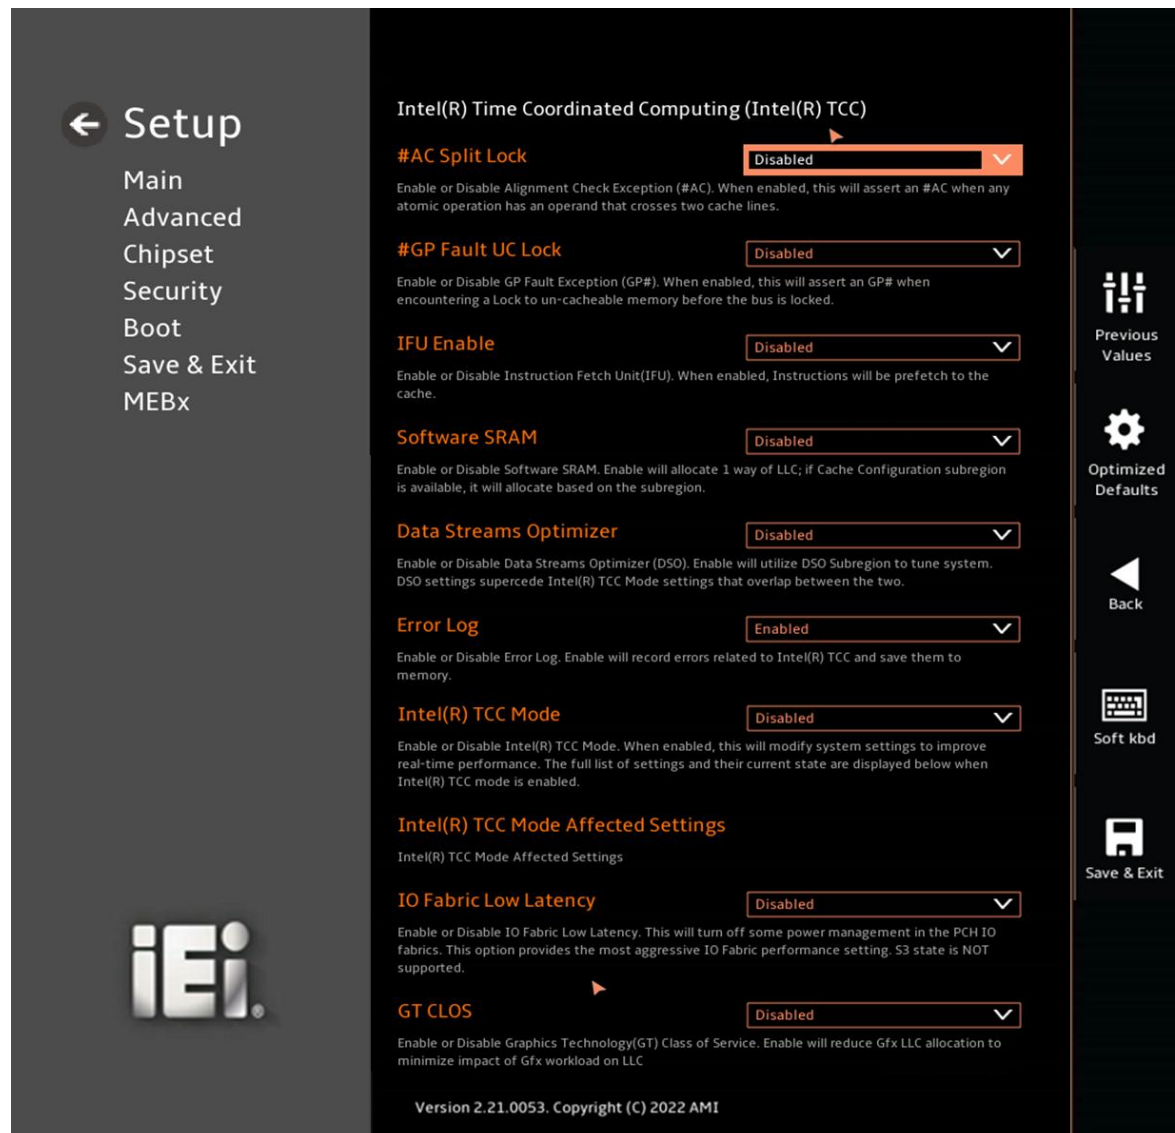

BIOS Menu 9: Intel Time Coordinated Computing

→ #AC Split Lock [Disabled]

Use the **#AC Split Lock** option to enable or disable the capability of asserting an #AC when any atomic operation has an operand that crosses two cache lines.

- ➔ Enabled Enable #AC Split Lock.
- ➔ Disabled **DEFAULT** Disable #AC Split Lock.

➔ **#GP Fault UC Lock [Disabled]**

Use the **#GP Fault UC Lock** option to enable or disable the capability of asserting an GP# when encountering a lock to un-cacheable memory before the bus is locked.

- ➔ Enabled Enable #GP Fault UC Lock.
- ➔ Disabled **DEFAULT** Disable #GP Fault UC Lock.

➔ **IFU Enable [Disabled]**

Use the **IFU Enable** option to enable or disable whether instructions will be perfetched to the cache.

- ➔ Enabled Enable the Instruction Fetch Unit.
- ➔ Disabled **DEFAULT** Disable the Instruction Fetch Unit.

➔ **Software SRAM [Disabled]**

Use the **Software SRAM** option to enable or disable the capability of allocating one way of LLC based on the subregion.

- ➔ Enabled Enable the Software SRAM.
- ➔ Disabled **DEFAULT** Disable the Software SRAM.

➔ **Data Streams Optimizer [Disabled]**

Use the **Data Streams Optimizer (DSO)** option to enable or disable the capability of utilizing DSO subregion to tune system.

- ➔ Enabled Enable the DSO Technology.
- ➔ Disabled **DEFAULT** Disable the DSO Technology.

TANK-XM811**→ Error Log [Disabled]**

Use the **Error Log** option to enable or disable the capability of recording errors related to the Inter(R) TCC and saving them to memory.

- **Enabled** Enable the Error Log Capability.
- **Disabled** **DEFAULT** Disable the Error Log Capability.

→ Intel(R) TCC Mode [Disabled]

Use the **Intel(R) TCC Mode** option to enable or disable the capability of modifying system settings to improve real-time performance.

- **Enabled** Enable Intel(R) TCC Mode Technology.
- **Disabled** **DEFAULT** Disable Intel(R) TCC Mode Technology.

→ IO Fabric Low Latency [Disabled]

Use the **IO Fabric Low Latency** option to enable or disable the capability of providing the most aggressive power management settings in the PCH IO fabrics.

- **Enabled** Enable IO Fabric Low Latency Technology.
- **Disabled** **DEFAULT** Disable IO Fabric Low Latency Technology.

→ GT CLOS [Disabled]

Use the **GT CLOS** option to enable or disable the capability of minimizing impact of Gfx workload on LLC.

- **Enabled** Enable the Graphics Technology Class of Service.
- **Disabled** **DEFAULT** Disable the Graphics Technology Class of Service

5.3.3.1 Intel(R) TCC Authentication

Use the **Intel(R) TCC Authentication** submenu (**BIOS Menu 10**) to configure the Intel(R) TCC Authentication options.



BIOS Menu 10: Intel(R) TCC Authentication


➔ Intel(R) TCC Authentication [Disabled]

Use the **Intel(R) TCC Authentication** option to enable or disable the ability to authenticate capsules generated by the data streams optimizer and cache configurator tools. Note that even if you disable authentication in BIOS, you are still required to sign the capsules. This is enforced to adhere to best security practices.

- ➔ **Disabled** **DEFAULT** Disable Intel TCC Authentication
- ➔ **Non-OEM Enrolled Key** Set Non-OEM Enrolled Key
- ➔ **OEM Enrolled Key** Set OEM Enrolled Key

5.3.4 Trusted Computing

Use the **Trusted Computing** menu (**BIOS Menu 11**) to configure settings related to the Trusted Computing Group (TCG) Trusted Platform Module (TPM).

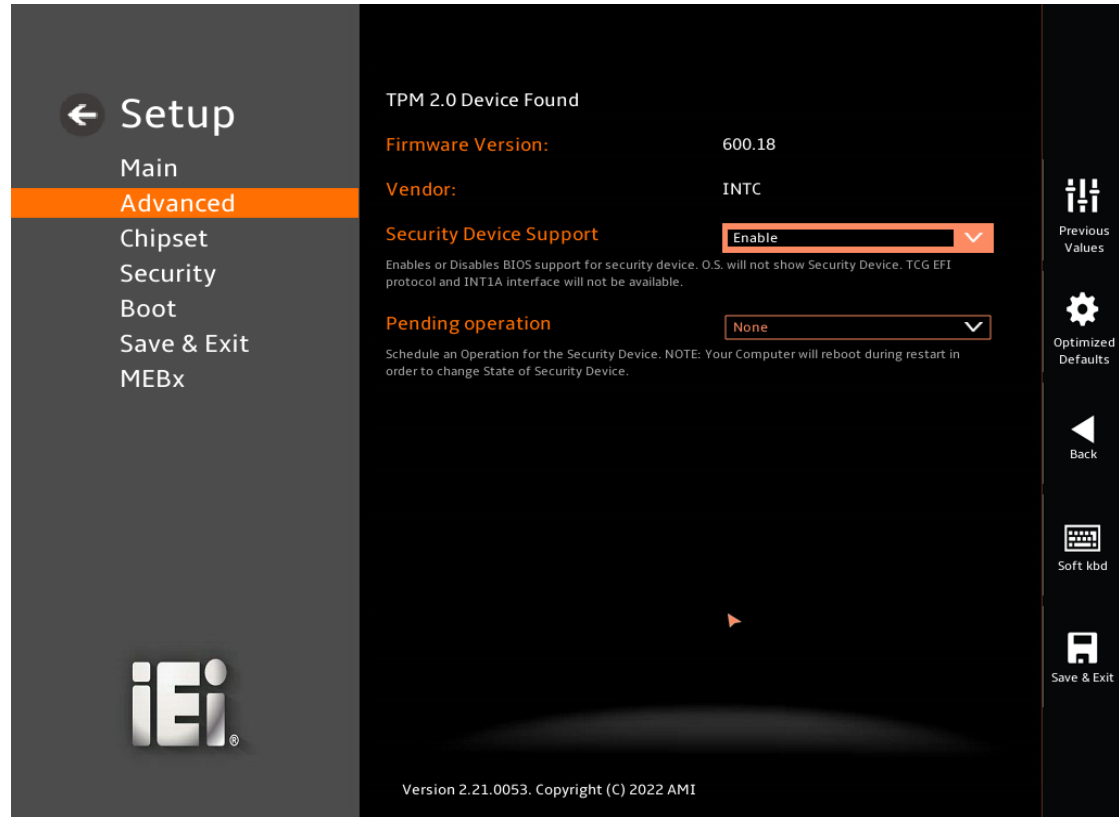

BIOS Menu 11: Trusted Computing

➔ Security Device Support [Enable]

Use the **Security Device Support** option to configure support for the TPM.

- ➔ **Disable** TPM support is disabled.
- ➔ **Enable** **DEFAULT** TPM support is enabled.


➔ Pending Operation [None]

Use the **Pending Operation** option to schedule an operation for the security device.

- ➔ **None** **DEFAULT** TPM information is as previous setting.
- ➔ **TPM Clear** TPM information is cleared

5.3.5 RTC Wake Settings

The **RTC Wake Settings** menu (**BIOS Menu 12**) configures RTC wake event.

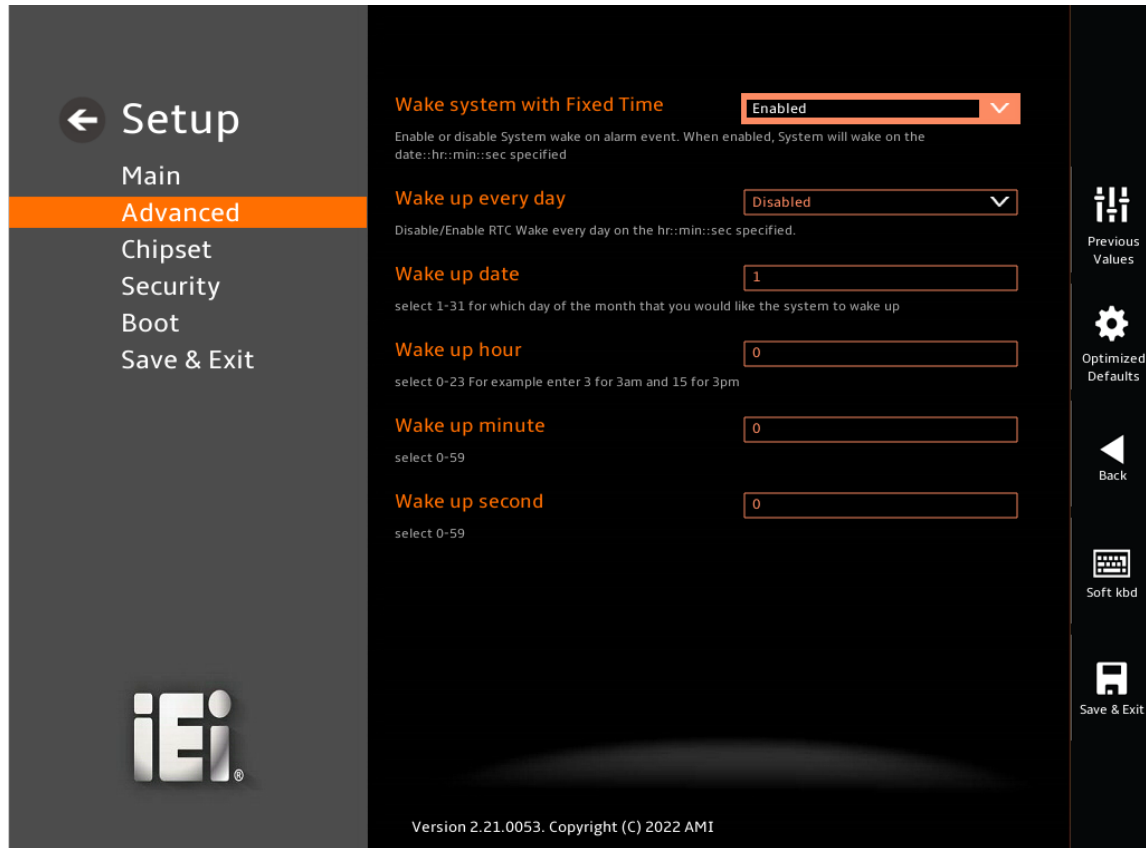

BIOS Menu 12: RTC Wake Settings

➔ **Wake System with Fixed Time [Disabled]**

Use the **Wake System with Fixed Time** option to specify the time the system should be roused from a suspended state.

- ➔ **Disabled** **DEFAULT** The real time clock (RTC) cannot generate a wake event
- ➔ **Enabled** If selected, the following appears with values that can be selected:
 - *Wake up every day
 - *Wake up date
 - *Wake up hour

TANK-XM811


*Wake up minute

*Wake up second

*Wake After setting the alarm, the computer turns itself on from a suspend state when the alarm goes off.

5.3.6 F81966 Super IO Configuration


Use the **F81966 Super IO Configuration** menu (**BIOS Menu 13**) to set or change the configurations for the serial ports.

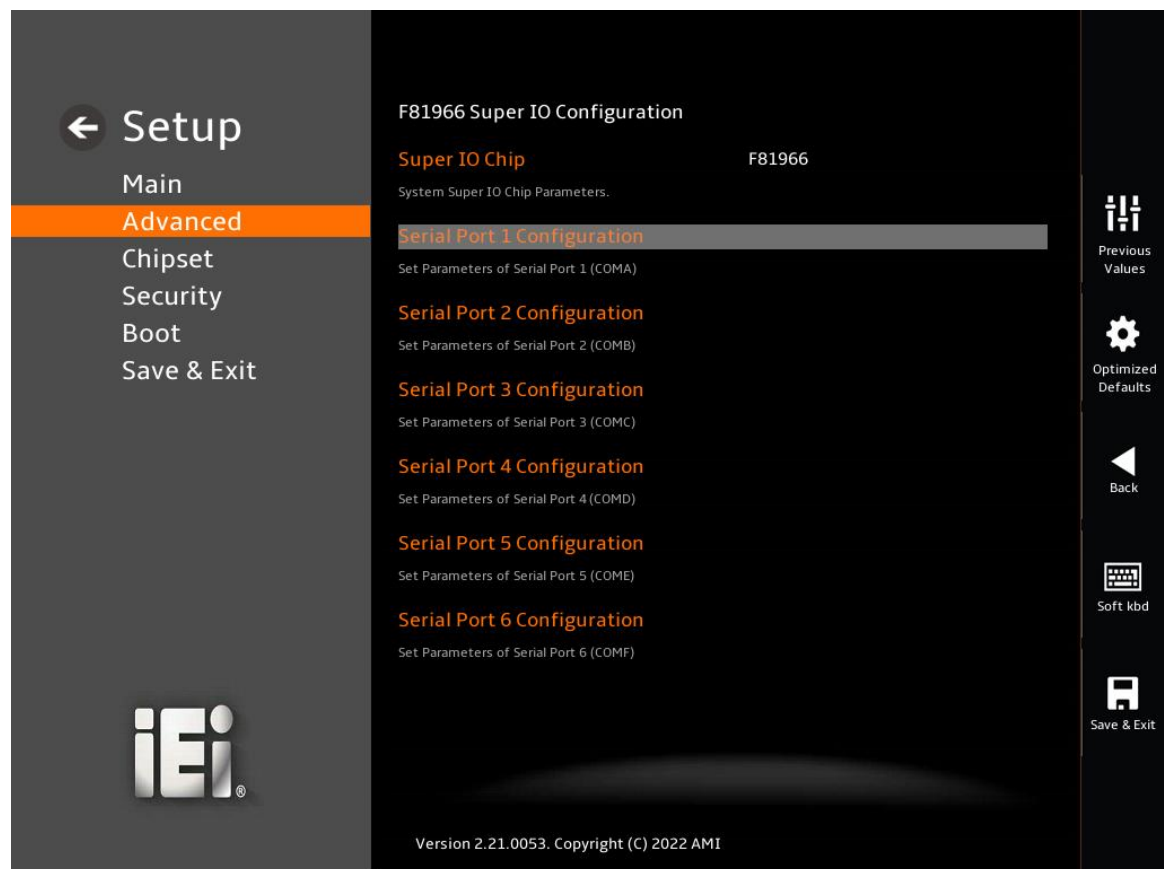

BIOS Menu 13: F81966 Super IO Configuration

5.3.6.1 Serial Port 1 Configuration

Use the **Serial Port 1 Configuration** menu (**BIOS Menu 14**) to configure the serial port 1.

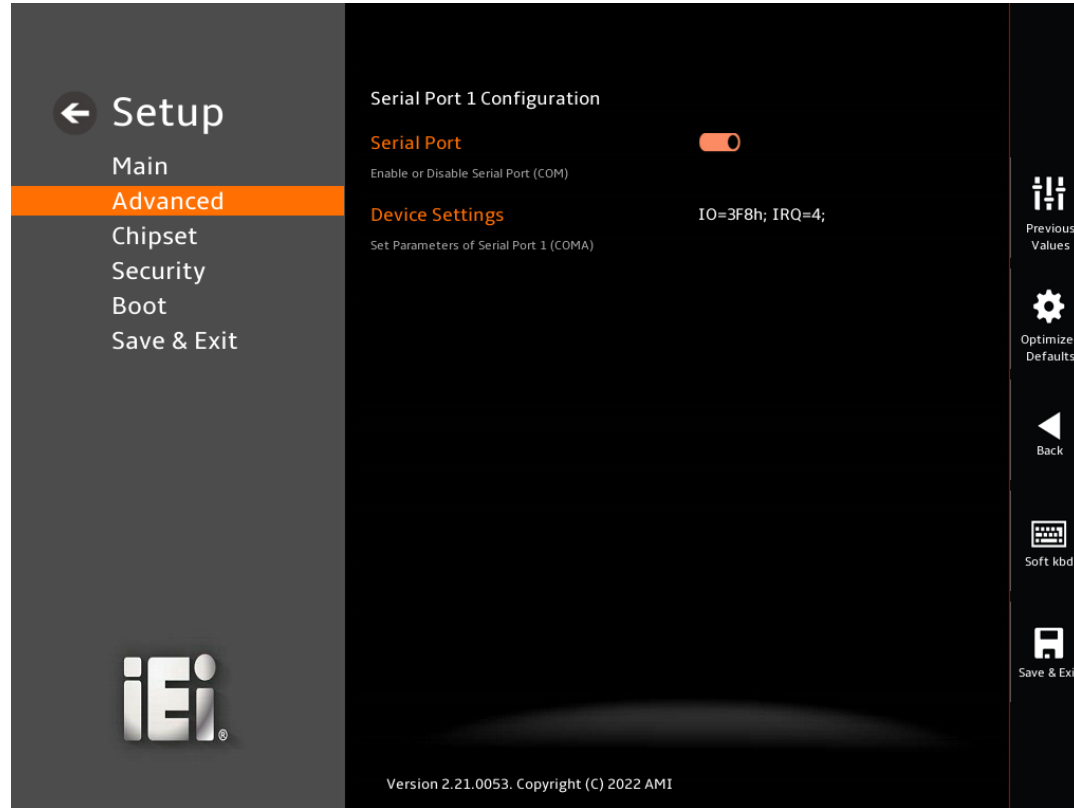

BIOS Menu 14: Serial Port 1 Configuration Menu

➔ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- ➔ **Disabled** Disable the serial port
- ➔ **Enabled DEFAULT** Enable the serial port


➔ Device Settings

The **Device Settings** option to show the serial port IO port address and interrupt address.

- ➔ **IO=3F8h;** Serial Port I/O port address is 3F8h and the interrupt
IRQ=4 address is IRQ4

5.3.6.2 Serial Port 2 Configuration

Use the **Serial Port 2 Configuration** menu (**BIOS Menu 15**) to configure the serial port 2.

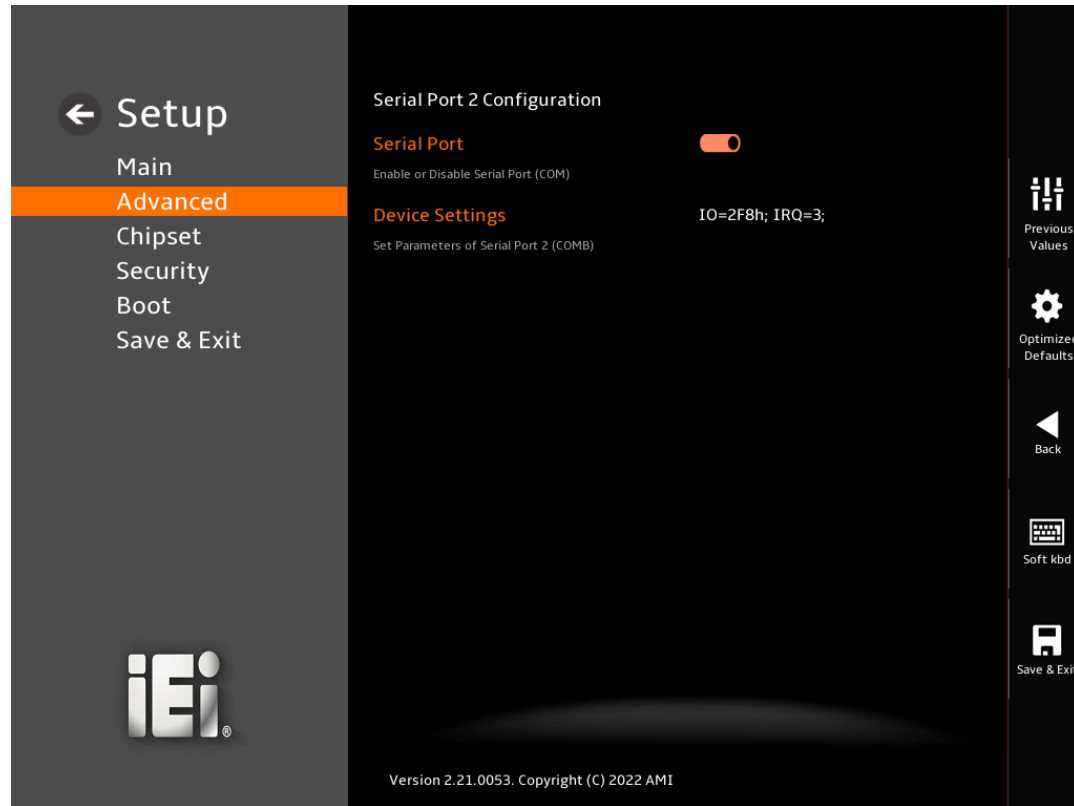

BIOS Menu 15: Serial Port 2 Configuration Menu

➔ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- ➔ **Disabled** Disable the serial port
- ➔ **Enabled DEFAULT** Enable the serial port


➔ Device Settings

The **Device Settings** option to show the serial port IO port address and interrupt address.

- ➔ **IO=2F8h;** Serial Port I/O port address is 2F8h and the interrupt
IRQ=3 address is IRQ3

5.3.6.3 Serial Port 3 Configuration

Use the **Serial Port 3 Configuration** menu (**BIOS Menu 16**) to configure the serial port 3.

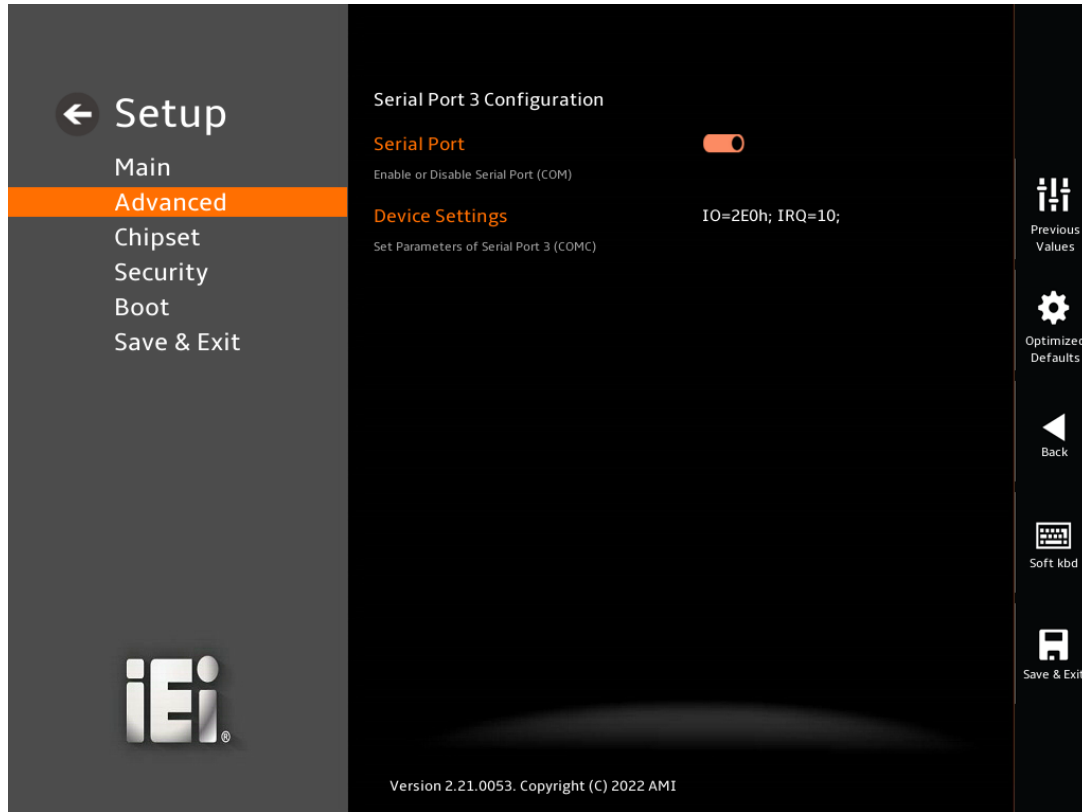

BIOS Menu 16: Serial Port 3 Configuration Menu

➔ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- ➔ **Disabled** Disable the serial port
- ➔ **Enabled DEFAULT** Enable the serial port


➔ Device Settings

The **Device Settings** option to show the serial port IO port address and interrupt address.

- ➔ **IO=2E0h;** Serial Port I/O port address is 2E0h and the interrupt
IRQ=10 address is IRQ10

5.3.6.4 Serial Port 4 Configuration

Use the **Serial Port 4 Configuration** menu (**BIOS Menu 17**) to configure the serial port 4.

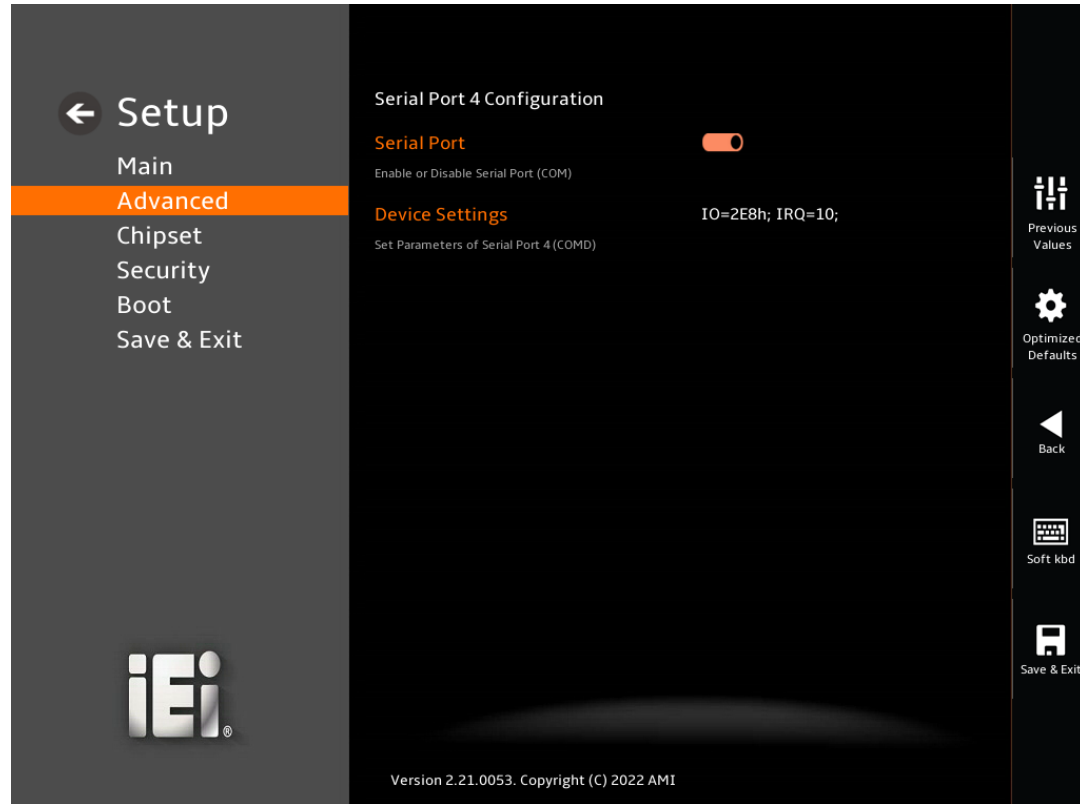

BIOS Menu 17: Serial Port 4 Configuration Menu

→ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled** Disable the serial port
- **Enabled** **DEFAULT** Enable the serial port


→ Device Settings

The **Device Settings** option to show the serial port IO port address and interrupt address.

- **IO=2E8h;**
IRQ=10 Serial Port I/O port address is 2E8h and the interrupt address is IRQ10

5.3.6.5 Serial Port 5 Configuration

Use the **Serial Port 5 Configuration** menu (**BIOS Menu 18**) to configure the serial port 5.

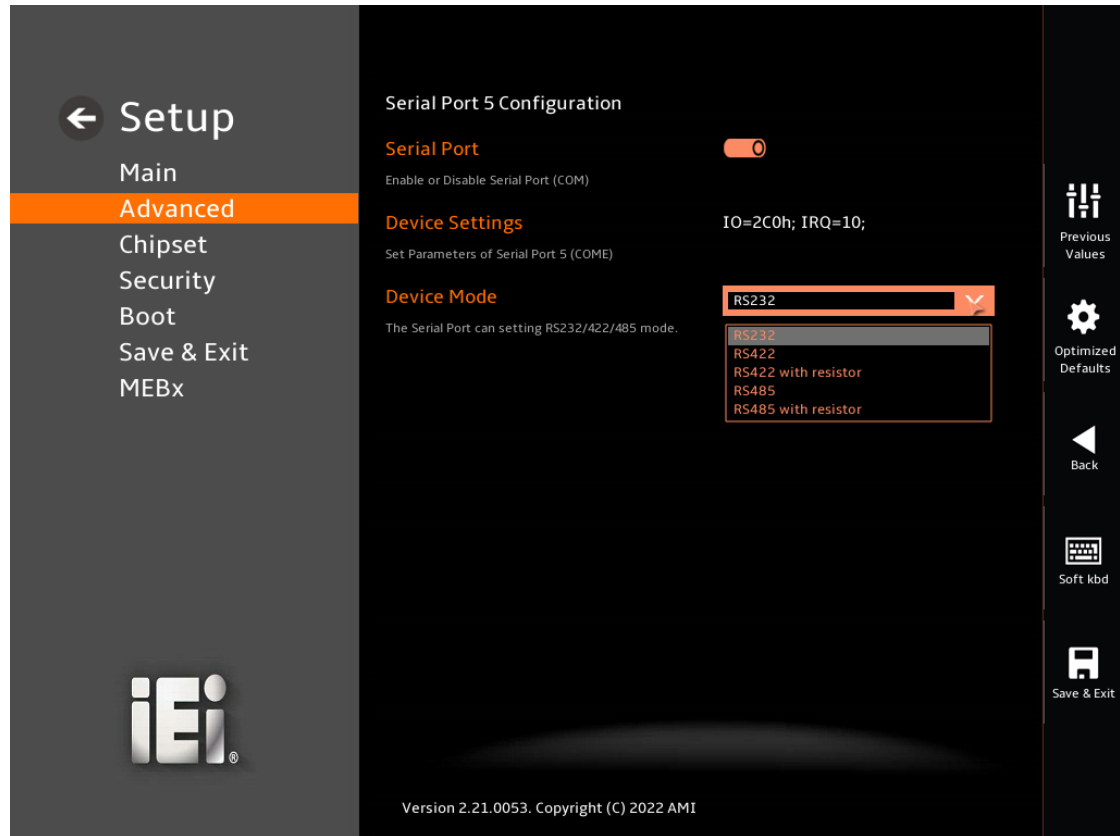

BIOS Menu 18: Serial Port 5 Configuration Menu

➔ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- ➔ **Disabled** Disable the serial port
- ➔ **Enabled** **DEFAULT** Enable the serial port

➔ Device Settings

The **Device Settings** option to show the serial port IO port address and interrupt address.

- ➔ **IO=2C0h;** Serial Port I/O port address is 2C0h and the interrupt
IRQ=10 address is IRQ10

TANK-XM811


➔ Device Mode [Printer Mode]

Use the **Device Mode** option to select the Serial Port 5 signaling mode. Configuration options are listed below.

- ➔ **RS232** **DEFAULT** Serial Port 5 signaling mode is RS-232
- ➔ **RS422** Serial Port 5 signaling mode is RS-422
- ➔ **RS422 with resistor** Serial Port 5 signaling mode is RS-422 with resistor
- ➔ **RS485** Serial Port 5 signaling mode is RS-485
- ➔ **RS485 with resistor** Serial Port 5 signaling mode is RS-485 with resistor

5.3.6.6 Serial Port 6 Configuration

Use the **Serial Port 6 Configuration** menu (**BIOS Menu 19**) to configure the serial port 6.

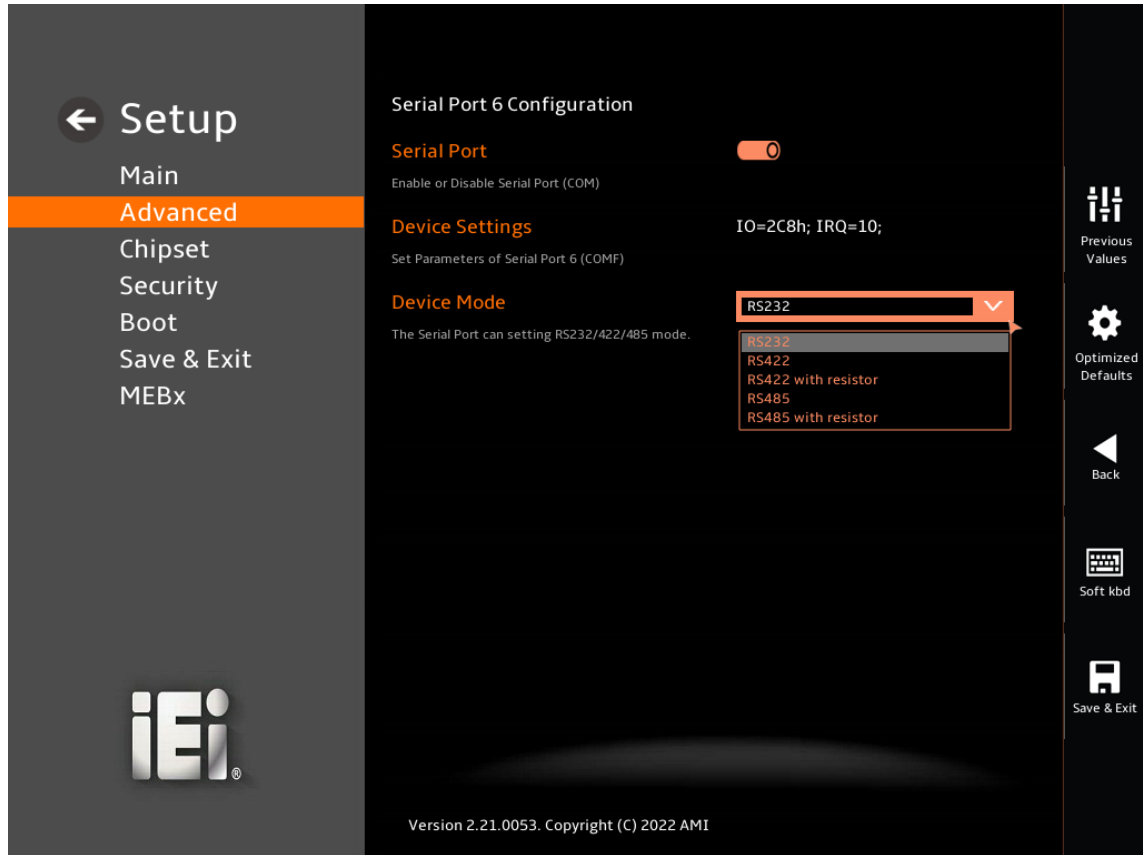

BIOS Menu 19: Serial Port 6 Configuration Menu

➔ **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the serial port.

- ➔ **Disabled** Disable the serial port
- ➔ **Enabled** **DEFAULT** Enable the serial port

➔ **Device Settings**

The **Device Settings** option to show the serial port IO port address and interrupt address.

- ➔ **IO=2C8h;** Serial Port I/O port address is 2C8h and the interrupt
IRQ=10 address is IRQ10


➔ **Device Mode [Printer Mode]**

Use the **Device Mode** option to select the Serial Port 5 signaling mode. Configuration options are listed below.

- ➔ **RS232** **DEFAULT** Serial Port 5 signaling mode is RS-232
- ➔ **RS422** Serial Port 5 signaling mode is RS-422
- ➔ **RS422 with** Serial Port 5 signaling mode is RS-422 with resistor
resistor
- ➔ **RS485** Serial Port 5 signaling mode is RS-485
- ➔ **RS485 with** Serial Port 5 signaling mode is RS-485 with resistor
resistor

5.3.7 EC KB9068 H-W Monitor

The **EC KB9068 H-W Monitor** menu (**BIOS Menu 20**) contains the smart fan mode configuration submenu and shows the state of H/W real-time operating temperature, fan speeds and system voltages.

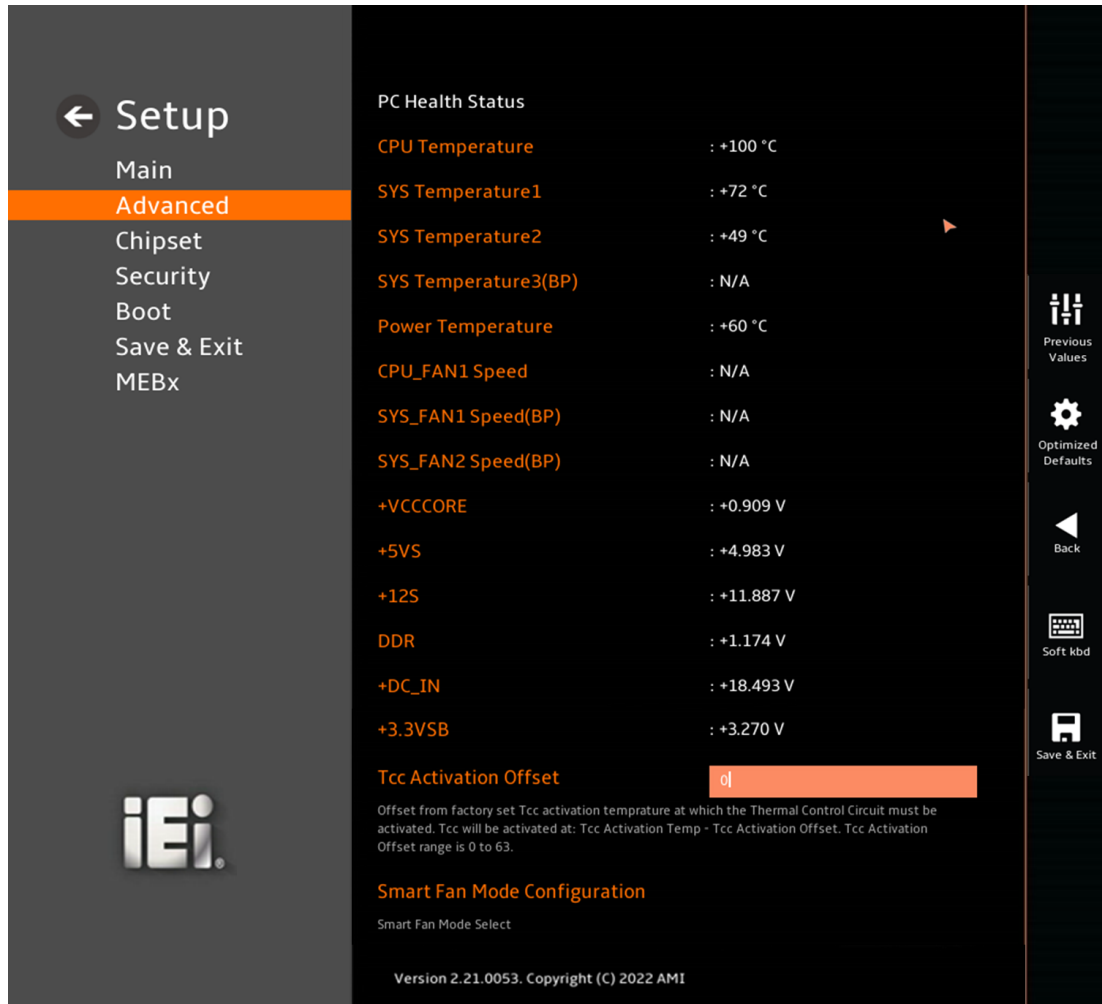

BIOS Menu 20: EC KB9068 H-W Monitor


➔ PC Health Status

The following system parameters and values are shown. The system parameters that are monitored are:

- System Temperatures:
 - o CPU Temperature
 - o SYS Temperature 1
 - o SYS Temperature 2
 - o SYS Temperature 3 (BP)
 - o Power Temperature
- Fan Speeds:
 - o CPU_FAN1 Speed
 - o SYS_FAN1 Speed (BP)
 - o SYS_FAN2 Speed (BP)
- Voltages:
 - o +VCCCORE
 - o +5VS
 - o +V12S
 - o +DDR
 - o +DC_IN
 - o + 3.3VSB

5.3.7.1 Smart Fan Mode Configuration

Use the **Smart Fan Mode Configuration** submenu (**BIOS Menu 21**) to configure the CPU/system fan start/off temperature and control mode.

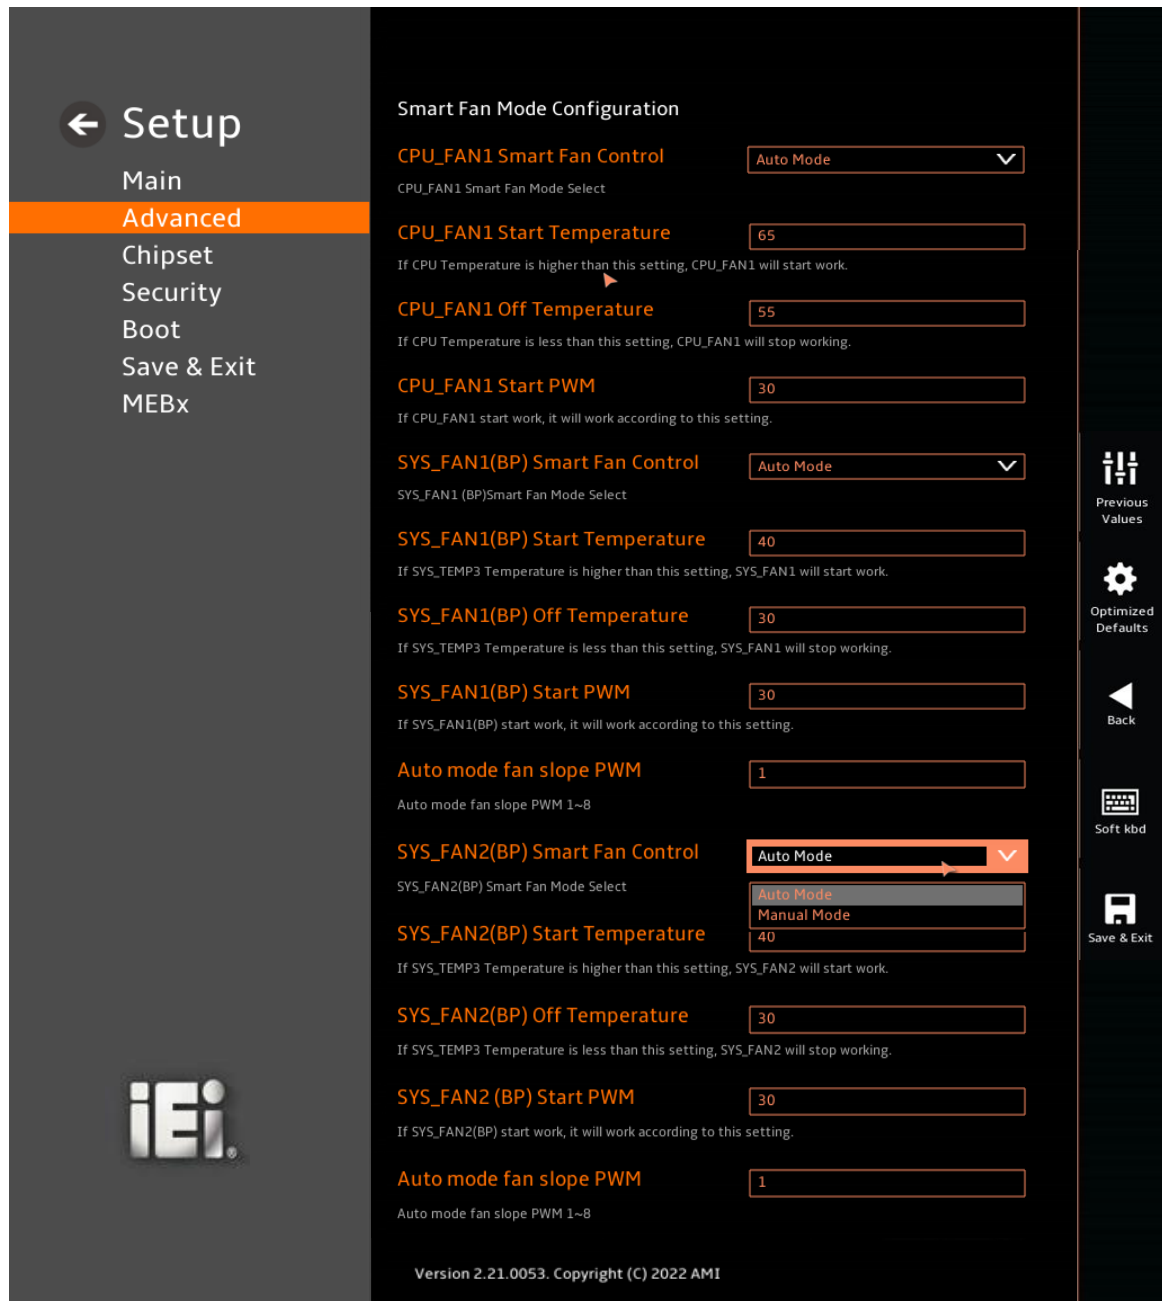

BIOS Menu 21: Smart Fan Mode Configuration

TANK-XM811**→ CPU_FAN1 Smart Fan Control [Auto Mode]**

Use the **CPU_FAN1 Smart Fan Control** option to configure the CPU Smart Fan.

- Manual Mode** The fan spins at the speed set in Manual Mode settings.
- Auto Mode DEFAULT** The fan adjusts its speed using Auto Mode settings.

→ CPU_FAN1 Start Temperature [65]

If the CPU temperature is between **fan off** and **fan start**, the fan speed change to **fan start PWM**. To set a value, Use the + or – key to change the value or enter a decimal number between 1 and 100.

→ CPU_FAN1 Off Temperature [55]

If the CPU temperature is **lower than the value** set this option, the fan speed change to **be lowest**. To set a value, Use the + or – key to change the value or enter a decimal number between 1 and 100.

→ CPU_FAN1 Start PWM [30]

Use the CPU_FAN1 Start PWM option to set the **PWM start value**. Use the + or – key to change the value or enter a decimal number between 1 and 100.

→ SYS_FAN1(BP)/SYS_FAN2(BP) Smart Fan Control [Auto Mode]

Use the **SYS_FAN1(BP)/SYS_FAN2(BP) Smart Fan Control** option to configure the System Smart Fan.

- Manual Mode** The fan spins at the speed set in Manual Mode settings.

→ **Auto Mode** **DEFAULT** The fan adjusts its speed using Auto Mode settings.

→ **SYS_FAN1(BP)/SYS_FAN2(BP) Start Temperature [40]**

If the System temperature is between **fan off** and **fan start**, the fan speed change to **fan start PWM**. To set a value, Use the + or – key to change the value or enter a decimal number between 1 and 100.

→ **SYS_FAN1(BP)/SYS_FAN2(BP) Off Temperature [30]**

If the System temperature is **lower than the value** set this option, the fan speed change to **be lowest**. To set a value, Use the + or – key to change the value or enter a decimal number between 1 and 100.

→ **SYS_FAN1(BP)/SYS_FAN2(BP) Start PWM [30]**


Use the SYS_FAN1/SYS_FAN2 Start PWM option to set the **PWM start value**. Use the + or – key to change the value or enter a decimal number between 1 and 100.

→ **Auto mode fan slope PWM [1]**

Use the **Auto mode fan slope PWM** option to select the linear rate at which the PWM mode increases with respect to an increase in temperature. Use the + or – key to change the value or enter a decimal number between 1 and 8

5.3.8 Serial Port Console Redirection

The **Serial Port Console Redirection** menu (**BIOS Menu 22**) allows the console redirection options to be configured. Console Redirection allows users to maintain a system remotely by re-directing keyboard input and text output through the serial port.

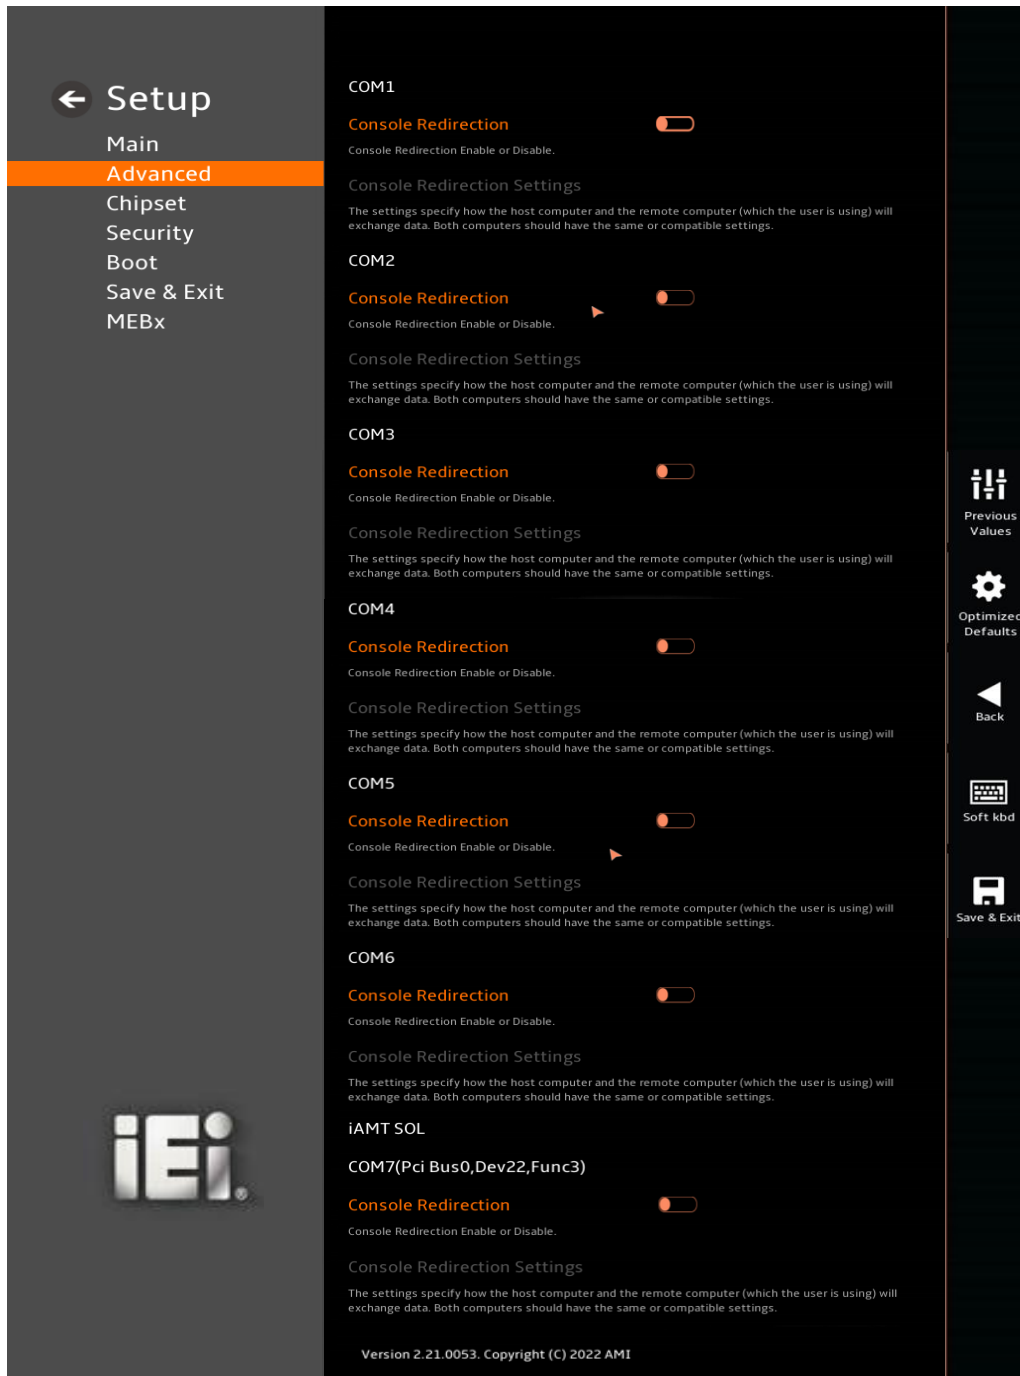

BIOS Menu 22: Serial Port Console Redirection

➔ **Console Redirection [Disabled]**

Use **Console Redirection** option to enable or disable the console redirection function.


➔ **Disabled** **DEFAULT** Disabled the console redirection function

➔ **Enabled** Enabled the console redirection function

The **Console Redirection Settings** submenu will be available when the **Console Redirection** option is enabled.

5.3.8.1 Console Redirection Settings

The following options are available in the **Console Redirection Settings** submenu (**BIOS Menu 23**) when the **COM Console Redirection (for COM1 to COM6)** option is enabled.

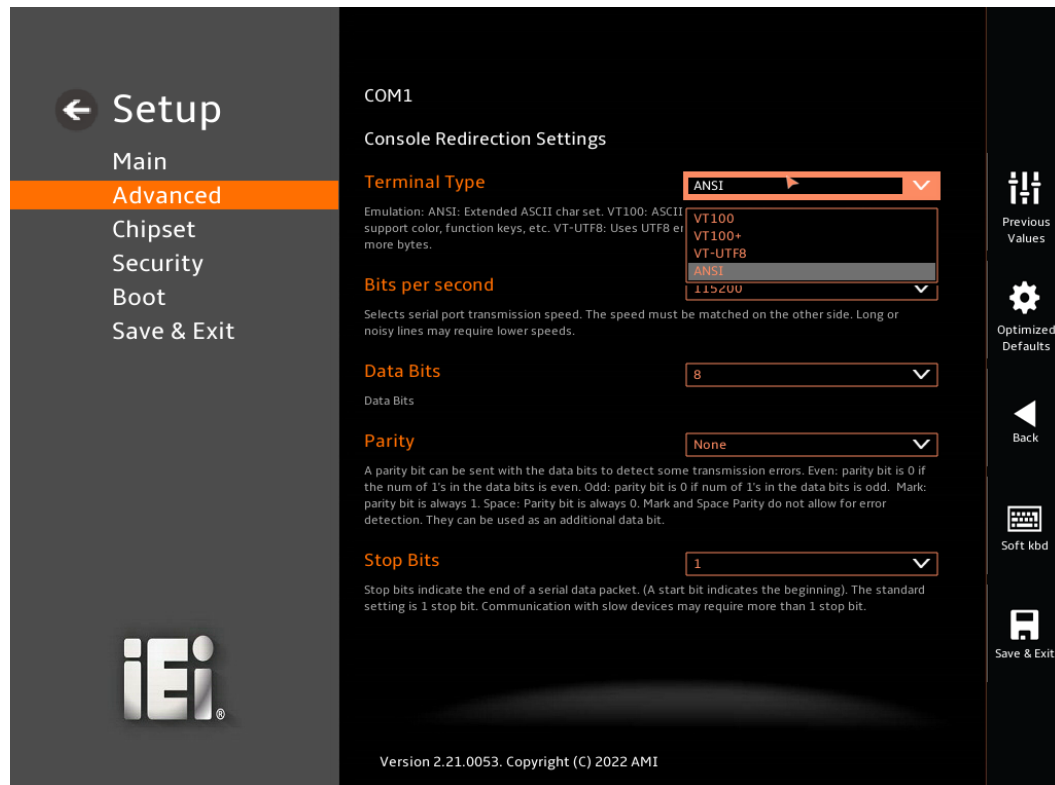

BIOS Menu 23: COM Console Redirection Settings

➔ **Terminal Type [ANSI]**

Use the **Terminal Type** option to specify the remote terminal type.

- ➔ **VT100** The target terminal type is VT100
- ➔ **VT100+** The target terminal type is VT100+
- ➔ **VT-UTF8** The target terminal type is VT-UTF8

TANK-XM811

→ **ANSI** **DEFAULT** The target terminal type is ANSI

→ **Bits per second [115200]**

Use the **Bits per second** option to specify the serial port transmission speed. The speed must match on the other side. Long or noisy lines may require lower speeds.

→ **9600** Sets the serial port transmission speed at 9600.

→ **19200** Sets the serial port transmission speed at 19200.

→ **38400** Sets the serial port transmission speed at 38400.

→ **57600** Sets the serial port transmission speed at 57600.

→ **115200** **DEFAULT** Sets the serial port transmission speed at 115200.

→ **Data Bits [8]**

Use the **Data Bits** option to specify the number of data bits.

→ **7** Sets the data bits at 7.

→ **8** **DEFAULT** Sets the data bits at 8.

→ **Parity [None]**

Use the **Parity** option to specify the parity bit that can be sent with the data bits for detecting the transmission errors.

→ **None** **DEFAULT** No parity bit is sent with the data bits.

→ **Even** The parity bit is 0 if the number of ones in the data bits is even.

→ **Odd** The parity bit is 0 if the number of ones in the data bits is odd.

→ **Mark** The parity bit is always 1. This option does not allow for error detection.

→ Space

The parity bit is always 0. This option does not allow for error detection.

→ Stop Bits [1]


Use the **Stop Bits** option to specify the number of stop bits used to indicate the end of a serial data packet. Communication with slow devices may require more than 1 stop bit.

→ 1 **DEFAULT** Sets the number of stop bits at 1.

→ 2 Sets the number of stop bits at 2.

5.3.9 NVMe Configuration

Use the **NVMe Configuration (BIOS Menu 24)** menu to display the NVMe controller and device information.

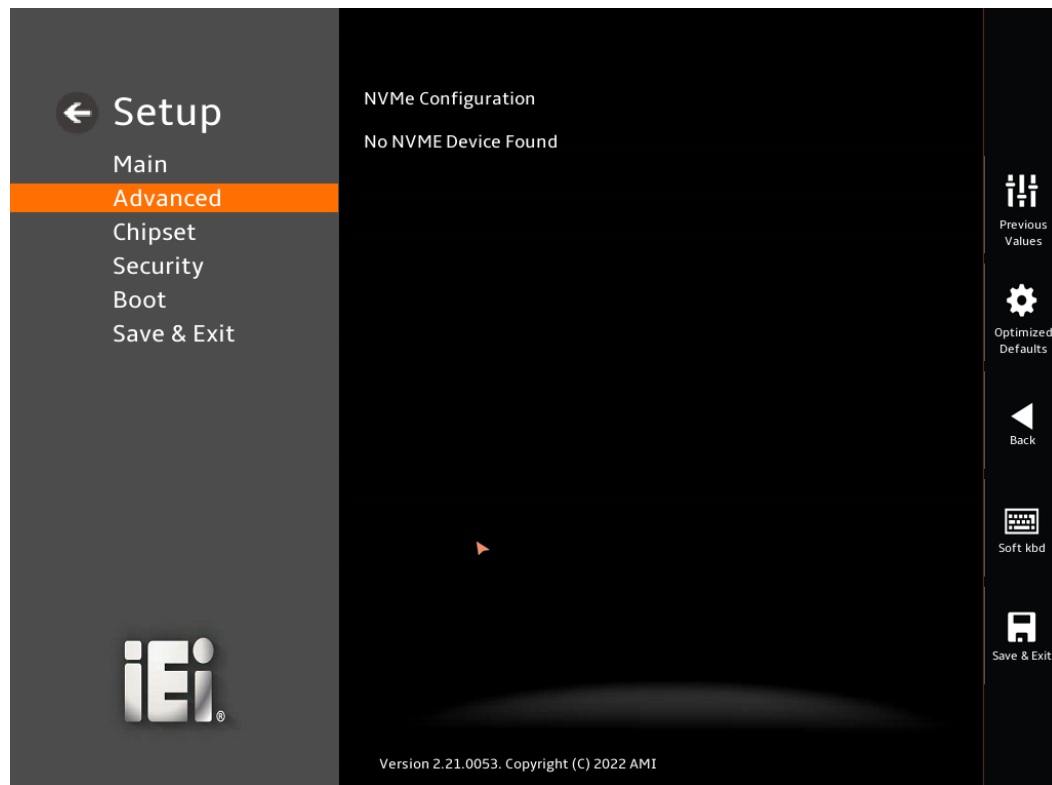

BIOS Menu 24: NVMe Configuration


5.4 Chipset

Use the **Chipset** menu (**BIOS Menu 25**) to access the PCH IO and System Agent (SA) configuration menus.



WARNING!


Setting the wrong values for the Chipset BIOS selections in the Chipset BIOS menu may cause the system to malfunction.

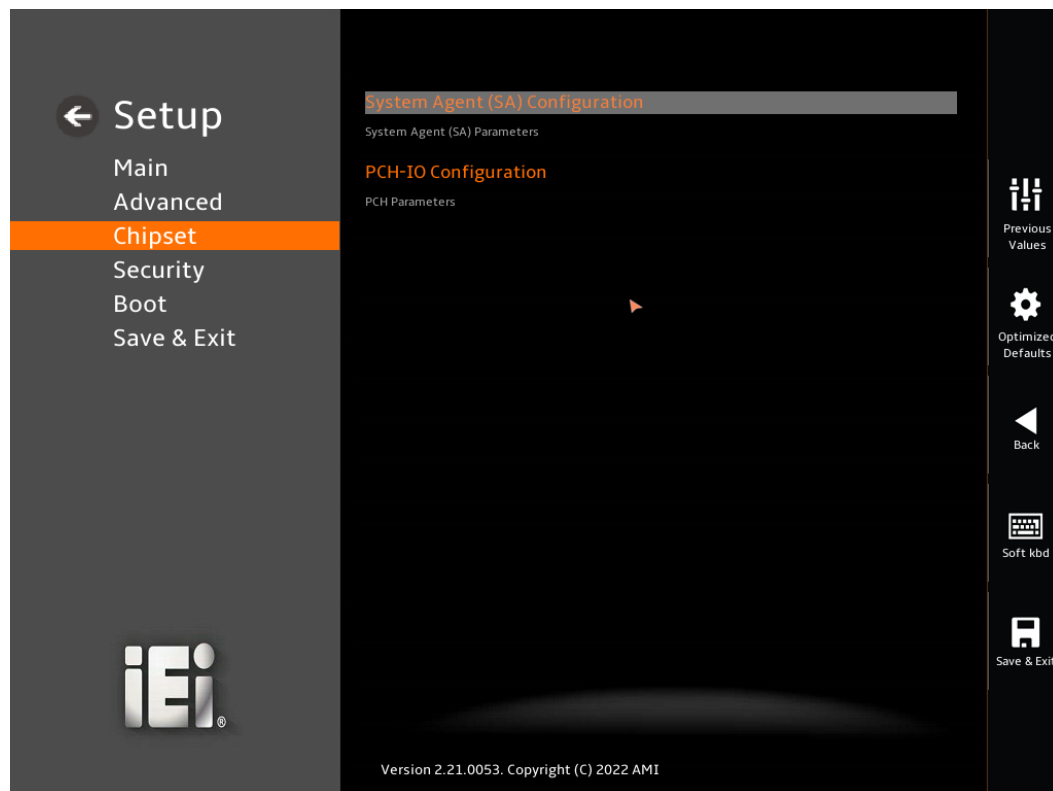

BIOS Menu 25: Chipset

5.4.1 System Agent (SA) Configuration

Use the **System Agent (SA) Configuration** menu (**BIOS Menu 26**) to configure the System Agent (SA) parameters.

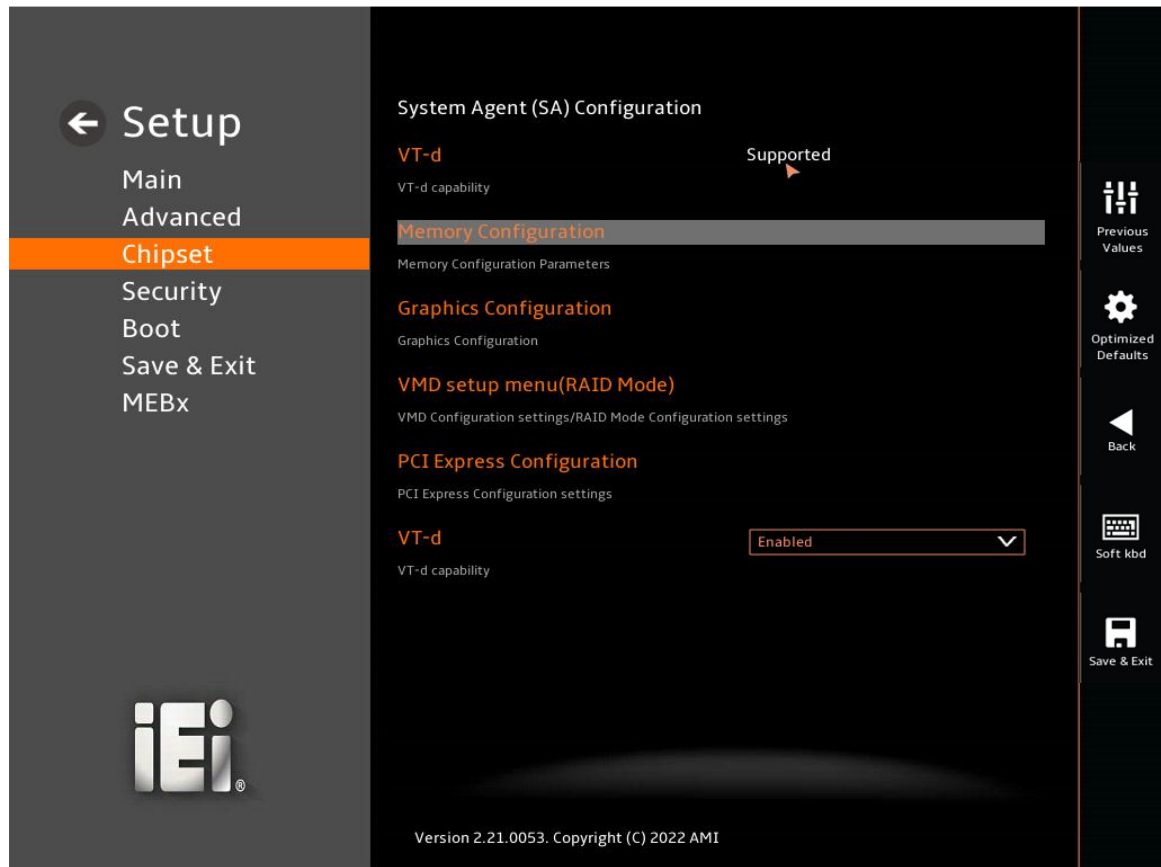

BIOS Menu 26: System Agent (SA) Configuration


➔ **VT-d [Enabled]**

Use the **VT-d** option to enable or disable the VT-d capability.

- ➔ **Disabled** Disable the VT-d capability
- ➔ **Enabled** **DEFAULT** Enable the VT-d capability

5.4.1.1 Memory Configuration

Use the **Memory Configuration** submenu (**BIOS Menu 27**) to view memory information.

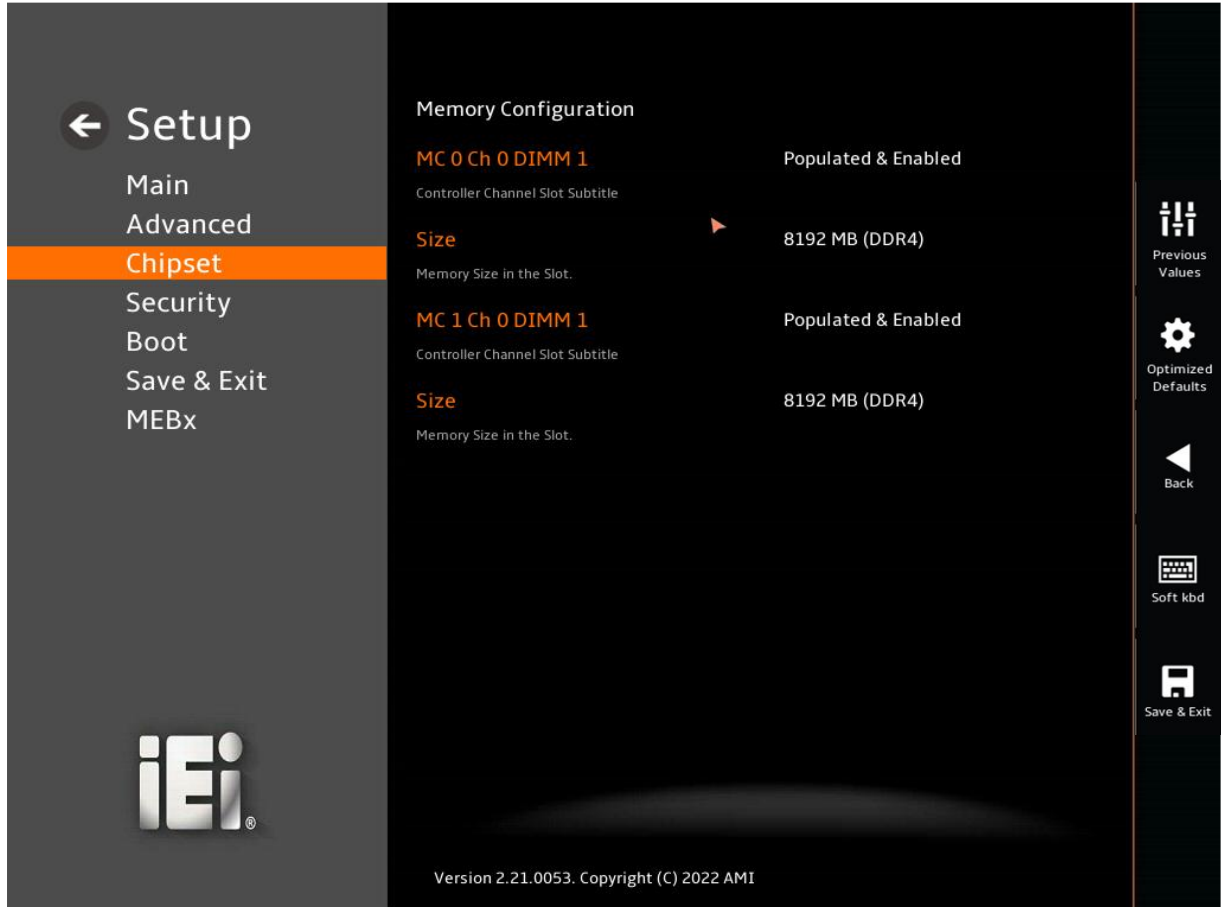

BIOS Menu 27: Memory Configuration

5.4.1.2 Graphics Configuration

Use the **Graphics Configuration (BIOS Menu 28)** menu to configure the video device connected to the system.



BIOS Menu 28: Graphics Configuration

➔ Primary Display [Auto]

Use the **Primary Display** option to select the primary graphics controller the system uses.

The following options are available:

- Auto **Default**
- IGFX
- PEG
- PCI
- SG


TANK-XM811**→ Internal Graphics [Enabled]**

Use the **Internal Graphics** option to configure whether to keep IGFX enabled. If user wants to support dual display by internal graphics and external graphics, this Internal Graphics option should be set to Enabled and the above Primary Display option should be set to IGFX.

- | | | | |
|---|-----------------|----------------|----------------|
| → | Auto | | Auto mode |
| → | Disabled | | Disables IGFX. |
| → | Enabled | Default | Enables IGFX. |

5.4.1.3 VMD Configuration/RAID Mode Configuration

Use the **VMD Configuration/RAID Mode Configuration** menu (**BIOS Menu 26**) to configure the VMD and RAID mode configuration settings.

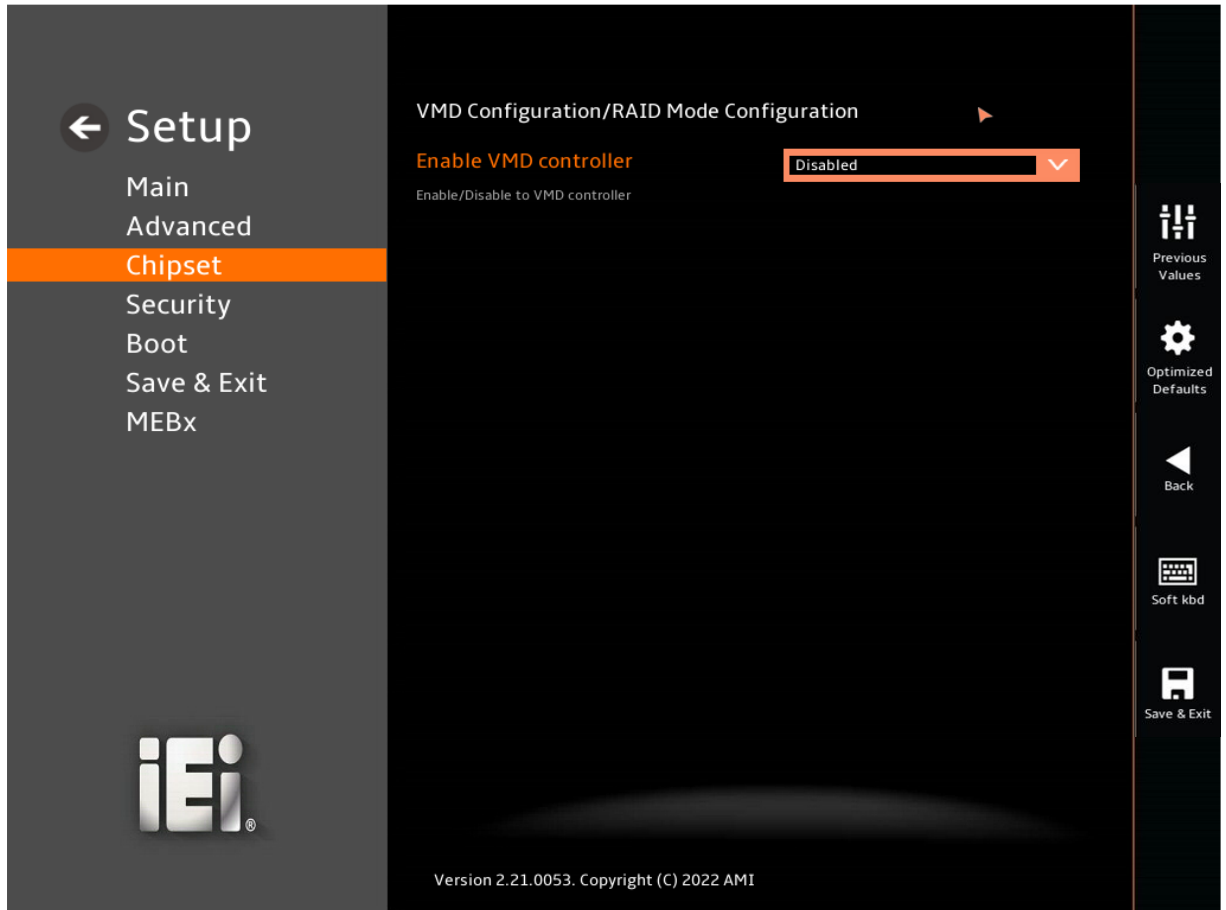

BIOS Menu 29: VMD Configuration/RAID Mode Configuration


➔ Enable VMD controller [Disabled]

Use the **Enable VMD controller** option to enable or disable the VMD controller.

- ➔ **Disabled** **DEFAULT** Disable the VMD controller
- ➔ **Enabled** Enable the VMD controller

5.4.1.4 PCI Express Configuration

Use the **PCI Express Configuration** menu (**BIOS Menu 30**) to configure the PCI Express Configuration settings.

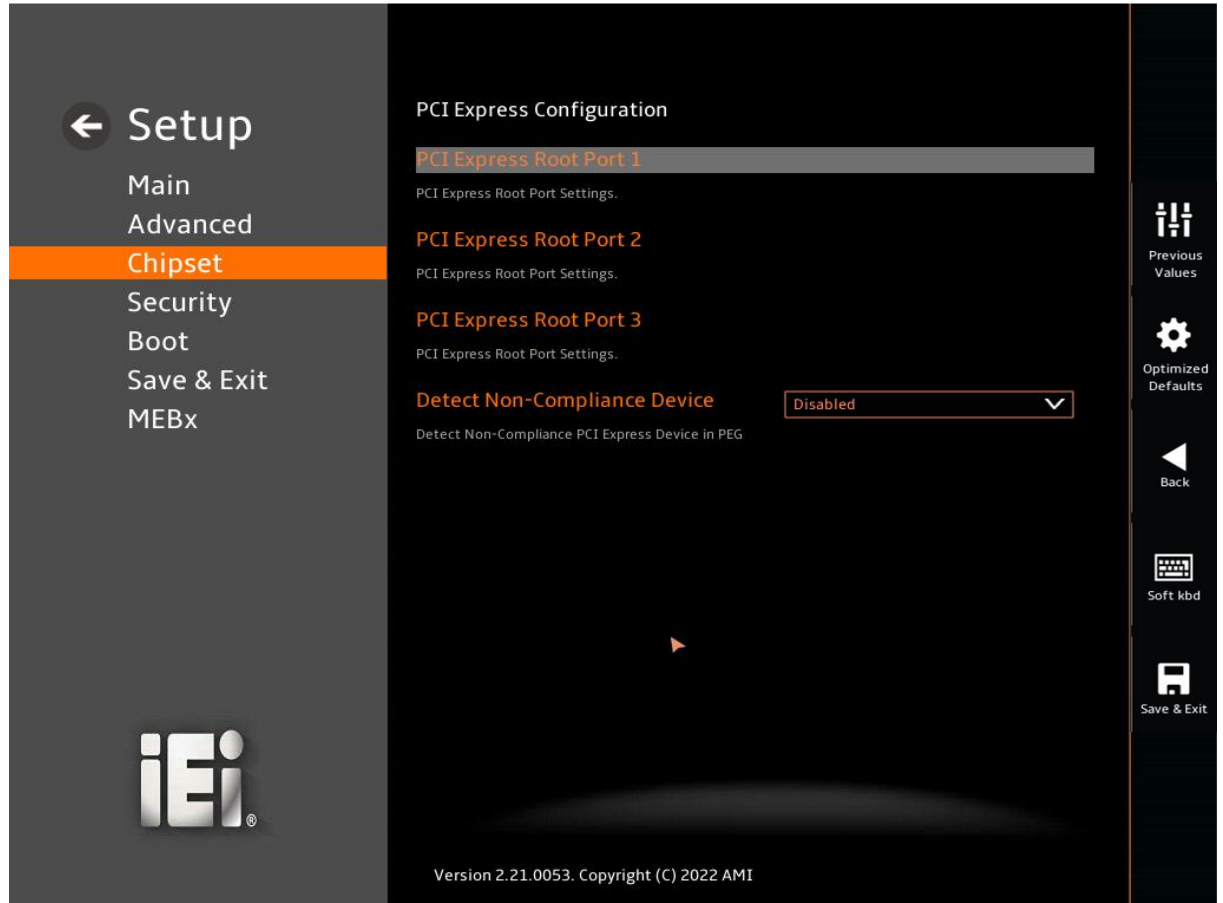

BIOS Menu 30: PCI Express Configuration

➔ Detect Non-Compliance Device [Disabled]

Use the **Detect Non-Compliance Device** option to detect non-compliance PCIe device in PEG.

- ➔ **Disabled** **DEFAULT** Do not detect non-compliance PCIe device in PEG
- ➔ **Enabled** Detect non-compliance PCIe device in PEG

5.4.1.4.1 PCI Express Root Port

Use the PCI Express Root Port 1, PCI Express Root Port 2, and PCI Express Root Port 3 submenus (**BIOS Menu 31**) to configure the PCI Express Root Port.

5.4.2 PCH-IO Configuration

Use the **PCH-IO Configuration** menu (**BIOS Menu 32**) to configure the PCH parameters.



BIOS Menu 32: PCH-IO Configuration

➔ Auto Power Button Function [Disabled (ATX)]

The **Auto Power Button Function** BIOS option shows the power mode state. Use the **J_ATX_AT1** to switch the AT/ATX power mode.

- ➔ **Enabled (AT)** The system power mode is ATX.
- ➔ **Disabled (ATX)** The system power mode is ATX.

➔ Restore AC Power Loss [Last State]

Use the **Restore AC Power Loss** BIOS option to specify what state the system returns to if there is a sudden loss of power to the system when the power mode is ATX.

- ➔ **Power Off** The system remains turned off

- ➔ **Power On** The system turns on
- ➔ **Last State** **DEFAULT** The system returns to its previous state. If it was on, it turns itself on. If it was off, it remains off.

➔ **Power Saving Function (EUP) [Disabled]**

Use the **Power Saving Function (EUP)** BIOS option to enable or disable the power saving function.

- ➔ **Disabled** **DEFAULT** Power saving function is disabled.
- ➔ **Enabled** Power saving function is enabled. It will reduce power consumption when the system is off.

➔ **USB Power SW1 [+5V DUAL]**

Use the **USB Power SW1** BIOS option to configure the USB power source for the corresponding USB connectors (Table 5-3).

- ➔ **+5V DUAL** **DEFAULT** Sets the USB power source to +5V dual
- ➔ **+5V** Sets the USB power source to +5V

➔ **USB Power SW2 [+5V DUAL]**

Use the **USB Power SW2** BIOS option to configure the USB power source for the corresponding USB connectors (Table 5-3).


- ➔ **+5V DUAL** **DEFAULT** Sets the USB power source to +5V dual
- ➔ **+5V** Sets the USB power source to +5V

BIOS Options	Configured USB Ports
USB Power SW1	LAN2_USB1 (external USB 3.2 Gen 2 ports) LAN2_USB2 (external USB 3.2 Gen 2 ports)
USB Power SW2	USB_CN1 (external USB 3.2 Gen 2 ports) USB_CN2 (external USB 3.2 Gen 2 ports)

Table 5-3: BIOS Options and Configured USB Ports

5.4.2.1 PCI Express Configuration

Use the **PCI Express Configuration** submenu (**BIOS Menu 33**) to configure the PCI Express Root Port Settings.

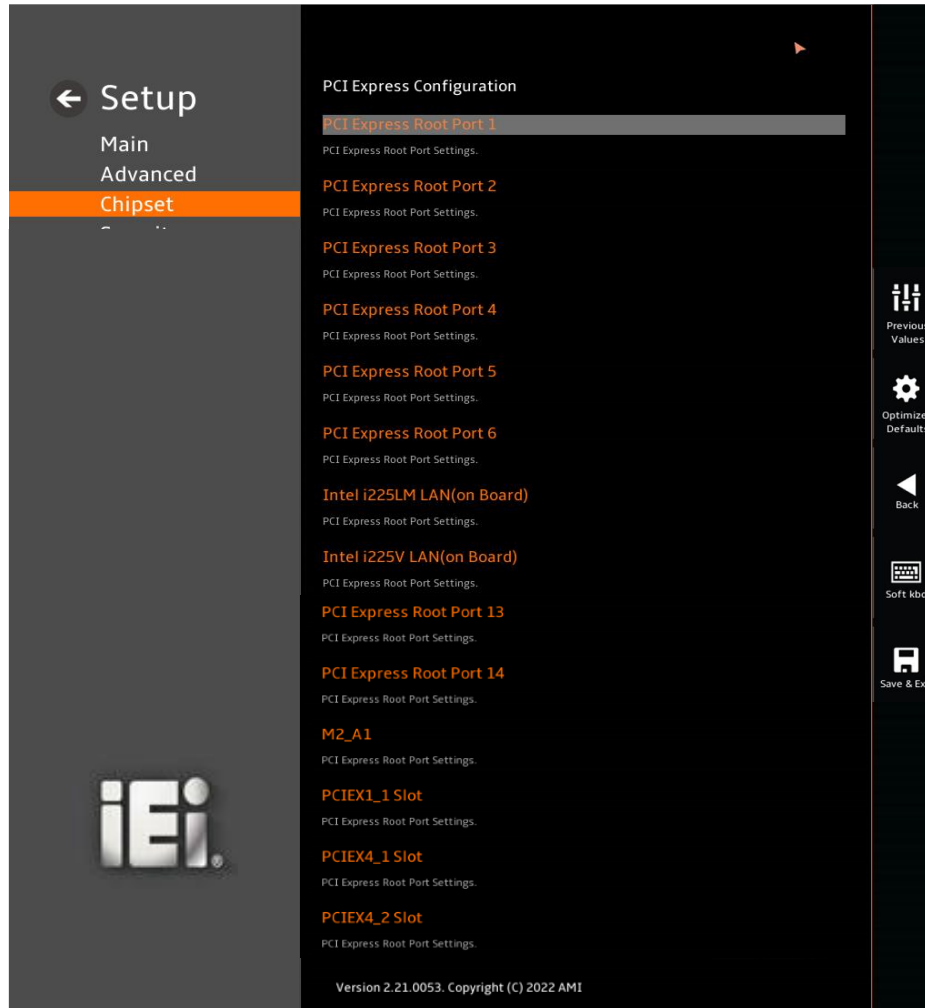

BIOS Menu 33: PCI Express Configuration

5.4.2.1.1 PCIe Slot Configuration

Use the submenus listed in this page (**BIOS Menu 34**) to configure the corresponding PCIe slots.



BIOS Menu 34: PCIe Slot Configuration Submenu

➔ **PCIe Speed [Auto]**

Use the **PCIe Speed** option to specify the PCI Express port speed.

- ➔ **Auto** **DEFAULT** Auto mode.
- ➔ **Gen1** Configure PCIe Speed to Gen1.
- ➔ **Gen2** Configure PCIe Speed to Gen2.
- ➔ **Gen3** Configure PCIe Speed to Gen3.
- ➔ **Gen4** Configure PCIe Speed to Gen4.


➔ **Detect Non-Compliance Device [Disabled]**

Use the **Detect Non-Compliance Device** option to configure whether to detect if a non-compliance PCI Express device is connected to the PCI Express port.

- ➔ **Disabled** **DEFAULT** Do not detect if a non-compliance PCI Express device is connected to the PCI Express port.
- ➔ **Enabled** Detect if a non-compliance PCI Express device is connected to the PCI Express port.

5.4.2.2 SATA Configuration

Use the **SATA Configuration** menu (**BIOS Menu 35**) to change or set the configuration of the SATA devices installed in the system.

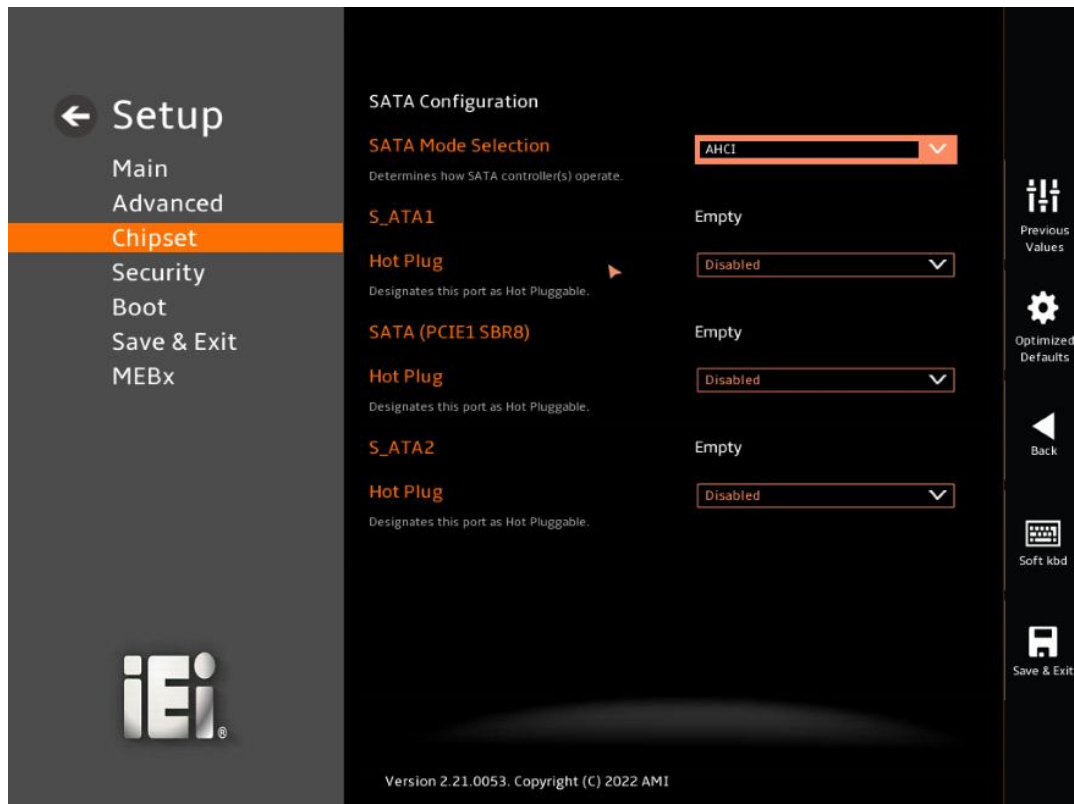

BIOS Menu 35: SATA Configuration

→ SATA Mode Selection [AHCI]

Use the **SATA Mode Selection** option to determine how the SATA devices operate.

→ **AHCI** **DEFAULT** Configures SATA devices as AHCI device.

→ Hot Plug [Disabled]


Use the **Hot Plug** option to designate the correspondent port as hot-pluggable.

→ **Disabled** **DEFAULT** Disables the hot-pluggable function of the SATA port.

→ **Enabled** Designates the SATA port as hot-pluggable.

5.4.2.3 HD Audio Configuration

Use the **HD Audio Configuration** menu (**BIOS Menu 36**) to configure the HD Audio Subsystem settings.

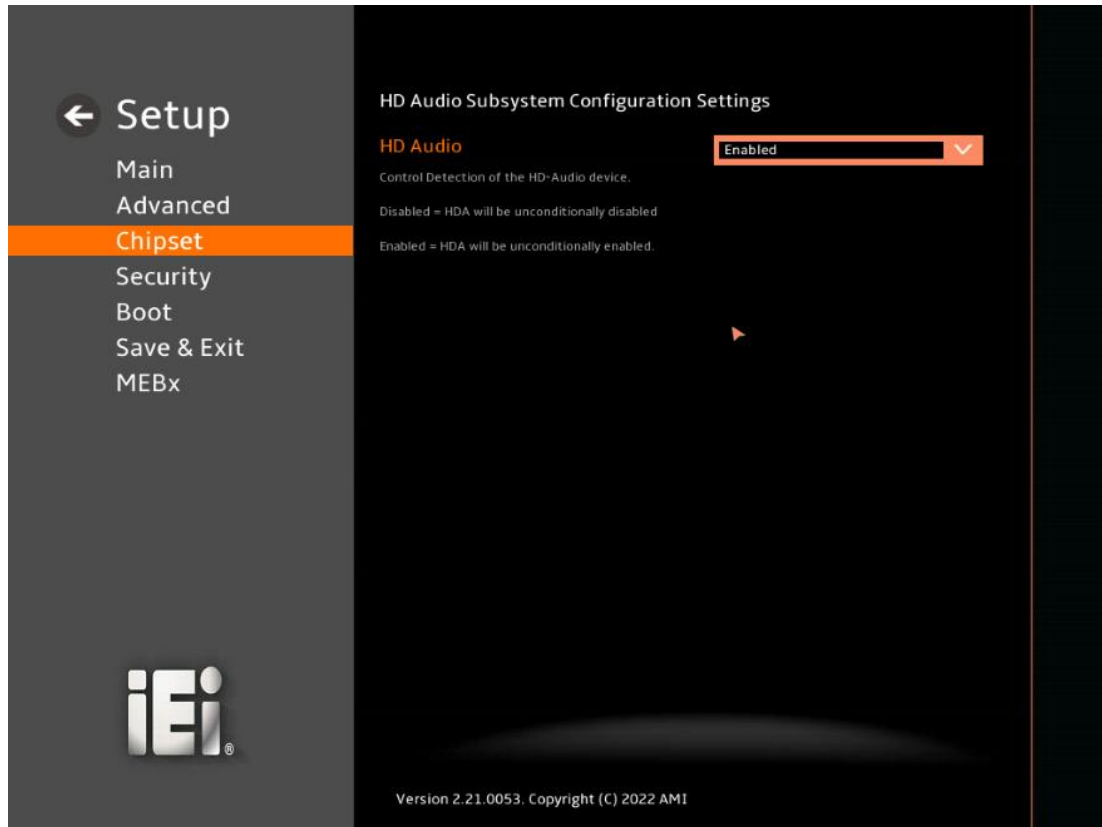

BIOS Menu 36: HD Audio Configuration


➔ HD Audio [Enabled]

Use the **HD Audio** option to enable or disable the High Definition Audio controller.

- ➔ **Disabled** The onboard High Definition Audio controller is disabled.
- ➔ **Enabled** **DEFAULT** The onboard High Definition Audio controller is enabled.

5.5 Security

Use the **Security** menu (**BIOS Menu 37**) to set system and user passwords.

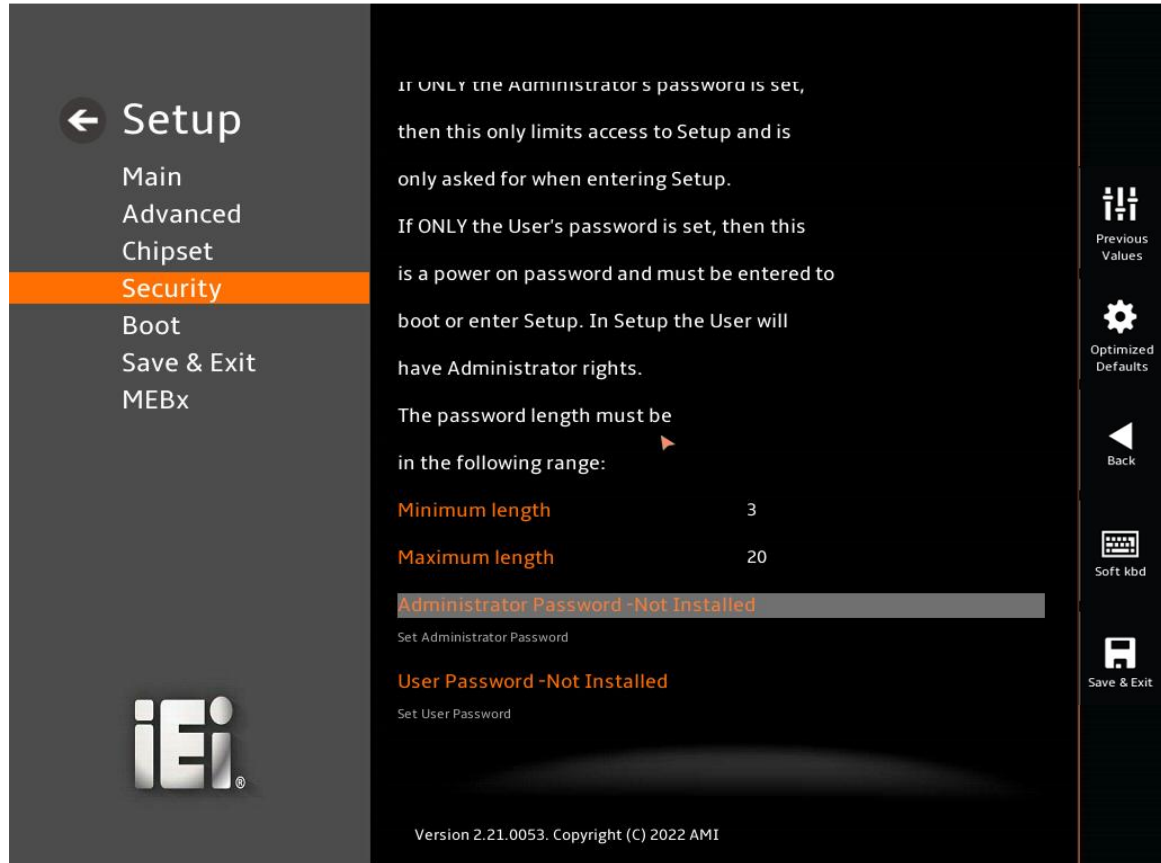

BIOS Menu 37: Security

→ Administrator Password


Use the **Administrator Password** to set or change a administrator password.

→ User Password

Use the **User Password** to set or change a user password.

5.6 Boot

Use the **Boot** menu (**BIOS Menu 38**) to configure system boot options.

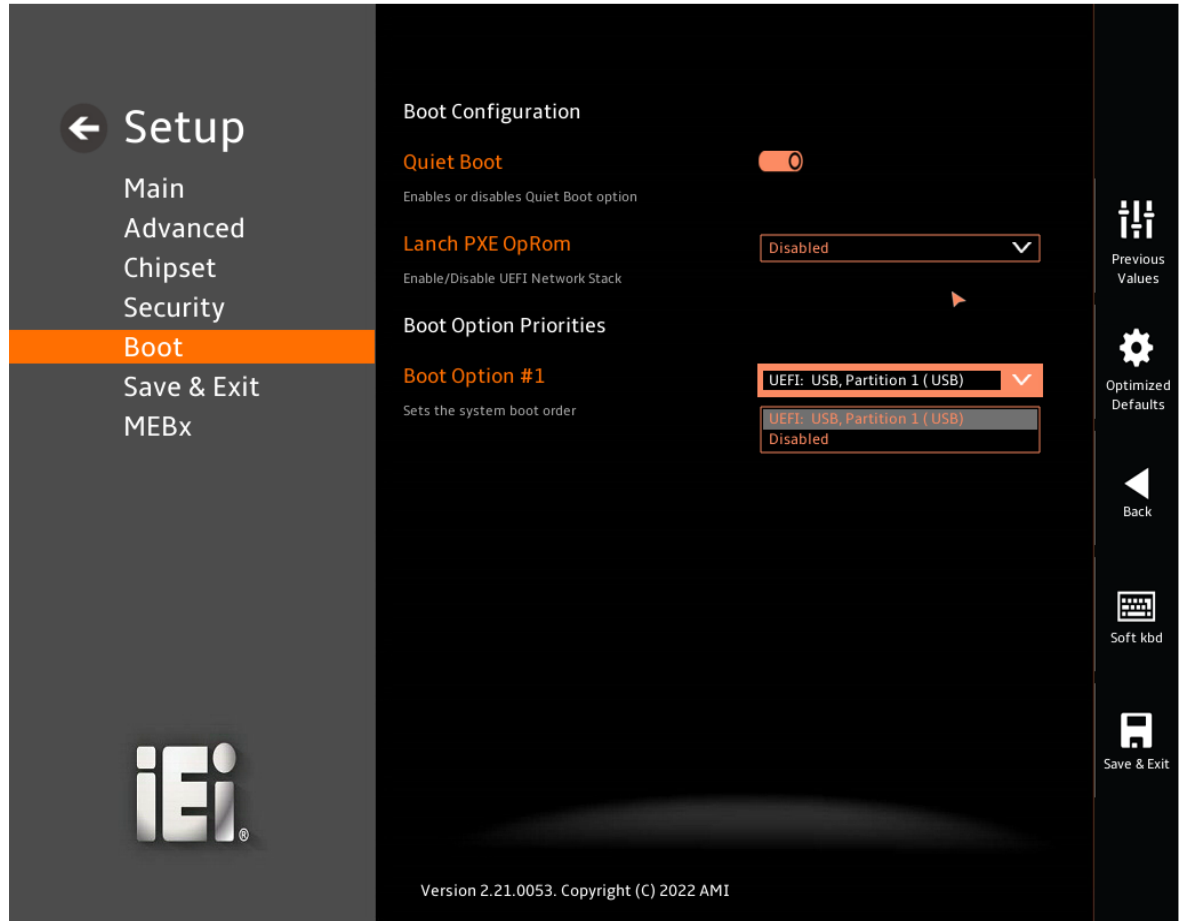

BIOS Menu 38: Boot Menu

5.6.1 Boot Configuration

→ Quiet Boot [Enabled]

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

- **Disabled** Normal POST messages displayed
- **Enabled** **DEFAULT** OEM Logo displayed instead of POST messages

TANK-XM811

→ Launch PXE OpRom [Disabled]

Use the **Launch PXE OpRom** option to enable or disable boot option for legacy network devices.

- **Disabled** **DEFAULT** Ignore all PXE Option ROMs
- **Enabled** Load PXE Option ROMs.

5.6.2 Boot Option Priorities

Use the Boot Option # N to choose the system boots from the peripherals you selected the following Boot Options are listed as an example.

→ Boot Option #1

Sets the system boot order **UEFI: KingstonDataTraveler2.0** as the second priority.

- **UEFI: KingstonDataTraveler2.0, Partition 1**
- **Disabled**


→ Boot Option #2

Sets the system boot order **ADATA SP580** as the first priority.

- **Windows Boot Manager (P1: ADATA SSD SP580 240GB)**
- **Disabled**

5.7 Save & Exit

Use the **Save & Exit** menu (**BIOS Menu 39**) to load default BIOS values, optimal failsafe values and to save configuration changes.

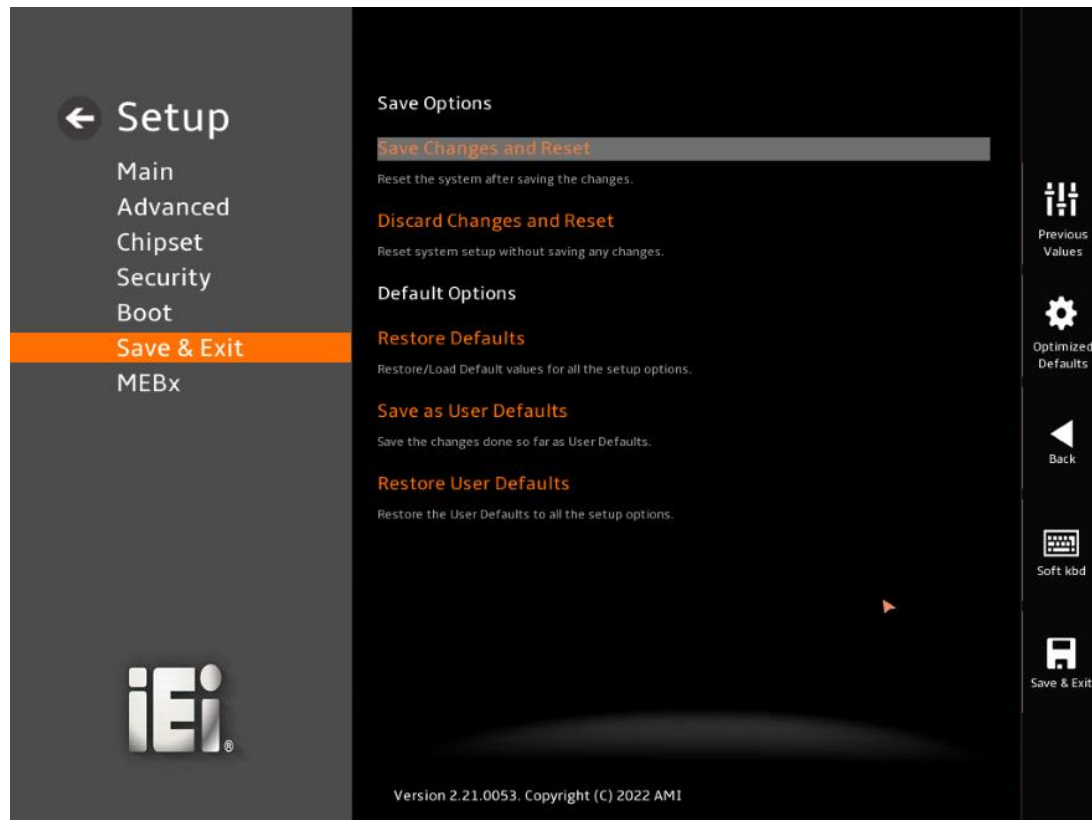

BIOS Menu 39: Save & Exit

→ Save Changes and Reset

Use the **Save Changes and Reset** option to save the changes made to the BIOS options and reset the system.

→ Discard Changes and Reset

Use the **Discard Changes and Reset** option to exit the system without saving the changes made to the BIOS configuration setup program.

TANK-XM811

→ Restore Defaults

Use the **Restore Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F3 key can be used for this operation.**

→ Save as User Defaults


Use the **Save as User Defaults** option to save the changes done so far as user defaults.

→ Restore User Defaults

Use the **Restore User Defaults** option to restore the user defaults to all the setup options.

5.8 MEBx

Use the **MEBx** menu (**BIOS Menu 39**) to configure the iAMT function for the Intel® I225LM controller.

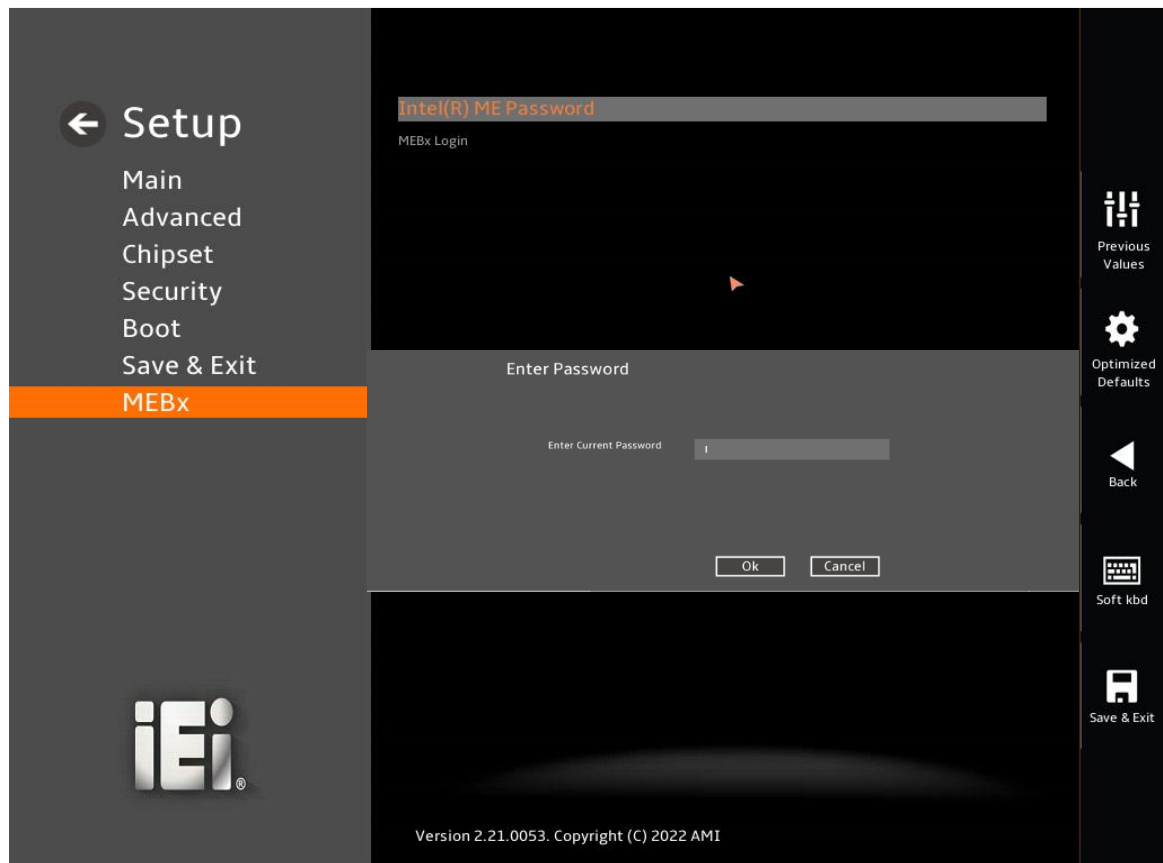

→ Intel(R) ME Password

Use the **Intel(R) ME Password** to set or change a MEBx Login password.

Appendix

A

Regulatory Compliance

DECLARATION OF CONFORMITY

This equipment is in conformity with the following EU directives:

- EMC Directive (2004/108/EC, 2014/30/EU)
- Low-Voltage Directive (2006/95/EC, 2014/35/EU)
- RoHS II Directive (2011/65/EU, 2015/863/EU)

If the user modifies and/or install other devices in the equipment, the CE conformity declaration may no longer apply.

If this equipment has telecommunications functionality, it also complies with the requirements of the Radio Equipment Directive 2014/53/EU.

English

IEI Integration Corp declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Български [Bulgarian]

IEI Integration Corp. декларира, че този оборудване е в съответствие със съществените изисквания и другите приложими правила на Директива 2014/53/EU.

Česky [Czech]

IEI Integration Corp tímto prohlašuje, že tento zařzení je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 2014/53/EU.

Dansk [Danish]

IEI Integration Corp erklærer herved, at følgende udstyr overholder de væsentlige krav og øvrige relevante krav i direktiv 2014/53/EU.

Deutsch [German]

IEI Integration Corp, erklärt dieses Gerät entspricht den grundlegenden Anforderungen und den weiteren entsprechenden Vorgaben der Richtlinie 2014/53/EU.

Eesti [Estonian]

IEI Integration Corp deklareerib seadme seadme vastavust direktiivi 2014/53/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

Español [Spanish]

IEI Integration Corp declara que el equipo cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 2014/53/EU.

Ελληνική [Greek]

IEI Integration Corp ΔΗΛΩΝΕΙ ΟΤΙ ΕΞΟΠΛΙΣΜΟΣ ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 2014/53/EU.

Français [French]

IEI Integration Corp déclare que l'appareil est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 2014/53/EU.

Italiano [Italian]

IEI Integration Corp dichiara che questo apparecchio è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 2014/53/EU.

Latviski [Latvian]

IEI Integration Corp deklarē, ka iekārta atbilst būtiskajām prasībām un citiem ar to saistītajiem noteikumiem Direktīvas 2014/53/EU.

Lietuvių [Lithuanian]

IEI Integration Corp deklaruoja, kad šis įranga atitinka esminius reikalavimus ir kitas 2014/53/EU Direktyvos nuostatas.

Nederlands [Dutch]

IEI Integration Corp dat het toestel toestel in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 2014/53/EU.

Malti [Maltese]

IEI Integration Corp jiddikjara li dan prodott jikkonforma mal-ħtiġijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Dirrettiva 2014/53/EU.

TANK-XM811

Magyar [Hungarian]

IEI Integration Corp nyilatkozom, hogy a berendezés megfelel a vonatkozó alapvető követelményeknek és az 2014/53/EU irányelv egyéb előírásainak.

Polski [Polish]

IEI Integration Corp oświadcza, że wyrobu jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 2014/53/EU.

Português [Portuguese]

IEI Integration Corp declara que este equipamento está conforme com os requisitos essenciais e outras disposições da Directiva 2014/53/EU.

Româna [Romanian]

IEI Integration Corp declară că acest echipament este în conformitate cu cerințele esențiale și cu celelalte prevederi relevante ale Directivei 2014/53/EU.

Slovensko [Slovenian]

IEI Integration Corp izjavlja, da je ta opreme v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 2014/53/EU.

Slovensky [Slovak]

IEI Integration Corp týmto vyhlasuje, že zariadenia spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 2014/53/EU.

Suomi [Finnish]

IEI Integration Corp vakuuttaa täten että laitteet on direktiivin 2014/53/EU oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

Svenska [Swedish]

IEI Integration Corp förklarar att denna utrustningstyp står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 2014/53/EU.



FCC WARNING

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Federal Communication Commission Interference Statement

This equipment has been assembled with components that comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Appendix

B

Safety Precautions

B.1 Safety Precautions



WARNING:

The precautions outlined in this appendix should be strictly followed. Failure to follow these precautions may result in permanent damage to the TANK-XM811 Series.

Please follow the safety precautions outlined in the sections that follow:

B.1.1 General Safety Precautions

Please ensure the following safety precautions are adhered to at all times.

- ***Make sure the power is turned off and the power cord is disconnected*** when moving, installing or modifying the system.
- ***Do not apply voltage levels that exceed the specified voltage range.*** Doing so may cause fire and/or an electrical shock.
- ***Electric shocks can occur*** if opened while still powered on.
- ***Do not drop or insert any objects*** into the ventilation openings.
- ***If considerable amounts of dust, water, or fluids enter the system***, turn off the power supply immediately, unplug the power cord, and contact the system vendor.
- **DO NOT:**
 - Drop the system against a hard surface.
 - In a site where the ambient temperature exceeds the rated temperature

B.1.2 Anti-static Precautions

**WARNING:**

Failure to take ESD precautions during the installation of the TANK-XM811 Series may result in permanent damage to the TANK-XM811 Series and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the TANK-XM811 Series. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the TANK-XM811 Series is opened and any of the electrical components are handled, the following anti-static precautions are strictly adhered to.

- ***Wear an anti-static wristband:*** Wearing a simple anti-static wristband can help to prevent ESD from damaging any electrical component.
- ***Self-grounding:*** Before handling any electrical component, touch any grounded conducting material. During the time the electrical component is handled, frequently touch any conducting materials that are connected to the ground.
- ***Use an anti-static pad:*** When configuring or working with an electrical component, place it on an anti-static pad. This reduces the possibility of ESD damage.
- ***Only handle the edges of the electrical component:*** When handling the electrical component, hold the electrical component by its edges.


B.1.3 Product Disposal

**CAUTION:**

Risk of explosion if battery is replaced by an incorrect type. Only certified engineers should replace the on-board battery.

Dispose of used batteries according to instructions and local regulations.

- Outside the European Union - If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority so as to comply with the correct disposal method.
- Within the European Union - The device that produces less waste and is easier to recycle is classified as electronic device in terms of the European Directive 2012/19/EU (WEEE), and must not be disposed of as domestic garbage.

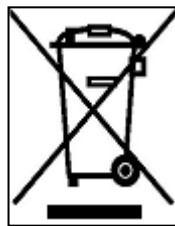

EU-wide legislation, as implemented in each Member State, requires that waste electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes monitors and electrical accessories, such as signal cables or power cords.

When you need to dispose of your display products, please follow the guidance of your local authority, or ask the shop where you purchased the product. The mark on electrical and electronic products only applies to the current European Union Member States.

Please follow the national guidelines for electrical and electronic product disposal.

B.2 Maintenance and Cleaning Precautions

When maintaining or cleaning the TANK-XM811 Series, please follow the guidelines below.

TANK-XM811

B.2.1 Maintenance and Cleaning

Prior to cleaning any part or component of the TANK-XM811 Series, please read the details below.

- The interior of the TANK-XM811 Series does not require cleaning. Keep fluids away from the TANK-XM811 Series interior.
- Be cautious of all small removable components when vacuuming the TANK-XM811 Series.
- Turn the TANK-XM811 Series off before cleaning the TANK-XM811 Series.
- Never drop any objects or liquids through the openings of the TANK-XM811 Series.
- Be cautious of any possible allergic reactions to solvents or chemicals used when cleaning the TANK-XM811 Series.
- Avoid eating, drinking and smoking within vicinity of the TANK-XM811 Series.

B.2.2 Cleaning Tools

Some components in the TANK-XM811 Series may only be cleaned using a product specifically designed for the purpose. In such case, the product will be explicitly mentioned in the cleaning tips. Below is a list of items to use when cleaning the TANK-XM811 Series.

- **Cloth** – Although paper towels or tissues can be used, a soft, clean piece of cloth is recommended when cleaning the TANK-XM811 Series.
- **Water or rubbing alcohol** – A cloth moistened with water or rubbing alcohol can be used to clean the TANK-XM811 Series.
- **Using solvents** – The use of solvents is not recommended when cleaning the TANK-XM811 Series as they may damage the plastic parts.
- **Vacuum cleaner** – Using a vacuum specifically designed for computers is one of the best methods of cleaning the TANK-XM811 Series. Dust and dirt can restrict the airflow in the TANK-XM811 Series and cause its circuitry to corrode.
- **Cotton swabs** - Cotton swaps moistened with rubbing alcohol or water are excellent tools for wiping hard to reach areas.
- **Foam swabs** - Whenever possible, it is best to use lint free swabs such as foam swabs for cleaning.

Appendix

C

BIOS Options

TANK-XM811

Below is a list of BIOS configuration options in the BIOS chapter.

➔ BIOS Information	55
➔ Processor Information.....	55
➔ PCH Information.....	55
➔ System Date [xx/xx/xx]	56
➔ System Time [xx:xx:xx]	56
➔ Intel (VMX) Virtualization Technology [Enabled]	59
➔ Active Performance-cores [All]	59
➔ Active Efficient-cores [All]	60
➔ Hyper-Threading [Enabled].....	60
➔ Intel(R) Trusted Execution Technology [Disabled]	60
➔ Intel(R) SpeedStep(tm) [Enabled].....	60
➔ C states [Disabled].....	61
➔ Power Limit 1	61
➔ Power Limit 1 Time Window [0].....	61
➔ Power Limit 2.....	61
➔ Turbo Mode [Enabled]	61
➔ Intel AMT [Enabled]	62
➔ Unconfigure ME [Disabled]	62
➔ #AC Split Lock [Disabled]	63
➔ #GP Fault UC Lock [Disabled]	64
➔ IFU Enable [Disabled]	64
➔ Software SRAM [Disabled].....	64
➔ Data Streams Optimizer [Disabled]	64
➔ Error Log [Disabled]	65
➔ Intel(R) TCC Mode [Disabled]	65
➔ IO Fabric Low Latency [Disabled]	65
➔ GT CLOS [Disabled].....	65
➔ Intel(R) TCC Authentication [Disabled]	66
➔ Security Device Support [Enable]	67
➔ Pending Operation [None]	67
➔ Wake System with Fixed Time [Disabled]	68
➔ Serial Port [Enabled].....	70
➔ Device Settings	70

- ➔ Serial Port [Enabled].....71
- ➔ Device Settings71
- ➔ Serial Port [Enabled].....72
- ➔ Device Settings72
- ➔ Serial Port [Enabled].....73
- ➔ Device Settings73
- ➔ Serial Port [Enabled].....74
- ➔ Device Settings74
- ➔ Device Mode [Printer Mode].....75
- ➔ Serial Port [Enabled].....76
- ➔ Device Settings76
- ➔ Device Mode [Printer Mode].....76
- ➔ PC Health Status77
- ➔ CPU_FAN1 Smart Fan Control [Auto Mode]79
- ➔ CPU_FAN1 Start Temperature [65]79
- ➔ CPU_FAN1 Off Temperature [55]79
- ➔ CPU_FAN1 Start PWM [30].....79
- ➔ SYS_FAN1(BP)/SYS_FAN2(BP) Smart Fan Control [Auto Mode]79
- ➔ SYS_FAN1(BP)/SYS_FAN2(BP) Start Temperature [40]80
- ➔ SYS_FAN1(BP)/SYS_FAN2(BP) Off Temperature [30]80
- ➔ SYS_FAN1(BP)/SYS_FAN2(BP) Start PWM [30]80
- ➔ Auto mode fan slope PWM [1]80
- ➔ Console Redirection [Disabled].....81
- ➔ Terminal Type [ANSI].....82
- ➔ Bits per second [115200].....83
- ➔ Data Bits [8]83
- ➔ Parity [None].....83
- ➔ Stop Bits [1]84
- ➔ VT-d [Enabled].....86
- ➔ Primary Display [Auto]88
- ➔ Internal Graphics [Enabled]89
- ➔ Enable VMD controller [Disabled]90
- ➔ Detect Non-Compliance Device [Disabled]91
- ➔ PCI Express Root Port n [Enabled]92
- ➔ PCIe Speed [Auto].....92

TANK-XM811

→ Auto Power Button Function [Disabled(ATX)]	93
→ Restore AC Power Loss [Last State]	93
→ Power Saving Function(EUP) [Disabled]	94
→ USB Power SW1 [+5V DUAL]	94
→ USB Power SW2 [+5V DUAL]	94
→ PCIe Speed [Auto]	96
→ Detect Non-Compliance Device [Disabled]	96
→ SATA Mode Selection [AHCI]	97
→ Hot Plug [Disabled]	97
→ HD Audio [Enabled]	98
→ Administrator Password	99
→ User Password	99
→ Quiet Boot [Enabled]	100
→ Launch PXE OpRom [Disabled]	101
→ Boot Option #1	101
→ Boot Option #2	101
→ Save Changes and Reset	102
→ Discard Changes and Reset	102
→ Restore Defaults	103
→ Save as User Defaults	103
→ Restore User Defaults	103
→ Intel(R) ME Password	103

Appendix

D

Error Beep Code

TANK-XM811

D.1 PEI Beep Codes

Number of Beeps	Description
1	Memory not Installed
1	Memory was installed twice (InstallPeiMemory routine in PEI Core called twice)
2	Recovery started
3	DXEIPL was not found
3	DXE Core Firmware Volume was not found
4	Recovery failed
4	S3 Resume failed
7	Reset PPI is not available

D.2 DXE Beep Codes

Number of Beeps	Description
1	Invalid password
4	Some of the Architectural Protocols are not available
5	No Console Output Devices are found
5	No Console Input Devices are found
6	Flash update is failed
7	Reset protocol is not available
8	Platform PCI resource requirements cannot be met

**NOTE:**

If you have any question, please contact IEI for further assistance.

Appendix

E

Hazardous Materials Disclosure

TANK-XM811

E.1 RoHS II Directive (2015/863/EU)

The details provided in this appendix are to ensure that the product is compliant with the RoHS II Directive (2015/863/EU). The table below acknowledges the presences of small quantities of certain substances in the product, and is applicable to RoHS II Directive (2015/863/EU).

Please refer to the following table.

Part Name	Toxic or Hazardous Substances and Elements									
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)	Bis(2-ethylhexyl) phthalate (DEHP)	Butyl benzyl phthalate (BBP)	Dibutyl phthalate (DBP)	Diisobutyl phthalate (DIBP)
Housing	O	O	O	O	O	O	O	O	O	O
Printed Circuit Board	O	O	O	O	O	O	O	O	O	O
Metal Fasteners	O	O	O	O	O	O	O	O	O	O
Cable Assembly	O	O	O	O	O	O	O	O	O	O
Fan Assembly	O	O	O	O	O	O	O	O	O	O
Power Supply Assemblies	O	O	O	O	O	O	O	O	O	O
Battery	O	O	O	O	O	O	O	O	O	O
<p>O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in Directive (EU) 2015/863.</p> <p>X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in Directive (EU) 2015/863.</p>										

E.2 China RoHS

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有“环境友好使用期限”的标签,此期限是估算这些物质“不会有泄漏或突变”的年限。本产品可能包含有较短的环境友好使用期限的可替换元件,像是电池或灯管,这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
壳体	○	○	○	○	○	○
印刷电路板	○	○	○	○	○	○
金属螺帽	○	○	○	○	○	○
电缆组装	○	○	○	○	○	○
风扇组装	○	○	○	○	○	○
电力供应组装	○	○	○	○	○	○
电池	○	○	○	○	○	○

○: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T11364-2014 與 GB/T26572-2011 标准规定的限量要求以下。

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11364-2014 與 GB/T26572-2011 标准规定的限量要求。