




16 You will see the installation status in the device list.

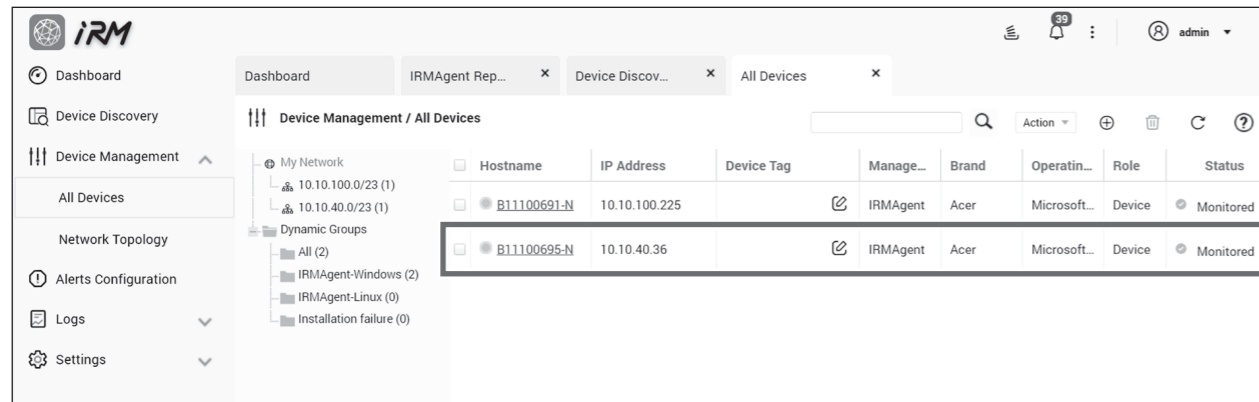

17 Change IRM default password



Control Panel

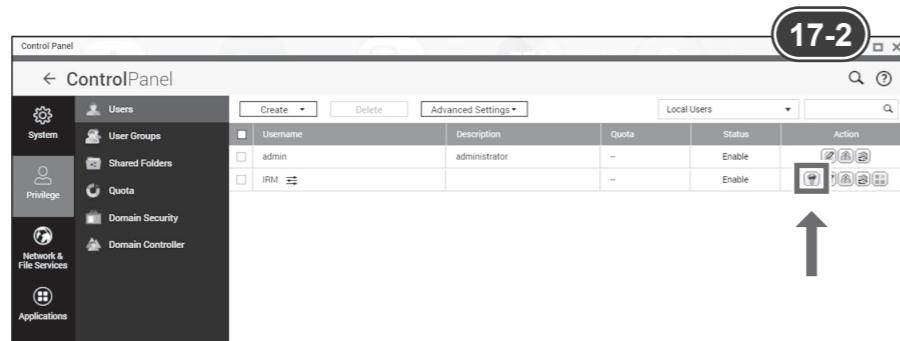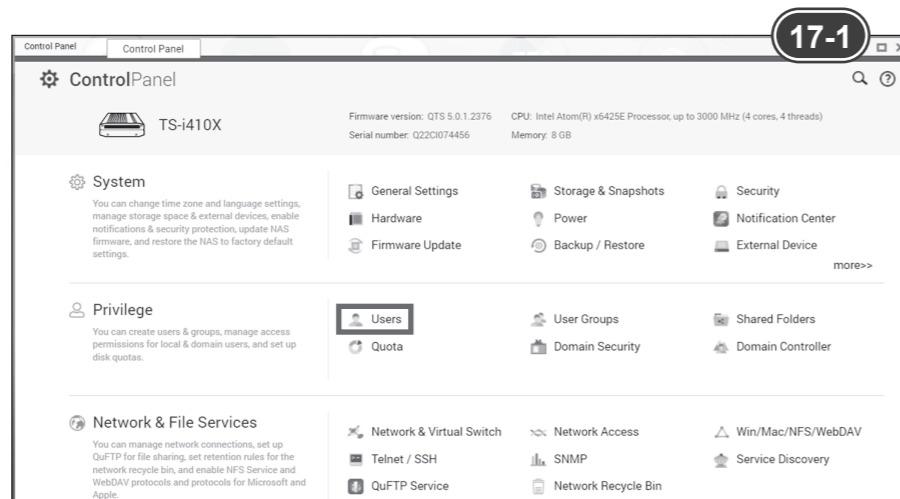

Note:
Please input your current password and then input new password!
To click apply button to save setting.

Change Password

User name: IRM

Old password:

New password:

Verify new password:

Show password

Note: The password must consist of 0-64 ASCII characters or 0-64 bytes of UTF-8 encoded characters.

Apply Cancel



IRM-TSi410X-8G2H-R10 / IRM-TS410E-8G2H-R10



IRM (IEI Remote Management) Appliance Quick Install Guide



Online user manual for Detail QR Code




Product landing page

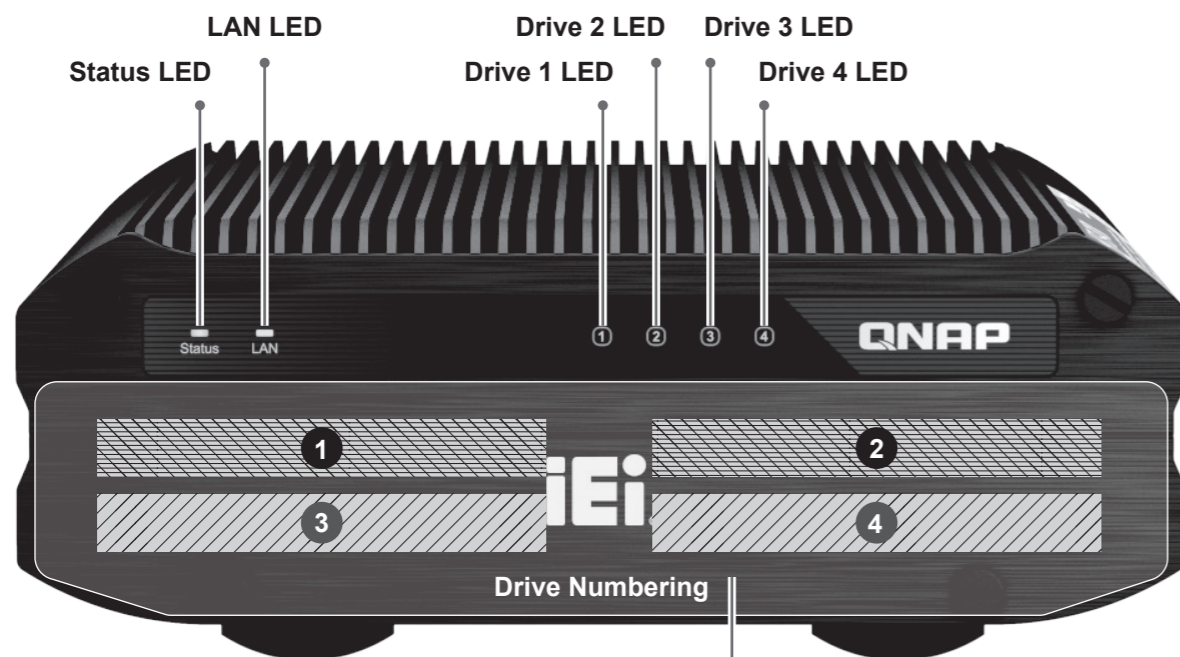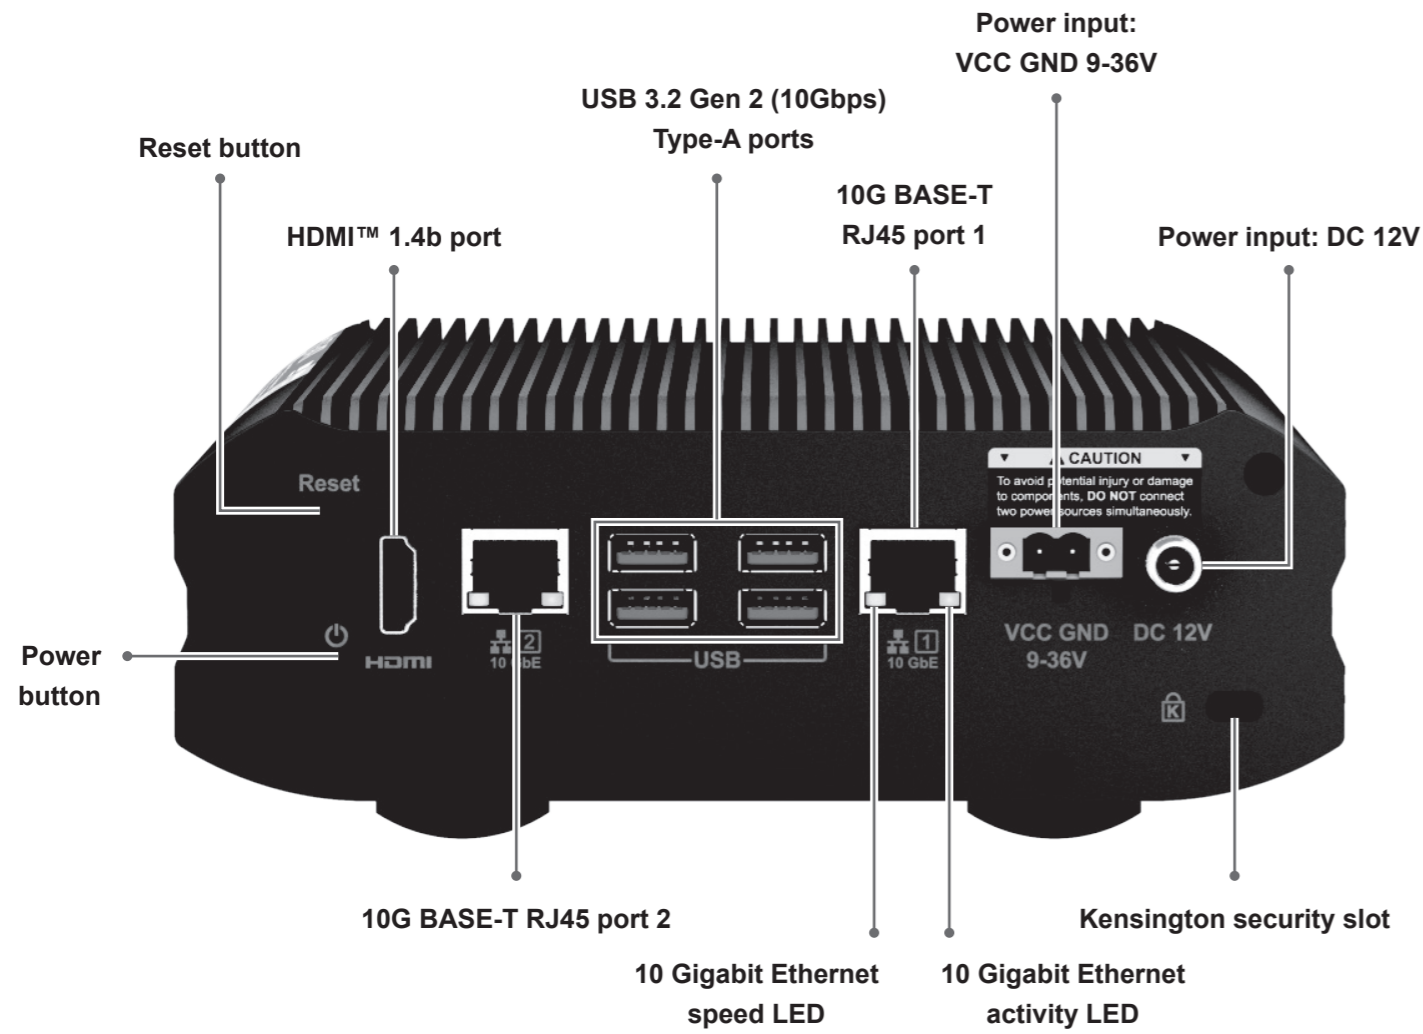


Note:
This area shows the device with the front cover removed.
Drive Slot 1 and 2 will be pre-installed SSD/HDD. Please don't pull-out when hardware is power-on status.

10 Download IRM Agent as your OS to install in your client device

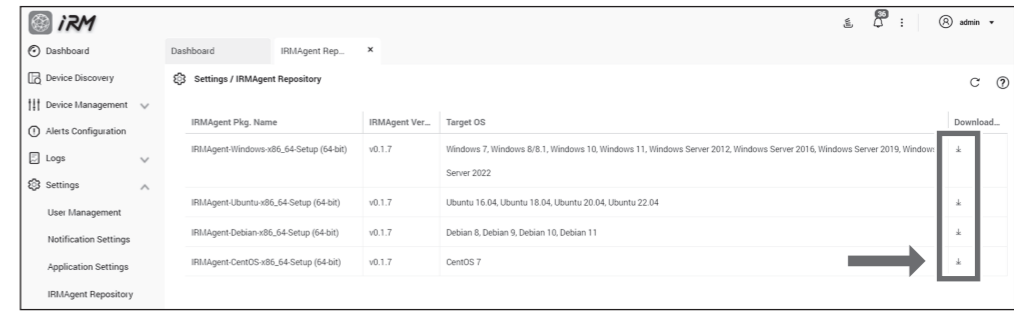


11 To install IRM Agent by running as administrator after extract the compress file

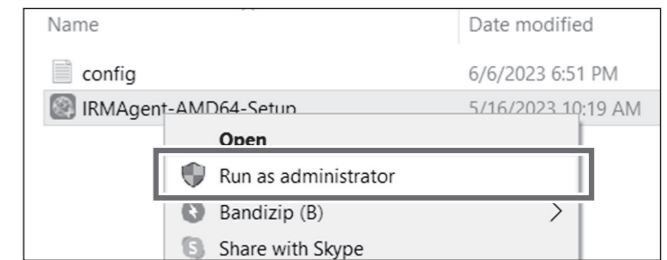


12 Begin to install




13 Confirm your IRM Server and Client IP address

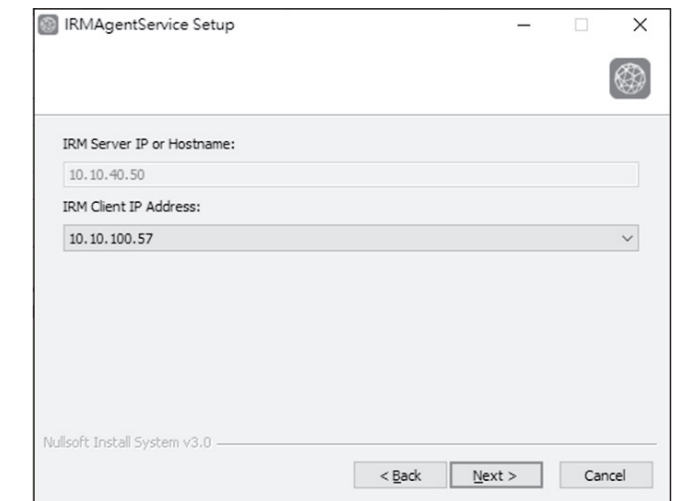




14 Enter the Username and Password of IRM as your IRM login ID/PWD.

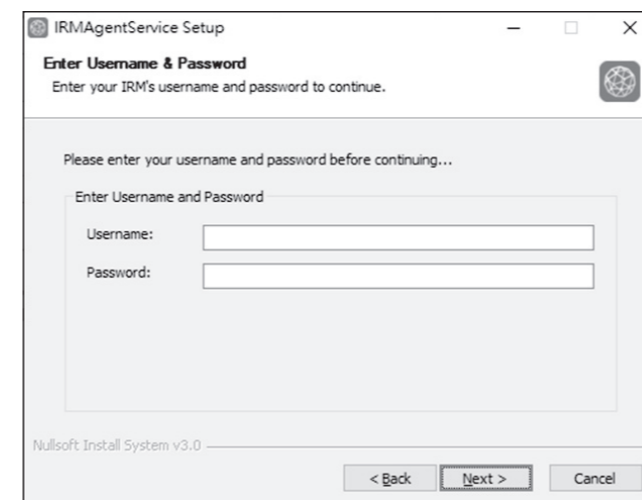

15 The IRM Agent Service will be installed in your device. Finally, click "Finish".

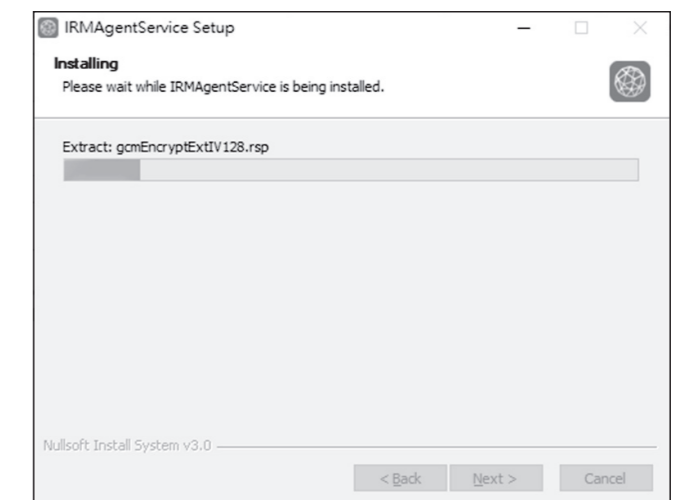

8 Input your network DNS address

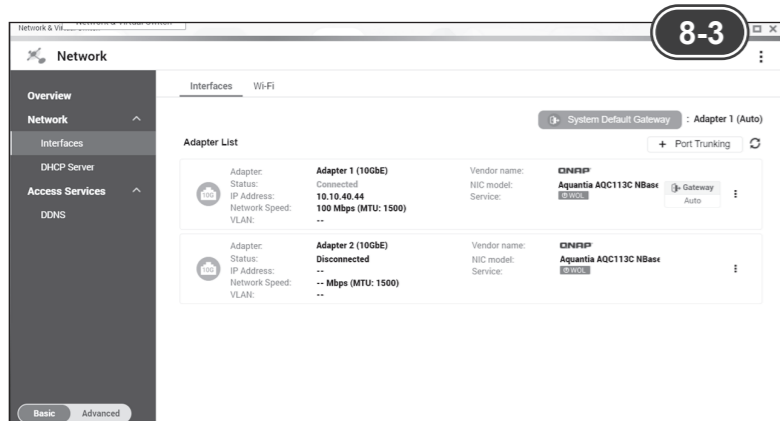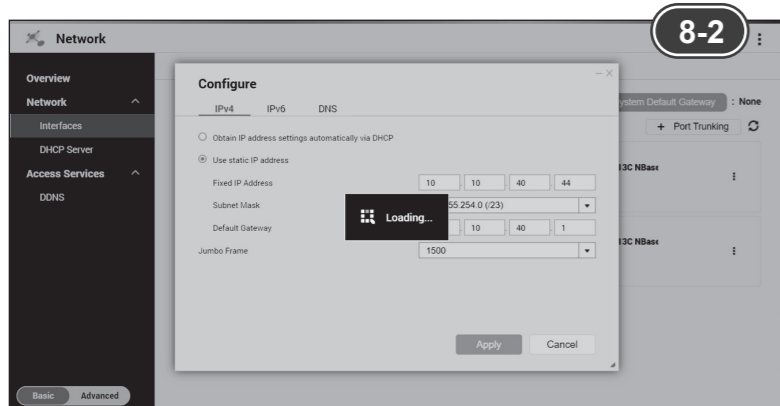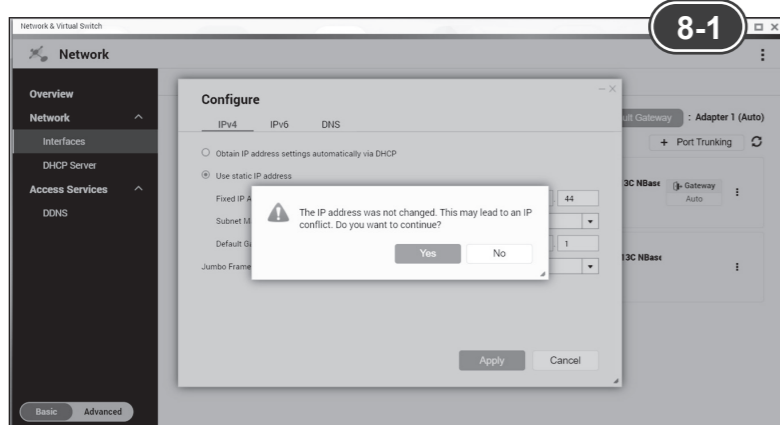


- Confirm your network setting and then press "Yes"

- Please wait for system will change your IP setting!

- Please check your IP setting change here!

9 Login to IRM Console

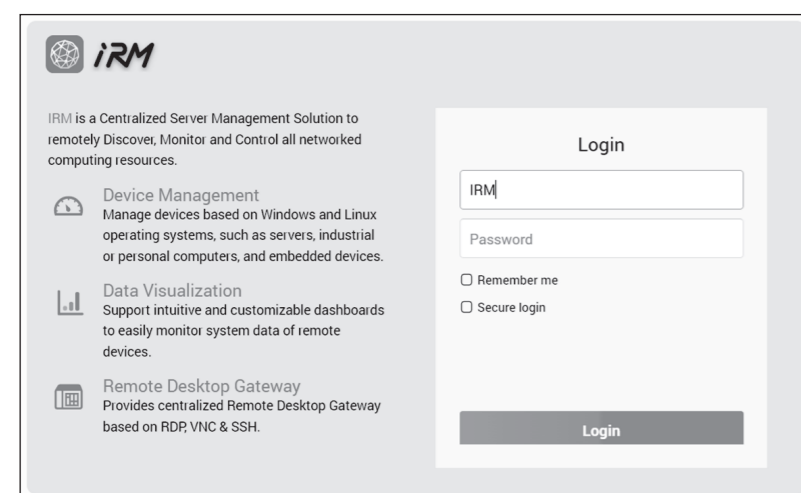


- Open browser to login to IRM Console

Note:
ID and password same to server administrator. The default ID is "IRM" and PWD is "Irm"+MAC1 Address last 6 yards. To confirm platform security, please change your default Password in Console.

Steps for building connect between IRM server and client

1 Plug-in network and power

Plug-in network cable Adapter 1 and power connector of IRM mini server and then boot-up to join your local network (Default DHCP).

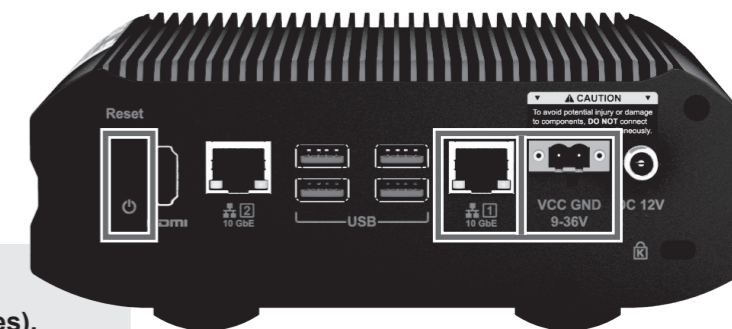


Note:
**OS booting up will take sometime(10 Minutes).
 An audio alert every time start-up and shuts down.**

2 Find IRM Mini Server in your network

- (1).Download Qfinder Pro Software to find IRM Mini Server.
 (Download URL: <https://www.qnap.com/en/utilities/essentials>)
- (2).Double click to login to IRM Server Desktop.



Download Qfinder Pro

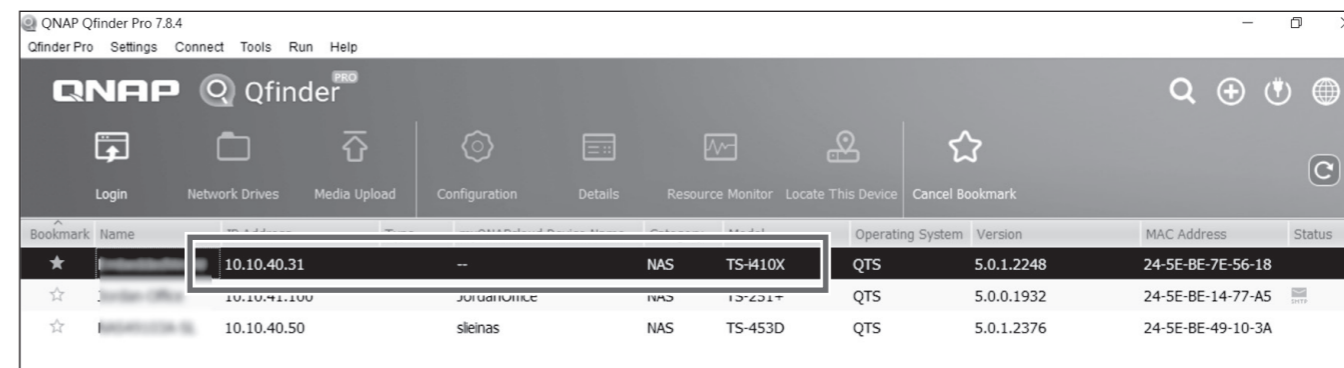

3 Login IRM Server Desktop


Default ID is "Irm" and Password is "Irm" + the last 6 letter of first MAC address of the Hardware in uppercase letters and without special characters.

EX: MAC1 address is 00-08-9B-F6-15-75 and password is "IrmF61575"


Note: Case is sensitive



4 Going into Control Panel » Network & Virtual Switch

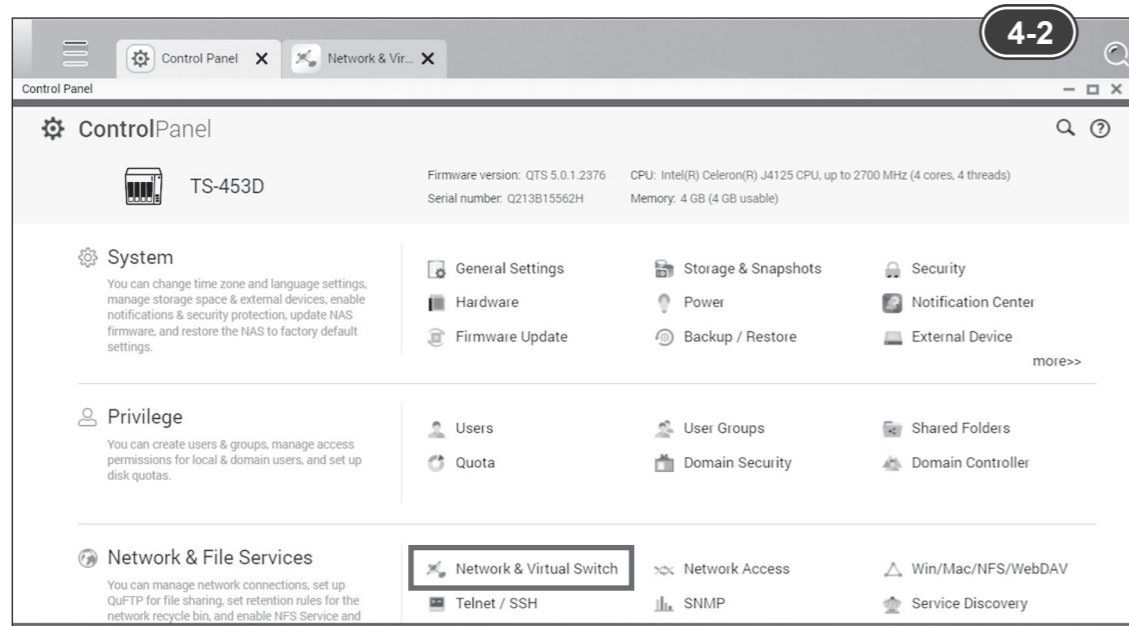


5 Configure Network Adapter Setting

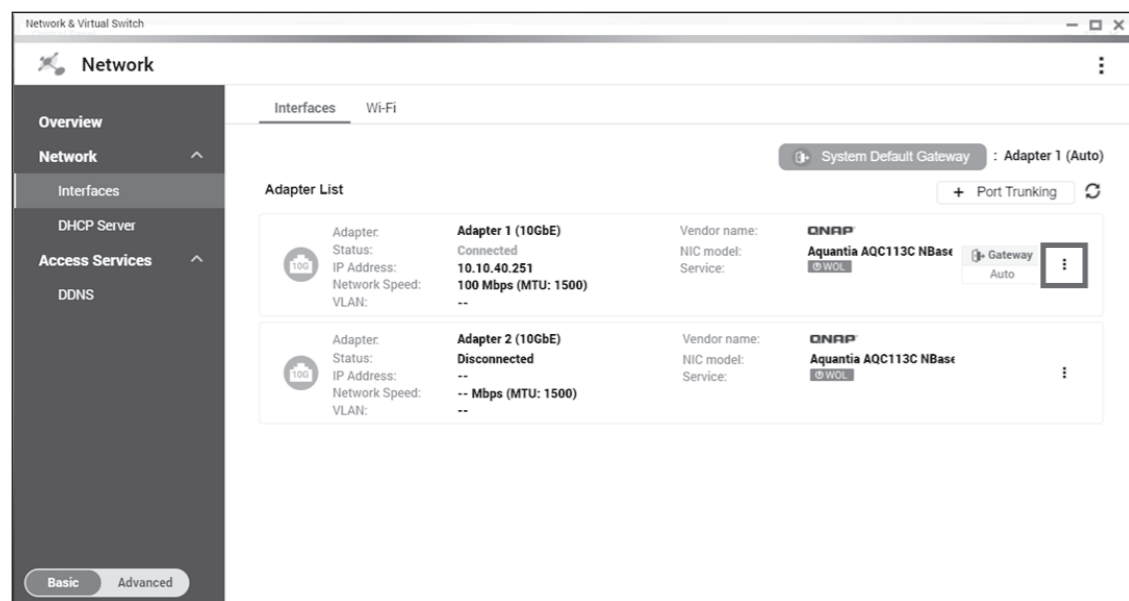

Note: Please select the Adapter you will connect to the your network

6 Configure Adapter IP Setting

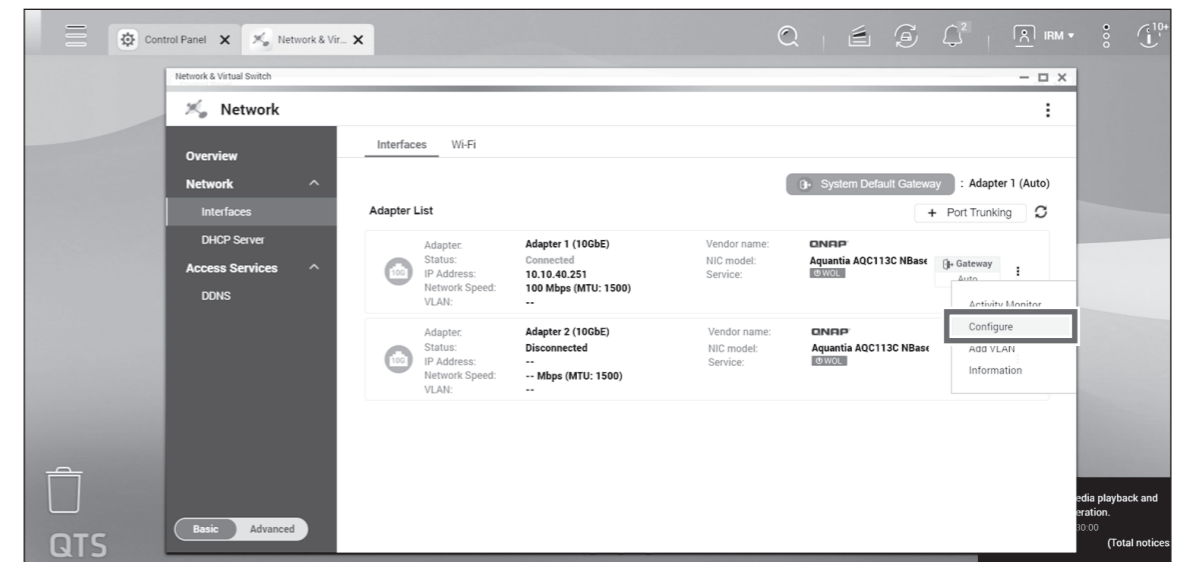

7 Select Static IP address

Please input static IP setting of your local network and then press "Apply"

