

**USB to UART Module,
4-port RJ-45 COM, RS-232/422/485 Selectable, RoHS**

iUCOM-4R

Quick Installation Guide Version 1.0

June 30, 2023

Package List

iUCOM-4R package includes the following items:

- 1 x iUCOM-4R USB to UART module
- 1 x USB to USB cable (p=2.0)
- 1 x USB to USB cable (p=2.54)
- 1 x QIG (Quick Installation Guide)



©2023 Copyright by IEI Integration Corp.
All rights reserved.

Specifications

- Convertor Chip:
WCH CH344 USB to quad serial port convertor chip
- Buffer/Transceiver Series:
Fintek F81435
- Compatible UARTs: 16C550 / 16C650 / 16C750 / 16C850 UART
- FIFO: 1024 bytes transmit, 512 bytes receive
- Baud Rate: 115.2K, up to 6M
- Interface (convert from):
USB 2.0 (1x4 pin, p=2.0mm)
- I/O Interface (convert to):
4 x RS-232/422/485 serial port (RJ-45)
- Supported OS:
Windows 11/10/8.1/8/7/VISTA/XP/2000, 32-bit/64-bit
Server 2022/2019/2016/2012/2008/2003
Linux 32-bit/64-bit
- Operating Temperature: 0°C ~ 60°C
- Storage Temperature: -10°C ~ 70°C
- Operating Humidity: 10% ~95%, non-condensing
- Dimensions: 94.46 mm x 38.00 mm

Ordering Information

- **32013-001400-100-RS**: RJ-45 to DB-9 cable, 300mm

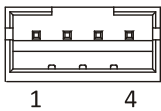
All the utility for the iUCOM-4R are available on IEI Resource Download Center. Type iUCOM-4R and press Enter to find all the relevant software, utilities, and documentation. To install software from the downloaded ISO file, mount the file as a virtual drive to view its content.

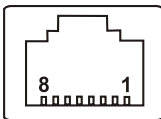
IEI Resource Download Center

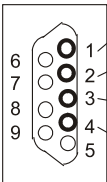
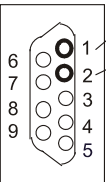
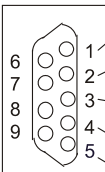
<https://download.ieiworld.com>



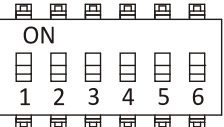
Connector Pinouts

CN1: USB connector (4-pin, p=2.0 mm)					
Pin	Description	Pin	Description		
1	GND	3	USB_DATA-		
2	USB_DATA+	4	VCC5V		

COM1, COM2, COM3, COM4: External RS-232/422/485 connectors					
Pin	Description	Pin	Description		
1	RI	5	RTS		
2	DTR	6	SIN		
3	CTS	7	DSR		
4	SOUT	8	DCD		

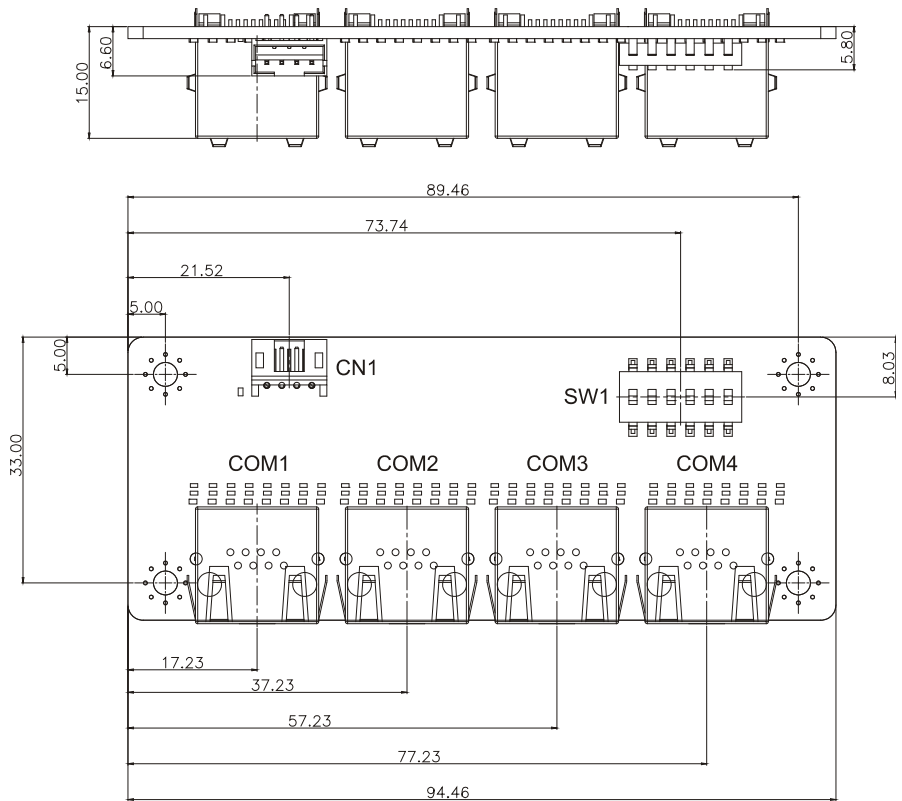
RS-422	RS-485	RS-232
 <p>1 TX-(TXD422#) 2 TX+(TXD422+) 3 RX+(RXD422+) 4 RX-(RXD422#)</p> <p>D-SUB 9PIN MALE MODE 00</p>	 <p>1 TX-(TXD485#) 2 TX+(TXD485+)</p> <p>D-SUB 9PIN MALE MODE 10/11</p>	 <p>1 DCD(1) 2 SIN(2) 3 SOUT(3) 4 DTR(4) 5 GND(5) 6 DSR(6) 7 RTS(7) 8 CTS(8) 9 RI(9)</p> <p>D-SUB 9PIN MALE MODE 01</p>

SW1: COM port mode switch						
	COM 1 & COM2			COM3 & COM4		
SW1 Pin	1	2	3	4	5	6
RS232	on	on	off	on	on	off
RS422	off	off	off	off	off	off
RS485	off	on	off	off	on	off



Use pin 1~3 to control COM1 + COM2; use pin 4~6 to control COM3 + COM4. The mode of these two sets of COM ports can be setup separately. For example: COM1&2 as RS232 and COM3&4 as RS485, set to: on-on-off-off-on-off.

Board Layout & Connector Locations



(Unit: mm)