



IRM-TSi410X-8G2H-R10 / IRM-TS410E-8G2H-R10



IRM (IEI Remote Management) Appliance Quick Install Guide



Online user manual for Detail QR Code




Product landing page

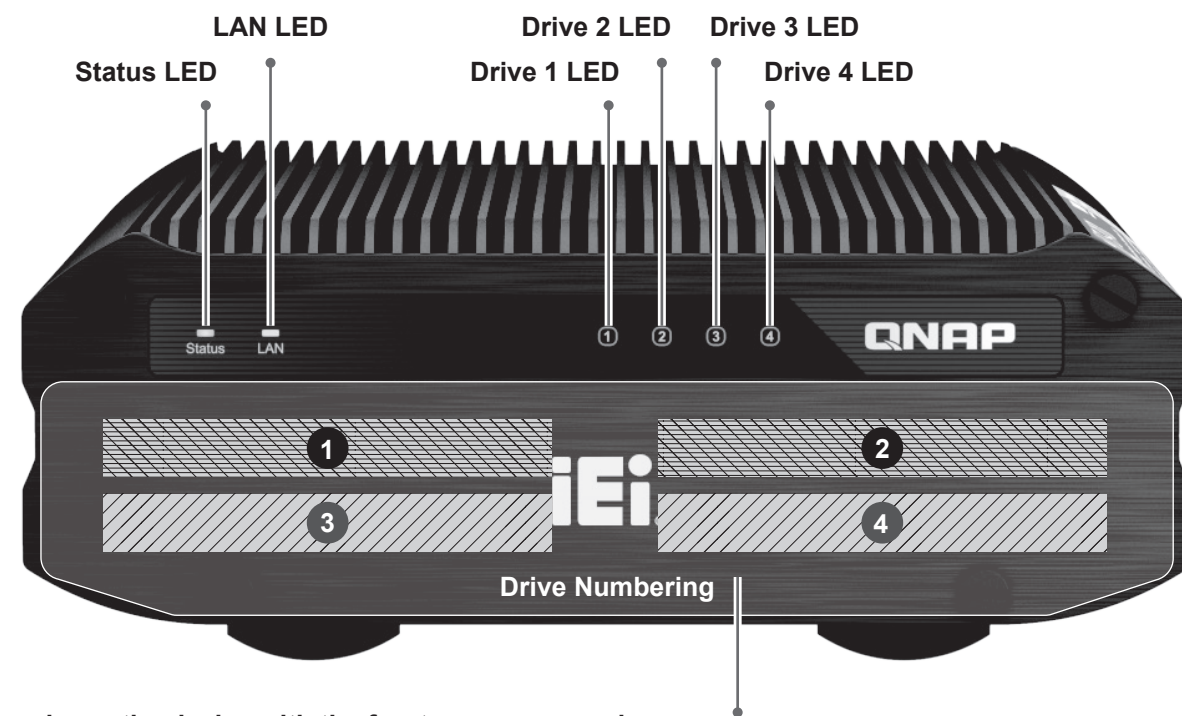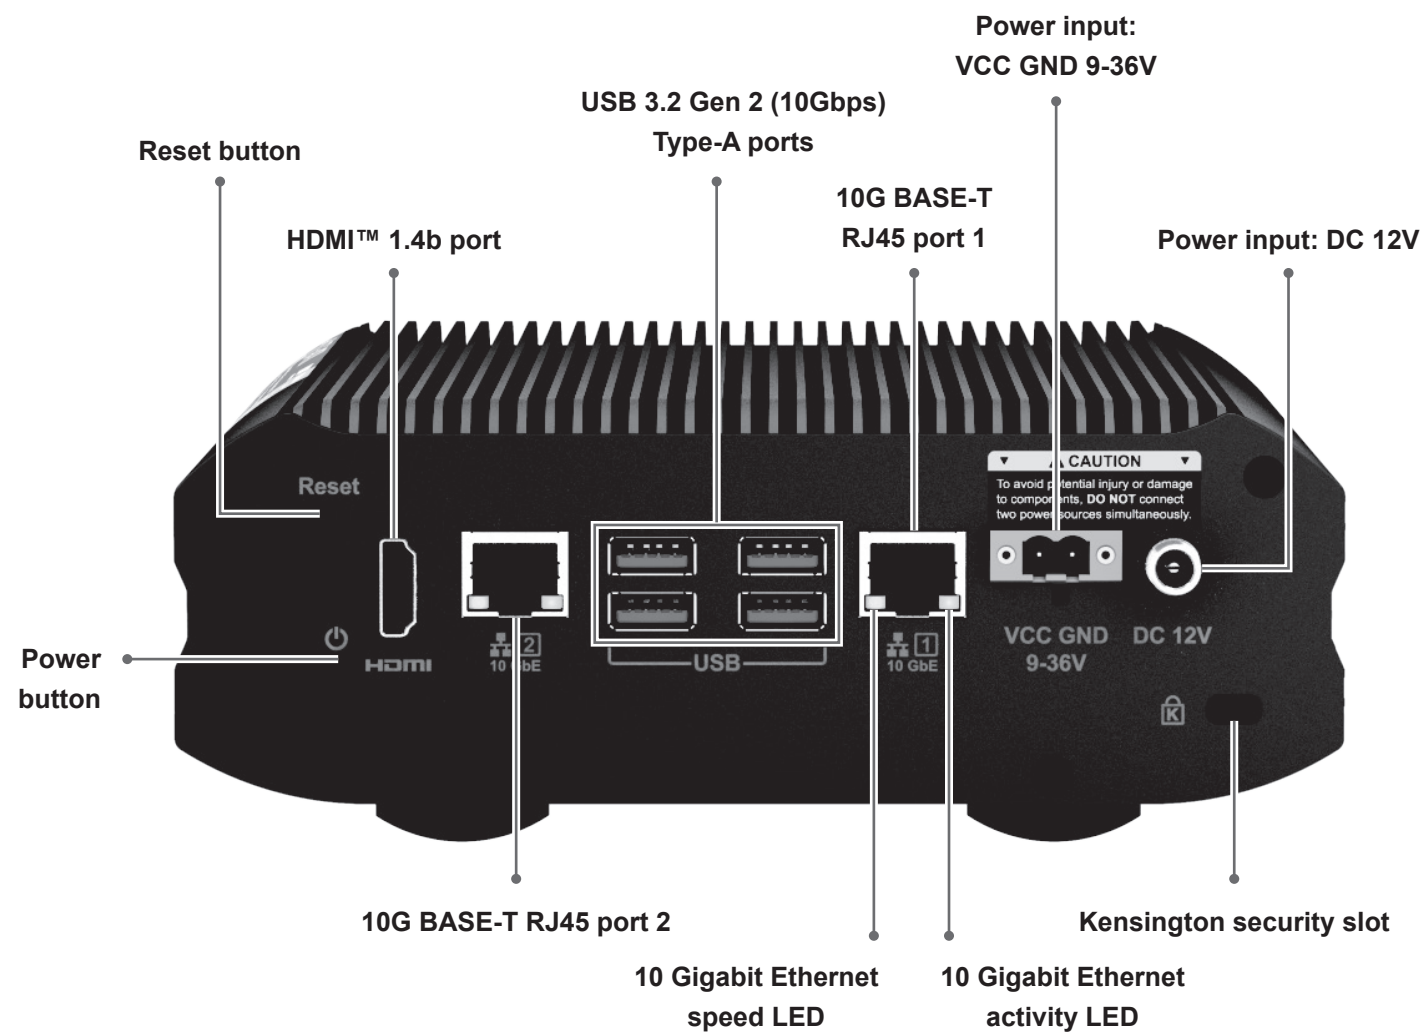


Note:
 This area shows the device with the front cover removed.
 Drive Slot 1 and 2 will be pre-installed SSD/HDD. Please don't pull-out when hardware is power-on status.

18 Change IRM default password

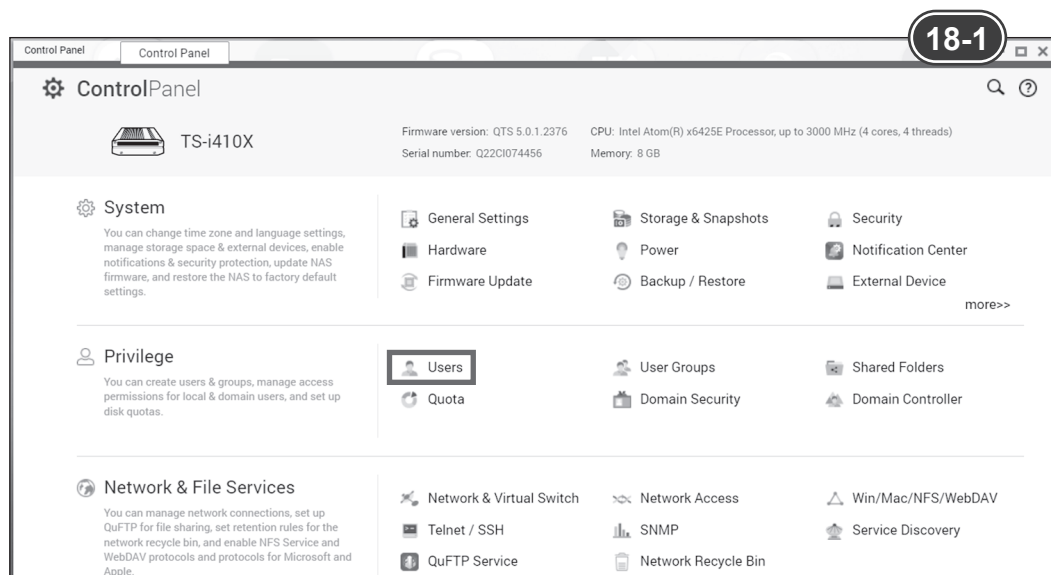

Control Panel

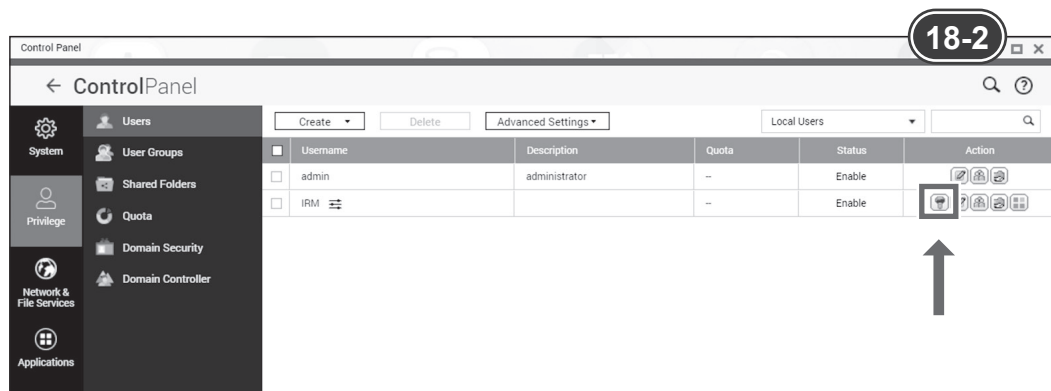

18-3

Change Password

User name: IRM

Old password:

New password:

Verify new password:

☐ Show password

Note: The password must consist of 0-64 ASCII characters or 0-64 bytes of UTF-8 encoded characters.


Apply Cancel

Note:
Please input your current password and then input new password!
To click apply button to save setting.

Steps for building connect between IRM server and client

1 Plug-in network and power

Plug-in network cable Adapter 1 and power connector of IRM mini server and then boot-up to join your local network (Default DHCP).

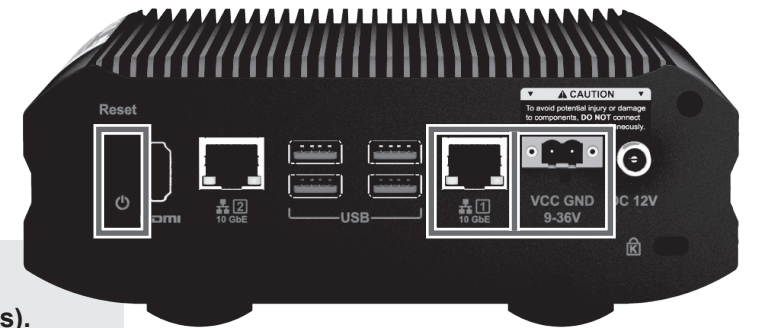


Note:
OS booting up will take sometime(10 Minutes).
An audio alert every time start-up and shuts down.

2 Find IRM Mini Server in your network

- Download Qfinder Pro Software to find IRM Mini Server.
(Download URL: <https://www.qnap.com/en/utilities/essentials>)
- Double click to login to IRM Server Desktop.



Download Qfinder Pro

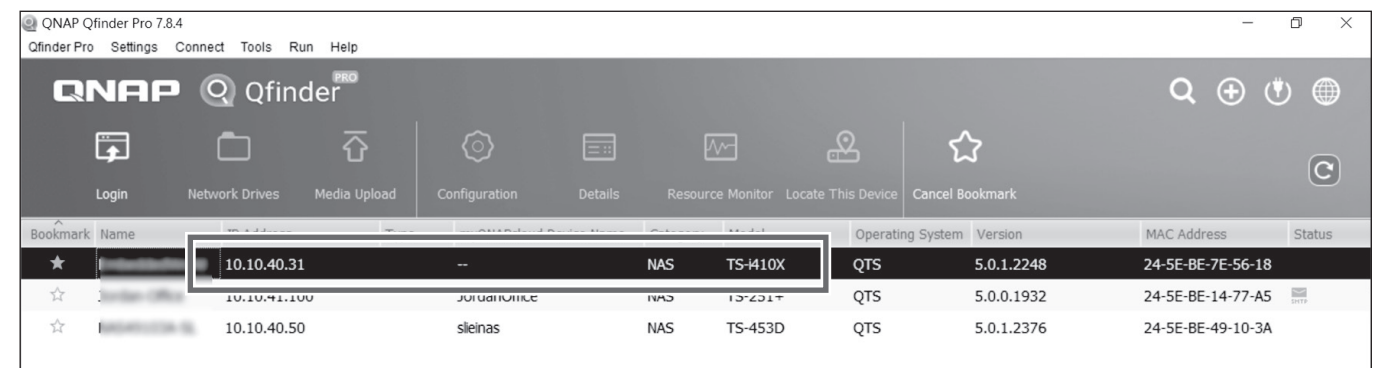


3 Login IRM Server Desktop



Default ID is "IRM" and Password is "Irm" + the last 6 letter of first MAC address of the Hardware in uppercase letters and without special characters.

EX: MAC1 address is 00-08-9B-F6-15-75 and password is "IrmF61575"


Note: Case is sensitive

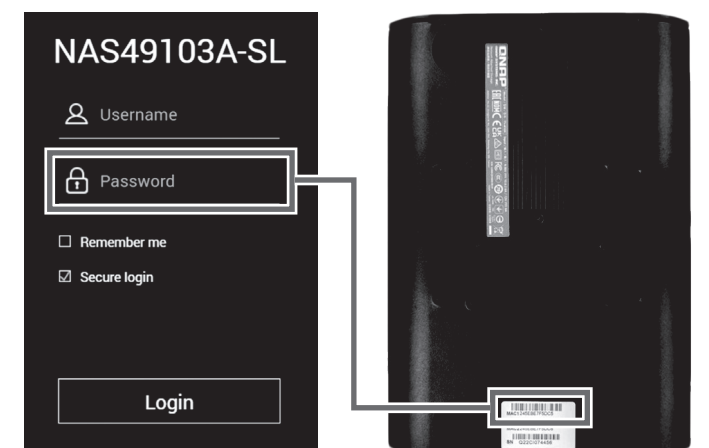

4 Going into Control Panel » Network & Virtual Switch

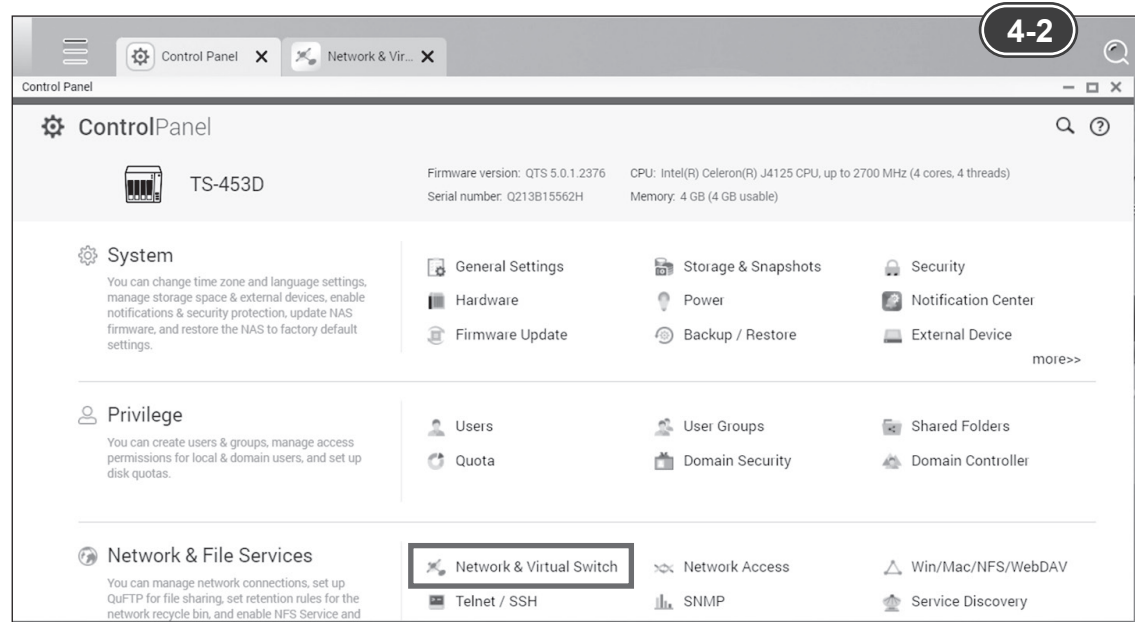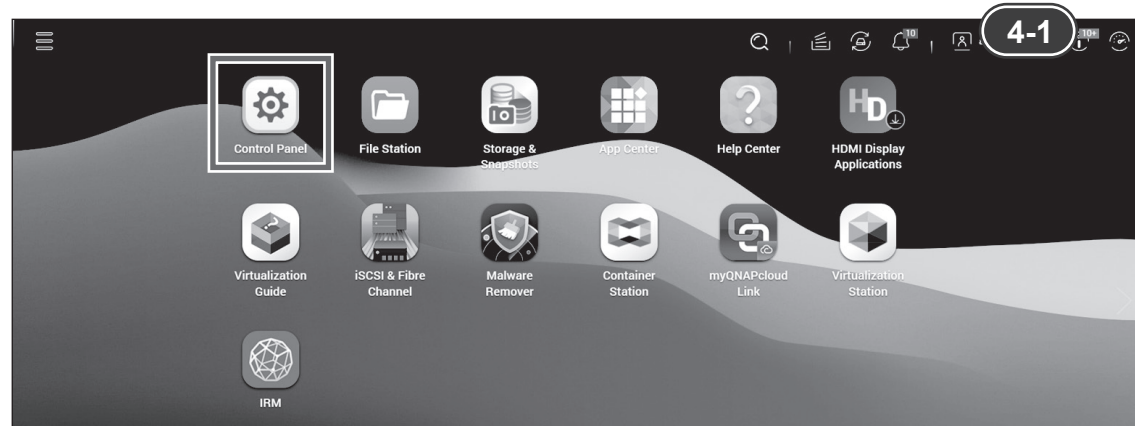


5 Configure Network Adapter Setting

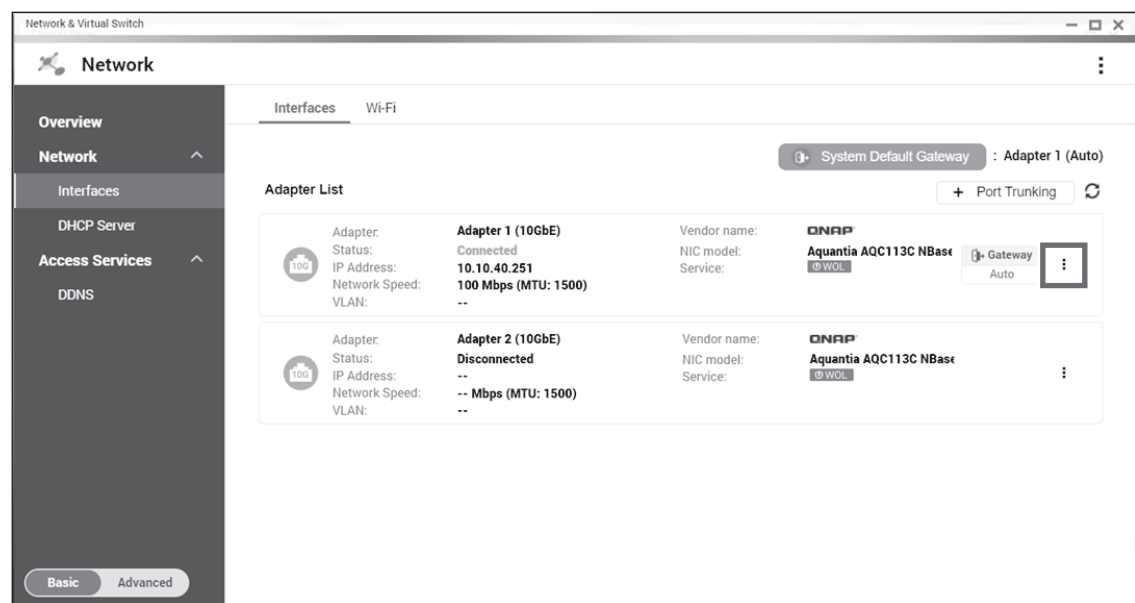


Note: Please select the Adapter you will connect to the your network


13 Begin to install

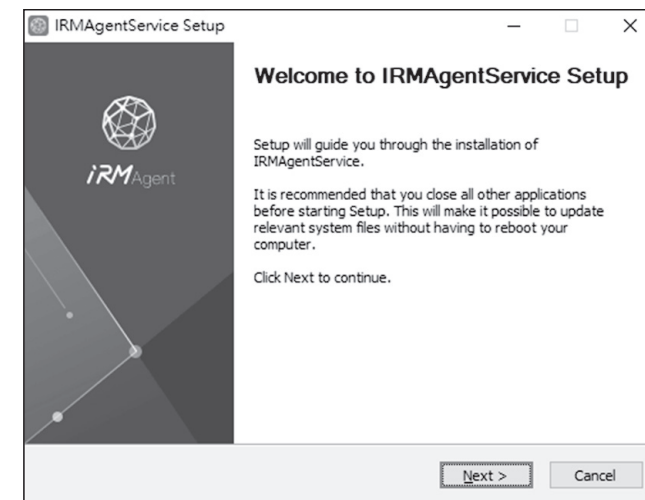


14 Confirm your IRM Server and Client IP address

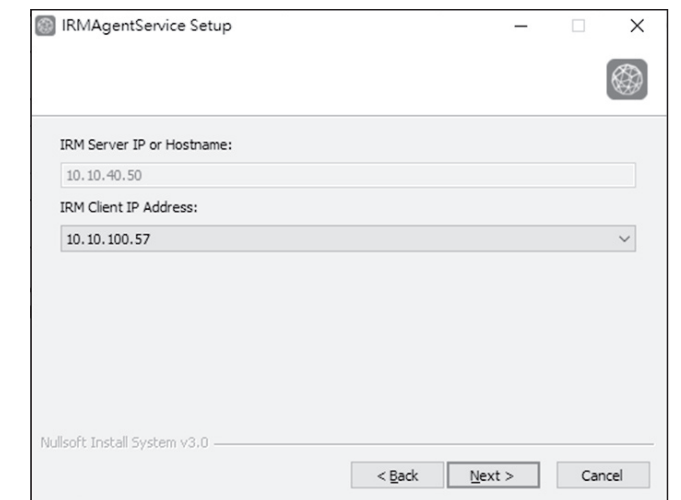


15 Enter the Username and Password of IRM as your IRM login ID/PWD.

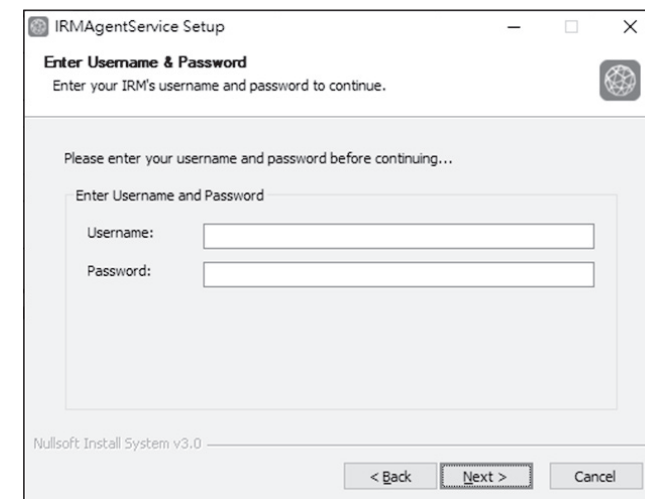

16 The IRMAgent Service will be installed in your device. Finally, click "Finish".

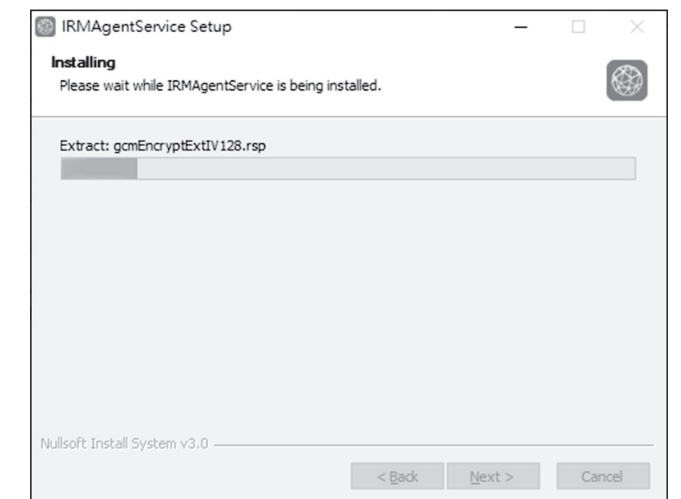


17 You will see the installation status in the device list.

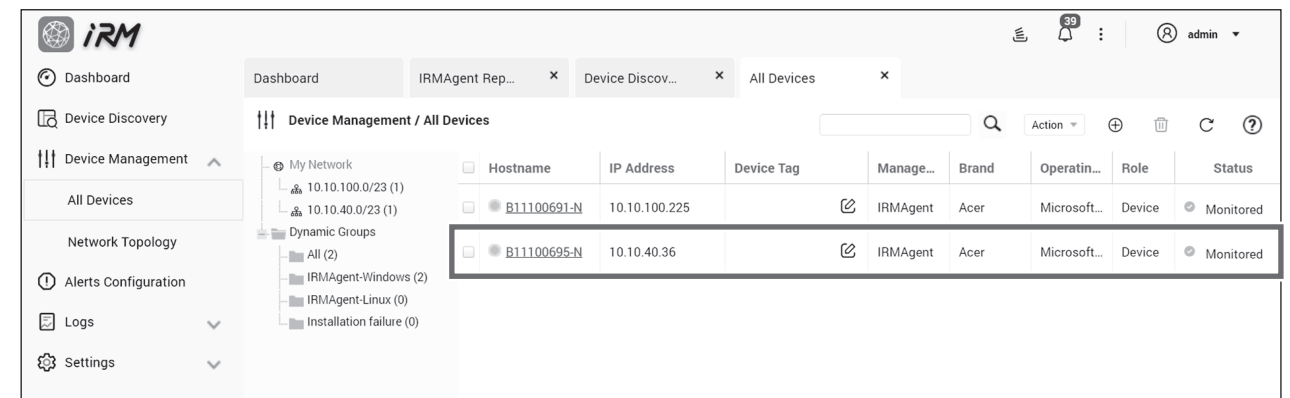


10 Login to IRM Console

- Open browser to login to IRM Console

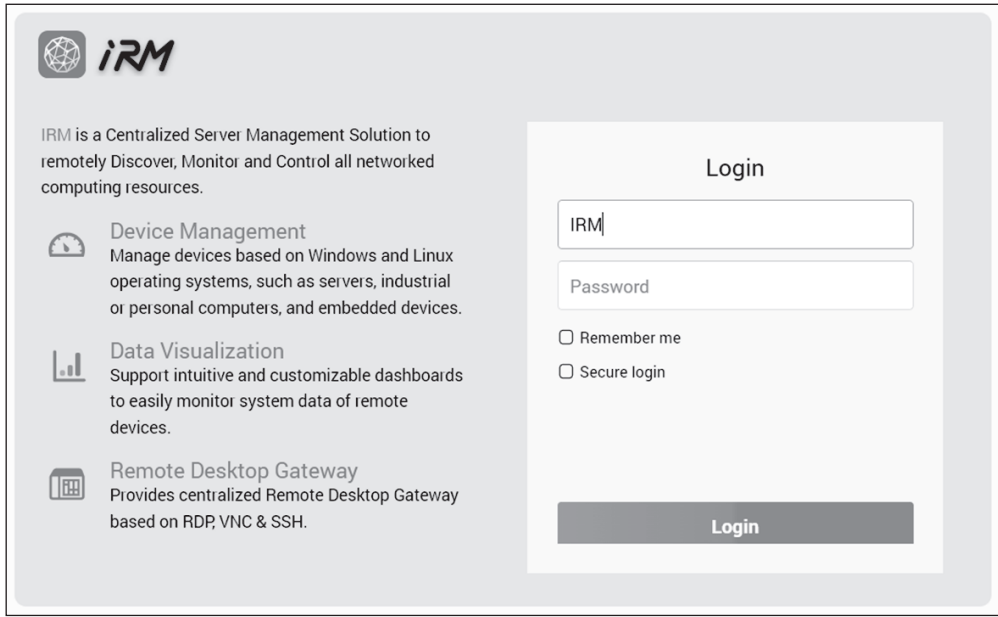


Note:
ID and password same to server administrator. The default ID is “IRM” and PWD is "Irm"+MAC1 Address last 6 yards. To confirm platform security, please change your default Password in Console.


11 Download IRM Agent as your OS to install in your client device

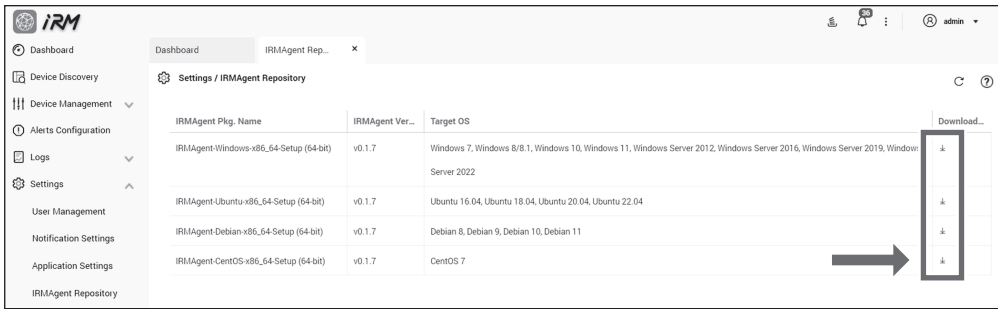

12 To install IRM Agent by running as administrator after extract the compress file


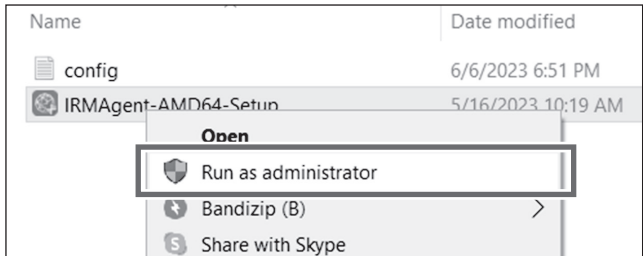


6 Configure Adapter IP Setting

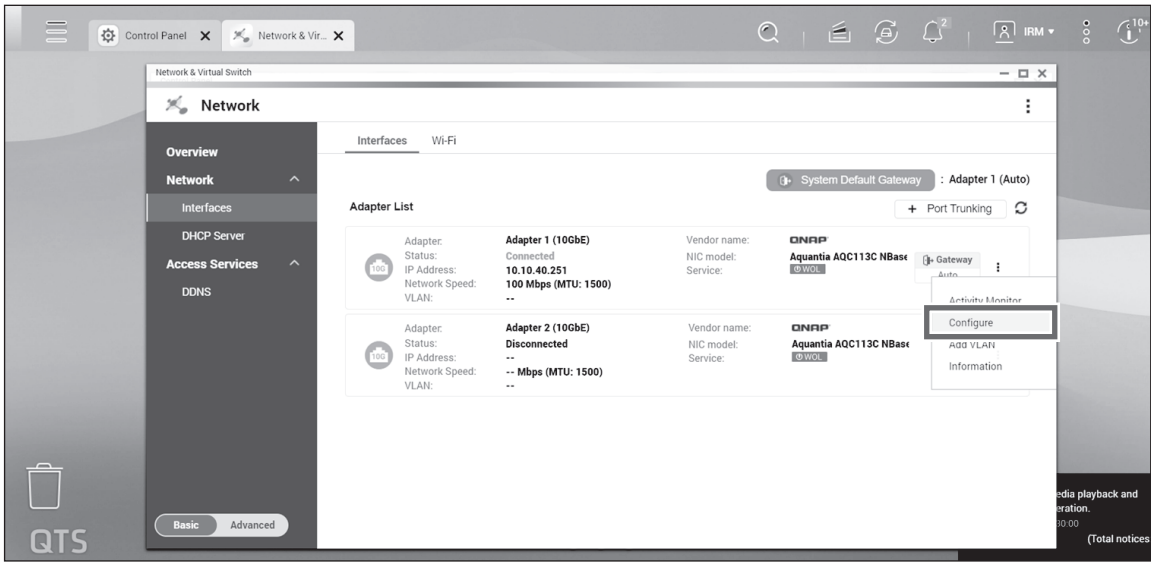


7 Select Static IP address

Please input static IP setting of your local network and then press “Apply”

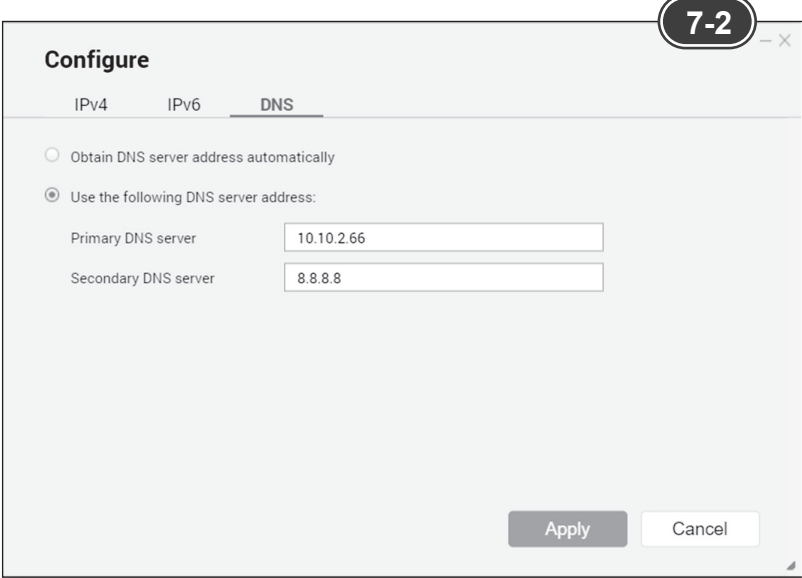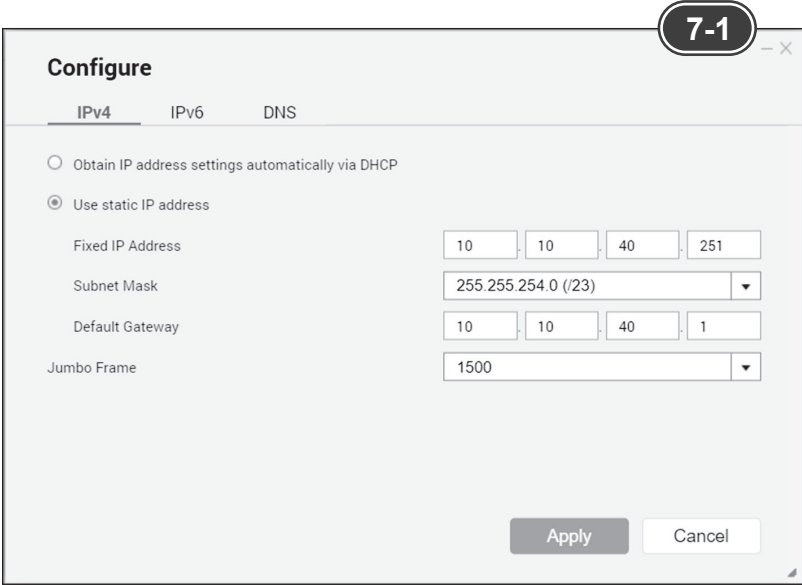


8 Input your network DNS address


- Confirm your network setting and then press “Yes”

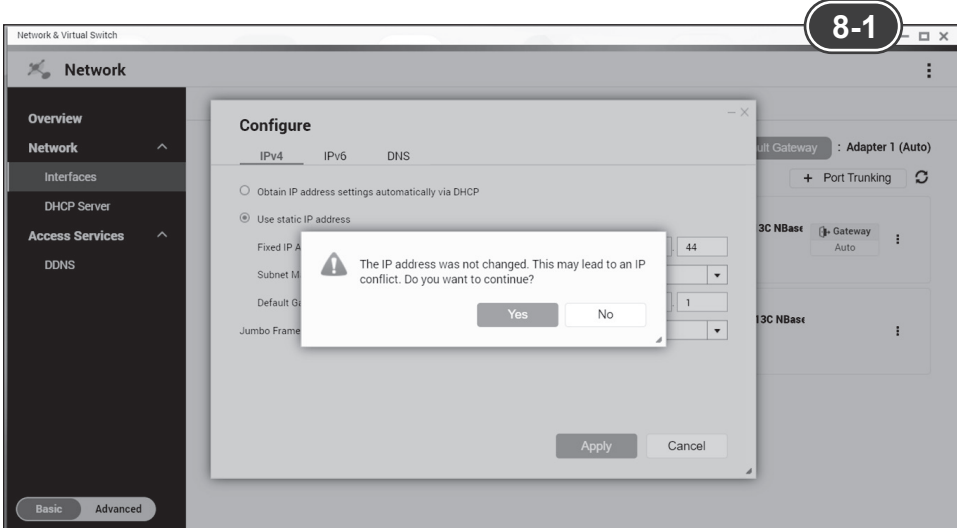

- Please wait for system will change your IP setting!

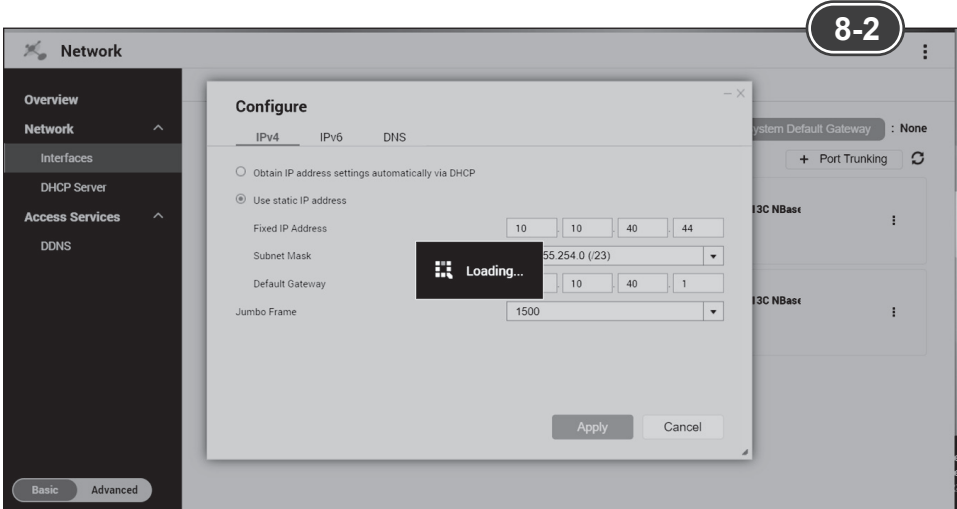

- Please check your IP setting change here!

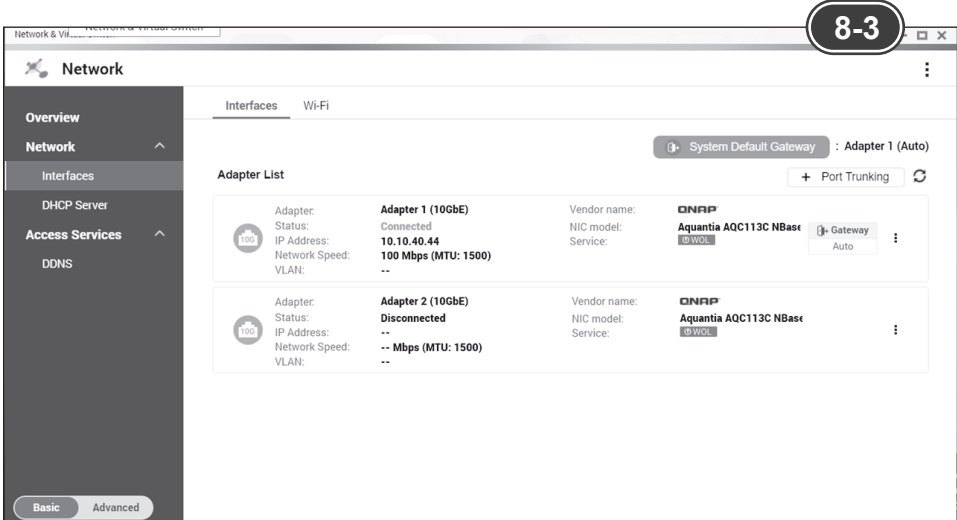

9 Online Upgrade IRM



End user can upgrade IRM through internet from IEI APP Store. The IEI Store is stepped in IRM Mini Server. Recommend end user to check and upgrade your IRM after you get it.



- Launch APP Center



- Select “IEI Store” and “My Apps” in left side. Please click the update button if the IRM or IRMAgentPack button display “Update”. No need to update APP if button display “Open”.

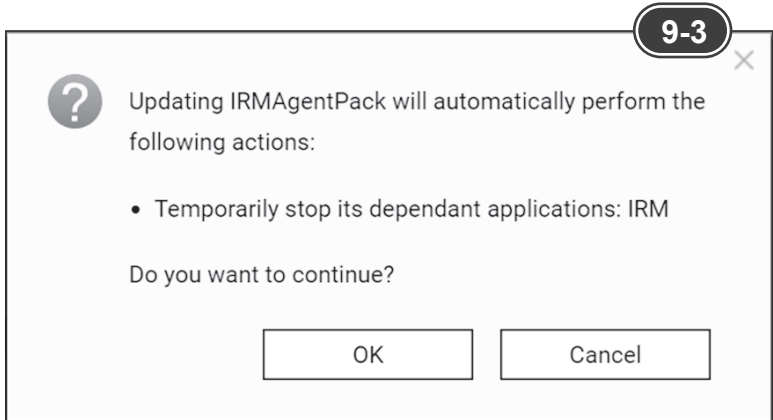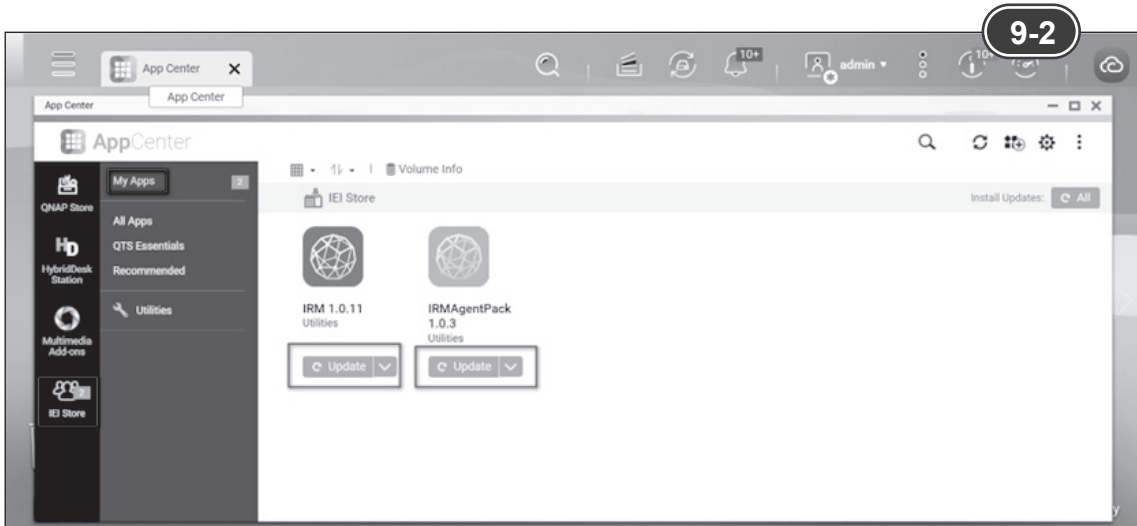

- Please press twice “OK” button to confirm to update APP