

**MODEL:
IMB-AM5**

**Micro-ATX Motherboard Supports AMD
7000&8000G PH1&9000 Series Processor, DDR5,
Triple Independent Displays, Dual 2.5GbE LAN,
M.2, USB 3.2, SATA 6Gb/s, HD Audio and RoHS**

User Manual

Revision

Date	Version	Changes
May 28, 2025	1.00	Initial release

Copyright

COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Manual Conventions



WARNING

Warnings appear where overlooked details may cause damage to the equipment or result in personal injury. Warnings should be taken seriously.



CAUTION

Cautionary messages should be heeded to help reduce the chance of losing data or damaging the product.



NOTE

These messages inform the reader of essential but non-critical information. These messages should be read carefully as any directions or instructions contained therein can help avoid making mistakes.

Table of Contents

1 INTRODUCTION.....	1
1.1 INTRODUCTION.....	2
1.2 FEATURES.....	2
1.3 CONNECTORS	4
1.4 DIMENSIONS.....	5
1.5 DATA FLOW	6
1.6 TECHNICAL SPECIFICATIONS	7
2 PACKING LIST.....	10
2.1 ANTI-STATIC PRECAUTIONS.....	11
2.2 UNPACKING PRECAUTIONS.....	11
2.3 PACKING LIST	12
2.4 OPTIONAL ITEMS.....	13
3 INSTALLATION	14
3.1 ANTI-STATIC PRECAUTIONS.....	15
3.2 INTERNAL PERIPHERAL DEVICE CONNECTIONS.....	15
3.2.1 <i>SATA Drive Connection</i>	15
3.3 INSTALLATION CONSIDERATIONS.....	18
3.4 SOCKET AM5 CPU INSTALLATION.....	19
3.5 SOCKET AM5 COOLING KIT INSTALLATION	23
3.6 DIMM INSTALLATION	25
3.7 M.2 MODULE INSTALLATION.....	26
3.8 SOFTWARE INSTALLATION	29
3.9 DRIVER DOWNLOAD	29
4 CONNECTORS	31
4.1 PERIPHERAL INTERFACE CONNECTORS.....	32
4.1.1 <i>IMB-AM5 Layout</i>	32
4.1.2 <i>Peripheral Interface Connectors</i>	32
4.1.3 <i>External Interface Panel Connectors</i>	34

4.2 INTERNAL PERIPHERAL CONNECTORS	35
4.2.1 Clear CMOS Button.....	35
4.2.2 AT/ATX Power Mode Setting	36
4.2.3 Front Panel Connector	37
4.2.4 Serial ATA 3.0 Connectors	38
4.2.5 Extend Audio Module Connector.....	40
4.2.6 Fan Connector (CPU).....	41
4.2.7 Fan Connectors (System).....	42
4.2.8 Pump Connector	43
4.2.9 CPU 12V Power Connector.....	44
4.2.10 ATX Power Connector	45
4.2.11 SMBus Connector.....	47
4.2.12 I ² C Connector	48
4.2.13 Chassis Intrusion Connector.....	49
4.2.14 M.2 M-key Slot.....	50
4.2.15 M.2 M-key Slot.....	52
4.2.16 Digital I/O Connector	54
4.2.17 Trusted Platform Module Connector	55
4.2.18 Battery Connector.....	56
4.2.19 EC Debug Connector.....	58
4.2.20 LAN Link LED connector.....	59
4.2.21 Flash SPI ROM Connector	60
4.2.22 PCIe x1 Slots.....	61
4.2.23 PCIe x4 Slots.....	62
4.2.24 PCIe x16 slots	63
4.2.25 DDR5 DIMM sockets.....	64
4.2.26 RS-232 Serial Port Connectors.....	65
4.2.27 RS-232/422/485 Serial Port Connectors	66
4.3 EXTERNAL PERIPHERAL INTERFACE CONNECTOR PANEL	67
4.3.1 Audio Jack Connector.....	67
4.3.2 External HDMI and DP Combo Connector.....	68
4.3.3 External 2.5GbE RJ-45 and dual USB 3.2 Gen 2 combo connector	69
4.3.4 External Dual USB 3.2 Gen 2 Connector.....	71
4.3.5 External HDMI Connector	71
4.3.6 External Serial Port Connector	72

5 BIOS	74
5.1 INTRODUCTION.....	75
5.1.1 Starting Setup.....	75
5.1.2 Using Setup	76
5.1.2.1 Keyboard Navigation	76
5.1.2.2 Touch Navigation	77
5.1.3 Getting Help.....	78
5.1.4 Unable to Reboot after Configuration Changes	78
5.1.5 BIOS Menu Bar.....	78
5.2 MAIN.....	79
5.3 ADVANCED.....	82
5.3.1 Trusted Computing.....	84
5.3.2 iEi One Key Recovery2	85
5.3.3 RTC Wake Settings	86
5.3.4 F81966 Super IO Configuration	88
5.3.4.1 Serial Port 1 Configuration	89
5.3.4.2 Serial Port 2 Configuration	90
5.3.4.3 Serial Port 3 Configuration	91
5.3.4.4 Serial Port 4 Configuration	92
5.3.4.5 Serial Port 5 Configuration	93
5.3.4.6 Serial Port 6 Configuration	94
5.3.5 EC KB9068 H/W Monitor.....	95
5.3.5.1 Smart Fan Mode Configuration	98
5.3.6 Serial Port Console Redirection	102
5.3.6.1 Console Redirection Settings	104
5.3.7 CPU Configuration	107
5.3.8 NVMe Configuration.....	109
5.3.9 AMD CBS.....	109
5.3.9.1 CPU Power Settings.....	111
5.3.10 AMD PBS.....	113
5.4 CHIPSET	114
5.4.1 South Bridge.....	115
5.4.2 Nouth Bridge.....	116
5.4.2.1 CPU PCIe Port Configuration.....	117

5.4.2.1 Memory Information.....	119
5.6 SECURITY.....	120
5.7 BOOT.....	122
5.7.1 Boot Configuration	122
5.7.2 Boot Option Priorities.....	123
5.8 SAVE & EXIT	124
A REGULATORY COMPLIANCE	126
B PRODUCT DISPOSAL	128
C BIOS OPTIONS	130
D WATCHDOG TIMER	134
E ERROR BEEP CODE.....	137
E.1 PEI BEEP CODES.....	138
E.2 DXE BEEP CODES	138
F HAZARDOUS MATERIALS DISCLOSURE.....	139
F.1 RoHS DIRECTIVE (2015/863/EU).....	140
F.2 CHINA RoHS.....	141

List of Figures

Figure 1-1: IMB-AM5	2
Figure 1-2: Connectors	4
Figure 1-3: IMB-AM5 Dimensions (mm).....	5
Figure 1-4: Data Flow Diagram.....	6
Figure 3-1: SATA Drive Cable Connection.....	16
Figure 3-2: SATA Power Drive Connection.....	17
Figure 3-3: Disengage the CPU Socket Load Lever.....	20
Figure 3-4: Remove Protective Cover.....	21
Figure 3-5: Insert the Socket AM5 CPU	22
Figure 3-6: Close the Socket AM5.....	23
Figure 3-7: Cooling Kit Support Bracket	24
Figure 3-8: DIMM Installation.....	25
Figure 3-9: Inserting the M.2 Module into the Slot at an Angle.....	26
Figure 3-10: Securing the M.2 Module.....	27
Figure 3-11: Press the Retainer.....	27
Figure 3-12: Aligning the M.2 Module with the Retainer.....	28
Figure 3-13: Securing the M.2 Module.....	28
Figure 3-14: IEI Resource Download Center.....	29
Figure 4-1: Peripheral Interface Connectors	32
Figure 4-2: Clear CMOS Jumper Location	35
Figure 4-3: AT/ATX Power Mode Switch Locations	36
Figure 4-4: Front Panel Connector Location	37
Figure 4-5: SATA 6Gb/s Connector Locations	38
Figure 4-6: Audio Connector Location	40
Figure 4-7: CPU Fan Connector Location	41
Figure 4-8: System Fan Connector Locations.....	42
Figure 4-9: Pump Connector Location	43
Figure 4-10: CPU 12V Power Connector Location	44
Figure 4-11: ATX Power Connector Location	45
Figure 4-12: SMBus Connector Location	47
Figure 4-13: I ² C Connector Location	48

Figure 4-14: Chassis Intrusion Connector Location	49
Figure 4-15: M.2 M-key Slot Location	50
Figure 4-16: M.2 M-key Slot Location	52
Figure 4-17: Digital I/O Connector Location	54
Figure 4-18: Trusted Platform Module Connector Location.....	55
Figure 4-19: Battery Connector Location.....	57
Figure 4-20: EC Debug Connector Location	58
Figure 4-21: LAN LED Connector Locations	59
Figure 4-22: Flash SPI ROM Connector Location	60
Figure 4-23: PCIe x1 Slot Locations	61
Figure 4-24: PCIe x4 Slot Locations	62
Figure 4-25: PCIe x16 Slot Locations	63
Figure 4-26: DDR5 DIMM Sockets Location	64
Figure 4-27: RS-232 Connector Location	65
Figure 4-28: RS-232/422/485 Connector Location	66
Figure 4-29: External Peripheral Interface Connector	67
Figure 4-30: Audio jack Connector Location	67
Figure 4-31: HDMI Connector	68
Figure 4-32: DP++ Connector	69
Figure 4-33: USB 3.2 and RJ45 Connector	70
Figure 4-34: USB 3.2 Connector.....	71
Figure 4-35: HDMI Connector	72
Figure 4-36: External Serial Port Pinout Locations.....	73
Figure 5-1: BIOS Starting Menu	75

List of Tables

Table 1-1: IMB-AM5 Specifications	9
Table 2-1: Packing List.....	12
Table 2-2: Optional Items	13
Table 4-1: Peripheral Interface Connectors	34
Table 4-2: Rear Panel Connectors	34
Table 4-3: Clear CMOS Jumper Pinouts.....	35
Table 4-4: AT/ATX Power Mode Switch Settings.....	36
Table 4-5: Front Panel Connector Pinouts.....	38
Table 4-6: SATA 6Gb/s Connector Pinouts.....	39
Table 4-7: Audio Connector Pinouts	40
Table 4-8: CPU Fan Connector Pinouts	41
Table 4-9: System Fan Connector Pinouts	42
Table 4-10: Pump Connector Pinouts.....	43
Table 4-11: CPU 12V Power Connector Pinouts.....	44
Table 4-12: ATX Power Connector Pinouts	46
Table 4-13: SMBus Connector Pinouts	47
Table 4-14: I ² C Connector Pinouts.....	48
Table 4-15: Chassis Intrusion Connector Pinouts	49
Table 4-16: M.2 M-key Connector Pinouts	52
Table 4-17: M.2 M-key Connector Pinouts	54
Table 4-18: Digital I/O Connector Pinouts.....	55
Table 4-19: Trusted Platform Module Connector Pinouts	56
Table 4-20: Battery Connector Pinouts	57
Table 4-21: EC Debug Connector Pinouts	58
Table 4-22: LAN1 LED Connector (JLAN_LED1) Pinouts.....	59
Table 4-23: LAN2 LED Connector (JLAN_LED 2) Pinouts.....	59
Table 4-24: Flash SPI ROM Connector Pinouts.....	60
Table 4-25: RS-232 Connector Pinouts	65
Table 4-26: RS-232/422/485 Connector Pinouts	66
Table 4-27: Audio jack Connector Pinouts	68
Table 4-28: HDMI Connector Pinouts	68

Table 4-29: DP++ Connector Pinouts	69
Table 4-30: USB 3.2 and RJ45 Pinouts	70
Table 4-31: USB 3.2 Connector Pinouts	71
Table 4-32: HDMI Connector Pinouts	72
Table 4-33: External Serial Port Pinouts	73
Table 5-1: BIOS Navigation Keys	76
Table 5-2: BIOS On-screen Navigation Keys	77

BIOS Menus

BIOS Menu 1: Main (1/2).....	79
BIOS Menu 2: Main (2/2).....	80
BIOS Menu 3: Advanced (1/2).....	82
BIOS Menu 4: Advanced (2/2).....	83
BIOS Menu 5: Trusted Computing Configuration	84
BIOS Menu 6: iEi One Key Recovery2	85
BIOS Menu 7: RTC Wake Settings (1/2).....	86
BIOS Menu 8: RTC Wake Settings (2/2).....	87
BIOS Menu 9: F81966 Super IO Configuration	88
BIOS Menu 10: Serial Port 1 Configuration Menu	89
BIOS Menu 11: Serial Port 2 Configuration Menu	90
BIOS Menu 12: Serial Port 3 Configuration Menu	91
BIOS Menu 13: Serial Port 4 Configuration Menu	92
BIOS Menu 14: Serial Port 5 Configuration Menu	93
BIOS Menu 15: Serial Port 6 Configuration Menu	94
BIOS Menu 16: EC KB9068 H/W Monitor (1/2)	95
BIOS Menu 17: EC KB9068 H/W Monitor (2/2)	96
BIOS Menu 18: Smart Fan Mode Configuration (1/3).....	98
BIOS Menu 19: Smart Fan Mode Configuration (2/3).....	99
BIOS Menu 20: Smart Fan Mode Configuration (3/3).....	99
BIOS Menu 21: Serial Port Console Redirection (1/3).....	102
BIOS Menu 22: Serial Port Console Redirection (2/3).....	103
BIOS Menu 23: Serial Port Console Redirection (3/3).....	103
BIOS Menu 24: COM Console Redirection Settings	104
BIOS Menu 25: CPU Configuration (1/2).....	107
BIOS Menu 26: CPU Configuration (2/2).....	108
BIOS Menu 27: NVMe Configuration.....	109
BIOS Menu 28: AMD CBS	110
BIOS Menu 29: CPU Power Settings.....	111
BIOS Menu 30: AMD PBS.....	113
BIOS Menu 31: Chipset	114

BIOS Menu 32: South Bridge Configuration	115
BIOS Menu 33: Nouth Bridge	116
BIOS Menu 34: CPU PCIe Port Configuration (1/2)	117
BIOS Menu 35: CPU PCIe Port Configuration (2/2)	117
BIOS Menu 36: Memory Configuration.....	119
BIOS Menu 37: Security (1/2).....	120
BIOS Menu 38: Security (2/2).....	121
BIOS Menu 39: Boot	122
BIOS Menu 40: Save & Exit.....	124

Chapter

1

Introduction

1.1 Introduction



Figure 1-1: IMB-AM5

The IMB-AM5 is a micro-ATX motherboard. It accepts AMD socket AM5 for AMD Ryzen™ 7000&8000G PHX1&9000 series desktop processors and supports four 288-pin 5200 MHz Dual-Channel DDR5 SDRAM Unbuffered DIMMs supported up to 192GB memory. Moreover, the IMB-AM5 includes one DP and two HDMI for triple independent display.

The IMB-AM5 provides two 2.5GbE interfaces through the Intel® I226V controllers. Expansion and I/O include one PCIe x1 slot, two PCIe x4 slots, one PCIe x16 slot, four SATA, two M.2 slots, four RS-232, two RS-232/422/485, two USB 3.2 Gen 2, four USB 3.2 Gen 1, and four USB 2.0.

1.2 Features

Some of the IMB-AM5 motherboard features are listed below:

- AMD Socket AM5 for AMD Ryzen™ 7000&8000G PHX1&9000 Series Desktop Processors

IMB-AM5

- Four 288-pin 5200 MHz Dual-Channel DDR5 SDRAM Unbuffered DIMMs supported up to 192GB
- Two 2.5GbE I226V controllers
- Triple independent display by DP and HDMI
- Four SATA 6Gb/s connectors
- Two USB 3.2 Gen 2 ports, four USB 3.2 Gen 1 ports and four USB 2.0
- One M.2 M-key slot with PCIe x4 signal; one M.2 M-key slot with PCIe x2 signal
- 1 x PCIe Gen4 x16 with x8 Signal
- 2 x PCIe Gen4 x4 (will disable with Ryzen8000G PHX1)
- 1 x PCIe Gen4 x1
- 4 x RS-232. 2 x RS-232/422/485
- TPM 2.0 security function supported by AMD fTPM
- RoHS compliant

1.3 Connectors

The connectors on the IMB-AM5 are shown in the figure below.

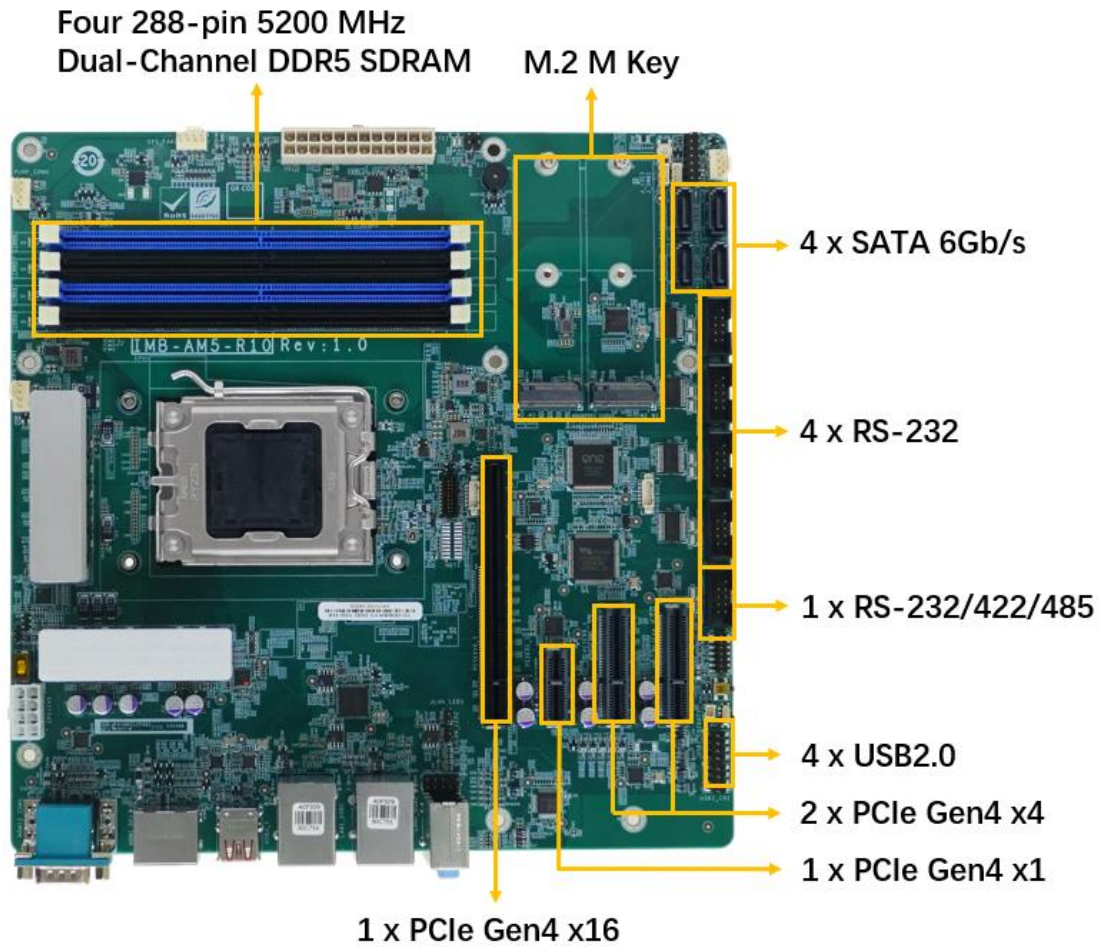


Figure 1-2: Connectors

1.5 Data Flow

Figure 1-4 shows the data flow between the system chipset, the CPU and other components installed on the motherboard.

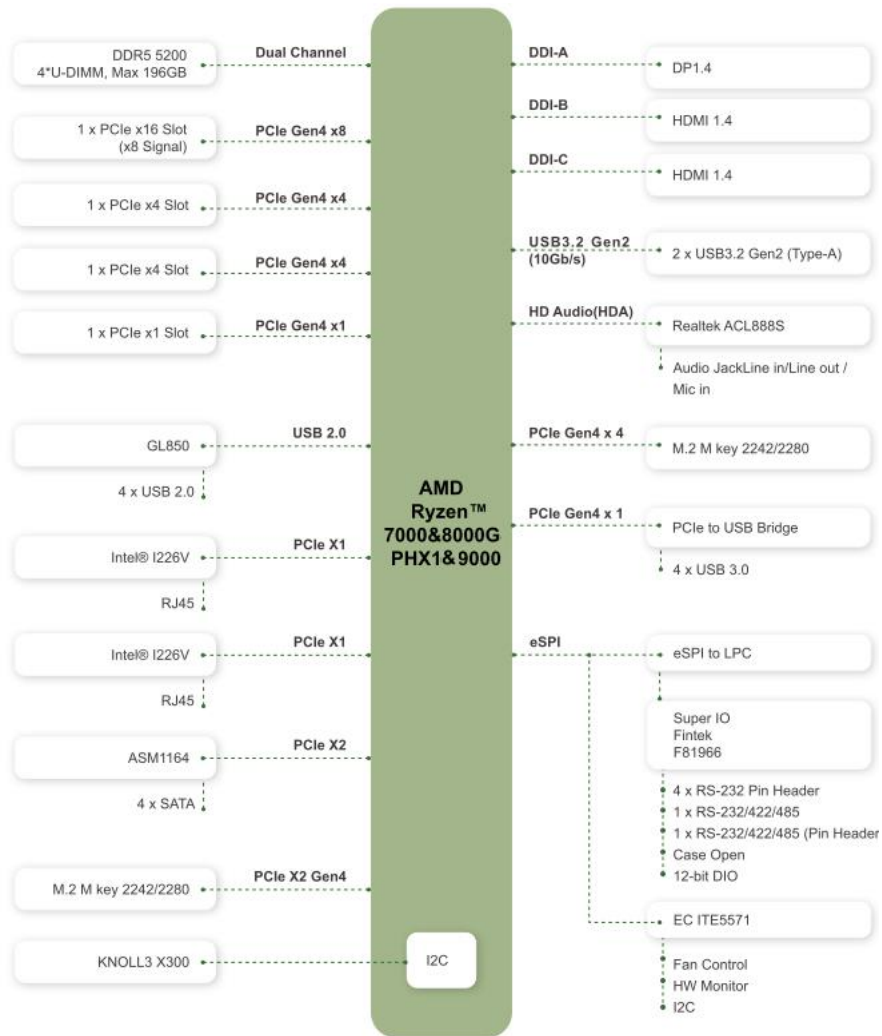


Figure 1-4: Data Flow Diagram

IMB-AM5

1.6 Technical Specifications

The IMB-AM5 technical specifications are listed below.

Specification/Model	IMB-AM5
Form Factor	microATX
CPU Supported	AMD Socket AM5 for AMD Ryzen™ 7000&8000G PHX1 &9000 Series Desktop Processors
Memory	Four 288-pin 5200 MHz Dual-Channel DDR5 SDRAM Unbuffered DIMMs supported up to 192GB
Graphics Engine	Integrated RDNA2 GPU
Display Output	Triple independent display 1 x DP (up to 4096x2304@60Hz) 2 x HDMI (up to 4096x2304@30Hz)
Ethernet Controllers	LAN1: Intel® I226V 2.5GbE controller LAN2: Intel® I226V 2.5GbE controller
Audio	Realtek ALC888S HD Audio codec supports 7.1-channel 3 x Audio jacks (line-out, line-in, mic-in) on rear IO 1 x Front audio (2x5 pin)
BIOS	AMI UEFI BIOS
Watchdog Timer	Software programmable supports 1~255 sec. system reset
Expansions	1 x PCIe x16 (Slot1) with x8 Signal Gen4 2 x PCIe x4 open-end (Slot3&4) Gen4 (slot3 will disable with Ryzen8000G PHX1) 1 x PCIe x1 (Slot 2, PCIe Gen4 x1 signal) 1 x M.2 M Key (2242/2280, PCIe x4) NVMe support (disable with Ryzen8000G PHX1) 1 x M.2 M Key (2242/2280, PCIe x2) NVMe support (NVME RAID 0/1 support)
I/O Interface Connectors	
Audio Connectors	One internal audio connector (10-pin header)

Specification/Model	IMB-AM5
Chassis Intrusion	One 2-pin header
Digital I/O	12-bit digital I/O
Ethernet	Two RJ-45 GbE ports
Fan	1 x CPU fan connector (1x4 pin) 1 X PUMP fan connector (1x4pin) 2 x System fan connector (1x 4 pin)
Front Panel	1 x Front Panel (2 x 7 pin, Power LED, HDD LED, Speaker, Power Button, Reset Button)
I²C	One 4-pin wafer connector
LAN LED	2 x LAN LED (1x2 pin)
Serial ATA	Four SATA 6Gb/s connectors
Serial Ports	4 x RS-232 (2x5 pin, P=2.54) 1 x RS-232/422/485 (RS-485 support AFC) 1 x RS-232/422/485 (RS-485 support AFC) (2x5 pin, P=2.54)
SMBus	One 4-pin wafer connector
USB Ports	2 x USB 3.2 Gen2 (Type-A) (10Gb/s) 4 x USB 3.2 Gen1 (Type-A) (5Gb/s) 4 x USB2.0 (2x4 pin, P=2.54)
Environmental and Power Specifications	
Power Supply	AT/ATX power supply
Power Consumption	3.3V@1.66A, 5V@9.29A, 12V@16.33A, 5VSB@0.07A (AMD Ryzen 9 7950X 170W with Transcend JM5600ALE-16GB X4 memory)
Operating Temperature	-10°C ~ 60°C
Storage Temperature	-30°C ~ 70°C
Operating Humidity	5% ~ 95% (non-condensing)
Physical Specifications	
Dimensions	244 mm x 244 mm

IMB-AM5

Specification/Model	IMB-AM5
Weight (GW/NW)	1200g / 700g

Table 1-1: IMB-AM5 Specifications

Chapter

2

Packing List

IMB-AM5

2.1 Anti-static Precautions



WARNING!

Static electricity can destroy certain electronics. Make sure to follow the ESD precautions to prevent damage to the product, and injury to the user.

Make sure to adhere to the following guidelines:

- ***Wear an anti-static wristband:*** Wearing an anti-static wristband can prevent electrostatic discharge.
- ***Self-grounding:*** Touch a grounded conductor every few minutes to discharge any excess static buildup.
- ***Use an anti-static pad:*** When configuring any circuit board, place it on an anti-static mat.
- ***Only handle the edges of the PCB:*** Don't touch the surface of the motherboard. Hold the motherboard by the edges when handling.

2.2 Unpacking Precautions

When the IMB-AM5 is unpacked, please do the following:

- Follow the anti-static guidelines above.
- Make sure the packing box is facing upwards when opening.
- Make sure all the packing list items are present.

2.3 Packing List



NOTE:

If any of the components listed in the checklist below are missing, do not proceed with the installation. Contact the IEI reseller or vendor the IMB-AM5 was purchased from or contact an IEI sales representative directly by sending an email to sales@ieiworld.com.

The IMB-AM5 is shipped with the following components:




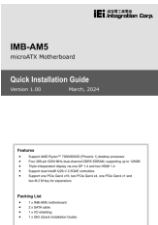
Quantity	Item and Part Number	Image
1	IMB-AM5 single board computer	
2	SATA cable	
1	I/O shielding	
1	Quick installation guide	

Table 2-1: Packing List

IMB-AM5

2.4 Optional Items

The following are optional components which may be separately purchased:

Item and Part Number	Image
RS-232/422/485 cable, 230mm, P=2.54 (P/N: 32205-000702-200-RS)	
SATA power cable (P/N: 32102-000100-200-RS)	
Dual port USB cable with bracket, 300mm, P=2.54 (P/N: 19800-003100-100-RS)	
Cooler module (P/N: 19100-000344-00-RS)	
Cooler module (P/N: 19100-000345-00-RS)	
Cooler module (P/N: 19100-000348-00-RS)	
Cooler module (P/N: 19100-000338-00-RS)	

Table 2-2: Optional Items

Chapter

3

Installation

IMB-AM5

3.1 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the installation of the IMB-AM5 may result in permanent damage to the IMB-AM5 and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the IMB-AM5. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the IMB-AM5 or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- **Self-grounding:** Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- **Use an anti-static pad:** When configuring the IMB-AM5, place it on an anti-static pad. This reduces the possibility of ESD damaging the IMB-AM5.
- **Only handle the edges of the PCB:** When handling the PCB, hold the PCB by the edges.

3.2 Internal Peripheral Device Connections

This section outlines the installation of peripheral devices to the onboard connectors.

3.2.1 SATA Drive Connection

The IMB-AM5 is shipped with two SATA drive cables. To connect the SATA drives to the connectors, please follow the steps below.

Step 1: Locate the connectors. The locations of the SATA drive connectors are shown in **Chapter 3**.

Step 2: **Insert the cable connector.** Insert the cable connector into the on-board SATA drive connector until it clips into place. See **Figure 3-1**.

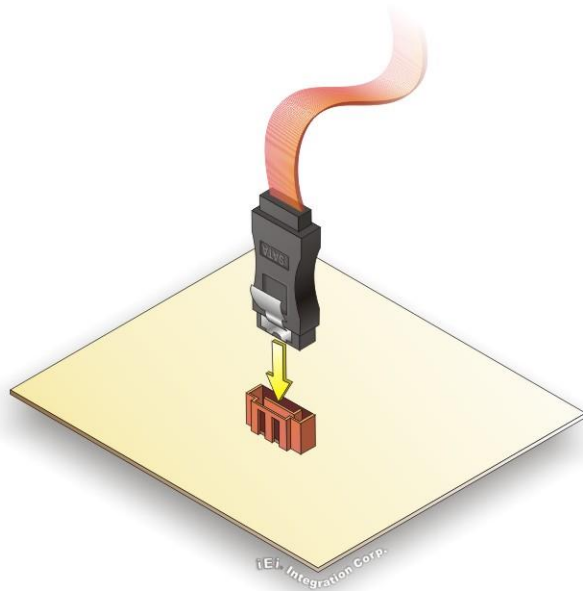


Figure 3-1: SATA Drive Cable Connection

Step 3: **Connect the cable to the SATA disk.** Connect the connector on the other end of the cable to the connector at the back of the SATA drive. See **Figure 3-2**.

Step 4: **Connect the SATA power cable.** Connect the SATA power connector to the back of the SATA drive. See **Figure 3-2**.

3.3 Installation Considerations

**NOTE:**

The following installation notices and installation considerations should be read and understood before installation. All installation notices must be strictly adhered to. Failing to adhere to these precautions may lead to severe damage and injury to the person performing the installation.

**WARNING:**

The installation instructions described in this manual should be carefully followed in order to prevent damage to the components and injury to the user.

Before and during the installation please **DO** the following:

- Read the user manual:
 - The user manual provides a complete description of the IMB-AM5 installation instructions and configuration options.
- Wear an electrostatic discharge cuff (ESD):
 - Electronic components are easily damaged by ESD. Wearing an ESD cuff removes ESD from the body and helps prevent ESD damage.
- Place the IMB-AM5 on an anti-static pad:
 - When installing or configuring the motherboard, place it on an anti-static pad. This helps to prevent potential ESD damage.
- Turn all power to the IMB-AM5 off:
 - When working with the IMB-AM5, make sure that it is disconnected from all power supplies and that no electricity is being fed into the system.

Before and during the installation of the IMB-AM5, **DO NOT**:

IMB-AM5

- Remove any of the stickers on the PCB board. These stickers are required for warranty validation.
- Use the product before verifying all the cables and power connectors are properly connected.
- Allow screws to come in contact with the PCB circuit, connector pins, or its components.

3.4 Socket AM5 CPU Installation



WARNING:

CPUs are expensive and sensitive components. When installing the CPU please be careful not to damage it in anyway. Make sure the CPU is installed properly and ensure the correct cooling kit is properly installed.

DO NOT touch the pins at the bottom of the CPU. When handling the CPU, only hold it on the sides.

To install the CPU, follow the steps below.

Step 1: **Disengage the load lever** by pressing the lever down and slightly outward to clear the retention tab. Fully open the lever. See **Figure 3-3**.

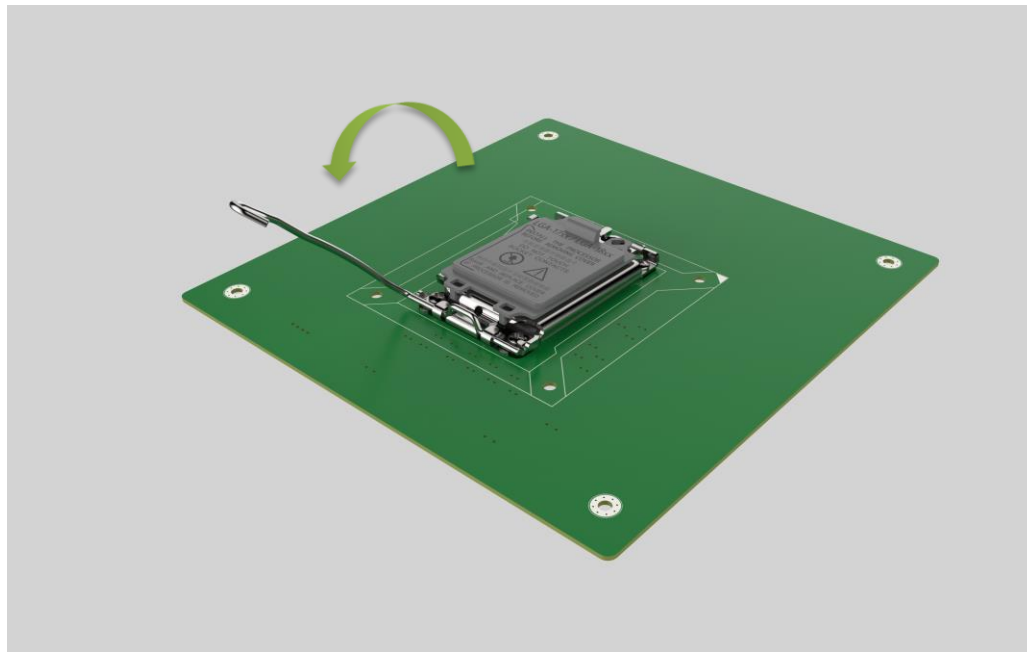


Figure 3-3: Disengage the CPU Socket Load Lever

Step 2: Open the socket and remove the protective cover. The black protective cover can be removed by pulling up on the tab labeled "Remove". See **Figure 3-4**.

IMB-AM5

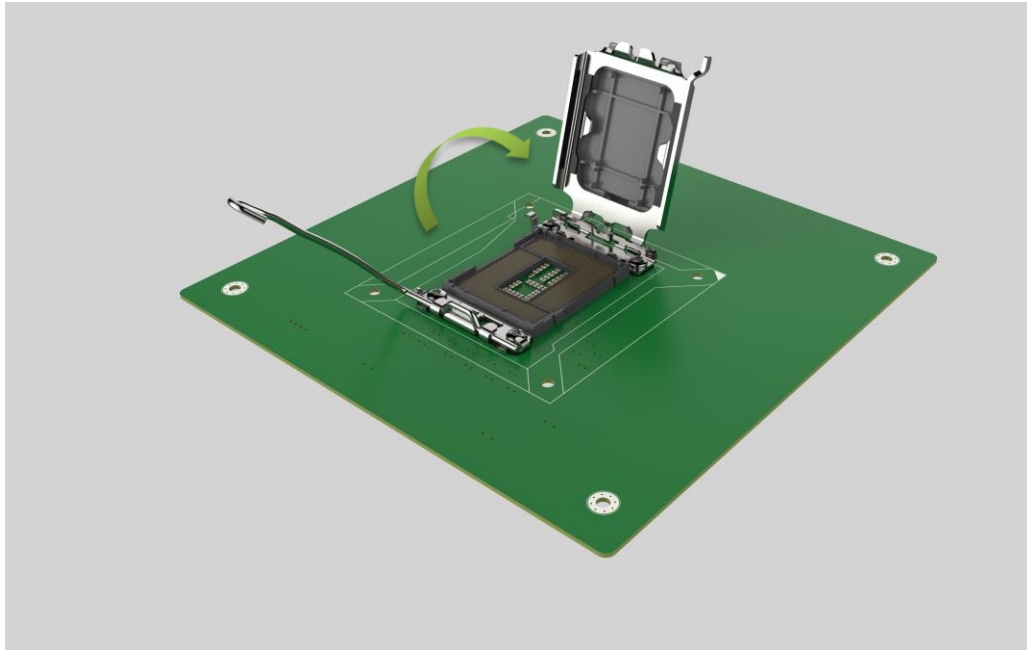


Figure 3-4: Remove Protective Cover

- Step 3:** **Inspect the CPU socket.** Make sure there are no bent pins and make sure the socket contacts are free of foreign material. If any debris is found, remove it with compressed air.
- Step 4:** **Orientate the CPU properly.** The contact array should be facing the CPU socket.



WARNING:

DO NOT touch the pins at the bottom of the CPU. When handling the CPU, only hold it on the sides.

-
- Step 5:** **Correctly position the CPU.** Match the Pin 1 mark with the cut edge on the CPU socket.
- Step 6:** **Align the CPU pins.** Locate pin 1 and the two orientation notches on the CPU. Carefully match the two orientation notches on the CPU with the socket alignment keys.

Step 7: Insert the CPU. Gently insert the CPU into the socket. If the CPU pins are properly aligned, the CPU should slide into the CPU socket smoothly. See **Figure 3-5**.

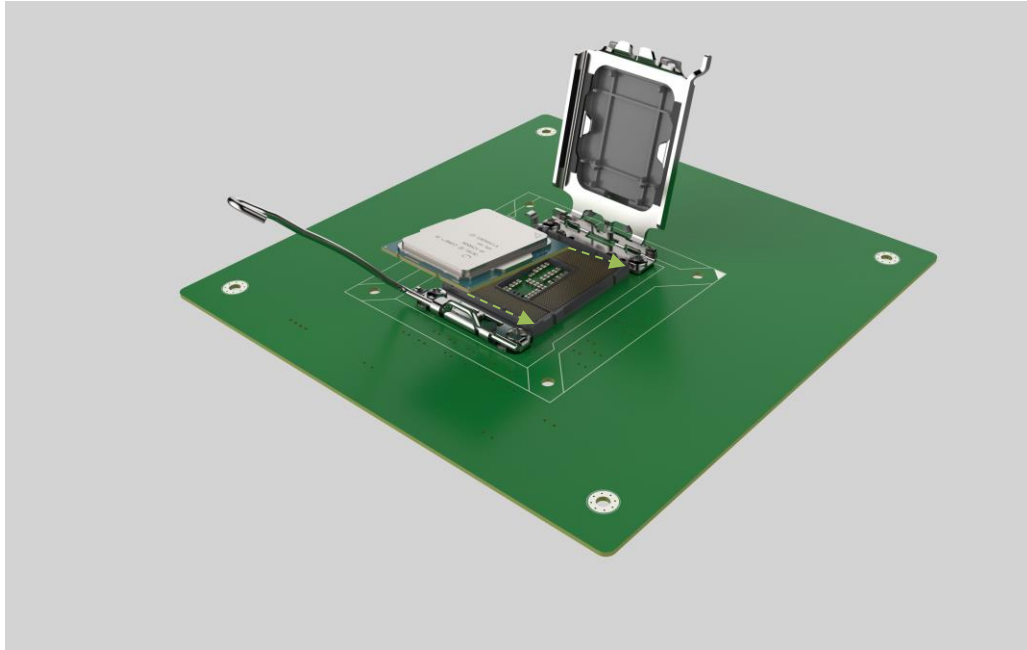


Figure 3-5: Insert the Socket AM5 CPU

Step 8: Close the CPU socket. Close the load plate and pull the load lever back a little to have the load plate be able to secure to the knob. Engage the load lever by pushing it back to its original position (**Figure 3-6**). There will be some resistance, but will not require extreme pressure.

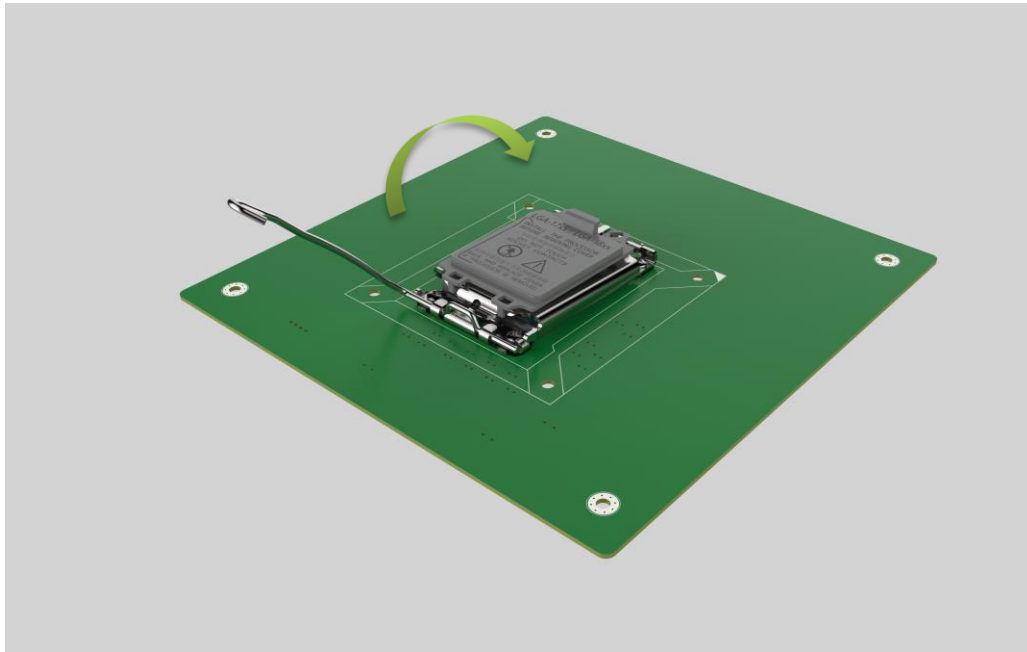


Figure 3-6: Close the Socket AM5

Step 9: Connect the 12 V power to the board. Connect the 12 V power from the power supply to the board.

3.5 Socket AM5 Cooling Kit Installation



WARNING:

DO NOT attempt to install a push-pin cooling fan.

The pre-installed support bracket prevents the board from bending and is **ONLY** compatible with captive screw type cooling fans.

The cooling kit can be bought from IEI. The cooling kit has a heat sink and fan.

**WARNING:**

Do not wipe off (accidentally or otherwise) the pre-sprayed layer of thermal paste on the bottom of the heat sink. The thermal paste between the CPU and the heat sink is important for optimum heat dissipation.

To install the cooling kit, follow the instructions below.

Step 1: A cooling kit bracket is pre-installed on the rear of the motherboard. See **Figure 3-7**.

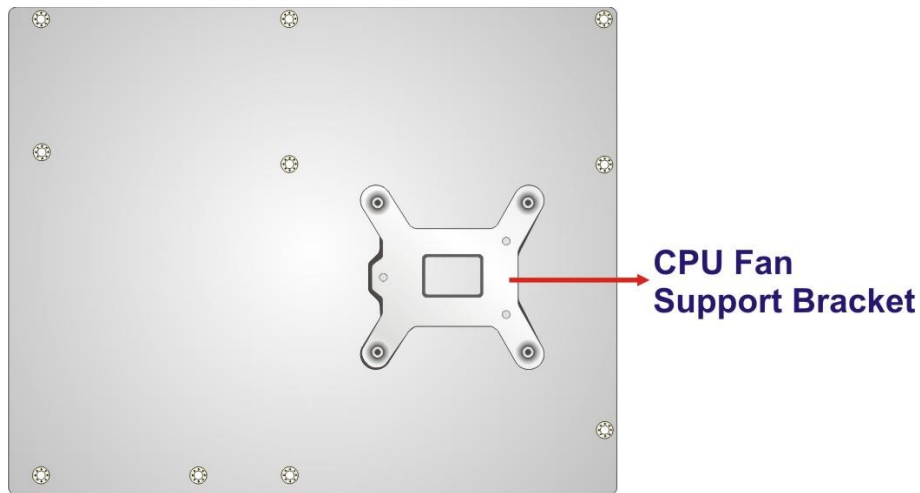


Figure 3-7: Cooling Kit Support Bracket

Step 2: Place the cooling kit onto the socket AM5 CPU. Make sure the CPU cable can be properly routed when the cooling kit is installed.

Step 3: Mount the cooling kit. Gently place the cooling kit on top of the CPU. Make sure the four threaded screws on the corners of the cooling kit properly pass through the holes of the cooling kit bracket.

IMB-AM5

- Step 4: Tighten the screws.** Use a screwdriver to tighten the four screws. In a diagonal pattern, tighten each screw a few turns then move to the next one, until they are all secured. Do not overtighten the screws.
- Step 5: Connect the fan cable.** Connect the cooling kit fan cable to the CPU fan connector on the IMB-AM5. Carefully route the cable and avoid heat generating chips and fan blades.

3.6 DIMM Installation

To install a DIMM, please follow the steps below and refer to **Figure 3-8**.

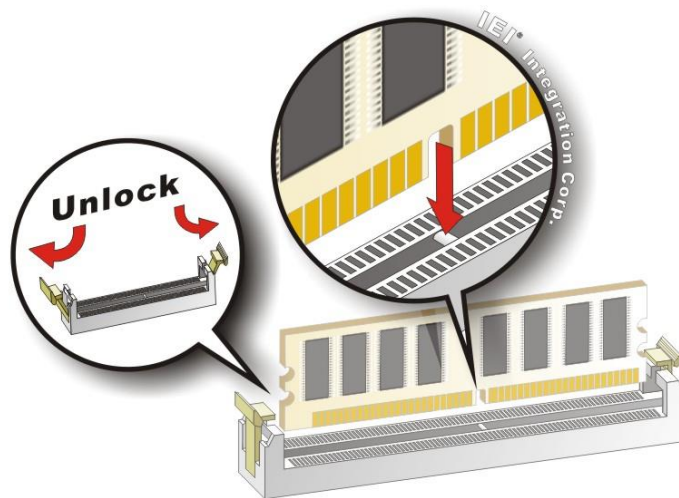


Figure 3-8: DIMM Installation

- Step 1: Open the DIMM socket handles.** Open the two handles outwards as far as they can. See **Figure 3-8**.
- Step 2: Align the DIMM with the socket.** Align the DIMM so the notch on the memory lines up with the notch on the memory socket. See **Figure 3-8**.
- Step 3: Insert the DIMM.** Once aligned, press down until the DIMM is properly seated. Clip the two handles into place. See **Figure 3-8**.
- Step 4: Removing a DIMM.** To remove a DIMM, push both handles outward. The memory module is ejected by a mechanism in the socket.

**CAUTION:**

For quad channel configuration, install four identical memory modules that feature the same capacity, timings, voltage, number of ranks and the same brand.

3.7 M.2 Module Installation

The IMB-AM5 provide two ways to install the M.2 expansion card. One is using screw, and the other is using the retainer. Please follow the steps below.

Mode One: Using screw

- Step 1:** Locate the M.2 module slot. See **Chapter 3**.
- Step 2:** Remove the retention screw secured on the motherboard.
- Step 3:** Line up the notch on the module with the notch on the slot. Slide the M.2 module into the socket at an angle of about 20° (**Figure 3-9**).

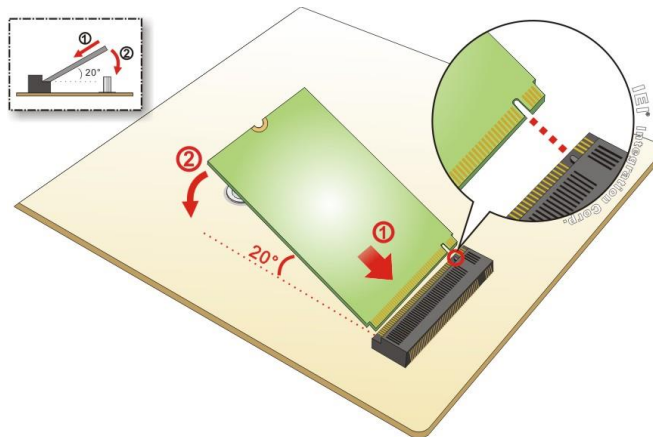


Figure 3-9: Inserting the M.2 Module into the Slot at an Angle

- Step 4:** Secure the M.2 module with the previously removed retention screw (**Figure 3-10**).

IMB-AM5

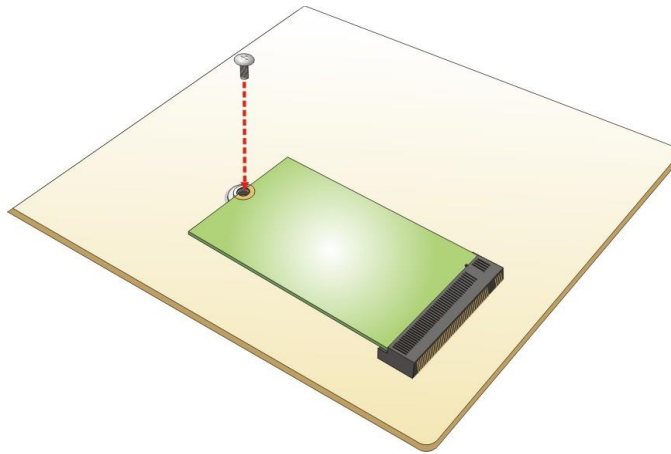


Figure 3-10: Securing the M.2 Module

Mode Two: Using the Retainer

Step 1: Press the retainer down as shown below. (See Figure 3-11)

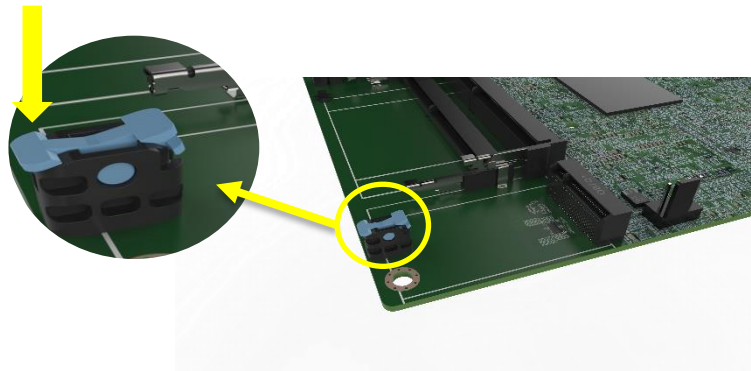


Figure 3-11: Press the Retainer

Step 2: Line up the notch on the M.2 module with the notch on the slot. Slide the M.2 module into the socket at an angle of about 20°. (See **Figure 3-9**)

Step 3: Align the notch on the end of the M.2 module with the clip of the retainer. (See

Figure 3-12)

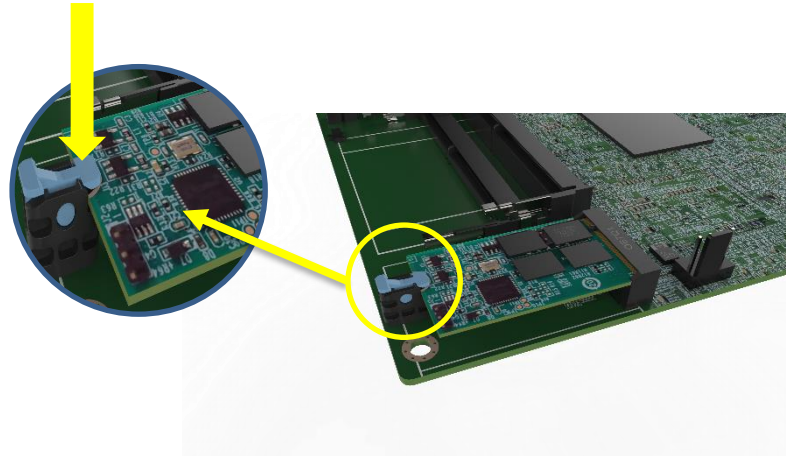


Figure 3-12: Aligning the M.2 Module with the Retainer

Step 4: Press the M.2 module down until it is secured into place by the retainer. (See **Figure 3-13**)

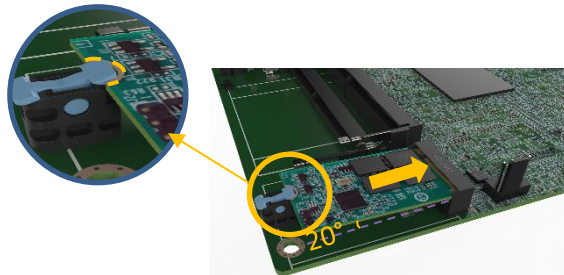


Figure 3-13: Securing the M.2 Module

Step 5: If you want to remove the M.2 module, you should press the retainer down as described in Step 1 to release the M.2 module. (See **Figure 3-11**)

IMB-AM5

3.8 Software Installation

All the drivers for the IMB-AM5 are available on IEI Resource Download Center (<https://download.ieiworld.com>). Type IMB-AM5 and press Enter to find all the relevant software, utilities, and documentation.


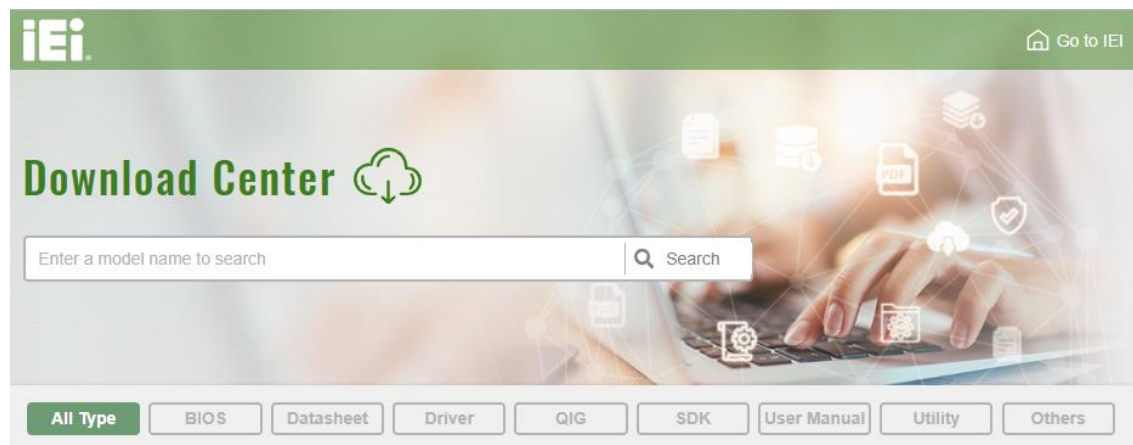


Figure 3-14: IEI Resource Download Center

3.9 Driver Download

To download drivers from IEI Resource Download Center, follow the steps below.

Step 1: Go to <https://download.ieiworld.com>. Type IMB-AM5 and press Enter.

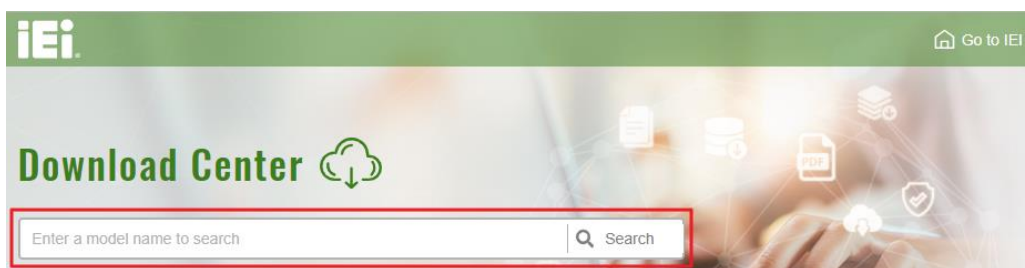



Step 2: All product-related software, utilities, and documentation will be listed. You can choose **Driver** to filter the result.

WAFER-BT-i1 Product Info ▶

Embedded Computer ▶
Single Board Computer ▶
Embedded Board


3.5" SBC with Intel® 22nm Atom™/Celeron® on-board SoC

Driver

File Name	Published	Version	File Checksum
 7B000-001033-RS V2.3.iso (2.23 GB) 	2017/10/03	2.30	3B2DB1F792779A93A8F50DDBC3943E30

Step 3: Click the driver file name on the page and you will be prompted with the following window. You can download the entire ISO file (○), or click the small arrow to find an individual driver and click the file name to download (○).

7B000-001168-RS_V1.4.iso

1  [Click here to download entire ISO file. \(2.99 GB\)](#)

2 * Download individual file *

- Docs
 - 1.Chipset
 - 10.1.1.12.zip (2.7 MB)
 - 2.VGA
 - 3.Audio
 - 4.Lan
 - 5.USB 3.0
 - 6.Serial IO
 - 7.TXE
 - 8.Manual



NOTE:

To install software from the downloaded ISO image file in Windows 8, 8.1 or 10, double-click the ISO file to mount it as a virtual drive to view its content. On Windows 7 system, an additional tool (such as Virtual CD-ROM Control Panel from Microsoft) is needed to mount the file.

Chapter

5

Connectors

4.1 Peripheral Interface Connectors

This chapter details all the peripheral interface connectors.

4.1.1 IMB-AM5 Layout

The figures below show all the peripheral interface connectors.

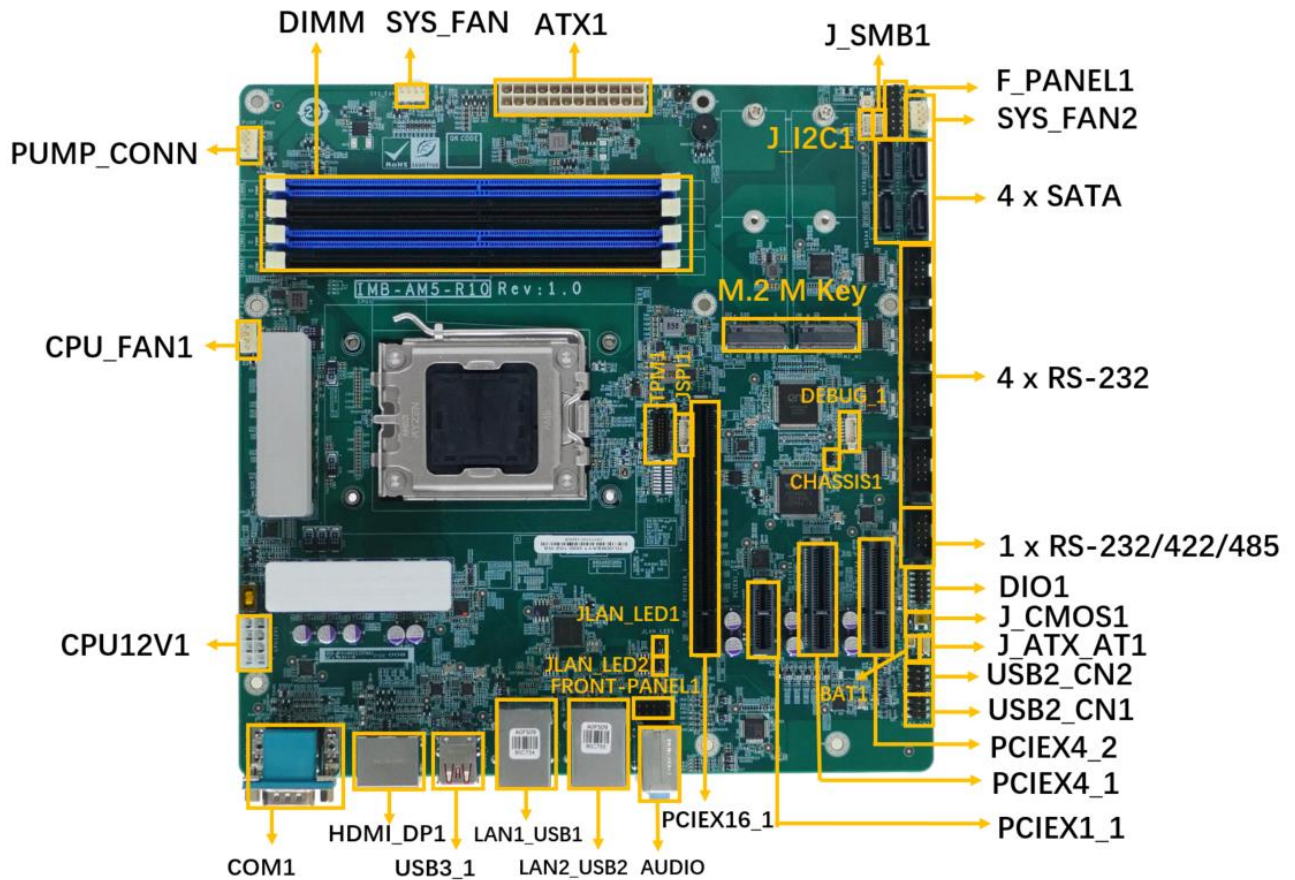


Figure 4-1: Peripheral Interface Connectors

4.1.2 Peripheral Interface Connectors

The table below lists all the connectors on the board.

Connector	Type	Label
AT/ATX power mode setting	3-pin switch	J_ATX_AT1
Clear CMOS jumper	Button	J_CMOS1

IMB-AM5

Connector	Type	Label
Audio connector	10-pin header	FRONT-PANEL 1
ATX power connector	24-pin connector	ATX1
ATX CPU 12V power connector	8-pin Molex power connector	CPU12V1
RTC battery connector	2-pin header	BAT1
Chassis intrusion connector	2-pin header	CHASSIS1
DDR5 DIMM slots	288-pin socket	CHA_DIMM0, CHA_DIMM1, CHB_DIMM0, CHB_DIMM1
Digital I/O connector	14-pin header	DIO1
Trusted Platform Module Connector	20-pin header	TPM1
EC debug connector	6-pin header	DEBUG_1
Fan connectors	4-pin header	CPU_FAN1, SYS_FAN1, SYS_FAN2
Front panel connector	14-pin header	F_PANEL1
I2C connector	4-pin wafer	J_I2C1
LAN1 link LED connector	2-pin header	JLAN_LED1
LAN2 link LED connector	2-pin header	JLAN_LED2
RS-232 serial port connectors	9-pin header	COM3-6
RS-232/422/485 connectors	9-pin header	COM2
SATA 6Gb/s connectors	8-pin SATA connector	SATA1, SATA2, SATA3, SATA4
SMBus connector	4-pin wafer	J_SMB1
Flash SPI ROM connector	6-pin header	JSPI1
M.2 M key slots	M-key slot	M2_M1, M2_M2
PCIe x1 slots	PCIe Slot	PCIEX1_1

Connector	Type	Label
PCIe x4 slots	PCIe Slot	PCIEX4_1, PCIEX4_2
PCIe x16 slot	PCIe Slot	PCIEX16_1
PUMP connector	4-pin header	PUMP_CONN
USB 2.0 connector	8-pin header	USB2_CN1 USB2_CN2

Table 4-1: Peripheral Interface Connectors

4.1.3 External Interface Panel Connectors

The table below lists the connectors on the external I/O panel.

Connector	Type	Label
External audio jacks	Audio jacks	AUDIO1
External 2.5GbE RJ-45 and dual USB 10Gb/s combo connector	USB 3.2, RJ45	LAN1_USB1, LAN2_USB2
External dual USB 5Gb/s connector	USB 3.2	USB3_1
External HDMI and DP combo connector	HDMI, DP	HDMI_DP1
External HDMI connector	HDMI	HDMI2
External Serial Port Connector	COM	COM1

Table 4-2: Rear Panel Connectors

IMB-AM5

4.2 Internal Peripheral Connectors

The section describes all of the connectors on the IMB-AM5.

4.2.1 Clear CMOS Button

- CN Label:** J_CMOS1
- CN Type:** Button
- CN Location:** See Figure 4-2
- CN Pinouts:** See Table 4-3

The J_CMOS1 is used to Clear CMOS Setup.

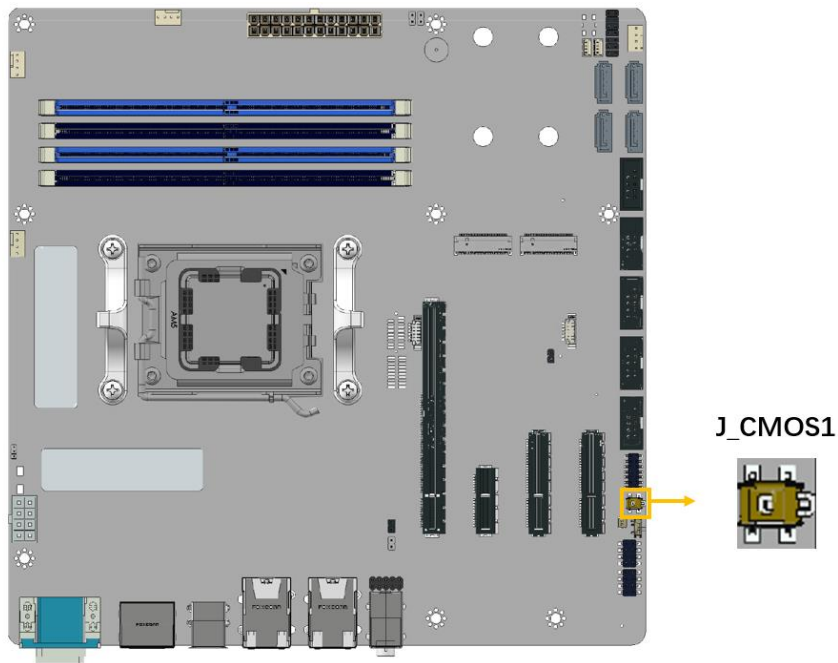


Figure 4-2: Clear CMOS Jumper Location

Pin	Description
NC	Keep CMOS Setup (Normal Operation)
Press	Clear CMOS Setup

Table 4-3: Clear CMOS Jumper Pinouts

4.2.2 AT/ATX Power Mode Setting

- CN Label:** J_ATX_AT1
- CN Type:** 3-pin switch
- CN Location:** See **Figure 4-3**
- CN Pinouts:** See **Table 4-4**

The AT/ATX power mode selection is made through the AT/ATX power mode switch.

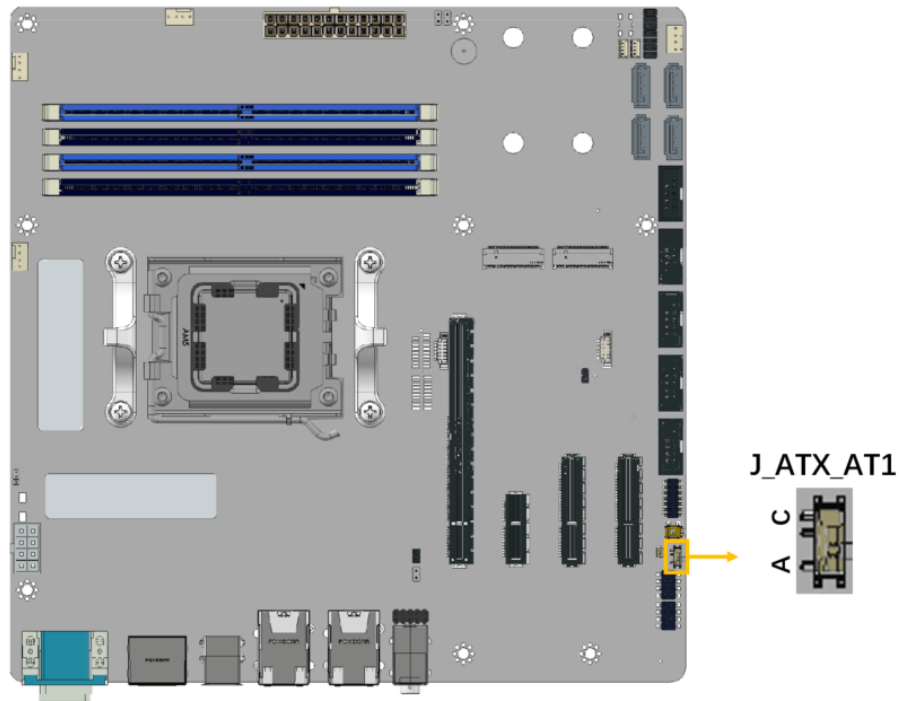


Figure 4-3: AT/ATX Power Mode Switch Locations

Pin	Description	Pin	Description
Short A - B	ATX Power Mode (default)	Short B - C	AT Power Mode

Table 4-4: AT/ATX Power Mode Switch Settings

IMB-AM5

4.2.3 Front Panel Connector

- CN Label:** F_PANEL1
- CN Type:** 14-pin header, p=2.54 mm
- CN Location:** See Figure 4-4
- CN Pinouts:** See Table 4-5

The front panel connector connects to the indicator LEDs and buttons on the computer's front panel.

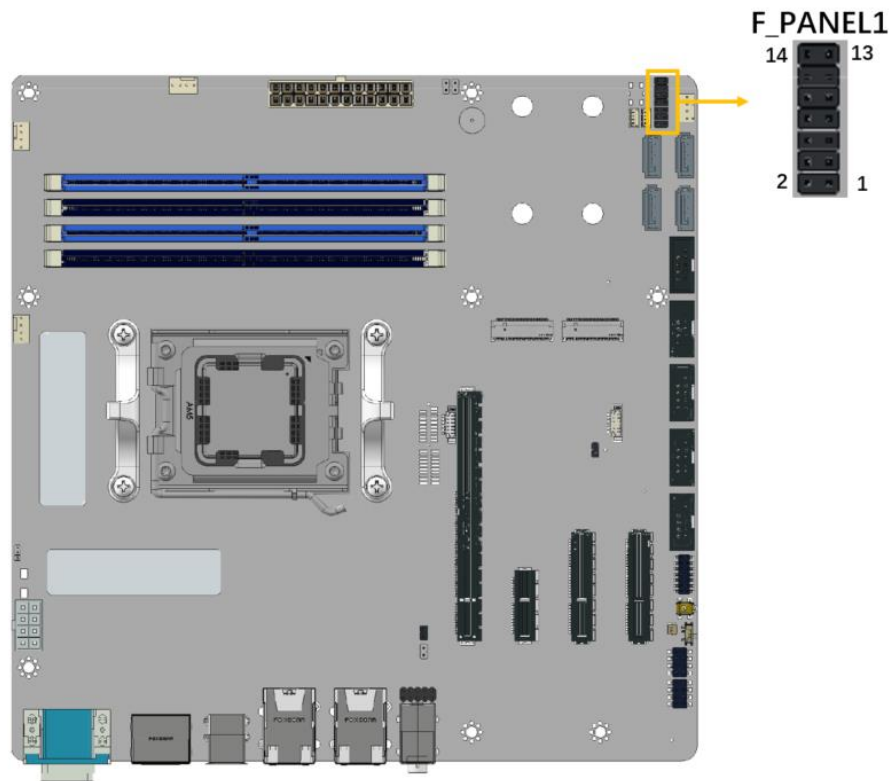


Figure 4-4: Front Panel Connector Location

Function	Pin	Description	Function	Pin	Description
PWR LED	1	+5V	SPKR	2	SPKR+
	3	NC	IPMI LED	4	NC
	5	GND		6	NC
PWR BTN	7	PWR_BTN_N	SPKR	8	SPKR-

	9	GND		10	NC
HDD LED	11	HD_LED_P	RESET	12	Reset+
	13	HD_LED_N		14	Reset-

Table 4-5: Front Panel Connector Pinouts

4.2.4 Serial ATA 3.0 Connectors

- CN Label:** SATA1, SATA2, SATA3, SATA4
- CN Type:** 8-pin SATA connector
- CN Location:** See Figure 4-5
- CN Pinouts:** See Table 4-6

The SATA drive connectors can be connected to SATA drives and support up to 6Gb/s data transfer rate.

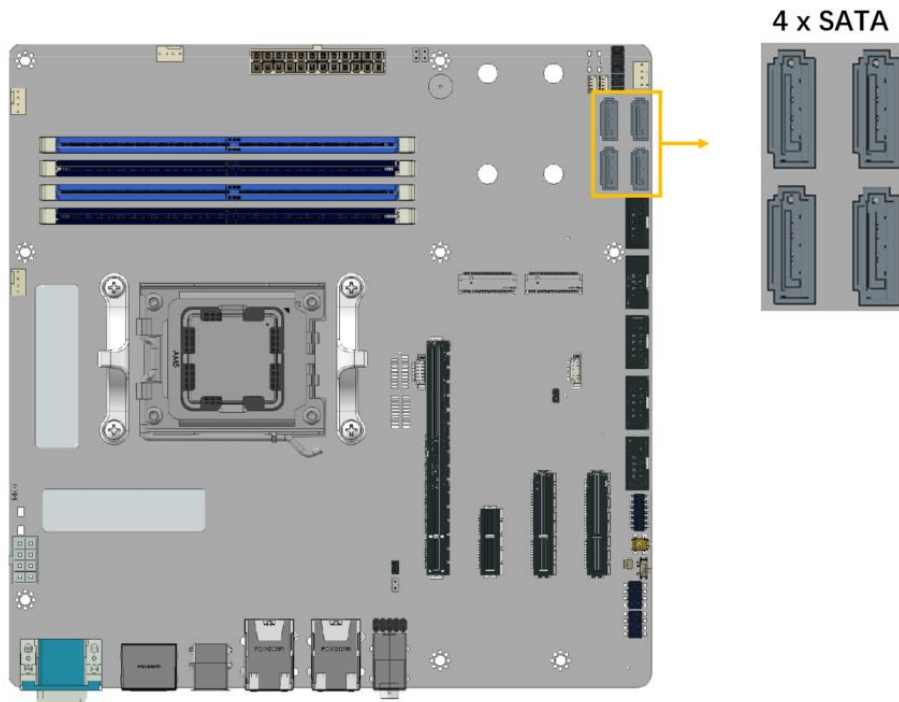


Figure 4-5: SATA 6Gb/s Connector Locations

IMB-AM5

Pin	Description
1	GND
2	SATA_TXP
3	SATA_TXN
4	GND
5	SATA_RXN
6	SATA_RXP
7	GND
8	N/C

Table 4-6: SATA 6Gb/s Connector Pinouts

4.2.5 Extend Audio Module Connector

- CN Label:** FRONT-PANEL1
- CN Type:** 10-pin header, p=2.54 mm
- CN Location:** See Figure 4-6
- CN Pinouts:** See Table 4-7

This connector connects to speakers, a microphone and an audio input.

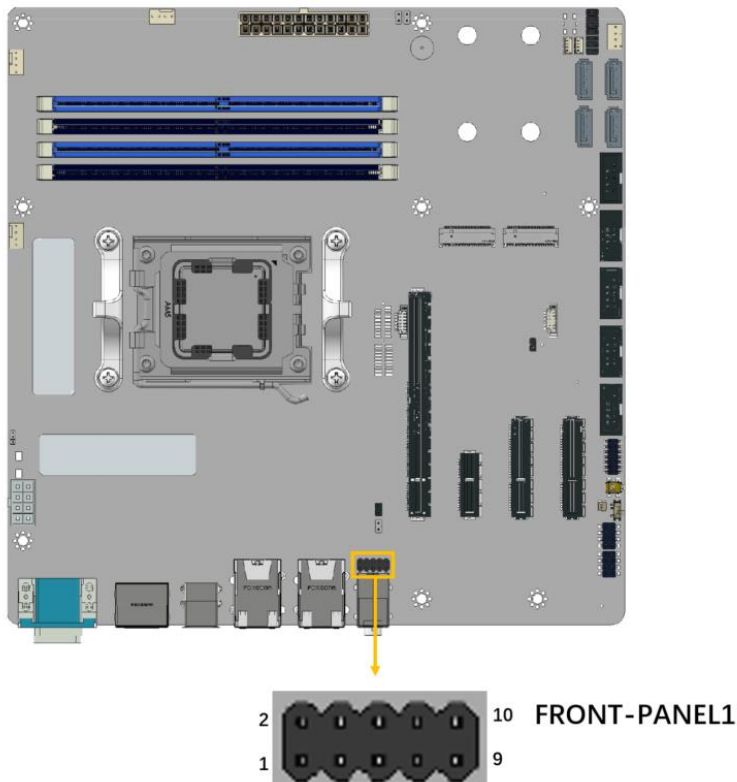


Figure 4-6: Audio Connector Location

Pin	Description	Pin	Description
1	LMIC2-L	2	GND
3	LMIC2-R	4	PRESENCE#
5	LLINE2-R	6	MIC2-JD
7	FRONT-IO	8	NC
9	LINE2-L	10	LINE2-JD

Table 4-7: Audio Connector Pinouts

IMB-AM5

4.2.6 Fan Connector (CPU)

- CN Label:** CPU_FAN1
- CN Type:** 4-pin header, p=2.54 mm
- CN Location:** See Figure 4-7
- CN Pinouts:** See Table 4-8

The fan connector attaches to a CPU cooling fan.

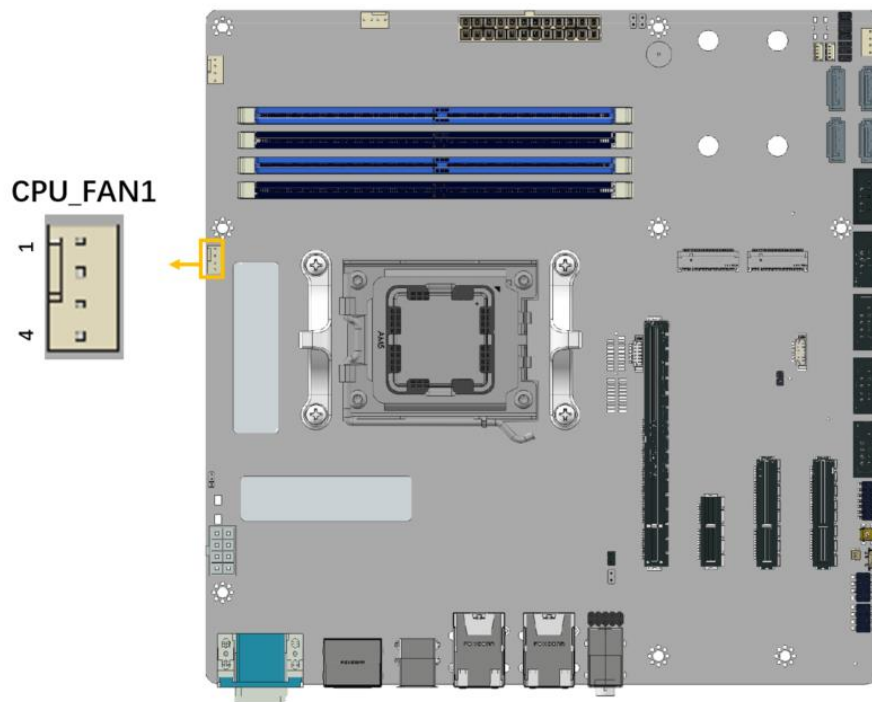


Figure 4-7: CPU Fan Connector Location

Pin	Description	Pin	Description
1	GND	2	+12V
3	FANIO	4	PWM (+5V)

Table 4-8: CPU Fan Connector Pinouts

4.2.7 Fan Connectors (System)

- CN Label:** **SYS_FAN1**
- CN Type:** 4-pin header, p=2.54 mm
- CN Location:** See **Figure 4-8**
- CN Pinouts:** See **Table 4-9**

Fan connector attaches to a system cooling fan. The fan connector provides smart fan function.

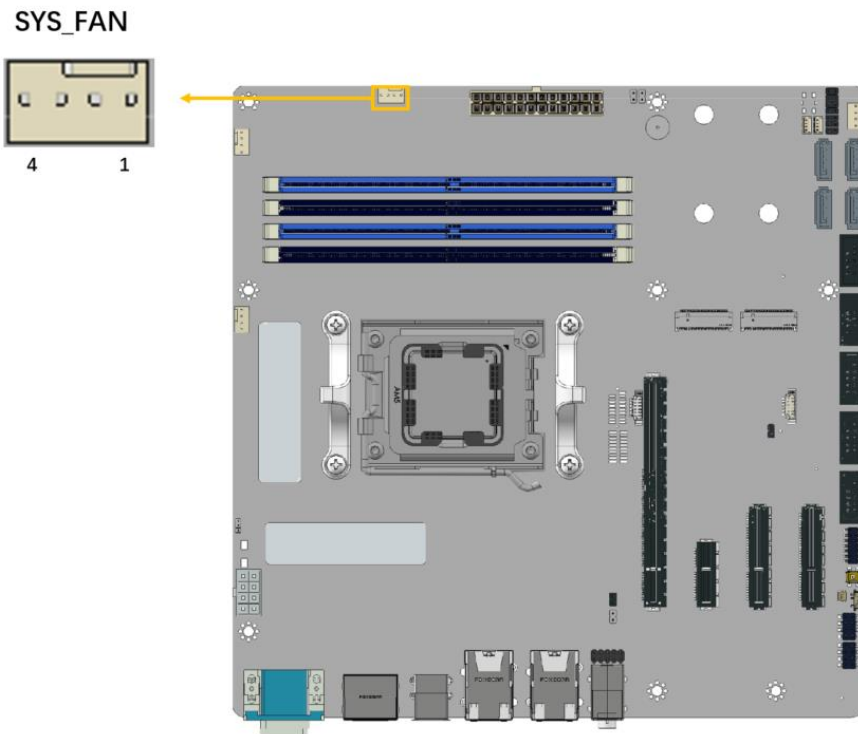


Figure 4-8: System Fan Connector Locations

Pin	Description	Pin	Description
1	GND	2	+12V
3	FANIO	4	PWM (+5V)

Table 4-9: System Fan Connector Pinouts

IMB-AM5

4.2.8 Pump Connector

- CN Label:** PUMP_CONN
- CN Type:** 4-pin header, p=2.54mm
- CN Location:** See **Figure 4-9**
- CN Pinouts:** See **Table 4-10**

The pump connector attaches to a water cooling fan.

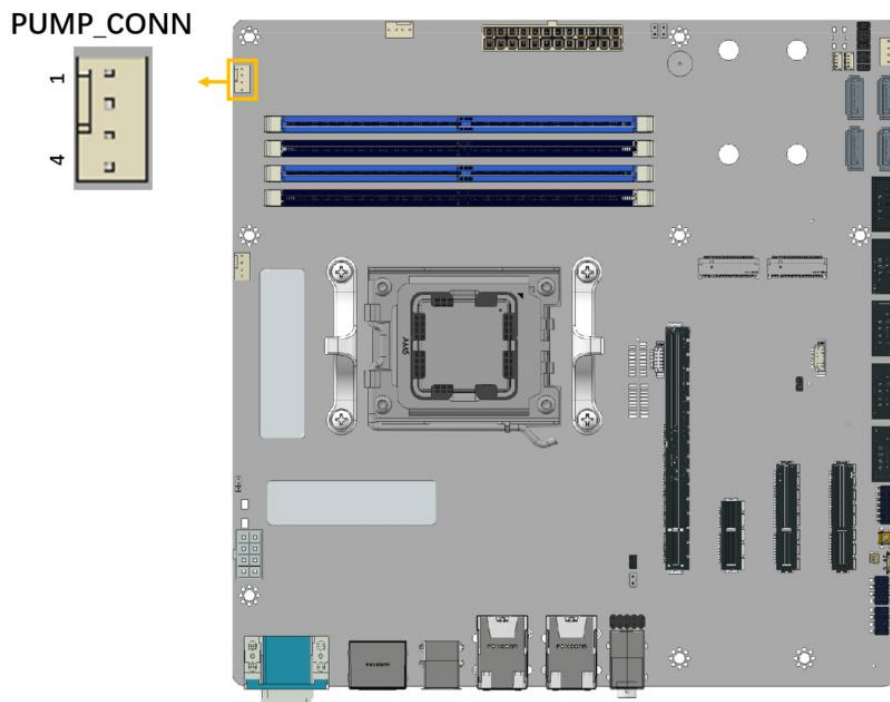


Figure 4-9: Pump Connector Location

Pin	Description	Pin	Description
1	GND	3	FANIO
2	+12V	4	PWM(+5V)

Table 4-10: Pump Connector Pinouts

4.2.9 CPU 12V Power Connector

- CN Label:** CPU12V1
- CN Type:** 8-pin Molex power connector, p=4.2mm
- CN Location:** See Figure 4-10
- CN Pinouts:** See Table 4-11

This connector provides power to the CPU.

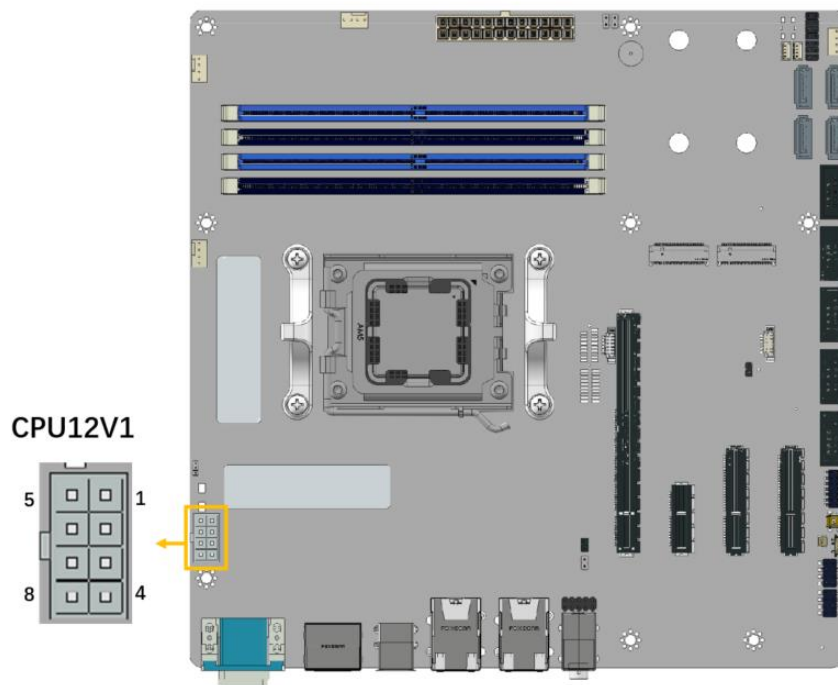


Figure 4-10: CPU 12V Power Connector Location

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	5	+12V
2	GND	6	+12V
3	GND	7	+12V
4	GND	8	+12V

Table 4-11: CPU 12V Power Connector Pinouts

IMB-AM5

4.2.10 ATX Power Connector

- CN Label:** ATX1
- CN Type:** 24-pin connector, p=4.2 mm
- CN Location:** See **Figure 4-11**
- CN Pinouts:** See **Table 4-12**

The ATX power connector connects to an ATX power supply.

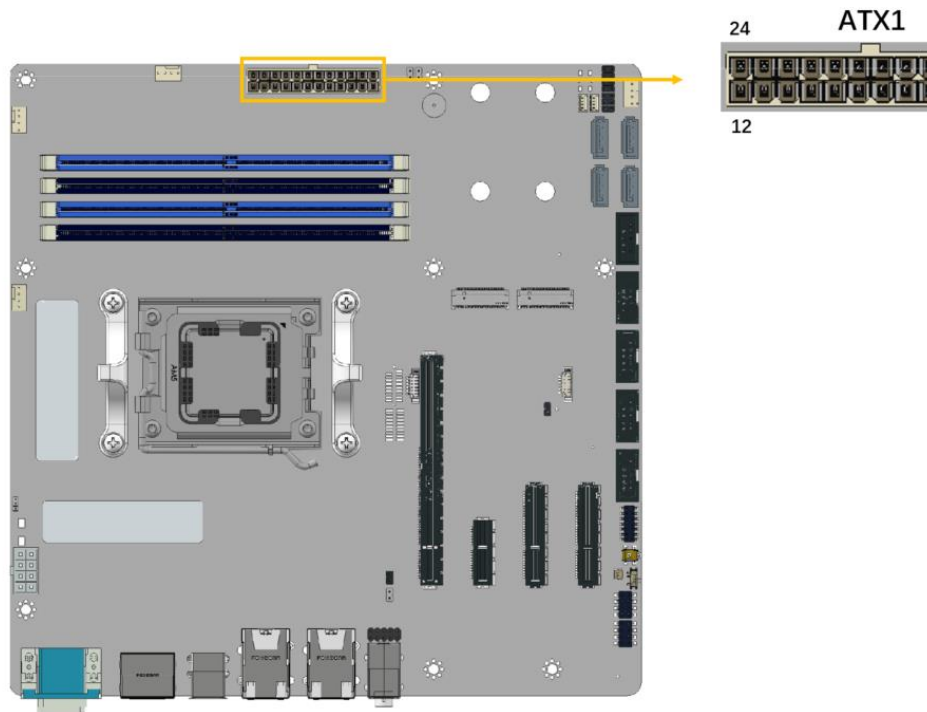


Figure 4-11: ATX Power Connector Location

Pin	Description	Pin	Description
1	+3.3V	13	+3.3V
2	+3.3V	14	-12V
3	GND	15	GND
4	+5V	16	PS_ON
5	GND	17	GND
6	+5V	18	GND
7	GND	19	GND
8	PWRGD_PS	20	NC

Pin	Description	Pin	Description
9	+5V	21	+5V
10	+12V	22	+5V
11	+12V	23	+5V
12	+3.3V	24	GND

Table 4-12: ATX Power Connector Pinouts

IMB-AM5

4.2.11 SMBus Connector

- CN Label:** J_SMB1
- CN Type:** 4-pin wafer, p=1.25 mm
- CN Location:** See Figure 4-12
- CN Pinouts:** See Table 4-13

The SMBus (System Management Bus) connector provides low-speed system management communications.

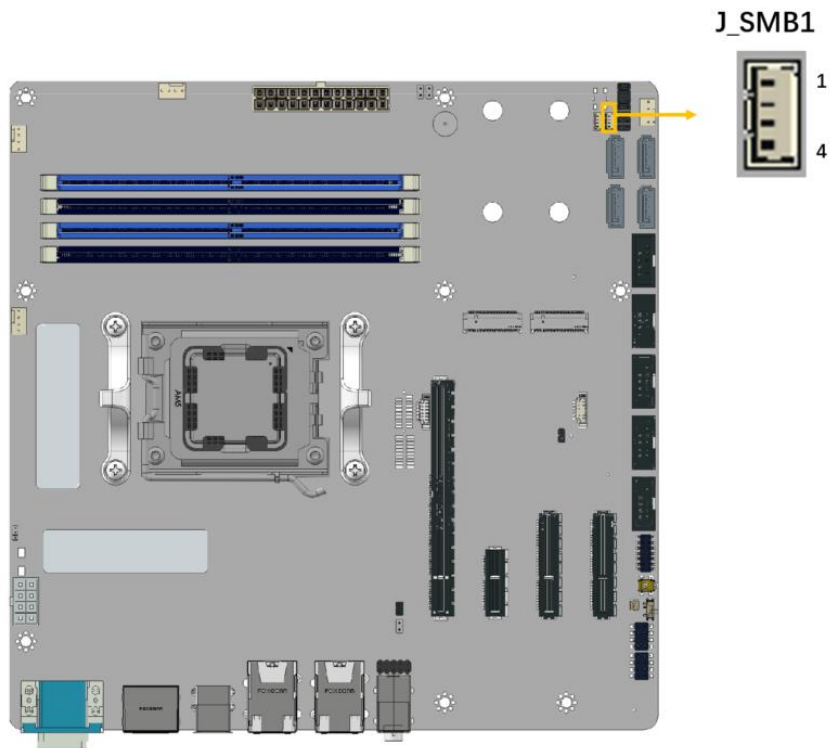


Figure 4-12: SMBus Connector Location

Pin	Description
1	GND
2	SMBUS0_3.3VS0_BUFF_SDA
3	SMBUS0_3.3VS0_BUFF_SCL
4	+5V

Table 4-13: SMBus Connector Pinouts

4.2.12 I²C Connector

- CN Label:** J_I2C1
- CN Type:** 4-pin wafer, p=1.25 mm
- CN Location:** See Figure 4-13
- CN Pinouts:** See Table 4-14

The I²C connector is used to connect I²C-bus devices to the mainboard.

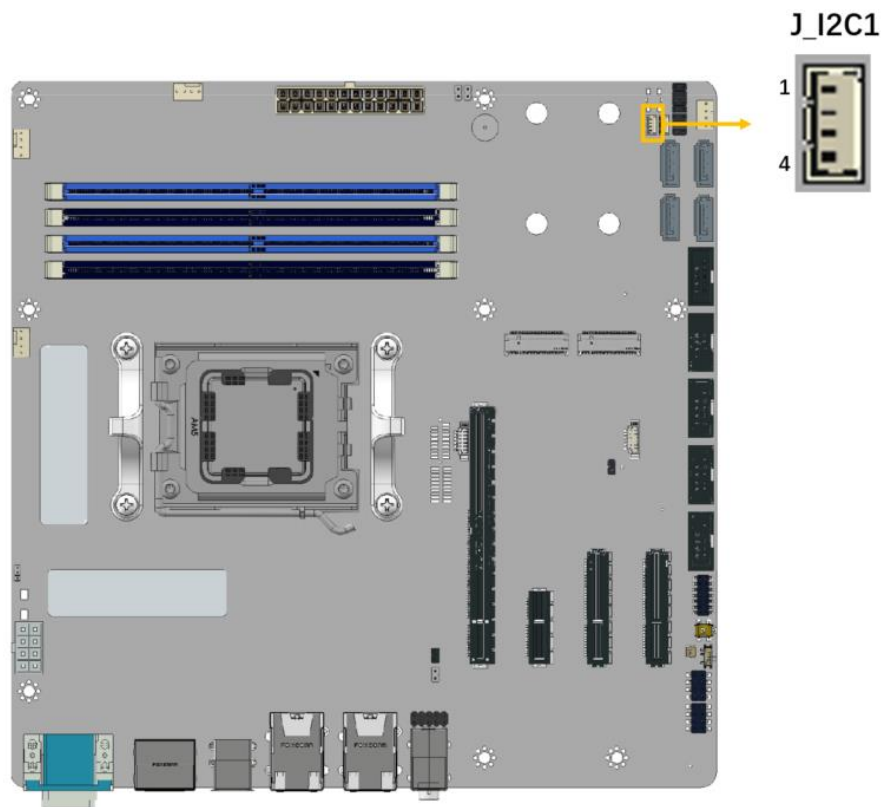


Figure 4-13: I²C Connector Location

Pin	Description	Pin	Description
1	GND	3	SMCLK0_EC
2	SMDAT0_EC	4	+5V

Table 4-14: I²C Connector Pinouts

IMB-AM5

4.2.13 Chassis Intrusion Connector

- CN Label:** CHASSIS1
- CN Type:** 2-pin header, p=2.54 mm
- CN Location:** See **Figure 4-14**
- CN Pinouts:** See **Table 4-15**

The chassis intrusion connector is for a chassis intrusion detection sensor or switch that detects if a chassis component is removed or replaced.

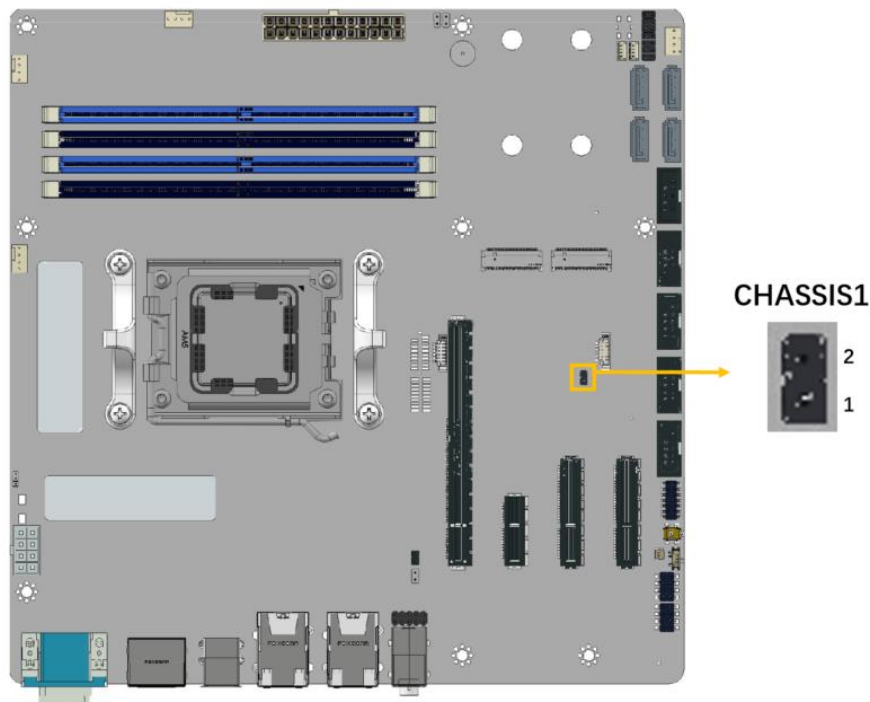


Figure 4-14: Chassis Intrusion Connector Location

Pin	Description	Pin	Description
1	CASEOPEN_N	2	GND

Table 4-15: Chassis Intrusion Connector Pinouts

4.2.14 M.2 M-key Slot

- CN Label:** M2_M1
- CN Type:** M-key slot
- CN Location:** See **Figure 4-15**
- CN Pinouts:** See **Table 4-16**

The M.2 2242/2280 slot is keyed in the M position.

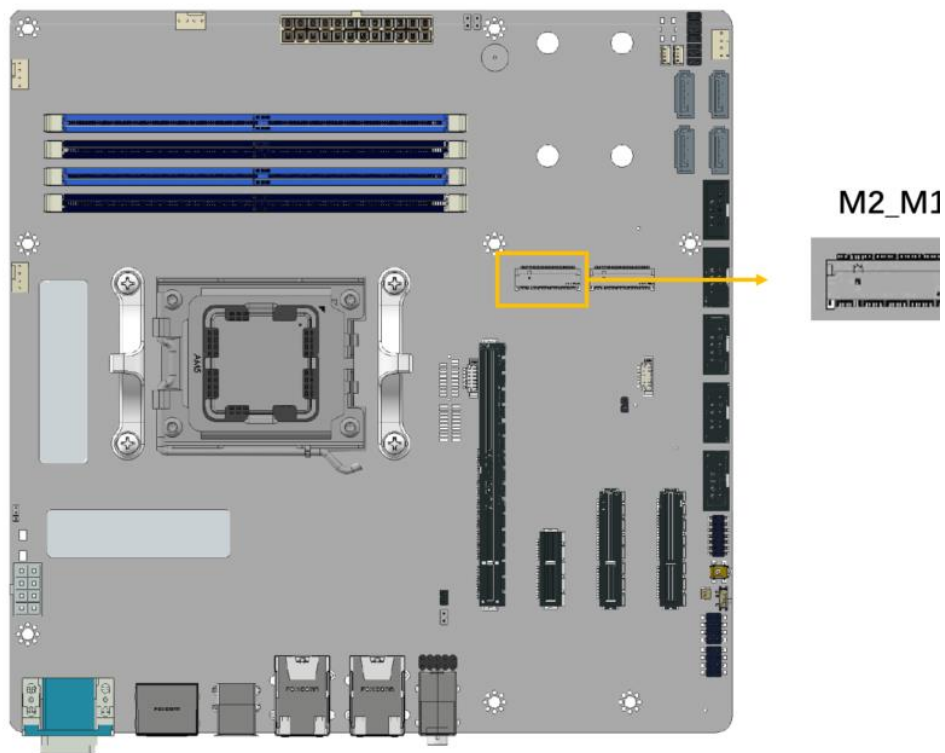


Figure 4-15: M.2 M-key Slot Location

Pin	Description	Pin	Description
1	GND	2	+3.3V
3	GND	4	+3.3V
5	PCIE_AM5_RX23N	6	N/C
7	PCIE_AM5_RX23P	8	N/C
9	GND	10	DAS/DSS#

IMB-AM5

Pin	Description	Pin	Description
11	PCIE_AM5_C_TX23N	12	+3.3V
13	PCIE_AM5_C_TX23P	14	+3.3V
15	GND	16	+3.3V
17	PCIE_AM5_RX22N	18	+3.3V
19	PCIE_AM5_RX22P	20	N/C
21	GND	22	N/C
23	PCIE_AM5_C_TX22N	24	N/C
25	PCIE_AM5_C_TX22P	26	N/C
27	GND	28	N/C
29	PCIE_AM5_RX21N	30	N/C
31	PCIE_AM5_RX21P	32	N/C
33	GND	34	N/C
35	PCIE_AM5_C_TX21N	36	N/C
37	PCIE_AM5_C_TX21P	38	N/C
39	GND	40	N/C
41	PCIE_AM5_RX20N	42	N/C
43	PCIE_AM5_RX20P	44	N/C
45	GND	46	N/C
47	PCIE_AM5_C_TX20N	48	N/C
49	PCIE_AM5_C_TX20P	50	PCIE_M2_RST_L
51	GND	52	CLKREQ1_L
53	GPP_CLK1N	54	NC
55	GPP_CLK1P	56	N/C
57	GND	58	N/C
59	N/C	60	N/C
61	N/C	62	N/C
63	N/C	64	N/C
65	N/C	66	N/C
67	N/C	68	TP29
69	N/C	70	+3.3V
71	GND	72	+3.3V
73	GND	74	+3.3V
75	GND		

Pin	Description	Pin	Description
N1	N/C	G1	GND
N2	N/C	G2	GND

Table 4-16: M.2 M-key Connector Pinouts

4.2.15 M.2 M-key Slot

- CN Label:** M2_M2
- CN Type:** M-key slot
- CN Location:** See **Figure 4-16**
- CN Pinouts:** See **Table 4-17**

The M.2 2242/2280 slot is keyed in the M position.

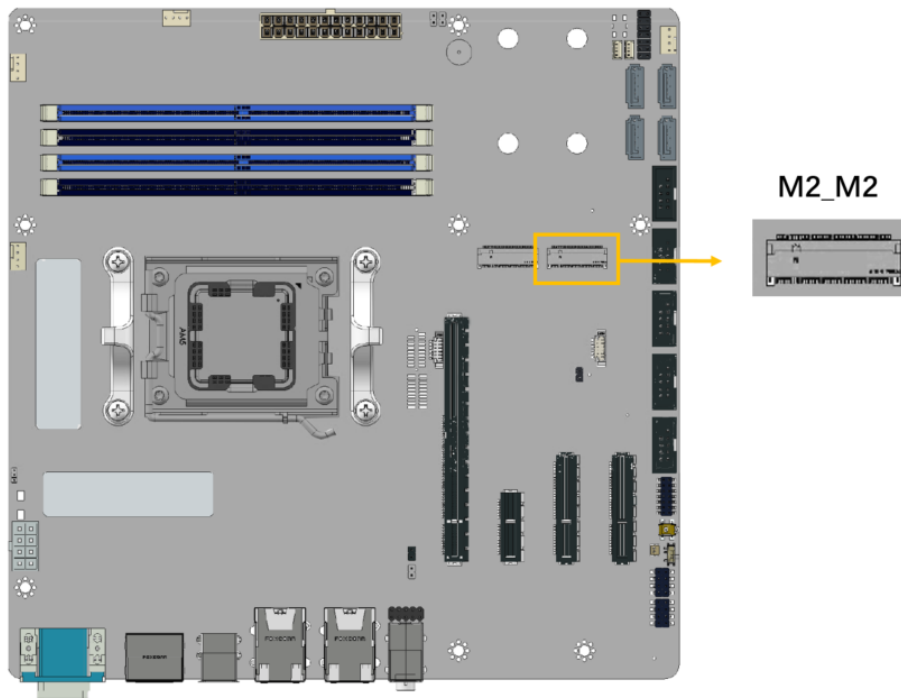


Figure 4-16: M.2 M-key Slot Location

Pin	Description	Pin	Description
1	GND	2	+3.3V
3	GND	4	+3.3V

IMB-AM5

5	N/C	6	N/C
7	N/C	8	N/C
9	GND	10	DAS/DSS#
11	N/C	12	+3.3V
13	N/C	14	+3.3V
15	GND	16	+3.3V
17	N/C	18	+3.3V
19	N/C	20	N/C
21	GND	22	N/C
23	N/C	24	N/C
25	N/C	26	N/C
27	GND	28	N/C
29	PCIE_AM5_RX17N	30	N/C
31	PCIE_AM5_RX17P	32	N/C
33	GND	34	N/C
35	PCIE_AM5_C_TX17N	36	N/C
37	PCIE_AM5_C_TX17P	38	N/C
39	GND	40	N/C
41	PCIE_AM5_RX16N	42	N/C
43	PCIE_AM5_RX16P	44	N/C
45	GND	46	N/C
47	PCIE_AM5_C_TX16N	48	N/C
49	PCIE_AM5_C_TX16P	50	PCIE_M2_RST_L
51	GND	52	+3.3V
53	BUF_CLKOUT3_N	54	NC
55	BUF_CLKOUT3_P	56	N/C
57	GND	58	N/C
59	N/C	60	N/C
61	N/C	62	N/C
63	N/C	64	N/C
65	N/C	66	N/C
67	N/C	68	TP30
69	N/C	70	+3.3V
71	GND	72	+3.3V

73	GND	74	+3.3V
75	GND		
N1	N/C	G1	GND
N2	N/C	G2	GND

Table 4-17: M.2 M-key Connector Pinouts

4.2.16 Digital I/O Connector

- CN Label:** DIO1
- CN Type:** 14-pin header, p=2.0 mm
- CN Location:** See **Figure 4-17**
- CN Pinouts:** See **Table 4-18**

The Digital I/O connector provides programmable input and output for external devices.

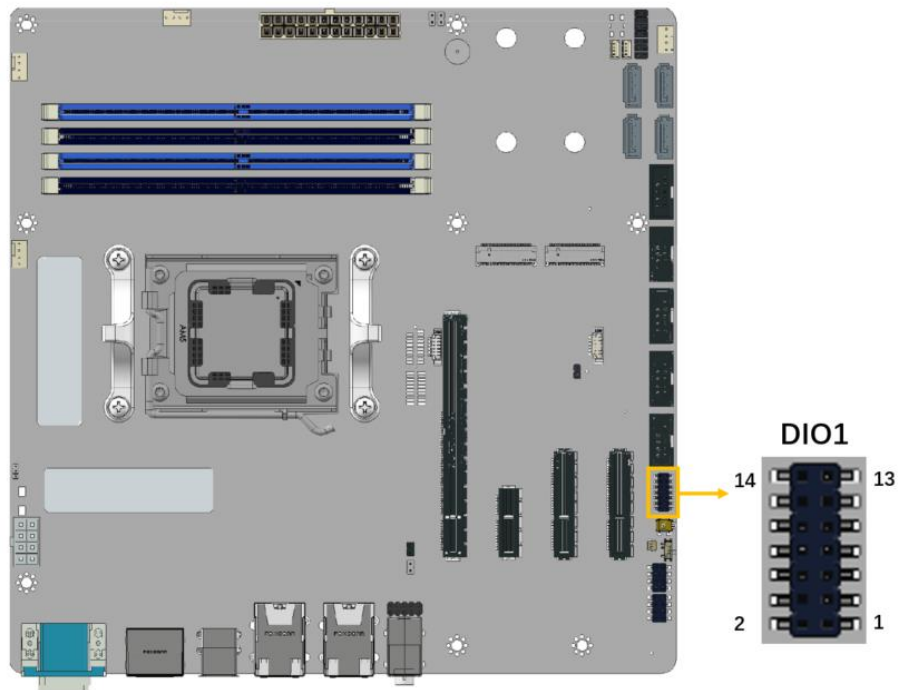


Figure 4-17: Digital I/O Connector Location

Pin	Description	Pin	Description
1	GND	2	+5V
3	DOUT_B5	4	DOUT_B4

IMB-AM5

Pin	Description	Pin	Description
5	DOUT_B3	6	DOUT_B2
7	DOUT_B1	8	DOUT_B0
9	DIN_B5	10	DIN_B4
11	DIN_B3	12	DIN_B2
13	DIN_B1	14	DIN_B0

Table 4-18: Digital I/O Connector Pinouts

4.2.17 Trusted Platform Module Connector

- CN Label:** TPM1
- CN Type:** 20-pin header, p=1.27 mm
- CN Location:** See **Figure 4-18**
- CN Pinouts:** See **Table 4-19**

The TPM1 connector is used to the trusted platform module.

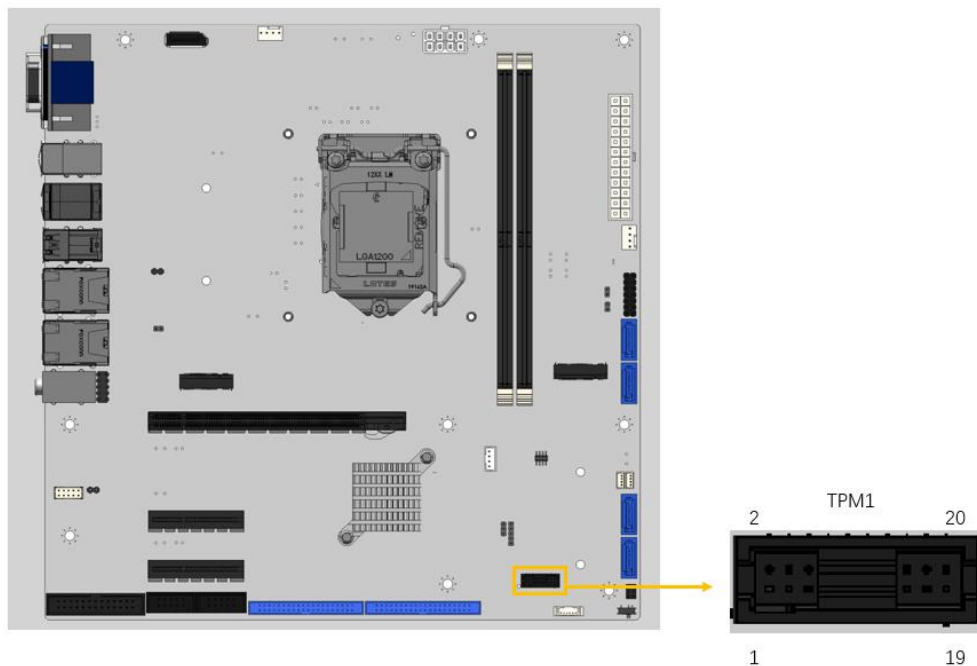


Figure 4-18: Trusted Platform Module Connector Location

Pin	Description	Pin	Description
1	N/C	2	N/C
3	+1.8V	4	N/C
5	GND	6	+1.8V
7	SPI_TPM_CLK_SW	8	N/C
9	N/C	10	SPI_TPM_SO_SW
11	N/C	12	SPI_TPM_SI_SW
13	SPI_TPM_CS#_SW	14	GND
15	N/C	16	N/C
17	TPM_PIRQ_L	18	+1.8V
19	TPM_RST_L	20	N/C

Table 4-19: Trusted Platform Module Connector Pinouts

4.2.18 Battery Connector



CAUTION:

Risk of explosion if battery is replaced by an incorrect type. Only certified engineers should replace the on-board battery.

Dispose of used batteries according to instructions and local regulations.



NOTE:

It is recommended to attach the RTC battery onto the system chassis in which the IMB-AM5 is installed.

- CN Label:** **BAT1**
- CN Type:** 2-pin header
- CN Location:** See **Figure 4-19**

IMB-AM5

CN Pinouts: See Table 4-20

A system battery is placed in the battery holder. The battery provides power to the system clock to retain the time when power is turned off.

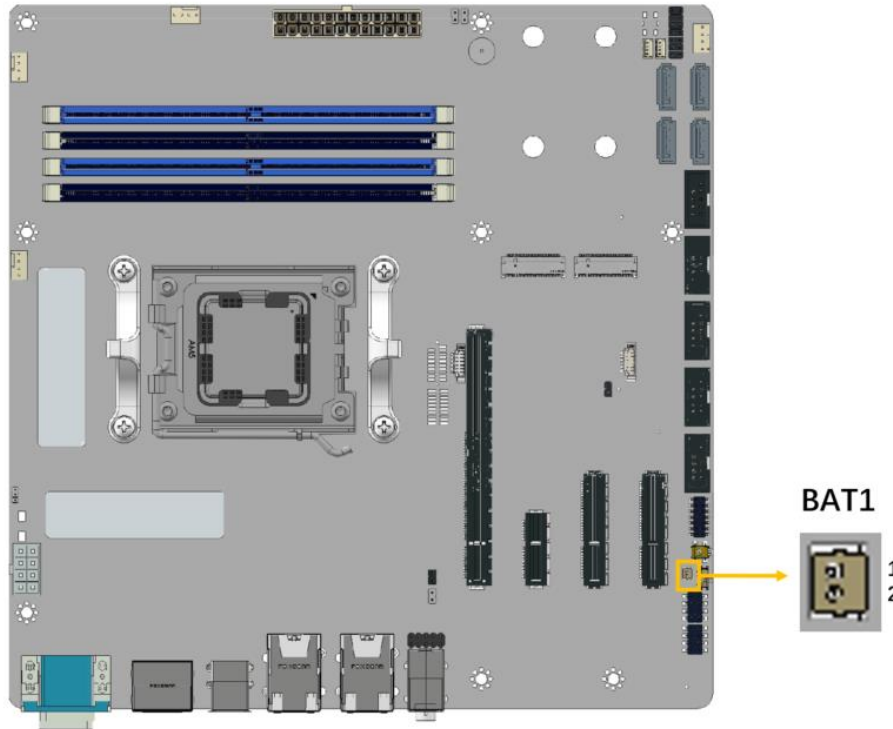


Figure 4-19: Battery Connector Location

Pin	Description	Pin	Description
1	VBATT(+3V)	2	GND

Table 4-20: Battery Connector Pinouts

4.2.19 EC Debug Connector

- CN Label:** **DEBUG_1**
- CN Type:** 6-pin header, p=1.25 mm
- CN Location:** See **Figure 4-20**
- CN Pinouts:** See **Table 4-21**

The EC debug connector is used for EC debug.

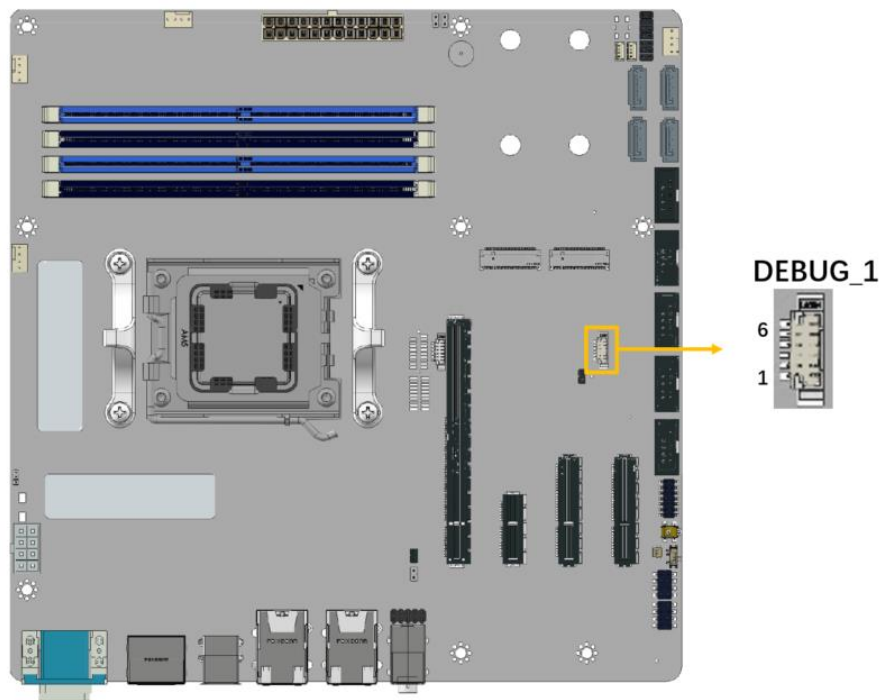


Figure 4-20: EC Debug Connector Location

Pin	Description	Pin	Description
1	NC	4	EDICK
2	EDICS	5	EDIDI
3	EDIDO	6	GND

Table 4-21: EC Debug Connector Pinouts

IMB-AM5

4.2.20 LAN Link LED connector

- CN Label:** JLAN_LED1, JLAN_LED2
- CN Type:** 2-pin header, p=2.54 mm
- CN Location:** See **Figure 4-21**
- CN Pinouts:** See **Table 4-22** and **Table 4-23**

The LAN LED connectors are used to connect to the LAN LED indicators on the chassis to indicate users the link activities of the two LAN ports.

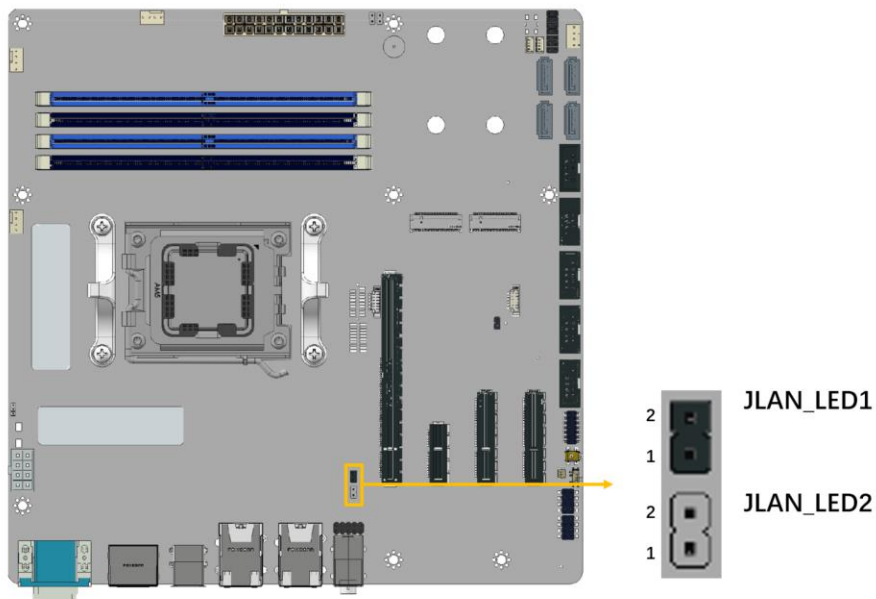


Figure 4-21: LAN LED Connector Locations

Pin	Description
1	+3.3V
2	I226_LINK_ACT_N

Table 4-22: LAN1 LED Connector (JLAN_LED1) Pinouts

Pin	Description
1	+3.3V
2	I226_LINK_ACT_N

Table 4-23: LAN2 LED Connector (JLAN_LED 2) Pinouts

4.2.21 Flash SPI ROM Connector

- CN Label:** JSPI1
- CN Type:** 6-pin header, p=1.25 mm
- CN Location:** See **Figure 4-22**
- CN Pinouts:** See **Table 4-24**

The Flash SPI ROM connector is used to flash the SPI ROM.

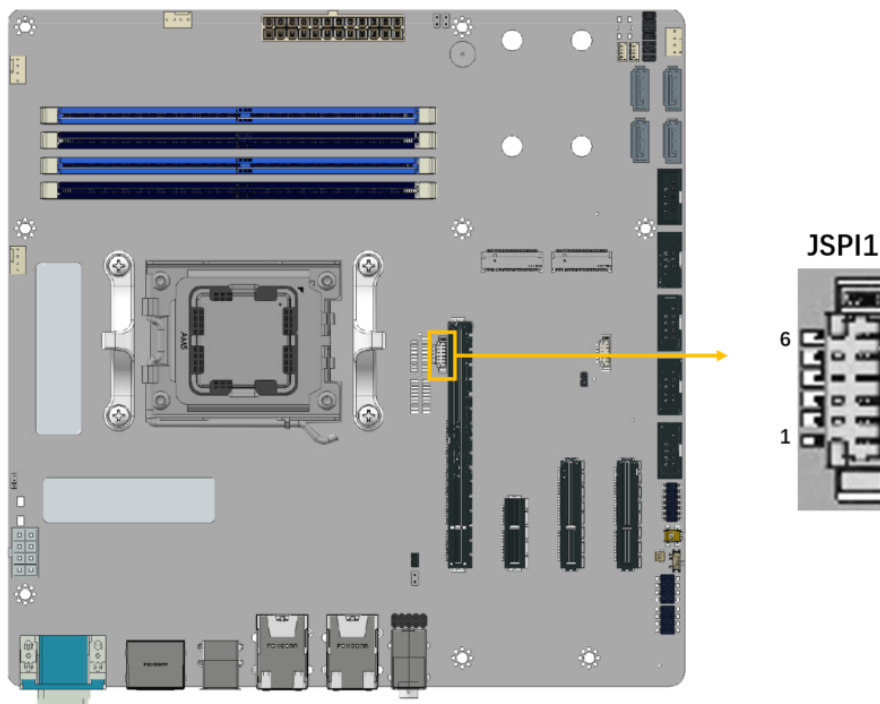


Figure 4-22: Flash SPI ROM Connector Location

Pin	Description	Pin	Description
1	+1.8V	4	SPI_FLASH_CLK_SW
2	SPI_FLASH_CS1#_SW	5	SPI_FLASH_SI_SW
3	SPI_FLASH_SO_SW	6	GND

Table 4-24: Flash SPI ROM Connector Pinouts

IMB-AM5

4.2.22 PCIe x1 Slots

CN Label:	PCIEX1_1
CN Type:	PCIe x1 Slot
CN Location:	See Figure 4-23

The PCIe x1 slot enables a PCIe x1 expansion module to be connected to the board.

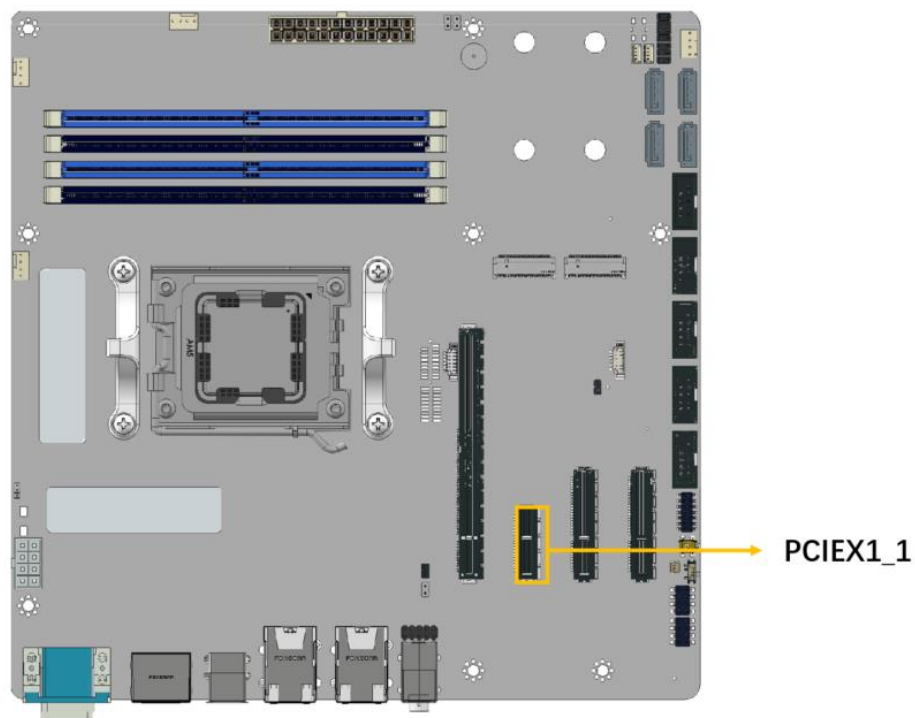


Figure 4-23: PCIe x1 Slot Locations

4.2.23 PCIe x4 Slots

CN Label: PCIEX4_1, PCIEX4_2

CN Type: PCIe x4 slot

CN Location: See Figure 4-24

The PCIe x4 expansion card slots are for PCIe x4 expansion cards.

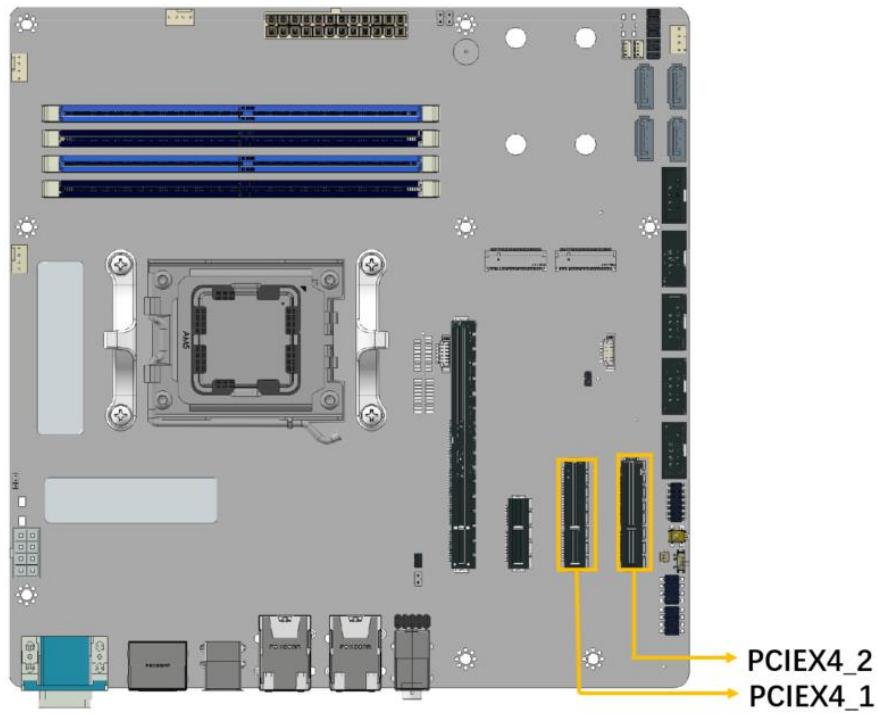


Figure 4-24: PCIe x4 Slot Locations

IMB-AM5**4.2.24 PCIe x16 slots**

CN Label:	PCIEX16_1
CN Type:	PCIe x16 slot
CN Location:	See Figure 4-25

The PCIe x16 expansion card slots are for PCIe x16 expansion cards.

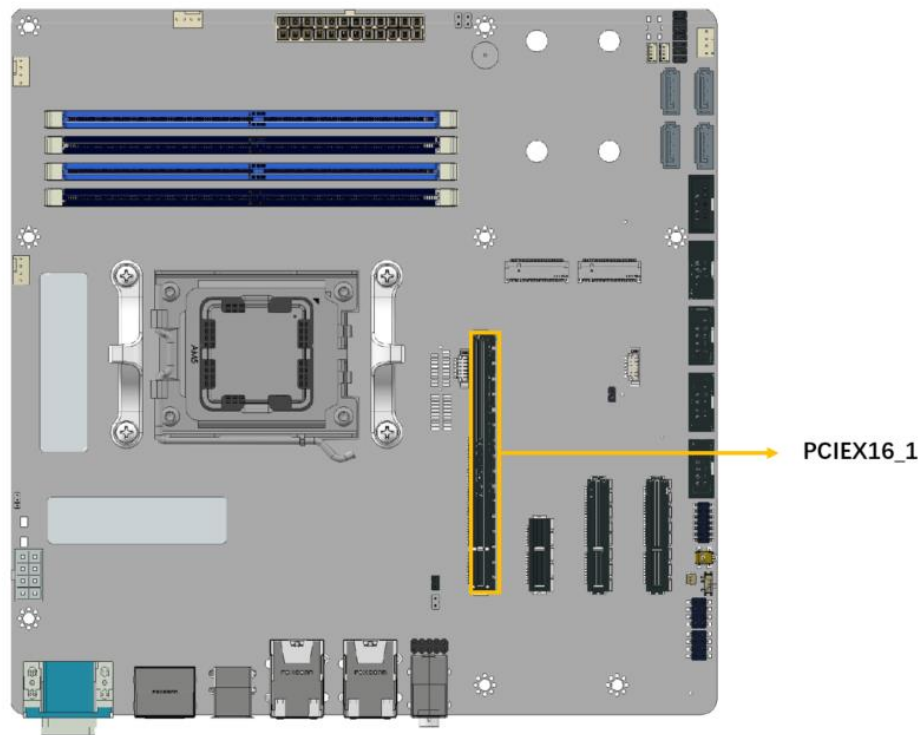


Figure 4-25: PCIe x16 Slot Locations

4.2.25 DDR5 DIMM sockets

- CN Label:** DIMMA0, DIMMA1, DIMMB0, DIMMB1
- CN Type:** 288-pin socket
- CN Location:** See Figure 4-26

The DIMM slots are for DDR5 DIMM memory modules

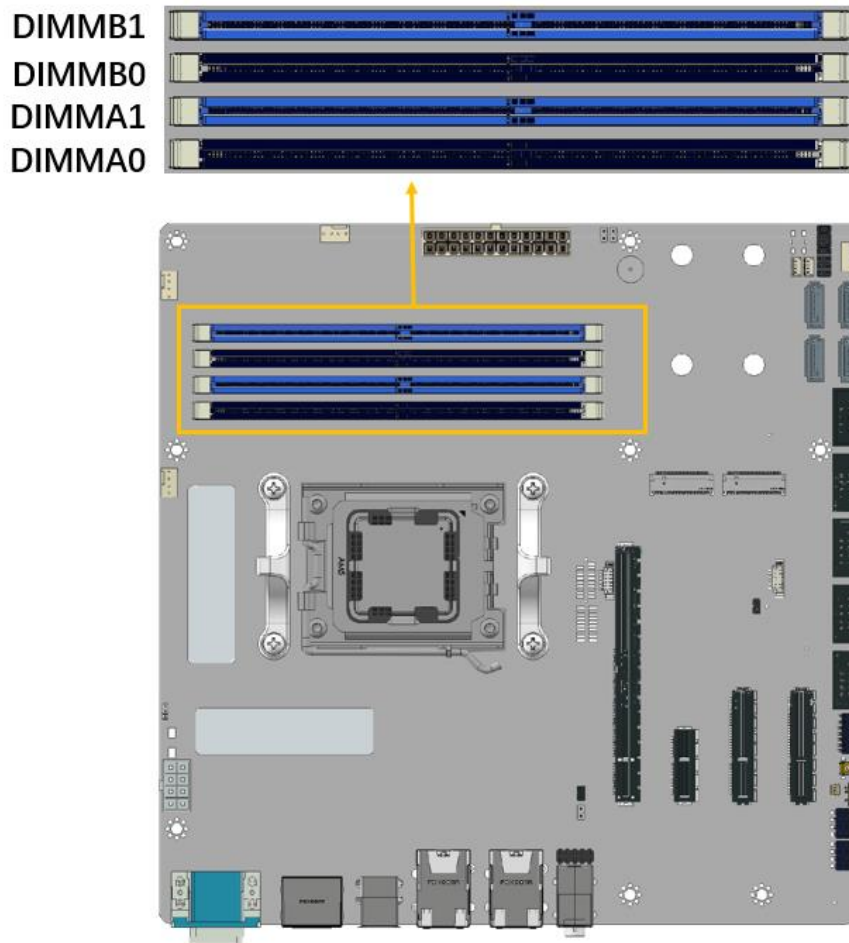


Figure 4-26: DDR5 DIMM Sockets Location

IMB-AM5

4.2.26 RS-232 Serial Port Connectors

- CN Label:** COM3-6
- CN Type:** 9-pin header, p=2.54 mm
- CN Location:** See **Figure 4-27**
- CN Pinouts:** See **Table 4-25**

Each of these connectors provides RS-232 communications.

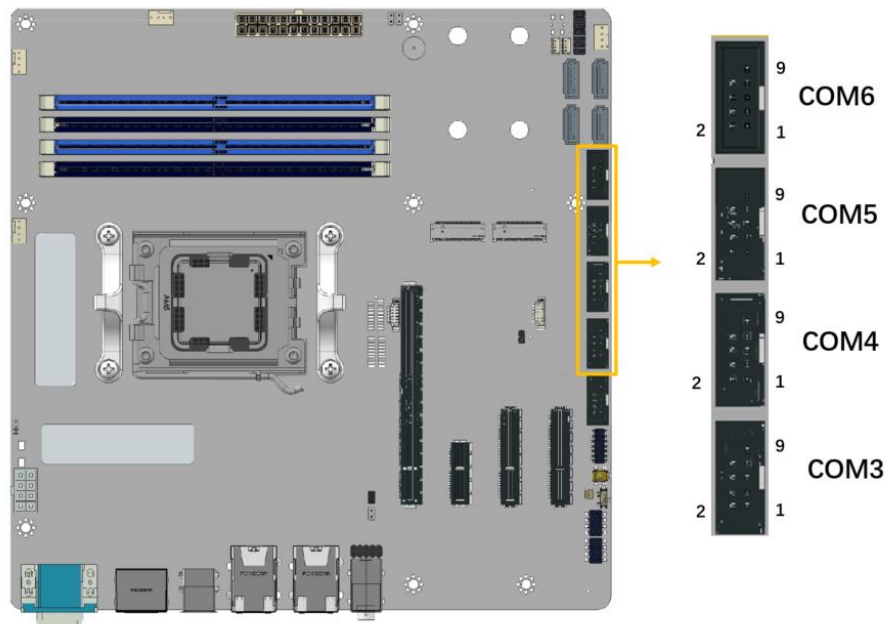


Figure 4-27: RS-232 Connector Location

Pin	Description	Pin	Description
1	NDCD#	2	NDSR#
3	NRX#	4	NRTS#
5	NTX#	6	NCTS#
7	NDTR#	8	NRI#
9	GND		

Table 4-25: RS-232 Connector Pinouts

4.2.27 RS-232/422/485 Serial Port Connectors

- CN Label:** COM2
- CN Type:** 9-pin header, p=2.54 mm
- CN Location:** See **Figure 4-28**
- CN Pinouts:** See **Table 4-26**

Each of these connectors provides RS-232/422/485 communications.

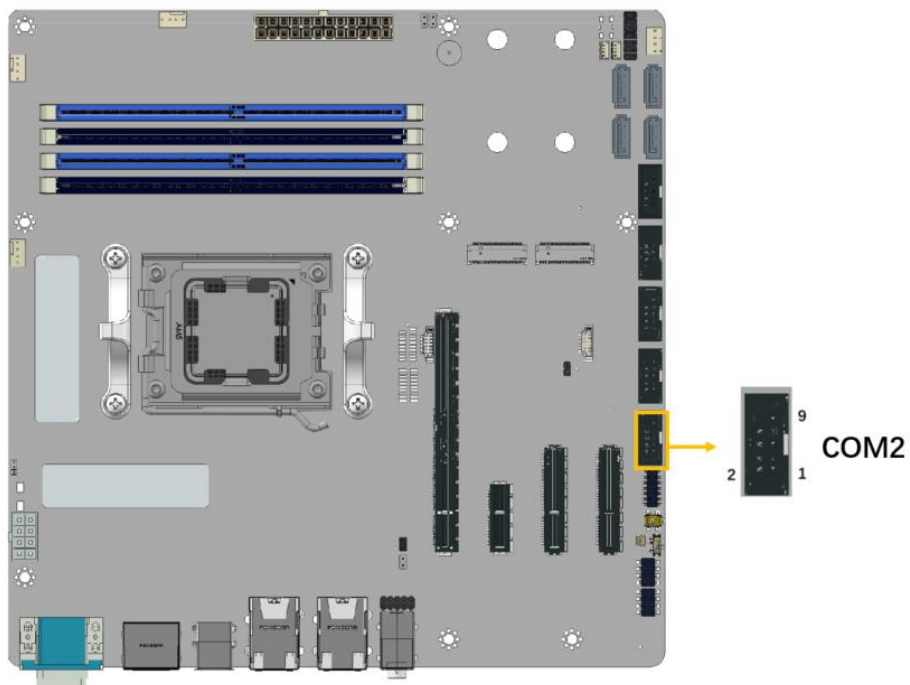


Figure 4-28: RS-232/422/485 Connector Location

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	NDCD#	2	NDSR#
3	NRX#	4	NRTS#
5	NTX#	6	NCTS#
7	NDTR#	8	NR!#
9	GND		

Table 4-26: RS-232/422/485 Connector Pinouts

IMB-AM5

4.3 External Peripheral Interface Connector Panel

The figure below shows the external peripheral interface connector (EPIC) panel. The EPIC panel consists of the following:

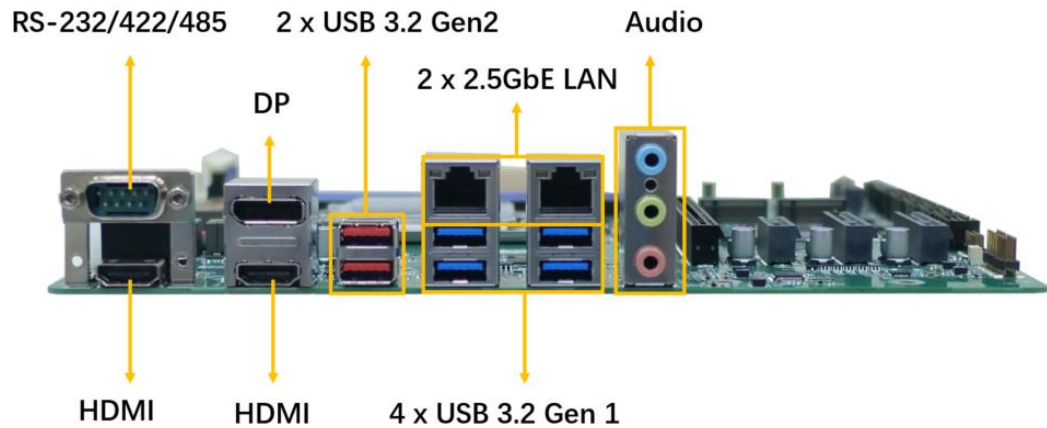


Figure 4-29: External Peripheral Interface Connector

4.3.1 Audio Jack Connector

- CN Label:** AUDIO1
- CN Type:** Audio jacks
- CN Location:** See Figure 4-30
- CN Pinouts:** See Table 4-27

The audio jacks connect to external audio devices.

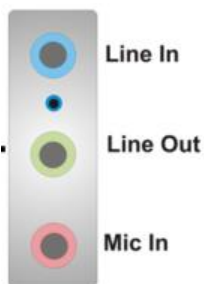


Figure 4-30: Audio jack Connector Location

Pin	Description
FRONT-OUT (Green)	Connect this port to headphone or speaker
FRONT-IN (Blue)	Connect this port to electric guitar's audio out
MIC-IN (Pink)	Connect this port to microphone

Table 4-27: Audio jack Connector Pinouts

4.3.2 External HDMI and DP Combo Connector

CN Label: HDMI_DP1

CN Type: HDMI, DisplayPort

CN Location: See **Figure 4-31** and **Figure 4-32**

CN Pinouts: See **Table 4-28** and **Table 4-29**

The HDMI connector can connect to an HDMI device.

Pin	Description	Pin	Description
21	HDMI1_L_TX2_P	31	GND
22	GND	32	HDMI1_L_CLK_N
23	HDMI1_L_TX2_N	33	N/C
24	HDMI1_L_TX1_P	34	N/C
25	GND	35	HDMI1_SCL
26	HDMI1_L_TX1_N	36	HDMI1_SDA
27	HDMI1_L_TX0_P	37	GND
28	GND	38	+5V
29	HDMI1_L_TX0_N	39	HDMI1_HPD
30	HDMI1_L_CLK_P		

Table 4-28: HDMI Connector Pinouts



Figure 4-31: HDMI Connector

The DP++ connector connects to a display device with DisplayPort interface.

IMB-AM5

Pin	Description	Pin	Description
1	DPO_L_TX0P	11	GND
2	GND	12	DPO_L_TX3N
3	DPO_L_TX0N	13	AUX_CTRL_DET
4	DPO_L_TX1P	14	CONFIG2
5	GND	15	DPO_C_AUXP
6	DPO_L_TX1N	16	GND
7	DPO_L_TX2P	17	DPO_C_AUXN
8	GND	18	DP_HPD
9	DPO_L_TX2N	19	GND
10	DPO_L_TX3P	20	+3.3V

Table 4-29: DP++ Connector Pinouts

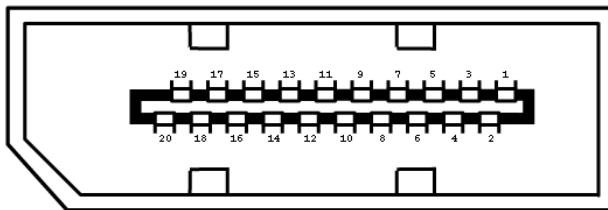


Figure 4-32: DP++ Connector

4.3.3 External 2.5GbE RJ-45 and dual USB 3.2 Gen 2 combo connector

CN Label: LAN1_USB1, LAN2_USB2

CN Type: USB 3.2, RJ45

CN Location: See Figure 4-33

CN Pinouts: See Table 4-30

The LAN1_USB1 and LAN2_USB2 include dual USB 3.2 Gen 1 (5Gb/s) and one 2.5GbE RJ-45.



Figure 4-33: USB 3.2 and RJ45 Connector

Pin	Description	Pin	Description
1	+5V	21	i225_MDIO_N_1
2	USB2_EJ188_L_D0N	22	i225_MDI1_P_1
3	USB2_EJ188_L_D0P	23	i225_MDI1_N_1
4	GND	24	i225_MDI2_P_1
5	USB3_EJ188_L_RX0N	25	i225_MDI2_N_1
6	USB3_EJ188_L_RX0P	26	i225_MDI3_P_1
7	GND	27	i225_MDI3_N_1
8	USB3_EJ188_L_TX0N	28	GND
9	USB3_EJ188_L_TX0P	29	+3.3V
10	+5V	30	I225_LINK_ACT_N_1
11	USB2_EJ188_L_D1N	31	I225_SPEED_2500_N_1
12	USB2_EJ188_L_D1P	32	I225_SPEED_1000_N_1
13	GND	G1	GND
14	USB3_EJ188_L_RX1N	G2	GND
15	USB3_EJ188_L_RX1P	G3	GND
16	GND	G4	GND
17	USB3_EJ188_L_TX1N	G5	GND
18	USB3_EJ188_L_TX1P	G6	GND
19	CT1	G7	GND
20	i225_MDIO_P_1	G8	GND

Table 4-30: USB 3.2 and RJ45 Pinouts

IMB-AM5

4.3.4 External Dual USB 3.2 Gen 2 Connector

- CN Label:** USB3_1
- CN Type:** USB 3.2 Gen 2
- CN Location:** See **Figure 4-34**
- CN Pinouts:** See **Table 4-31**

The USB3_1 connector includes dual USB 3.2 Gen 2 (10Gb/s).



Figure 4-34: USB 3.2 Connector

Pin	Description	Pin	Description
1	+5V	10	+5V
2	USB2_L_D2N	11	USB2_L_D3N
3	USB2_L_D2P	12	USB2_L_D3P
4	GND	13	GND
5	USB3_RD_L_RX2N	14	USB3_RD_L_RX3N
6	USB3_RD_L_RX2P	15	USB3_RD_L_RX3P
7	GND	16	GND
8	USB3_RD_L_TX2N	17	USB3_RD_L_TX3N
9	USB3_RD_L_TX2P	18	USB3_RD_L_TX3P

Table 4-31: USB 3.2 Connector Pinouts

4.3.5 External HDMI Connector

- CN Label:** HDMI2
- CN Type:** HDMI
- CN Location:** See **Figure 4-35**
- CN Pinouts:** See **Table 4-32**

The HDMI connector can connect to the HDMI device.

 


Figure 4-35: HDMI Connector


Pin	Description	Pin	Description
1	HDMI2_L_TX2_P	10	HDMI2_L_CLK_P
2	GND	11	GND
3	HDMI2_L_TX2_N	12	HDMI2_L_CLK_N
4	HDMI2_L_TX1_P	13	N/C
5	GND	14	N/C
6	HDMI2_L_TX1_N	15	HDMI2_SCL
7	HDMI2_L_TX0_P	16	HDMI2_SDA
8	GND	17	GND
9	HDMI2_L_TX0_N	18	+5V
		19	HDMI2_HPD

Table 4-32: HDMI Connector Pinouts

4.3.6 External Serial Port Connector

- CN Label:** COM1
- CN Type:** COM
- CN Location:** See **Figure 4-36**
- CN Pinouts:** See **Table 4-33**

The COM connector (COM1) connects to a serial device that supports RS-232 communication.

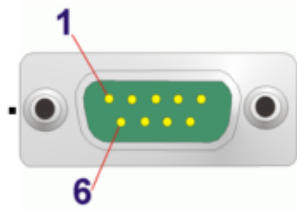

IMB-AM5

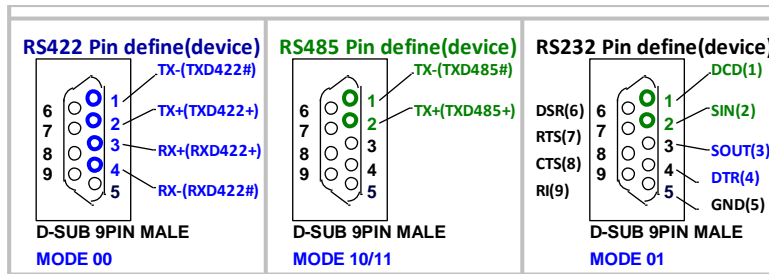


Figure 4-36: External Serial Port Pinout Locations

PIN	RS-232	RS-422	RS-485
1	DCD	TXD422-	TXD485-
2	RXD	TXD422+	TXD485+
3	TXD	RXD422+	--
4	DTR	RXD422-	--
5	GND	--	--
6	DSR	--	--
7	RTS	--	--
8	CTS	--	--
9	RI	--	--

Table 4-33: External Serial Port Pinouts

Chapter

5

BIOS

5.1 Introduction

The BIOS is programmed onto the BIOS chip. The BIOS setup program allows changes to certain system settings. This chapter outlines the options that can be changed.



NOTE:

Some of the BIOS options may vary throughout the life cycle of the product and are subject to change without prior notice.

5.1.1 Starting Setup

The UEFI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. **Using keyboard:** Press the **DEL** or **F2** as soon as the system is turned on.
2. **Using touchscreen:** Press the **Setup** button on the upper right corner of the BIOS Starting Menu.

If the message disappears before the **DEL** or **F2** key is pressed, restart the computer and try again, then the BIOS Starting Menu will appear. Select "Setup" and press Enter to get into the BIOS Setup.

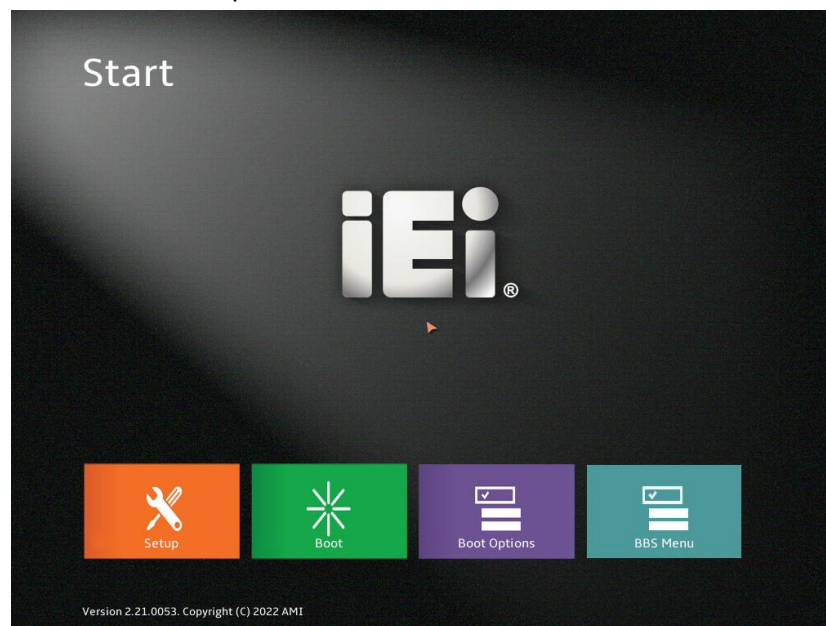


Figure 5-1: BIOS Starting Menu

5.1.2 Using Setup

The BIOS Setup menu can be navigated by using a keyboard or a touchscreen.

5.1.2.1 Keyboard Navigation

For keyboard navigation, use the navigation keys shown in **Table 5-1**.


Key	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
+	Increase the numeric value or make changes
-	Decrease the numeric value or make changes
Page Up	Move to the previous page
Page Dn	Move to the next page
Esc	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
F1	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2	Load previous values
F3	Load optimized defaults
F4	Save changes and Exit BIOS
<K>	Scroll help area upwards
<M>	Scroll help area downwards

Table 5-1: BIOS Navigation Keys

IMB-AM5

5.1.2.2 Touch Navigation

For touchscreen navigation, use the on-screen navigation keys shown below.

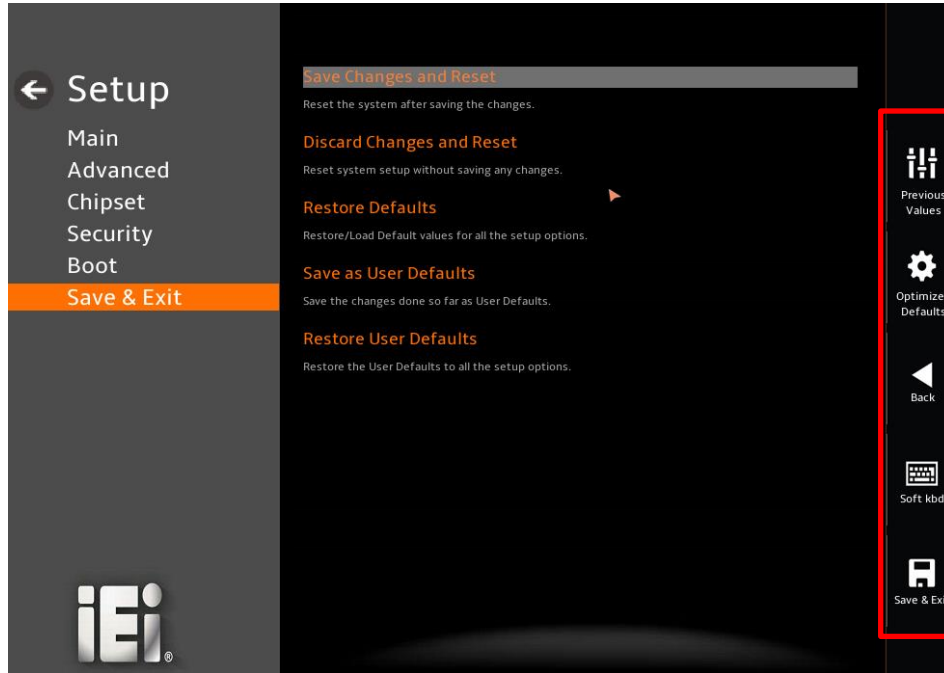

On-screen Button	Function
Previous Values	Load the last value you set.
Optimized Defaults	Load the factory default values in order to achieve the best performance.
Back	Return to the previous menu.
Soft kbd	Display the on-screen keyboard.
Save & Exit	Save the changes made to the BIOS options and reset the system.

Table 5-2: BIOS On-screen Navigation Keys

5.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window, press the **Esc** key.

5.1.4 Unable to Reboot after Configuration Changes

If the computer cannot boot after changes to the system configuration is made, CMOS defaults. Use the clear CMOS button described in **Chapter 4**.

5.1.5 BIOS Menu Bar

The **menu bar** on top of the BIOS screen has the following main items:

- Main – Changes the basic system configuration.
- Advanced – Changes the advanced system settings.
- Chipset – Changes the chipset settings.
- Security – Sets User and Supervisor Passwords.
- Boot – Changes the system boot configuration.
- Save & Exit – Selects exit options and loads default settings


The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.

IMB-AM5


5.2 Main

The **Main** BIOS menu (**BIOS Menu 1**) appears when the **BIOS Setup** program is entered.

The **Main** menu gives an overview of the basic system information.

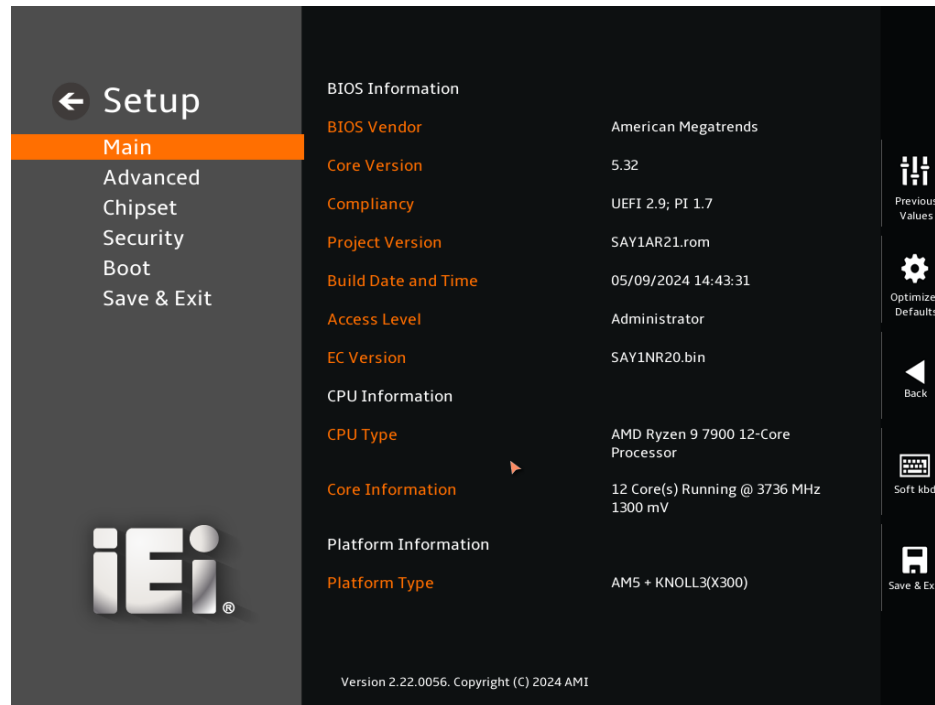

BIOS Menu 1: Main (1/2)

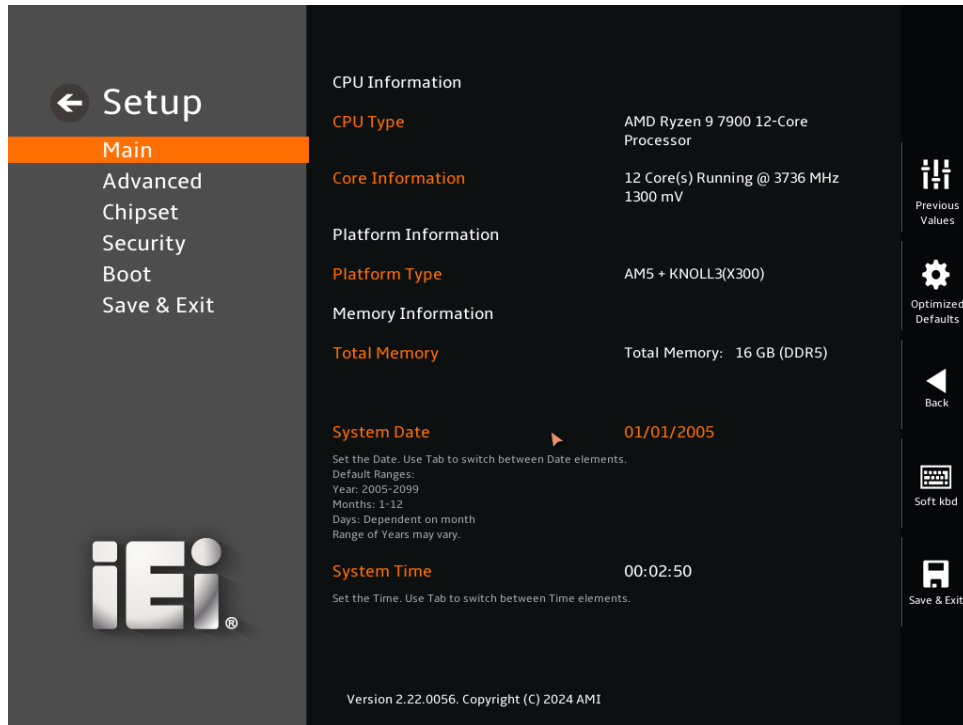

BIOS Menu 2: Main (2/2)

➔ **BIOS Information**

The **BIOS Information** lists a brief summary of the BIOS. The fields in **BIOS Information** cannot be changed. The items shown in the system overview include:

- **BIOS Vendor:** Installed BIOS vendor
- **Core Version:** Current BIOS version
- **Compliance:** Current UEFI & PI version
- **Project Version:** the board version
- **Build Date and Time:** Date the current BIOS version was made
- **EC Version:** Current EC version

➔ **CPU Information**

The **CPU Information** lists a brief summary of the CPU. The fields in **CPU Information** cannot be changed. The items shown in the system overview include:

- **CPU Type:** Displays the CPU Type
- **Core Information:** Displays the CPU Core Information

IMB-AM5

→ Platform Information

The **Platform Information** lists a brief summary of the Platform. The fields in **Platform Information** cannot be changed. The items shown in the system overview include:

- **Platform Type:** Displays the PCH Name
- **PCH SKU:** Displays the PCH SKU

→ Memory Information

- **Total Memory:** Displays the Total Memory

→ System Date [xx/xx/xx]

Use the **System Date** option to set the system date. Manually enter the day, month and year.

→ System Time [xx:xx:xx]

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.

5.3 Advanced

Use the **Advanced** menu (**BIOS Menu 3**) to configure the CPU and peripheral devices through the following sub-menus:



WARNING!

Setting the wrong values in the sections below may cause the system to malfunction. Make sure that the settings made are compatible with the hardware.



BIOS Menu 3: Advanced (1/2)


IMB-AM5



BIOS Menu 4: Advanced (2/2)

IMB-AM5

5.3.2 iEi One Key Recovery2

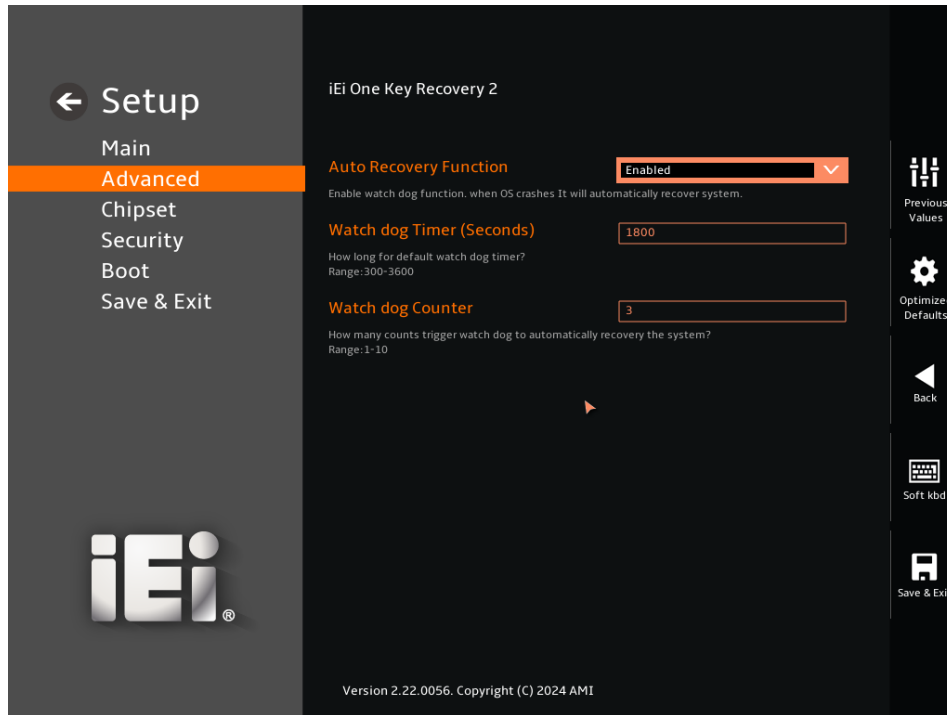

BIOS Menu 6: iEi One Key Recovery2

→ Auto Recovery Function [Enabled]

Use the **Auto Recovery Function** option to enable or disable watch dog function, when OS crashes, it will automatically recover system.

- **Disabled** Watch dog function is disabled.
- **Enabled** **DEFAULT** Watch dog function t is enabled.

→ Watch dog Timer (Seconds) [1800]


Use the **Watch dog Timer (Seconds)** option to set value. Use the + or – key to change the value or enter a decimal number between 300 and 3600.

→ **Watch dog Counter [3]**


Use the **Watch dog Counter** option to set the number of counts that trigger watch dog to automatically recovery the system. Use the + or – key to change the value or enter a decimal number between 1 and 10.

5.3.3 RTC Wake Settings

The **RTC Wake Settings** menu (**BIOS Menu 7**) configures RTC wake event.

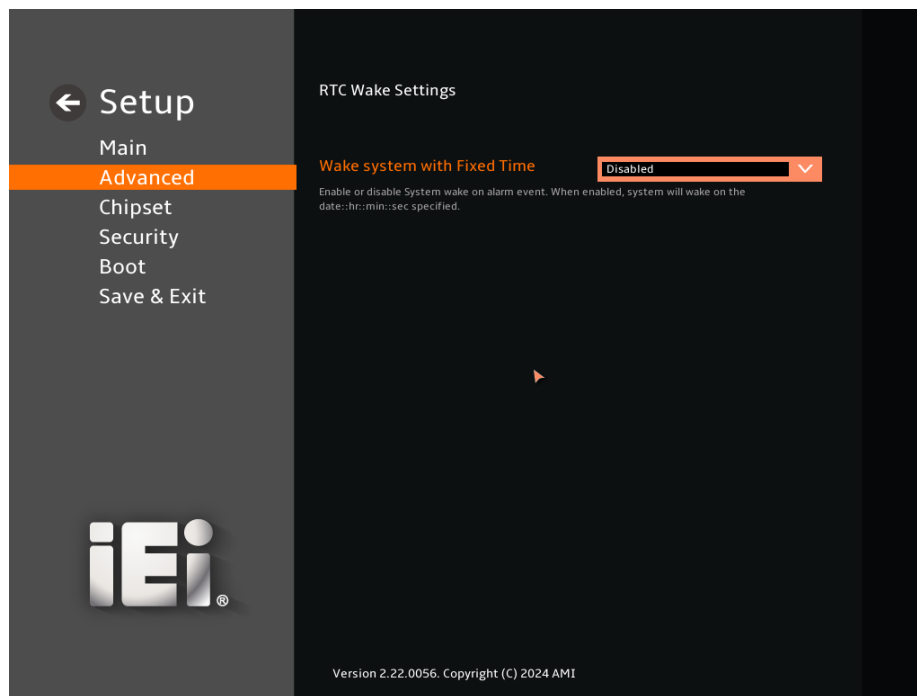

BIOS Menu 7: RTC Wake Settings (1/2)

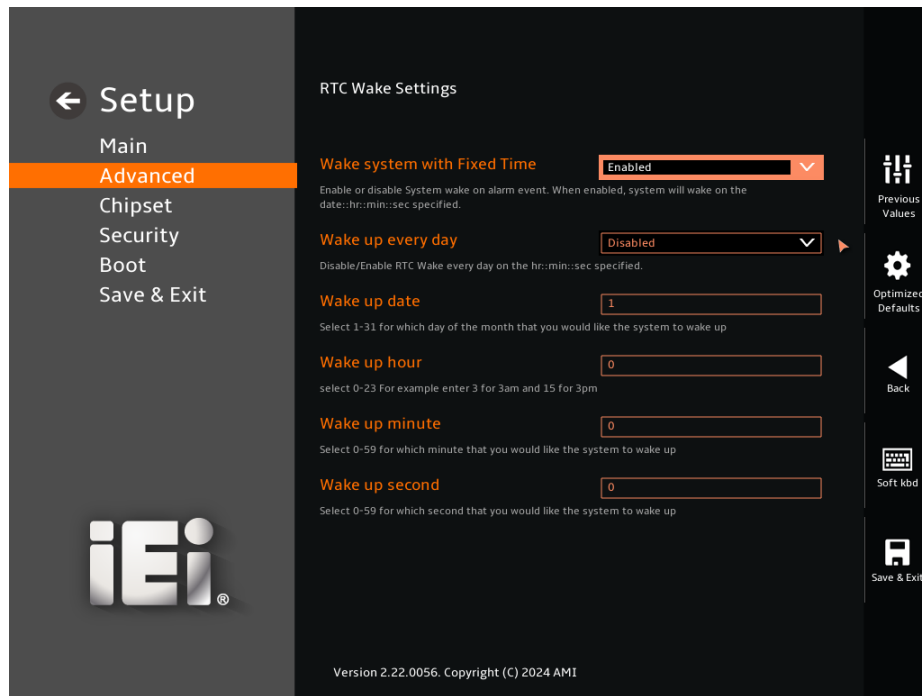

BIOS Menu 8: RTC Wake Settings (2/2)

→ Wake system with Fixed Time [Enabled]


Use the **Wake system with Fixed Time** option to enable or disable the system wake on alarm event.

- **Disabled** The real time clock (RTC) cannot generate a wake event
- **Enabled** **DEFAULT** If selected, the **Wake up every day** option appears allowing you to enable to disable the system to wake every day at the specified time. Besides, the following options appear with values that can be selected:
 - Wake up date
 - Wake up hour
 - Wake up minute
 - Wake up second

After setting the alarm, the computer turns itself on from a suspend state when the alarm goes off.

5.3.4 F81966 Super IO Configuration

Use the **F81966 Super IO Configuration** menu (**BIOS Menu 9**) to set or change the configurations for serial ports.

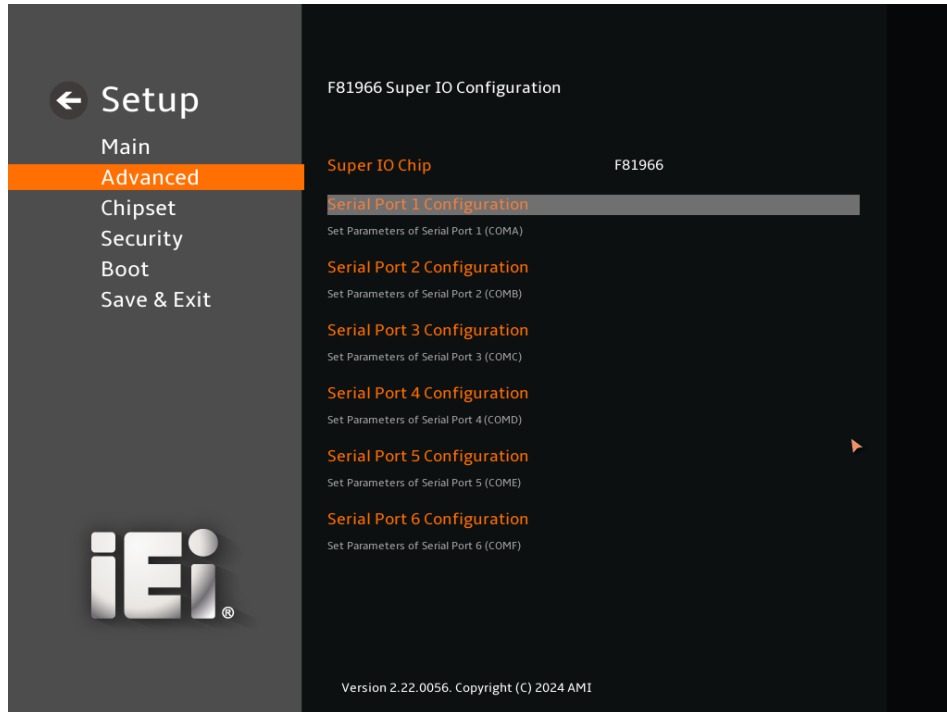


BIOS Menu 9: F81966 Super IO Configuration

IMB-AM5

5.3.4.1 Serial Port 1 Configuration

Use the **Serial Port 1 Configuration** menu (**BIOS Menu 10**) to configure the serial port.

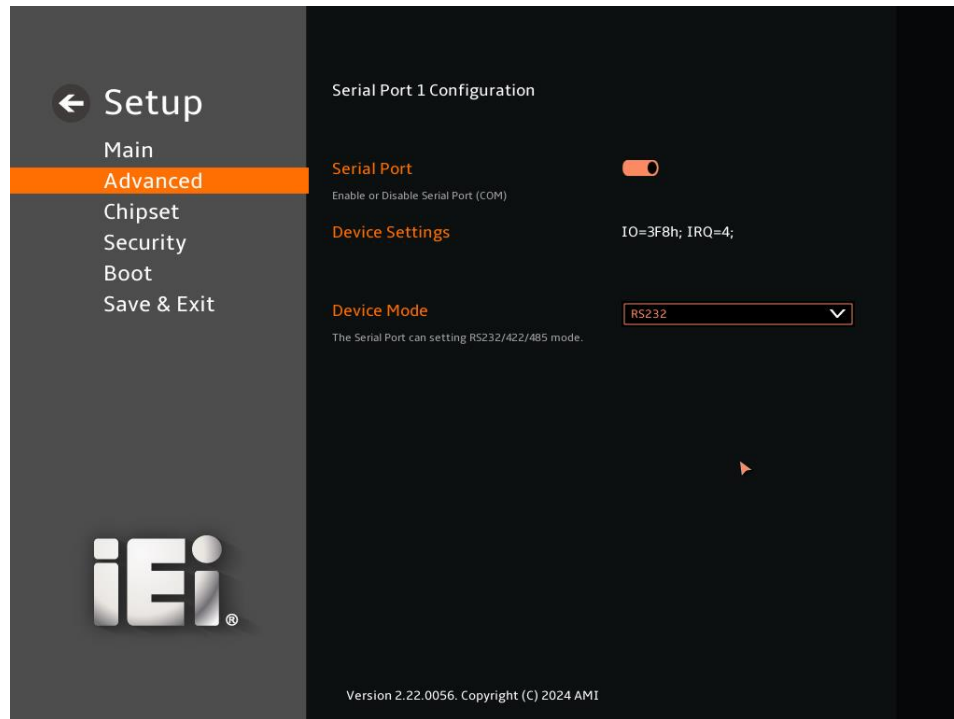

BIOS Menu 10: Serial Port 1 Configuration Menu

→ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled** Disable the serial port
- **Enabled** **DEFAULT** Enable the serial port

→ Device Settings

The **Device Settings** option shows the serial port IO port address and interrupt address.

- **IO=3F8h;** Serial Port I/O port address is 3F8h and the interrupt
IRQ=4 address is IRQ4

→ Device Mode [RS232]

Use the **Device Mode** option to change the serial port mode.

- ➔ **Disabled** Disable the serial port
- ➔ **Enabled** **DEFAULT** Enable the serial port

➔ **Device Settings**

The **Device Settings** option shows the serial port IO port address and interrupt address.


- ➔ **IO=3F8h;** Serial Port I/O port address is 2F8h and the interrupt
IRQ=3 address is IRQ3

➔ **Device Mode [RS232]**

The **Device Mode** only supports RS232.

5.3.4.4 Serial Port 4 Configuration

Use the **Serial Port 4 Configuration** menu (**BIOS Menu 13**) to configure the serial port.

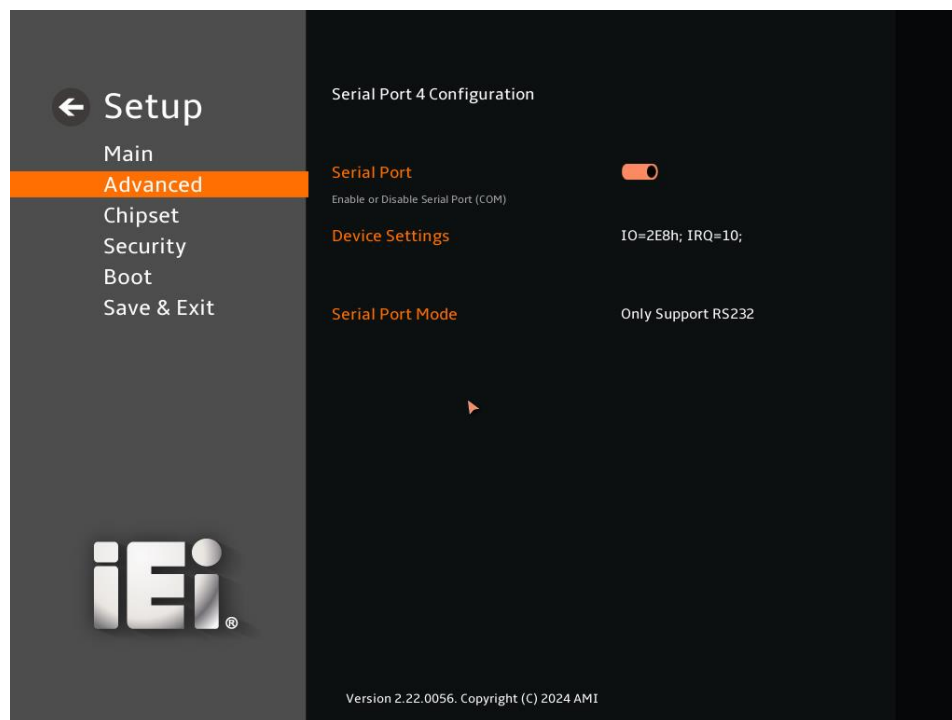

BIOS Menu 13: Serial Port 4 Configuration Menu

➔ **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the serial port.

IMB-AM5

- ➔ **Disabled** Disable the serial port
- ➔ **Enabled** **DEFAULT** Enable the serial port

➔ **Device Settings**

The **Device Settings** option shows the serial port IO port address and interrupt address.


- ➔ **IO=2E8h;** Serial Port I/O port address is 2F8h and the interrupt
IRQ=3 address is IRQ3

➔ **Device Mode [RS232]**

The **Device Mode** only supports RS232.

5.3.4.5 Serial Port 5 Configuration

Use the **Serial Port 5 Configuration** menu (**BIOS Menu 14**) to configure the serial port.

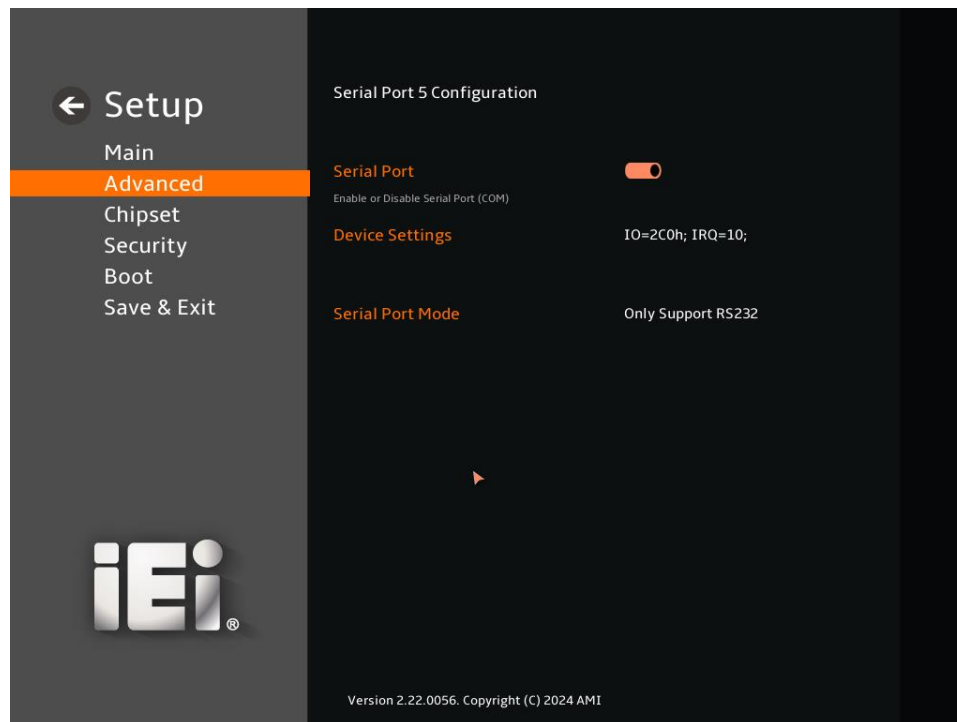

BIOS Menu 14: Serial Port 5 Configuration Menu

➔ **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the serial port.

- ➔ **Disabled** Disable the serial port
- ➔ **Enabled** **DEFAULT** Enable the serial port

➔ **Device Settings**

The **Device Settings** option shows the serial port IO port address and interrupt address.


- ➔ **IO=2C0h;** Serial Port I/O port address is 2F8h and the interrupt
IRQ=3 address is IRQ3

➔ **Device Mode [RS232]**

The **Device Mode** only supports RS232.

5.3.4.6 Serial Port 6 Configuration


Use the **Serial Port 6 Configuration** menu (**BIOS Menu 15**) to configure the serial port.

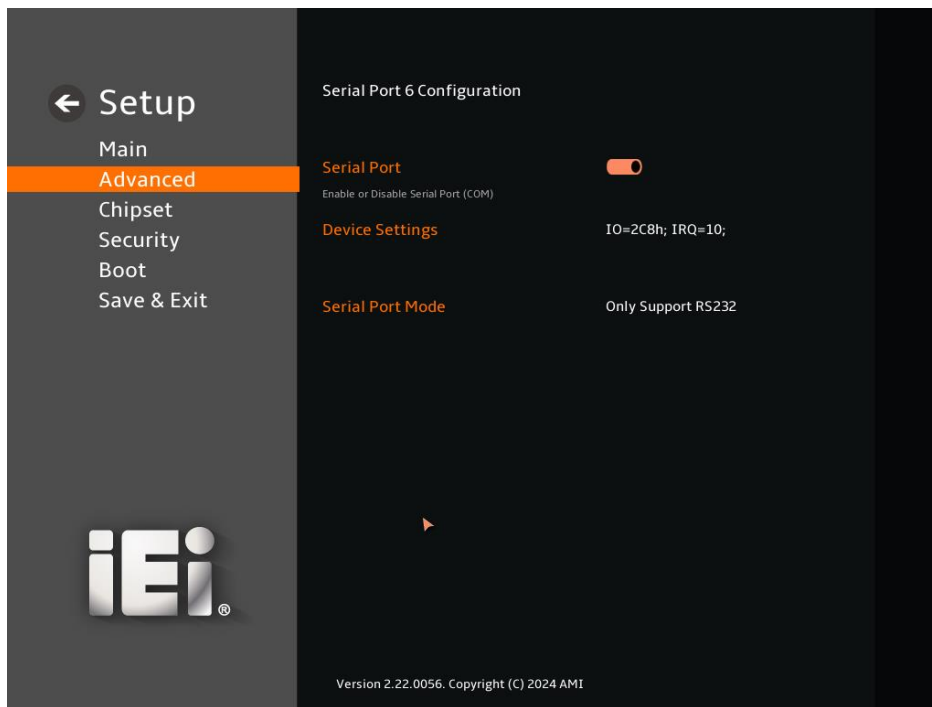

BIOS Menu 15: Serial Port 6 Configuration Menu

➔ **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the serial port.

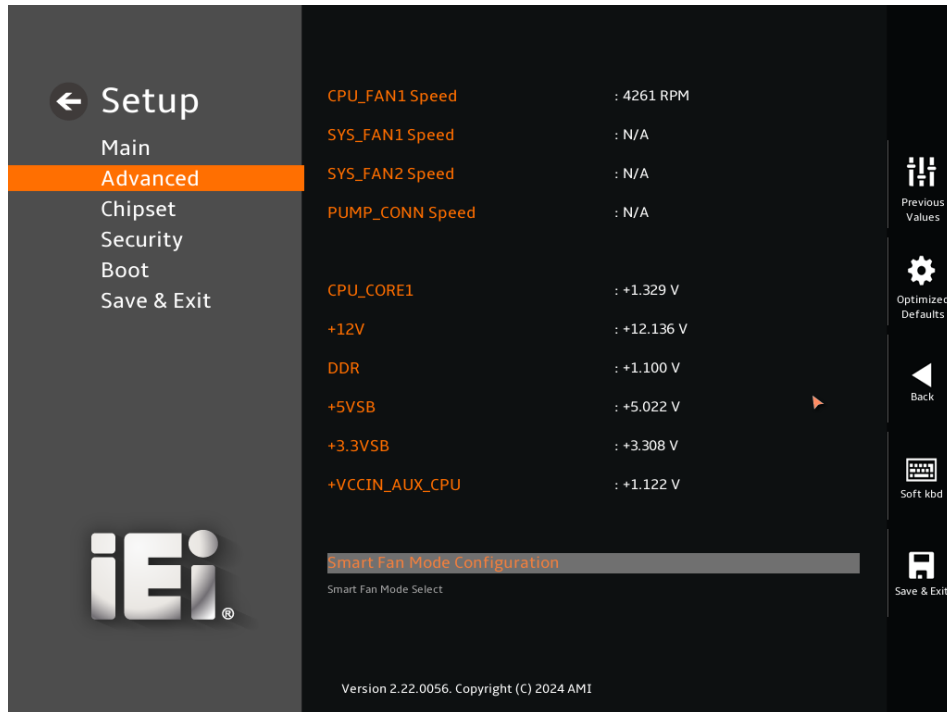

BIOS Menu 17: EC KB9068 H/W Monitor (2/2)

→ PC Health Status

The following system parameters and values are shown. The system parameters that are monitored are:


- System Temperatures:
 - CPU Temperature
 - System Temperature1
 - System Temperature2
- Fan Speeds:
 - CPU_Fan1 Speed
 - SYS_Fan1 Speed
 - SYS_Fan2 Speed
 - PUMP_CONN Speed
- Voltages:
 - CPU_CORE1
 - +12V
 - DDR

IMB-AM5

- +5VSB
- +3.3VSB
- +VCCIN_AUX_CPU


5.3.5.1 Smart Fan Mode Configuration

Use the **Smart Fan Mode Configuration** submenu (**BIOS Menu 18**) to configure the CPU/system fan start/off temperature and control mode.

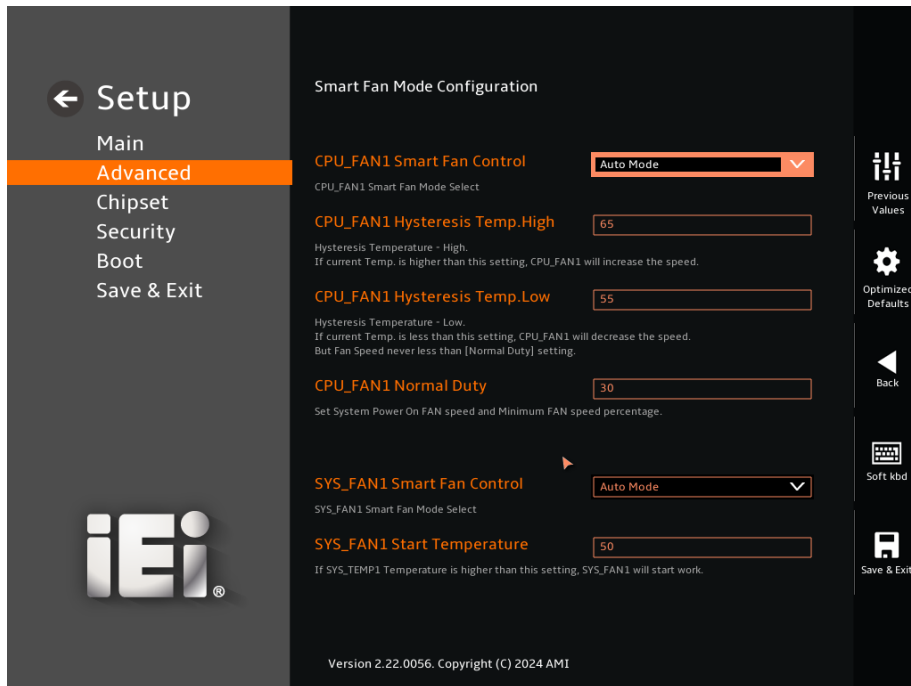


BIOS Menu 18: Smart Fan Mode Configuration (1/3)

IMB-AM5

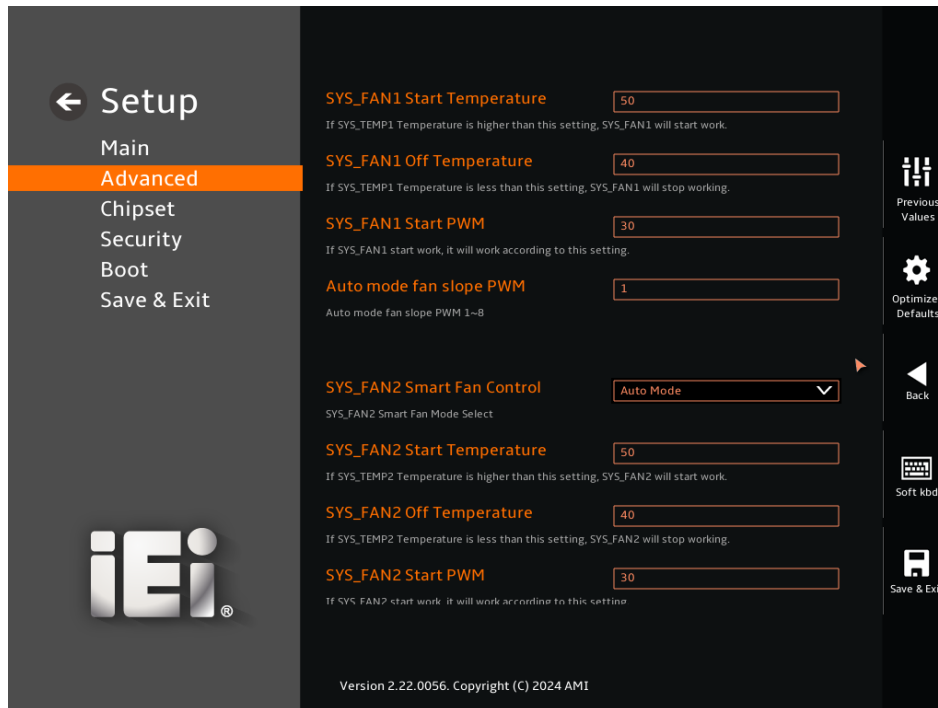

BIOS Menu 19: Smart Fan Mode Configuration (2/3)

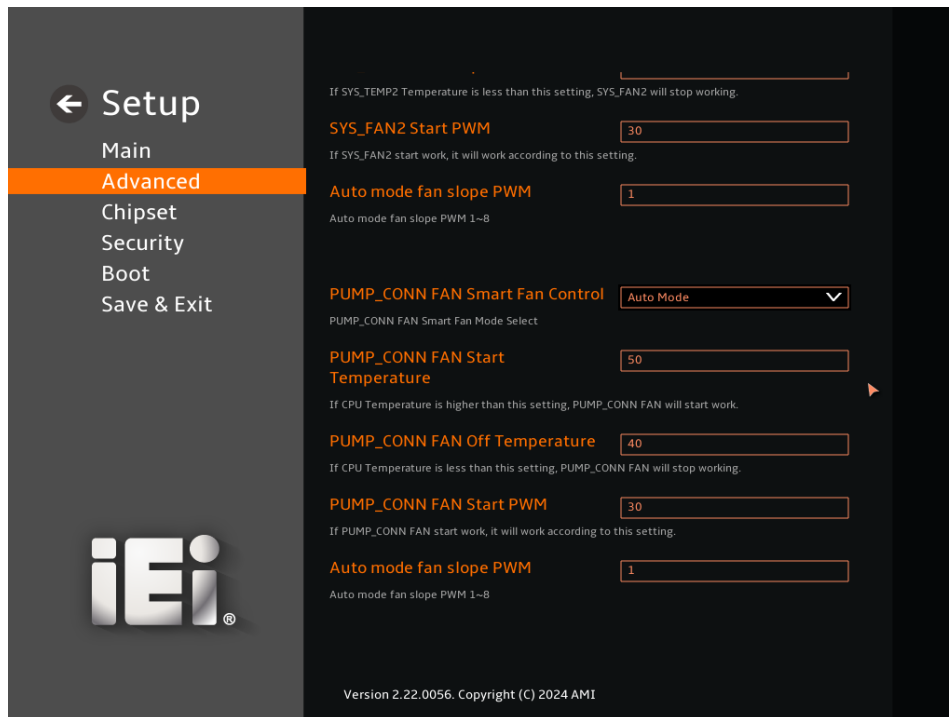

BIOS Menu 20: Smart Fan Mode Configuration (3/3)

→ **CPU_FAN1 Smart Fan Control [Auto Mode]**

Use the **CPU_FAN1 Smart Fan Control** option to configure the CPU Smart Fan.

- **Manual Mode** The fan spins at the speed set in Manual Mode settings.
- **Auto Mode** **DEFAULT** The fan adjusts its speed using Auto Mode settings.

→ **CPU_FAN1 Hysteresis Temp.High [65]**

Use the **CPU_FAN1 Hysteresis Temp.High** option to set value. If current temperature is higher than this setting, CPU_FAN1 will increase the speed.

→ **CPU_FAN1 Hysteresis Temp.Low [55]**

Use the **CPU_FAN1 Hysteresis Temp. Low** option to set value. If current temperature is lower than this setting, CPU_FAN1 will decrease the speed.

→ **CPU_FAN1 Normal Duty [30]**

Use the **CPU_FAN1 Normal Duty** option to set system power on fan speed and minimum fan speed percentage.

→ **SYS_FAN1 Smart Fan Control [Auto Mode]**

Use the **SYS_FAN1 Smart Fan Control** option to configure the System Smart Fan.

- **Manual Mode** The fan spins at the speed set in Manual Mode settings.
- **Auto Mode** **DEFAULT** The fan adjusts its speed using Auto Mode settings.

→ **SYS_FAN1 Start Temperature [50]**

If the SYS temperature is high than the value, the SYS_FAN1 will start working. To set a value, Use the + or – key to change the value or enter a decimal number between 1 and 100.

IMB-AM5**→ SYS_FAN1 Off Temperature**

If the SYS temperature is lower than the value, the SYS_FAN1 will stop working. To set a value, Use the + or – key to change the value or enter a decimal number between 1 and 100.

→ SYS_FAN1 Start PWM

Use the **SYS_FAN1 Start PWM** option to set the PWM start value. Use the + or – key to change the value or enter a decimal number between 1 and 100.

→ Auto mode fan slope PWM

Use the **Auto mode fan slope PWM** option to set the PWM start value. Use the + or – key to change the value or enter a decimal number between 1 and 100.

→ SYS_FAN2 Smart Fan Control [Auto Mode]

Use the **SYS_FAN2 Smart Fan Control** option to configure the System Smart Fan.

- Manual Mode** The fan spins at the speed set in Manual Mode settings.
- Auto Mode** **DEFAULT** The fan adjusts its speed using Auto Mode settings.

→ SYS_FAN2 Start Temperature [50]

If the System temperature is higher than this value, SYS_FAN2 will start working. To set a value, Use the + or – key to change the value or enter a decimal number between 1 and 100.

→ SYS_FAN2 Off Temperature


If the System temperature is lower than the value, SYS_FAN2 will stop working. To set a value, Use the + or – key to change the value or enter a decimal number between 1 and 100.

➔ **SYS_FAN2 Start PWM**

Use the **SYS_Fan2 Start PWM** option to set the PWM start value. Use the + or – key to change the value or enter a decimal number between 1 and 100.


5.3.6 Serial Port Console Redirection

The **Serial Port Console Redirection** menu (**BIOS Menu 21**) allows the console redirection options to be configured. Console Redirection allows users to maintain a system remotely by re-directing keyboard input and text output through the serial port.

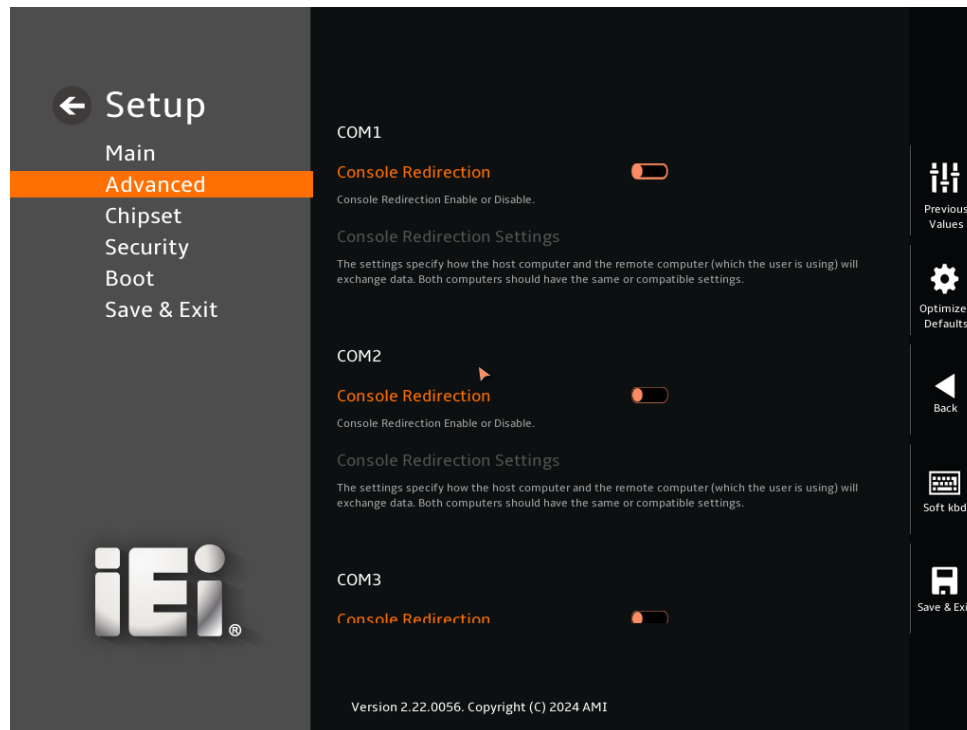


BIOS Menu 21: Serial Port Console Redirection (1/3)

IMB-AM5

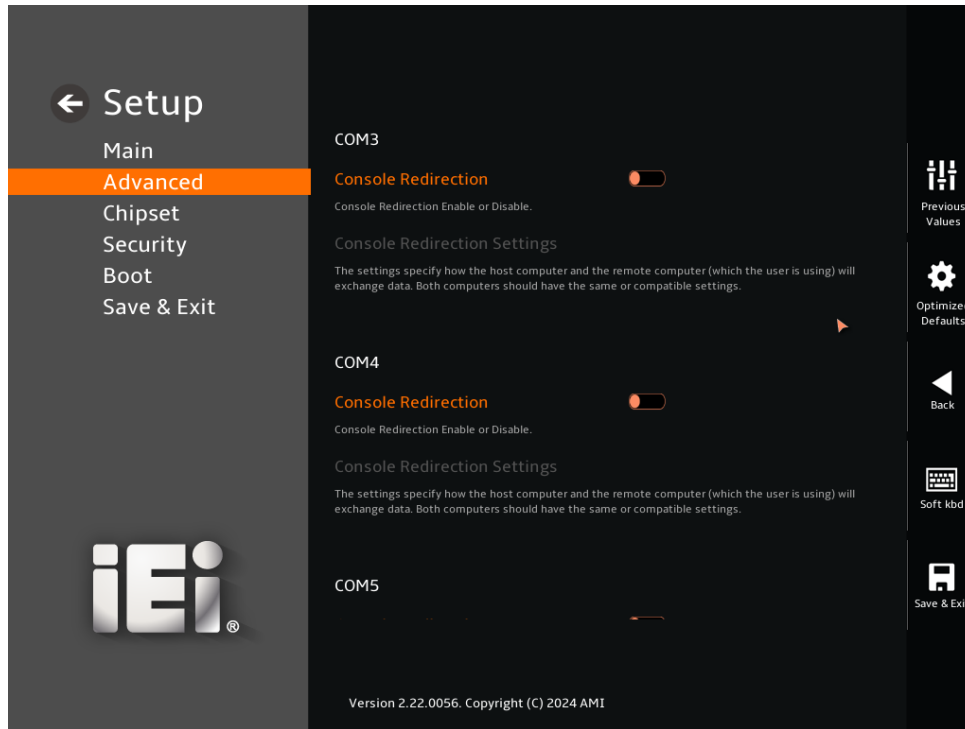

BIOS Menu 22: Serial Port Console Redirection (2/3)

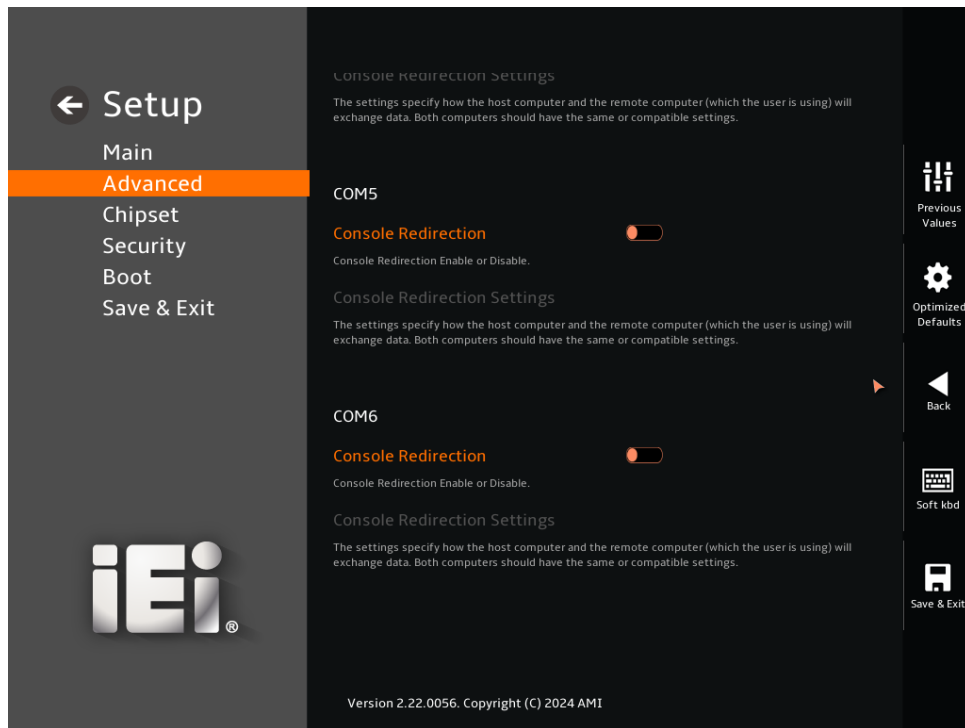

BIOS Menu 23: Serial Port Console Redirection (3/3)

➔ **Console Redirection [Disabled]**


Use **Console Redirection** option to enable or disable the console redirection function.

- ➔ **Disabled** **DEFAULT** Disabled the console redirection function
- ➔ **Enabled** Enabled the console redirection function

The **Console Redirection Settings** submenu will be available when the **Console Redirection** option is enabled.

5.3.6.1 Console Redirection Settings

The following options are available in the **Console Redirection Settings** submenu (**BIOS Menu 24**) when the **COM Console Redirection** (for COM1 to COM6) option is enabled.

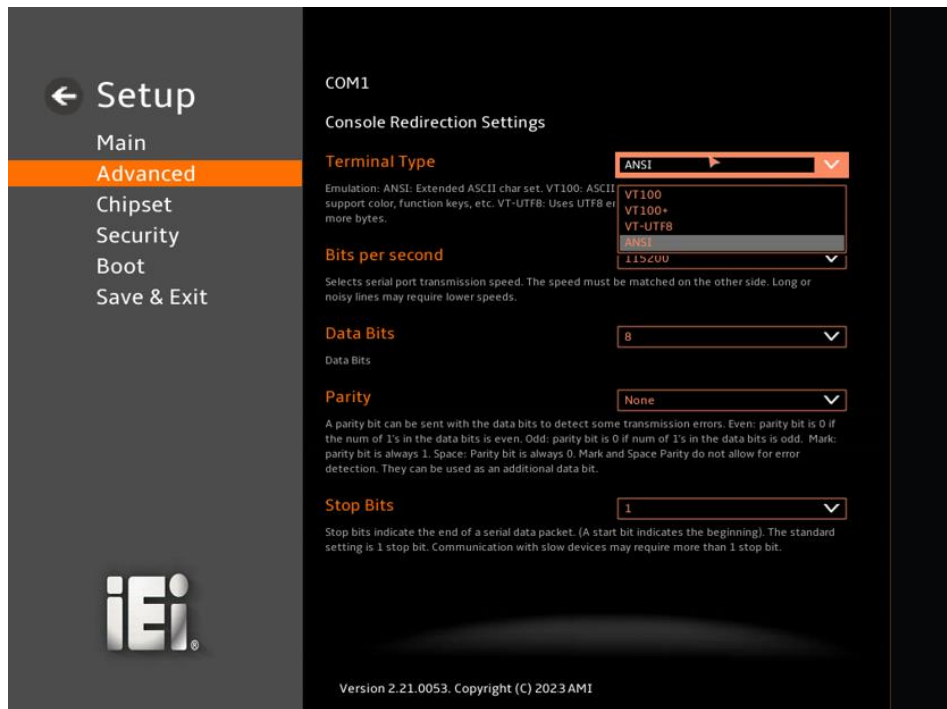

BIOS Menu 24: COM Console Redirection Settings


➔ **Terminal Type [ANSI]**

Use the **Terminal Type** option to specify the remote terminal type.

IMB-AM5

5.3.7 CPU Configuration

Use the **CPU Configuration** menu (**BIOS Menu 26**) to view detailed CPU specifications.

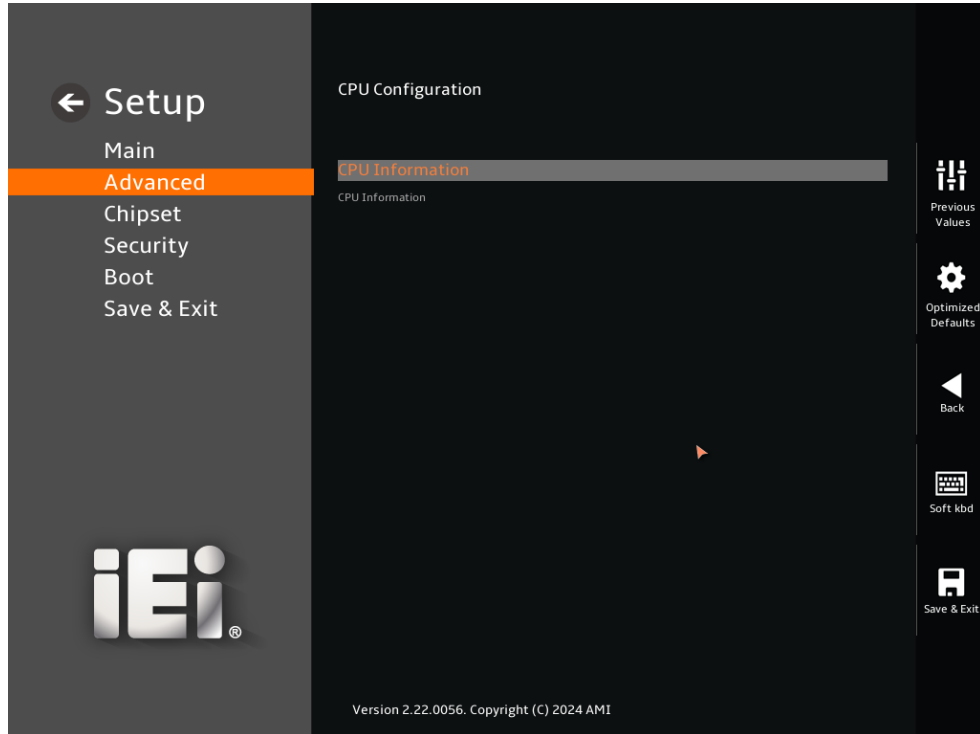

BIOS Menu 25: CPU Configuration (1/2)



BIOS Menu 26: CPU Configuration (2/2)

IMB-AM5

5.3.8 NVMe Configuration


Use the **NVMe Configuration (BIOS Menu 27)** menu to display the NVMe controller and device information.



BIOS Menu 27: NVMe Configuration

5.3.9 AMD CBS

Use the **AMD CBS (BIOS Menu 28)** menu to display the AMD Core BIOS Settings.

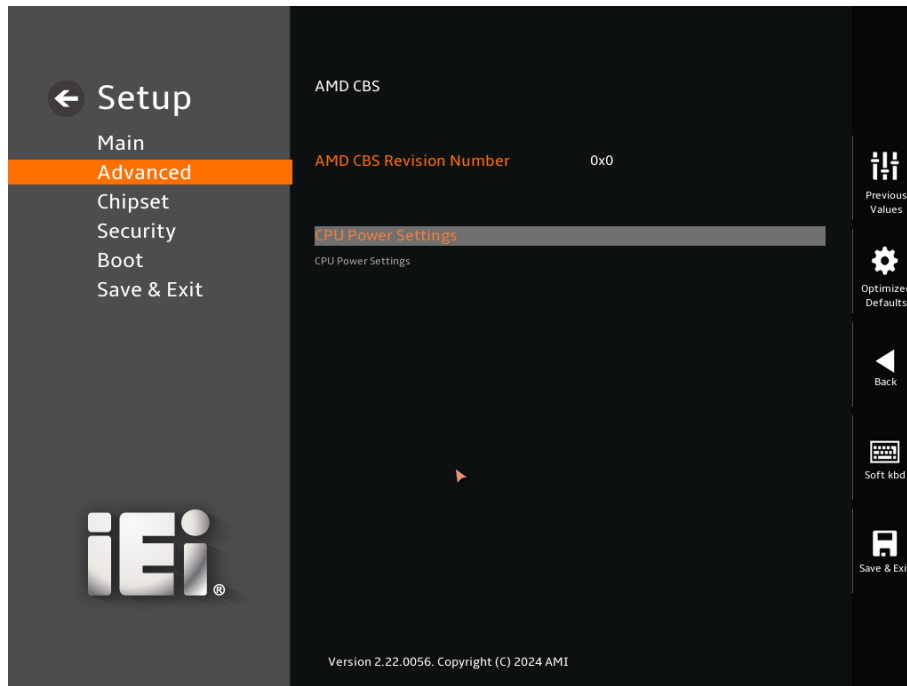


BIOS Menu 28: AMD CBS

IMB-AM5

5.3.9.1 CPU Power Settings

Use the **CPU Power Settings (BIOS Menu 29)** menu to display the 5.3.9.1 CPU Power Settings.

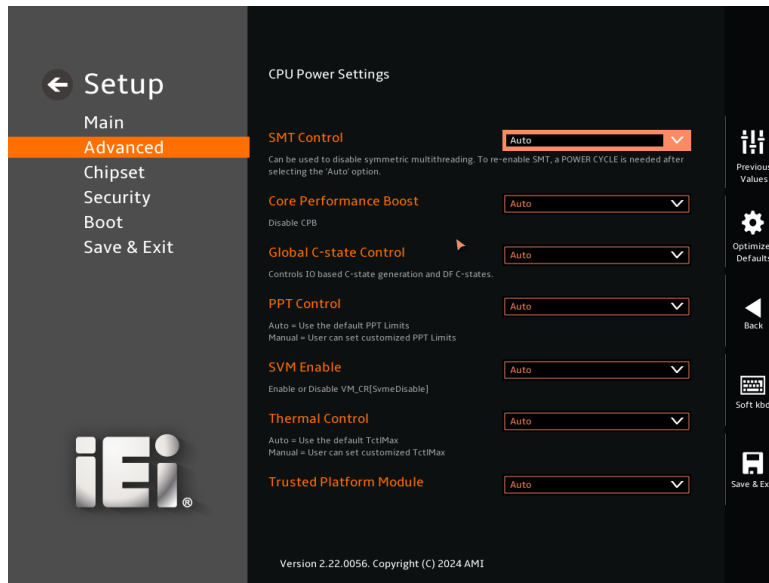

BIOS Menu 29: CPU Power Settings

➔ **SMT Control [Auto]**

Use the **SMT Control** option to enable or disable the symmetric multithreading.

- ➔ **Auto** **DEFAULT** Enable the symmetric multithreading.
- ➔ **Disable** Disable the symmetric multithreading.

➔ **Core Performance Boost [Auto]**

Use the **Core Performance Boost** option to enable or disable the CPB.

- ➔ **Auto** **DEFAULT** Enable the CPB.
- ➔ **Disable** Disable the CPB.

→ Global C-state Control [Auto]

Use the **Global C-state Control** option to enable or disable the IO based C-state generation and DF C-states.

→ **Auto** **DEFAULT** Enable the IO based C-state generation and DF C-states.

→ **Disable** Disable the IO based C-state generation and DF C-states.

→ PPT Control [Auto]

Use the **PPT Control** option to use the PPT Limits.

→ **Auto** **DEFAULT** Use the default PPT Limits.

→ **Manual** Customized the PPT Limits.

→ SVM Enable [Auto]

Use the **SVM Enable** option to enable or disable the SVM.

→ **Auto** **DEFAULT** Enable the SVM.

→ **Disable** Disable the SVM.

→ Thermal Control [Auto]

Use the **Thermal Control** option to use the TctlMax.

→ **Auto** **DEFAULT** Use the default TctlMax.

→ **Manual** Customized the TctlMax.

→ Trusted Platform Module [Auto]

Use the **Trusted Platform Module** option to enable or disable the TPM.

→ **Auto** **DEFAULT** Enable the TPM.

→ **Disable** Disable the TPM.


5.4 Chipset

Use the **Chipset** menu (**BIOS Menu 31**) to access the South Bridge and North Bridge configuration menus.



WARNING!

Setting the wrong values for the Chipset BIOS selections in the Chipset BIOS menu may cause the system to malfunction.

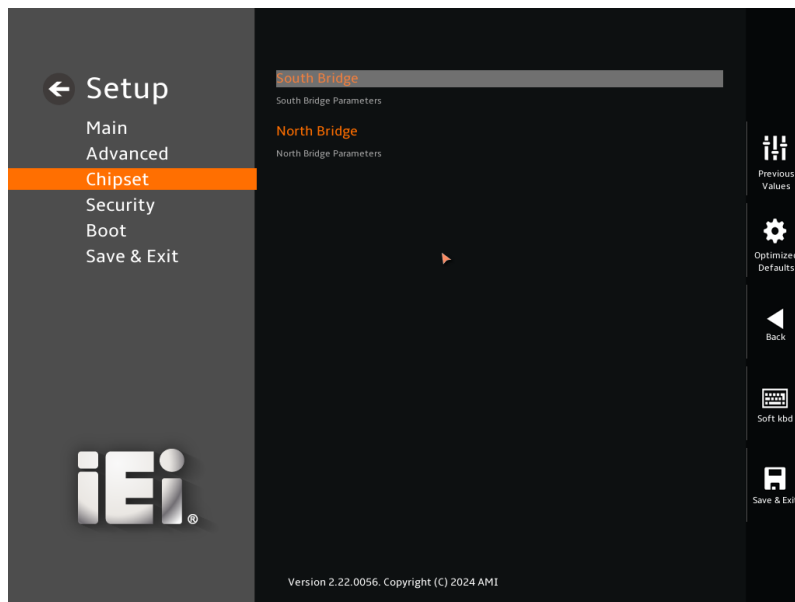

BIOS Menu 31: Chipset

IMB-AM5

5.4.1 South Bridge

Use the **South Bridge** menu (**BIOS Menu 32**) to configure the parameters.



BIOS Menu 32: South Bridge Configuration

➔ Power Saving Function (EUP) [Disabled]

Use the **Power Saving Function (EUP)** BIOS option to enable or disable the power saving function.

- ➔ **Disabled** **DEFAULT** Power saving function is disabled.
- ➔ **Enabled** Power saving function is enabled. It will reduce power consumption when the system is off.


➔ USB Power [+5VDUAL]

Use the **USB Power** option to enable or disable the USB Power.

- ➔ **+5VDUAL** **DEFAULT** USB Power is on.
- ➔ **+5V** USB Power is off.

5.4.2 Nouth Bridge


Use the **Nouth Bridge** menu (**BIOS Menu 33**) to configure the parameters.

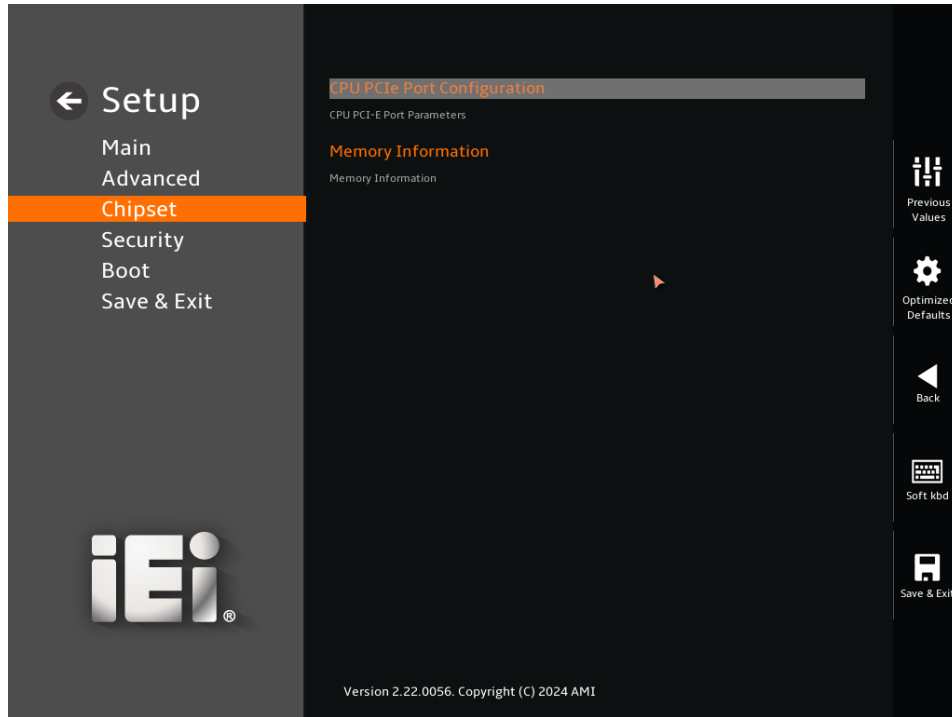

BIOS Menu 33: Nouth Bridge

5.4.2.1 CPU PCIe Port Configuration

Use the **CPU PCIe Port Configuration (BIOS Menu 35)** menu to configure the PCIe Port.

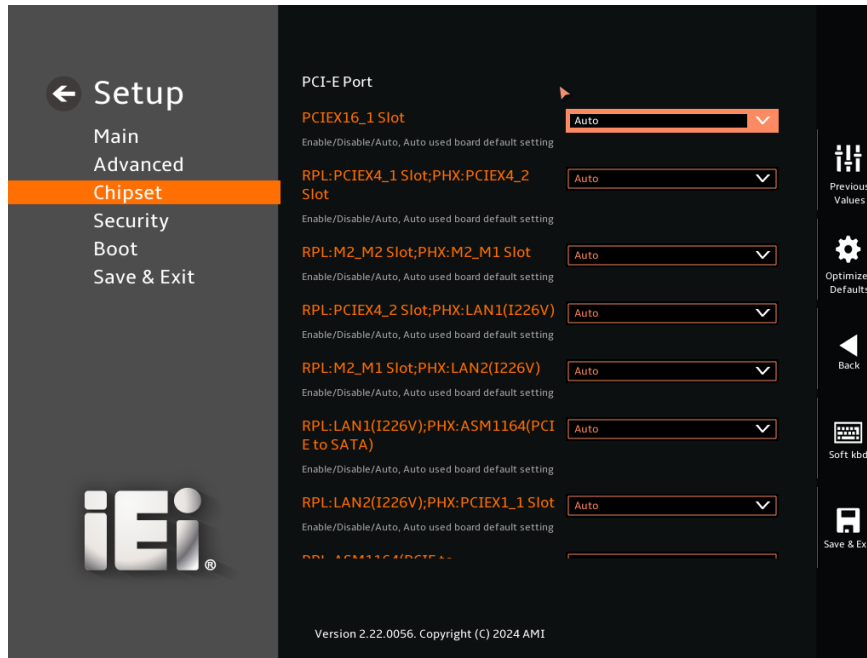

BIOS Menu 34: CPU PCIe Port Configuration (1/2)



BIOS Menu 35: CPU PCIe Port Configuration (2/2)

→ **PCIe Port [Auto]**


Use the **PCIe Port** option to configure the PCIe Port.

- **Auto** **DEFAULT** PCIe Port function is auto.
- **Disabled** PCIe Port function is disabled.
- **Enable** PCIe Port function is enabled.

IMB-AM5

5.4.2.1 Memory Information


Use the **Memory Configuration** submenu (**BIOS Menu 36**) to view memory information.

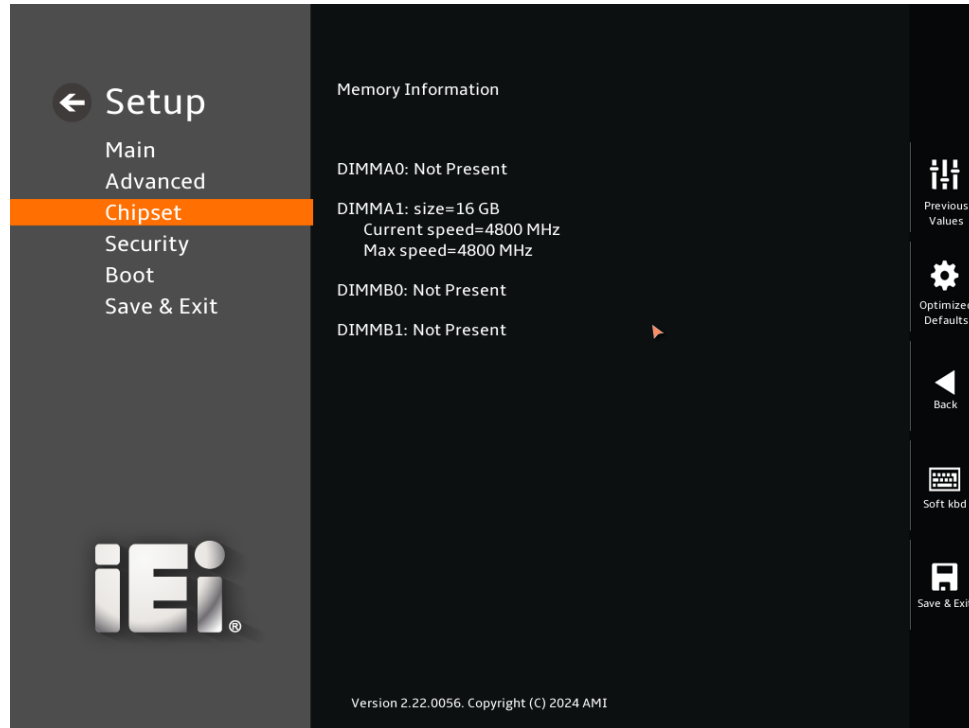

BIOS Menu 36: Memory Configuration

5.6 Security

Use the **Security** menu (**BIOS Menu 37**) to set system and user passwords.

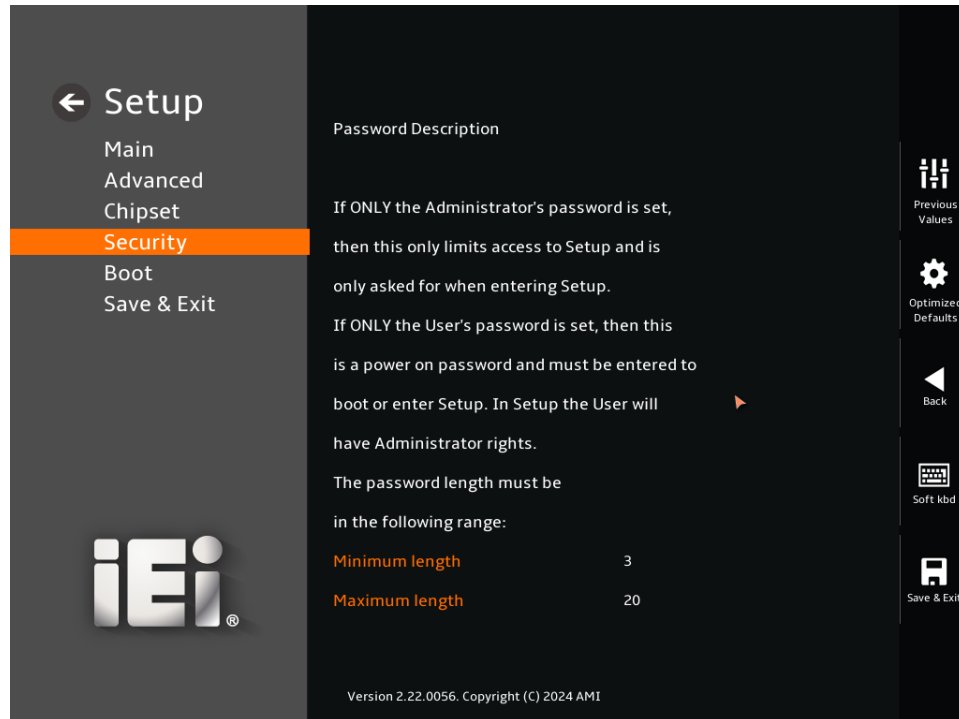

BIOS Menu 37: Security (1/2)



BIOS Menu 38: Security (2/2)

→ Administrator Password


Use the **Administrator Password** to set or change an administrator password.

→ User Password

Use the **User Password** to set or change a user password.

5.7 Boot

Use the **Boot** menu (**BIOS Menu 39**) to configure system boot options.

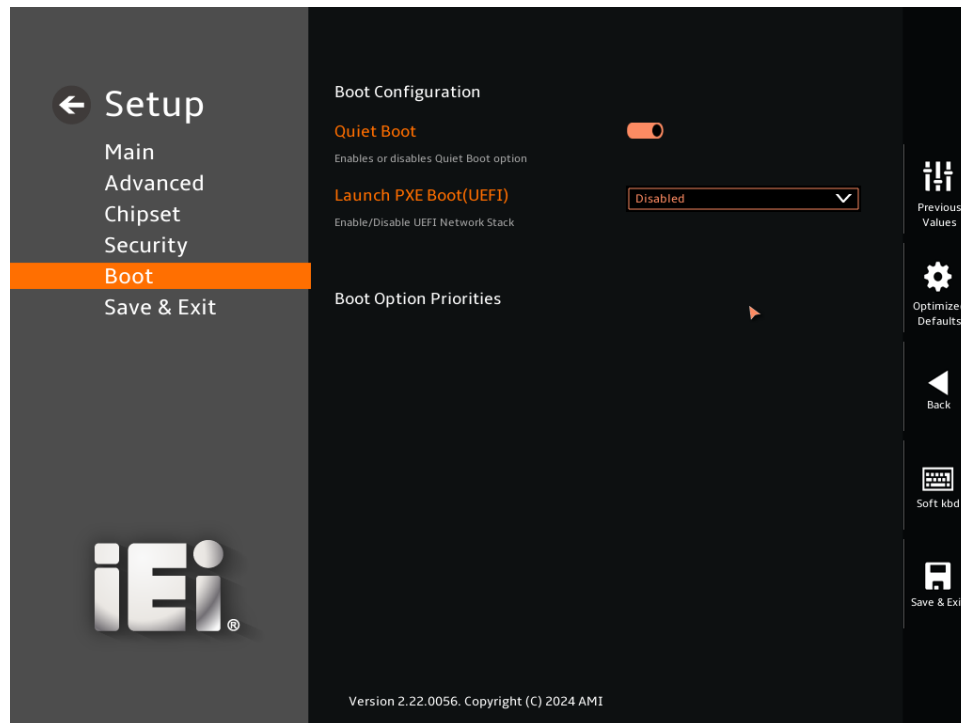

BIOS Menu 39: Boot

5.7.1 Boot Configuration

→ Quiet Boot [Enabled]

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

- | | | |
|------------|---------|---|
| → Disabled | | Normal POST messages displayed |
| → Enabled | DEFAULT | OEM Logo displayed instead of POST messages |

→ Launch PXE OpROM [Disabled]

Use the **Launch PXE OpROM** option to enable or disable boot option for legacy network devices.

IMB-AM5

- ➔ **Disabled** **DEFAULT** Ignore all PXE Option ROMs
- ➔ **Enabled** Load PXE Option ROMs.

➔ **Option ROM Messages [Force BIOS]**

Use the **Option ROM Messages** option to set the Option ROM display mode.

- ➔ **Force BIOS** **DEFAULT** Sets display mode to force BIOS.
- ➔ **Keep Current** Sets display mode to current.

5.7.2 Boot Option Priorities

Use the Boot Option # N to choose the system boots from the peripherals you selected. The following Boot Options are listed as an example.

➔ **Boot Option #1**

Sets the system boot order **ADATA SP580** as the first priority.

- ➔ **Windows Boot Manager (P1: ADATA SSD SP580 240GB)**
- ➔ **Disabled**


➔ **Boot Option #2**

Sets the system boot order **USB Partition 1** as the second priority.

- ➔ **UEFI: USB, Partition 1**
- ➔ **Disabled**

5.8 Save & Exit

Use the **Save & Exit** menu (**BIOS Menu 40**) to load default BIOS values, optimal failsafe values and to save configuration changes.

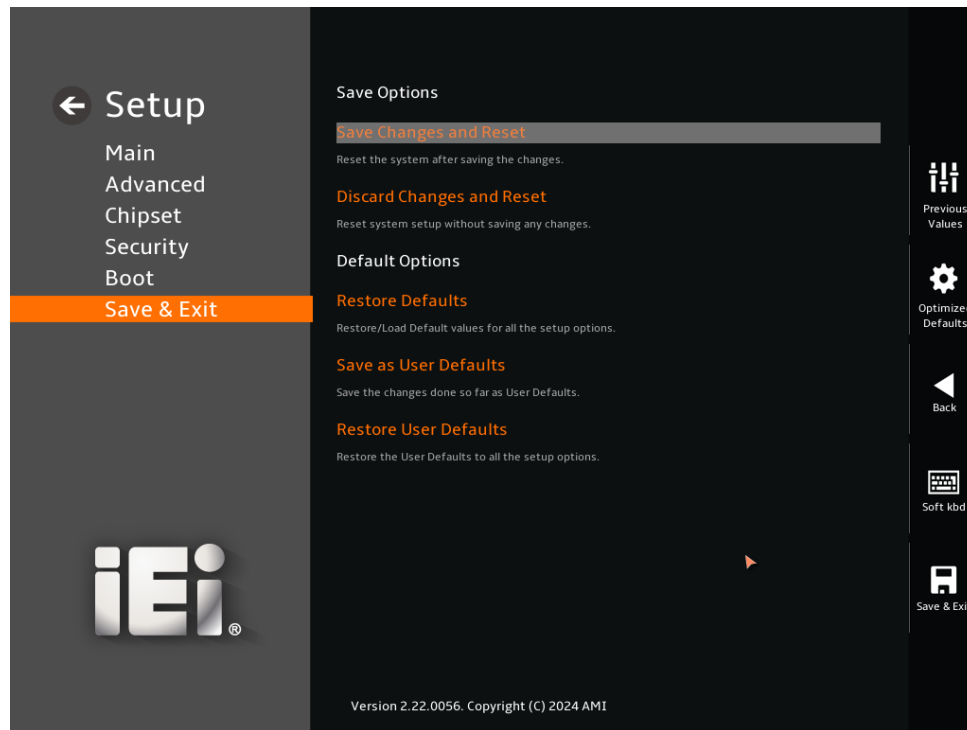

BIOS Menu 40: Save & Exit

→ Save Changes and Reset

Use the **Save Changes and Reset** option to save the changes made to the BIOS options and reset the system.

→ Discard Changes and Reset

Use the **Discard Changes and Reset** option to exit the system without saving the changes made to the BIOS configuration setup program.

→ Restore Defaults

Use the **Restore Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F3 key can be used for this operation.**

IMB-AM5

→ **Save as User Defaults**

Use the **Save as User Defaults** option to save the changes done so far as user defaults.

→ **Restore User Defaults**

Use the **Restore User Defaults** option to restore the user defaults to all the setup options.

Appendix

A

Regulatory Compliance

DECLARATION OF CONFORMITY

This equipment has been tested and found to comply with specifications for CE marking. If the user modifies and/or installs other devices in the equipment, the CE conformity declaration may no longer apply.

FCC WARNING

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Appendix

B

Product Disposal


IMB-AM5

**CAUTION:**

Risk of explosion if battery is replaced by an incorrect type. Only certified engineers should replace the on-board battery.

Dispose of used batteries according to instructions and local regulations.

- Outside the European Union–If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority so as to comply with the correct disposal method.
- Within the European Union–The device that produces less waste and is easier to recycle is classified as electronic device in terms of the European Directive 2012/19/EU (WEEE), and must not be disposed of as domestic garbage.

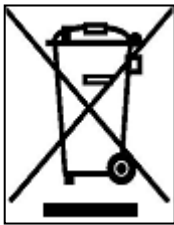

EU-wide legislation, as implemented in each Member State, requires that waste electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes monitors and electrical accessories, such as signal cables or power cords. When you need to dispose of your device, please follow the guidance of your local authority, or ask the shop where you purchased the product. The mark on electrical and electronic products only applies to the current European Union Member States.

Please follow the national guidelines for electrical and electronic product disposal.

Appendix

C

BIOS Options

IMB-AM5

Below is a list of BIOS configuration options in the BIOS chapter.

➔ BIOS Information	80
➔ CPU Information.....	80
➔ Platform Information.....	81
➔ Memory Information	81
➔ System Date [xx/xx/xx].....	81
➔ System Time [xx:xx:xx].....	81
➔ Security Device Support [Enable]	84
➔ Pending Operation [None]	84
➔ Auto Recovery Function [Enabled].....	85
➔ Watch dog Timer (Seconds) [1800].....	85
➔ Watch dog Counter [3]	86
➔ Wake system with Fixed Time [Enabled].....	87
➔ Serial Port [Enabled].....	89
➔ Device Settings	89
➔ Device Mode [RS232].....	89
➔ Serial Port [Enabled].....	90
➔ Device Settings	90
➔ Device Mode [RS232].....	91
➔ Serial Port [Enabled].....	91
➔ Device Settings	92
➔ Device Mode [RS232].....	92
➔ Serial Port [Enabled].....	92
➔ Device Settings	93
➔ Device Mode [RS232].....	93
➔ Serial Port [Enabled].....	93
➔ Device Settings	94
➔ Device Mode [RS232].....	94
➔ Serial Port [Enabled].....	94
➔ Device Settings	95
➔ Device Mode [RS232].....	95
➔ PC Health Status	96
➔ CPU_FAN1 Smart Fan Control [Auto Mode]	100
➔ CPU_FAN1 Hysteresis Temp.High [65].....	100

- ➔ CPU_FAN1 Hysteresis Temp.Low [55]100
- ➔ CPU_FAN1 Normal Duty [30]100
- ➔ SYS_FAN1 Smart Fan Control [Auto Mode].....100
- ➔ SYS_FAN1 Start Temperature [50].....100
- ➔ SYS_FAN1 Off Temperature101
- ➔ SYS_FAN1 Start PWM101
- ➔ Auto mode fan slope PWM.....101
- ➔ SYS_FAN2 Smart Fan Control [Auto Mode].....101
- ➔ SYS_FAN2 Start Temperature [50].....101
- ➔ SYS_FAN2 Off Temperature101
- ➔ SYS_FAN2 Start PWM102
- ➔ Console Redirection [Disabled].....104
- ➔ Terminal Type [ANSI].....104
- ➔ Bits per second [115200].....105
- ➔ Data Bits [8]105
- ➔ Parity [None].....105
- ➔ Stop Bits [1].....106
- ➔ SMT Control [Auto]111
- ➔ Core Performance Boost [Auto].....111
- ➔ Global C-state Control [Auto]112
- ➔ PPT Control [Auto].....112
- ➔ SVM Enable [Auto].....112
- ➔ Thermal Control [Auto].....112
- ➔ Trusted Platform Module [Auto].....112
- ➔ NVMe RAID mode [Disabled]113
- ➔ Power Saving Function (EUP) [Disabled].....115
- ➔ USB Power [+5VDUAL].....115
- ➔ PCIe Port [Auto]118
- ➔ Administrator Password121
- ➔ User Password121
- ➔ Quiet Boot [Enabled]122
- ➔ Launch PXE OpROM [Disabled]122
- ➔ Option ROM Messages [Force BIOS].....123
- ➔ Boot Option #1123
- ➔ Boot Option #2123

IMB-AM5

➔ Save Changes and Reset	124
➔ Discard Changes and Reset	124
➔ Restore Defaults	124
➔ Save as User Defaults	125
➔ Restore User Defaults	125

Appendix

D

Watchdog Timer

**NOTE:**

The following discussion applies to DOS environment. Contact IEI support or visit the IEI website for specific drivers for other operating systems.

The Watchdog Timer is provided to ensure that standalone systems can always recover from catastrophic conditions that cause the CPU to crash. This condition may have occurred by external EMIs or a software bug. When the CPU stops working correctly, Watchdog Timer either performs a hardware reset (cold boot) or a Non-Maskable Interrupt (NMI) to bring the system back to a known state.

A BIOS function call (INT 15H) is used to control the Watchdog Timer.

INT 15H:

AH – 6FH Sub-function:	
AL – 2:	Sets the Watchdog Timer's period.
BL:	Time-out value (Its unit-second is dependent on the item "Watchdog Timer unit select" in CMOS setup).

Table D-1: AH-6FH Sub-function

Call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer starts counting down. When the timer value reaches zero, the system resets. To ensure that this reset condition does not occur, calling sub-function 2 must periodically refresh the Watchdog Timer. However, the watchdog timer is disabled if the time-out value is set to zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.

**NOTE:**

When exiting a program it is necessary to disable the Watchdog Timer, otherwise the system resets.

EXAMPLE PROGRAM:

; INITIAL TIMER PERIOD COUNTER

;

W_LOOP:

;

```
MOV     AX, 6F02H      ;setting the time-out value
MOV     BL, 30         ;time-out value is 48 seconds
INT     15H
```

;

; ADD THE APPLICATION PROGRAM HERE

;

```
CMP     EXIT_AP, 1     ;is the application over?
JNE     W_LOOP        ;No, restart the application
```

```
MOV     AX, 6F02H      ;disable Watchdog Timer
MOV     BL, 0         ;
INT     15H
```

;

; EXIT ;

Appendix

E

Error Beep Code

E.1 PEI Beep Codes

Number of Beeps	Description
1	Memory not Installed
1	Memory was installed twice (InstallPeiMemory routine in PEI Core called twice)
2	Recovery started
3	DXE IPL was not found
3	DXE Core Firmware Volume was not found
4	Recovery failed
4	S3 Resume failed
7	Reset PPI is not available

E.2 DXE Beep Codes

Number of Beeps	Description
1	Invalid password
4	Some of the Architectural Protocols are not available
5	No Console Output Devices are found
5	No Console Input Devices are found
6	Flash update is failed
7	Reset protocol is not available
8	Platform PCI resource requirements cannot be met



NOTE:

If you have any question, please contact IEI for further assistance.

Appendix

F

Hazardous Materials Disclosure

F.1 RoHS Directive (2015/863/EU)

The details provided in this appendix are to ensure that the product is compliant with the RoHS Directive (2015/863/EU). The table below acknowledges the presences of small quantities of certain substances in the product, and is applicable to RoHS Directive (2015/863/EU).

Please refer to the following table.

Part Name	Toxic or Hazardous Substances and Elements									
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)	Bis(2-ethylhexyl) phthalate (DEHP)	Butyl benzyl phthalate (BBP)	Dibutyl phthalate (DBP)	Diisobutyl phthalate (DIBP)
Housing	O	O	O	O	O	O	O	O	O	O
Printed Circuit Board	O	O	O	O	O	O	O	O	O	O
Metal Fasteners	O	O	O	O	O	O	O	O	O	O
Cable Assembly	O	O	O	O	O	O	O	O	O	O
Fan Assembly	O	O	O	O	O	O	O	O	O	O
Power Supply Assemblies	O	O	O	O	O	O	O	O	O	O
Battery	O	O	O	O	O	O	O	O	O	O
<p>O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in Directive (EU) 2015/863.</p> <p>X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in Directive (EU) 2015/863.</p>										

IMB-AM5

F.2 China RoHS

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有“环境友好使用期限”的标签，此期限是估算这些物质“不会有泄漏或突变”的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
壳体	○	○	○	○	○	○
印刷电路板	○	○	○	○	○	○
金属螺帽	○	○	○	○	○	○
电缆组装	○	○	○	○	○	○
风扇组装	○	○	○	○	○	○
电力供应组装	○	○	○	○	○	○
电池	○	○	○	○	○	○

O: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T11364-2014 與 GB/T26572-2011 标准规定的限量要求以下。

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11364-2014 與 GB/T26572-2011 标准规定的限量要求。