

UPC-V315 Screw Driver User manual



NOTE:



Please use the screw driver that comes with the UPC-V315 to remove the screws on the chassis.

1. To install the SSD, remove the SSD drive bay access panel by removing the four retention screws



2. To install the 3G USB dongle, remove the internal USB port cover by removing the seven retention screws.



3. To install external peripheral devices, remove the I/O cover by removing the ten retention screws.

