



MODEL:
AFL4-W08-EHL

Fanless Panel PC with Intel® Celeron® J6412 on-board processor, 8GB LPDDR4x on-board, IEEE 802.11 a/b/g/n/ax, Bluetooth V5.2, one M.2 2242 M Key Slot

User Manual

Revision

Date	Version	Changes
2023/11/15	1.00	Initial release
2025/11/27	1.01	Modified Section 1.6: System Specifications



Safety Instructions

- en** Warning! Read the user manual before connecting the system to the power source.
- de** Vorsicht! Bitte lesen Sie die Bedienungsanleitung, bevor Sie das System an eine Stromquelle anschließen.
- fr** Attention! Avant de brancher le système à la source d'alimentation, consultez le mode d'emploi.
- it** Avvertenza! Consultare il manuale utente prima di collegare il sistema all'alimentatore.
- es** Atención! Lea atentamente este manual del usuario antes de operar la fuente de alimentación.
- zh**警告! 在將系統連接到電源之前, 請仔細閱讀使用手冊。
- cn**警告! 在將系統連接到電源之前, 請仔細閱讀使用手冊。
-

- en** Warning! To prevent the system from overheating, do not operate it in an area that exceeds the maximum operating temperature described in the user manual.
- de** Vorsicht! Um eine Überhitzung des Systems zu vermeiden, betreiben Sie es ausschließlich im zulässigen Betriebstemperaturbereich. Dieser ist in der Bedienungsanleitung vermerkt.
- fr** Attention! Pour éviter la surchauffe du système, ne l'utilisez pas dans une zone dont la température dépasse les limites décrits dans le mode d'emploi.
- it** Avvertenza! Per evitare che il sistema si surriscaldi, non utilizzarlo in aree che superino la temperatura massima d'esercizio descritta nel manuale utente.
- es** Atención! Para evitar el excesivo calentamiento del sistema, no opere en las condiciones de temperatura superior a lo recomendado en este manual del usuario.
- zh**警告! 為防止系統過熱, 不要在超過使用手冊上記載的產品工作溫度範圍之外操作此系統。
- cn**警告! 為防止系統過熱, 不要在超過使用手冊上記載的產品工作溫度範圍之外操作此系統。
-

- en** Warning! Use only the adapter and power cord approved for this system. Use of another type of adapter may risk fire or explosion. Please refer to the user manual for the power adapter specifications.
- de** Vorsicht! Nur zugelassene Netzteile und Netzkabel dürfen verwendet werden. Die Benutzung von anderen Netzteilen kann einen Brand oder eine Explosion zur Folge haben. Prüfen Sie die jeweiligen Spezifikationen in der Bedienungsanleitung.
- fr** Attention! Utilisez exclusivement le câble d'alimentation et l'adaptateur homologués pour ce système. L'utilisation d'un autre type d'adaptateur risquerait de provoquer un incendie ou une explosion. Veuillez référer au mode d'emploi pour les spécifications de l'adaptateur d'alimentation.
- it** Avvertenza! Utilizzare solo l'adattatore e il cavo di alimentazione approvati per questo sistema. L'uso di un altro tipo di adattatore può causare rischio d'incendio o esplosione. Si prega di fare riferimento al manuale utente per le specifiche sull'alimentazione.
- es** Atención! Utilice solamente el adaptador de corriente alterna (CA) con Marcas Conformidad otorgadas. Cualquier otro adaptador no otorgado aumenta el riesgo de explosión o incendio. Por favor consulte el manual del usuario para las especificaciones del adaptador de alimentación.
- zh** 警告! 只能使用經過認證、適用於本系統的電源變壓器與電源線。使用不適用的電源變壓器將可能導致火災或爆炸。電源變壓器規格請參考使用手冊。
- cn** 警告! 只能使用经过认证, 适用于本系统的电源适配器与电源线。使用不适用的电源适配器将可能导致火灾或爆炸。电源适配器规格请参考使用手册。

-
- en** Warning! Ultimate disposal of this product should be handled according to all national laws and regulations.
- de** Vorsicht! Die Entsorgung dieses Produkts sollte gemäß allen Bestimmungen und Gesetzen des Landes erfolgen.
- fr** Attention! La mise au rebut ou le recyclage de ce produit sont généralement soumis aux lois et/ou directives de respect de l'environnement. Renseignez-vous auprès de l'organisme compétent.
- it** Avvertenza! Lo smaltimento di questo prodotto deve essere eseguito secondo le leggi e i regolamenti locali.
- es** Atención! La disposición final de residuos de este producto se debe cumplir con las normativas y leyes del país.
- zh** 警告! 本產品的廢棄處理應根據該國家的法律和規章進行。
- cn** 警告! 本产品的废弃处理应根据该国家的法律和规章进行。
-

Copyright

COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Manual Conventions

**WARNING**

Warnings appear where overlooked details may cause damage to the equipment or result in personal injury. Warnings should be taken seriously.

**CAUTION**

Cautionary messages should be heeded to help reduce the chance of losing data or damaging the product.

**NOTE**

These messages inform the reader of essential but non-critical information. These messages should be read carefully as any directions or instructions contained therein can help avoid making mistakes.

**HOT SURFACE**

This symbol indicates a hot surface that should not be touched without taking care.

Table of Contents

1 INTRODUCTION	14
1.1 OVERVIEW	15
1.2 FEATURES	15
1.3 FRONT PANEL	16
1.4 REAR PANEL	16
1.5 BOTTOM PANEL	17
1.6 SYSTEM SPECIFICATIONS	18
1.6.1 WLAN/Bluetooth Frequency Range and Power	19
1.7 DIMENSIONS	21
2 UNPACKING	22
2.1 UNPACKING	23
2.2 PACKING LIST	23
2.3 OPTIONAL ITEMS	24
3 INSTALLATION	26
3.1 ANTI-STATIC PRECAUTIONS	27
3.2 INSTALLATION PRECAUTIONS	27
3.3 INSTALLATION AND CONFIGURATION STEPS	28
3.4 REMOVING THE BACK COVER	28
3.5 M.2 MODULE INSTALLATION	29
3.6 CLEAR CMOS	30
3.7 AT/ATX MODE SELECTION	31
3.7.1 AT Power Mode	31
3.7.2 ATX Power Mode	32
3.8 MOUNTING THE SYSTEM	32
3.8.1 Wall Mounting	32
3.8.2 Arm Mounting	36
3.8.3 Stand Mounting	37
3.8.4 V-Stand Mounting	38
3.9 POWERING ON THE SYSTEM	40

3.10 RESET THE SYSTEM	41
3.11 SOFTWARE INSTALLATION.....	42
3.11.1 Driver Download	42
4 SYSTEM MAINTENANCE	44
4.1 SYSTEM MAINTENANCE INTRODUCTION.....	45
4.2 ANTI-STATIC PRECAUTIONS.....	45
4.3 TURN OFF THE POWER	46
4.4 WLAN CARD REPLACEMENT.....	46
4.5 REINSTALLING THE COVER	48
5 BIOS	49
5.1 INTRODUCTION	50
5.1.1 Starting Setup.....	50
5.1.2 Using Setup.....	51
5.1.2.1 Keyboard Navigation.....	51
5.1.2.2 Touch Navigation	51
5.1.3 Getting Help.....	52
5.1.4 Unable to Reboot after Configuration Changes	52
5.1.5 BIOS Menu Bar.....	53
5.2 MAIN	53
5.3 ADVANCED	55
5.3.1 CPU Configuration.....	56
5.3.2 Trusted Computing	60
5.3.3 RTC Wake Settings.....	61
5.3.4 F81804 Super IO Configuration.....	63
5.3.4.1 Serial Port 1 Configuration.....	64
5.3.4.2 Serial Port 2 Configuration.....	65
5.3.5 ENE KB9068 Monitor.....	67
5.3.6 Serial Port Console Redirection	68
5.3.6.1 Console Redirection Settings.....	69
5.3.7 NVMe Configuration.....	71
5.4 CHIPSET.....	72
5.4.1 System Agent (SA) Configuration	73
5.4.1.1 Memory Configuration	74

AFL4-W08-EHL Panel PC

5.4.1.2	Graphics Configuration.....	75
5.4.2	PCH-IO Configuration	77
5.4.2.1	PCI Express Configuration.....	79
5.4.2.1.1	M2_M1	80
5.4.2.1.2	M2_AE1	81
5.4.2.2	SATA Configuration.....	83
5.4.2.3	HD Audio Configuration	84
5.5	SECURITY	85
5.6	BOOT	86
5.6.1	Boot Configuration	86
5.6.2	Boot Option Priorities	87
5.7	SAVE & EXIT	88
6	INTERFACE CONNECTORS.....	90
6.1	PERIPHERAL INTERFACE CONNECTORS.....	91
6.2	INTERNAL PERIPHERAL CONNECTORS	92
6.2.1	Touch Panel Connector (TOUCH_USB1).....	92
6.2.2	SPI Flash Header (JBIOS1).....	93
6.2.3	EC Debug Header (EC_DEBUG1)	93
6.2.4	Speaker Connector (SPK_L1).....	93
6.2.5	EC Flash Header (JEC1).....	93
6.2.6	RFID Connector (RFID_USB1)	94
6.2.7	Digital MIC Connector (DMIC1).....	94
6.2.8	I ² C Connector (I2C1).....	94
6.2.9	SMBus Connector (SMB1).....	95
6.2.10	Battery Connector (BAT1).....	95
6.2.11	M.2 A-Key Slot (M2_AE1).....	95
6.2.12	M.2 M-Key Slot (M2_M1).....	97
6.2.13	LVDS Connector (LVDS1).....	99
6.3	JUMPER.....	100
6.3.1	Flash Descriptor Security Override.....	100
6.4	EXTERNAL INTERFACE PANEL CONNECTORS.....	100
6.4.1	USB 2.0 Connector (USB_CON1)	101
6.4.2	USB 3.2 Gen 2 Connector (USB_CON2/3)	101
6.4.3	DC Jack (PWR1).....	101

6.4.4 Power Button (PWR_SW1).....	102
6.4.5 RS-232/422/485 Serial Ports (COM1/COM2).....	102
6.4.6 2.5GbE LAN Connector (J_LAN1).....	102
6.4.7 HDMI Connector (HDMI1).....	103
A REGULATORY COMPLIANCE.....	104
B SAFETY PRECAUTIONS.....	110
B.1 SAFETY PRECAUTIONS	111
B.1.1 General Safety Precautions.....	111
B.1.2 Anti-static Precautions.....	112
B.1.3 Product Disposal.....	113
B.2 MAINTENANCE AND CLEANING PRECAUTIONS	114
B.2.1 Maintenance and Cleaning.....	114
B.2.2 Cleaning Tools	115
C WATCHDOG TIMER.....	116
D HAZARDOUS MATERIALS DISCLOSURE.....	119
D.1 RoHS II DIRECTIVE (2015/863/EU).....	120
D.2 CHINA RoHS	121

List of Figures

Figure 1-1: AFL4-W08-EHL Panel PC.....	15
Figure 1-2: Front View	16
Figure 1-3: Rear View	16
Figure 1-4: Bottom Panel	17
Figure 1-5: AFL4-W08-EHL Dimensions (mm).....	21
Figure 3-1: Back Cover Retention Screws	29
Figure 3-2: M.2 Module Slot Location.....	30
Figure 3-3: M.2 Module Installation.....	30
Figure 3-4: Clear CMOS Button Location.....	31
Figure 3-5: AT/ATX Switch Location.....	31
Figure 3-6: Wall-mounting Bracket	33
Figure 3-7: Chassis Support Screws	35
Figure 3-8: Secure the Panel PC	35
Figure 3-9: Arm Mounting Retention Screw Holes.....	36
Figure 3-10: Arm Mounting	37
Figure 3-11: Stand Mounting (Stand-Cxx).....	38
Figure 3-12: Drill Pilot Holes for V-Stand	39
Figure 3-13: Secure V-Stand to System	39
Figure 3-14: Secure V-Stand to Mounting Area	40
Figure 3-15: Power Button	41
Figure 3-16: Reset Button Location.....	41
Figure 3-17: IEI Resource Download Center.....	42
Figure 4-1: WLAN Module Location.....	46
Figure 4-2: Releasing the WLAN Module	47
Figure 4-3: Removing the WLAN Module	47
Figure 5-1: BIOS Starting Menu	50
Figure 5-2: BIOS Options and Configured USB Ports	78
Figure 6-1: Main Board Layout Diagram (Front Side).....	91
Figure 6-2: Main Board Layout Diagram (Solder Side).....	91

List of Tables

Table 1-1: System Specifications.....	19
Table 1-2: WLAN/Bluetooth Frequency range and power	20
Table 2-1: Packing List.....	24
Table 2-2: Optional Items	25
Table 5-1: BIOS Navigation Keys	51
Table 5-2: BIOS On-screen Navigation Keys	52
Table 6-1: Peripheral Interface Connectors	92
Table 6-2: Touch Panel Connector (TOUCH_USB1) Pinouts	92
Table 6-3: SPI Flash Header (JBIOS1) Pinouts.....	93
Table 6-4: EC Debug Header (EC_DEBUG1) Pinouts.....	93
Table 6-5: Speaker Connector (SPK_L1) Pinouts	93
Table 6-6: EC Flash Header (JEC1) Pinouts	94
Table 6-7: RFID Connector (RFID_USB1) Pinouts.....	94
Table 6-8: Digital MIC Connector (DMIC1) Pinouts	94
Table 6-9: I ² C Connector (I2C1) Pinouts.....	94
Table 6-10: SMBus Connector (SMB1) Pinouts	95
Table 6-11: Battery Connector (BAT1) Pinouts	95
Table 6-12: M.2 A-Key Slot (M2_AE1) Pinouts.....	96
Table 6-13: M.2 M-Key Slot (M2_M1) Pinouts	98
Table 6-14: LVDS Connector (LVDS1) Pinouts.....	99
Table 6-15: Table of Jumper	100
Table 6-16: J_FLASH1 Connector	100
Table 6-17: Rear Panel Connectors	100
Table 6-18: USB 2.0 Connector (USB_CON1) Pinouts.....	101
Table 6-19: USB 3.2 Gen 2 Connector (USB_CON2/3) Pinouts.....	101
Table 6-20: DC Jack (PWR1).....	101
Table 6-21: Power Button (PWR_SW1).....	102
Table 6-22: RS-232/422/485 Serial Ports (COM1/2) Pinouts	102
Table 6-23: 2.5GbE LAN Connector (J_LAN1) Pinouts.....	102
Table 6-24: HDMI1 Connector (HDMI1) Pinouts.....	103

List of BIOS

BIOS Menu 1: Main (1/2).....	53
BIOS Menu 2: Main (2/2).....	54
BIOS Menu 3: Advanced	56
BIOS Menu 4: CPU Configuration (1/3).....	57
BIOS Menu 5: CPU Configuration (2/3).....	58
BIOS Menu 6: CPU Configuration (3/3).....	58
BIOS Menu 7: Trusted Computing	61
BIOS Menu 8: RTC Wake Settings	62
BIOS Menu 9: F81804 Super IO Configuration	63
BIOS Menu 10: Serial Port 1 Configuration Menu	64
BIOS Menu 11: Serial Port 2 Configuration Menu	65
BIOS Menu 12: ENE KB9068 Monitor	67
BIOS Menu 13: Serial Port Console Redirection	68
BIOS Menu 14: COM Console Redirection Settings	69
BIOS Menu 15: NVMe Configuration.....	71
BIOS Menu 16: Chipset	72
BIOS Menu 17: System Agent (SA) Configuration	73
BIOS Menu 18: Memory Configuration.....	74
BIOS Menu 19: Graphics Configuration	75
BIOS Menu 20: LCD Control	76
BIOS Menu 21: PCH-IO Configuration	77
BIOS Menu 22: PCI Express Configuration	79
BIOS Menu 23: M2_M1	80
BIOS Menu 24: M2_AE1	81
BIOS Menu 25: SATA Configuration	83
BIOS Menu 26: HD Audio Configuration	84
BIOS Menu 27: Security	85
BIOS Menu 28: Boot	86
BIOS Menu 29: Save & Exit.....	88

Chapter

1

Introduction

AFL4-W08-EHL Panel PC

1.1 Overview



Figure 1-1: AFL4-W08-EHL Panel PC

The AFL4-W08-EHL is an 8" panel PC powered by Intel® Celeron® J6412 Processor, featuring a variety of functions and peripherals.

The Intel® Celeron® Processor J6412 is a SoC (System-on-Chip) that ensures optimal memory, graphics, and peripheral I/O support. The system comes with on-board dual-channel LPDDR4x 8GB RAM ensuring smooth data throughputs with reduced bottlenecks and fast system access.

The major external device connections include USB 3.2 Gen 2, USB 2.0, serial port, LAN port and HDMI connectors.

1.2 Features

Some of the features of the AFL4-W08-EHL Series panel PC include:

- Equipped with Intel® Celeron® processor J6412
- With 8 GB of LPDDR4x memory
- IP 64 compliant front panel
- Anti-glare and anti-UV touchscreen
- Support gloved and waterproof function
- Two USB 3.2 Gen 2
- Two RS-232/422/485 by DB9
- Support Wi-Fi 6E and Bluetooth 5.2

1.3 Front Panel

The front side of the AFL4-W08-EHL is a flat panel LCD touchscreen surrounded by an aluminum frame. (Figure 1-2).



Figure 1-2: Front View

1.4 Rear Panel

The rear panel provides access to retention screw holes that support VESA 75 mounting. See Figure 1-3.

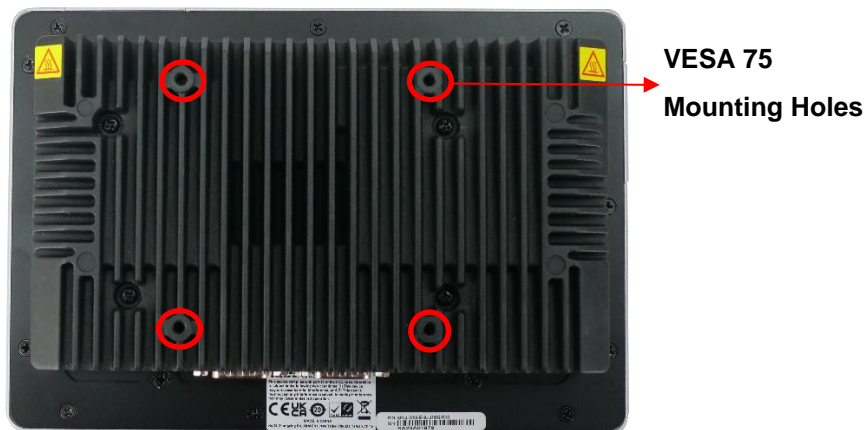


Figure 1-3: Rear View

AFL4-W08-EHL Panel PC

1.5 Bottom Panel

The bottom panel of the AFL4-W08-EHL has the following connectors and switches (Figure 1-4).

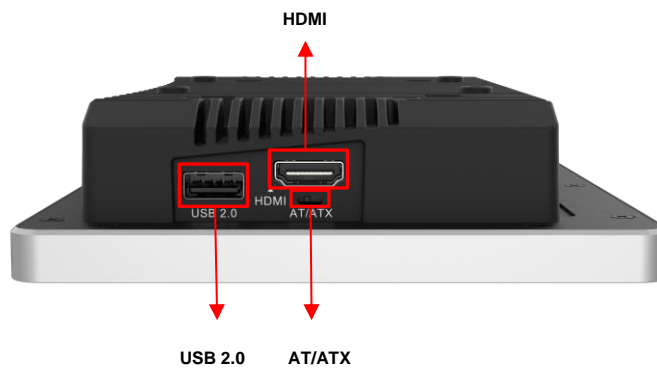
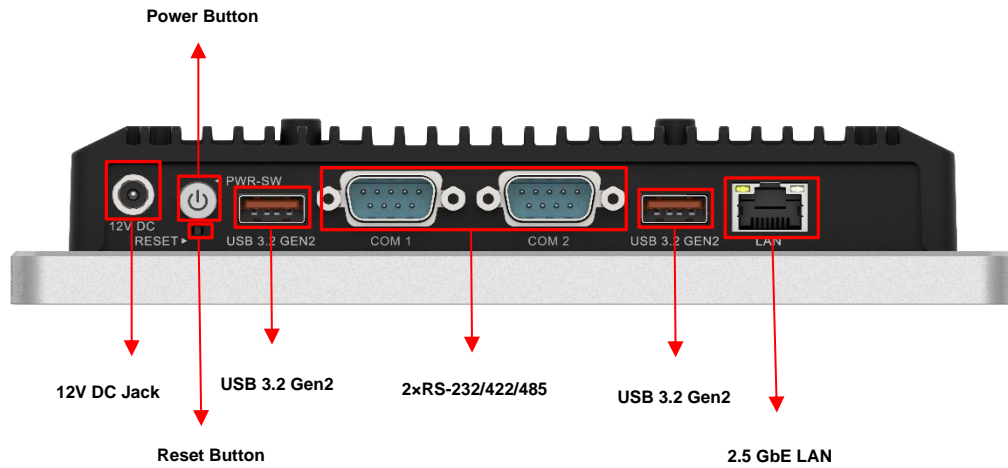


Figure 1-4: Bottom Panel

1.6 System Specifications

The technical specifications for the AFL4-W08-EHL systems are listed in **Table 1-1**.

Specification	AFL4-W08-EHL
LCD Size	8" (16:10)
Max. Resolution	1280 x 800
Brightness (cd/m ²)	420
LCD Color	16.7M
Contrast Ratio	800:1
Viewing Angle (H-V)	170°/170°
Backlight MTBF	30000 hours
Touchscreen	PCAP with USB interface (anti-UV/AG coating)
Touch Controller	EETI EXC 81 Series
CPU (SoC)	Intel® Celeron® Processor J6412
RAM	Dual channel LPDDR4x 8GB on board
Ethernet	LAN1: Intel® I226-V 2.5GbE controller
Storage	128GB eMMC (Optional)
M.2	1 x M.2 2242 M key (PCIe Gen3 x1 or SATA)
Audio	Realtek ALC888S
Internal Speaker	AMP 1.2 W (internal speaker)
Wireless & Bluetooth	IEEE 802.11ax 2T2R module (Wi-Fi 6E) with BT v5.2 (M.2 2230 A-key)
Construction	Aluminum die casting +SECC
Mounting	Wall, Stand, ARM, VESA 75
Color	Silver + Black

AFL4-W08-EHL Panel PC

Operating Temperature	-10 °C ~ 50°C
Storage Temperature	-20°C ~ 60°C
Humidity	10% ~ 95%@40°C (non-condensing)
IP Level	IP 64 compliant front panel
Safety/EMC	CE/EMC, UKCA, FCC, RED (Class A)
Power Requirement	12V
Thermal Solution	Fanless
ErP	ErP 2009/125/EC
OS	Windows10/11 Linux
I/O Ports and Switches	<ul style="list-style-type: none"> 1 x 2.5GbE LAN 2 x RS-232/422/485 by DB9 1 x USB 2.0 1 x HDMI output 2 x USB 3.2 Gen 2 1 x Power button 1 x AT/ATX switch 1 x Reset button 1 x 12V DC jack

Table 1-1: System Specifications

1.6.1 WLAN/Bluetooth Frequency Range and Power

Technology	Frequency range/MHz	Max. E.I.R.P/dBm
WLAN 2.4GHz	2400-2483.5	20
WLAN 5GHz	5150-5250	23
WLAN 5GHz	5250-5350	23
WLAN 5GHz	5470-5725	23

Technology	Frequency range/MHz	Max. E.I.R.P/dBm
WLAN 5GHz	5725-5850	13.98
WLAN 6GHz	5945-6425	14
Bluetooth BR/EDR	2402-2480	10
Bluetooth LE	2402-2480	10

Table 1-2: WLAN/Bluetooth Frequency range and power

AFL4-W08-EHL Panel PC

1.7 Dimensions

The AFL4-W08-EHL dimensions are shown below.

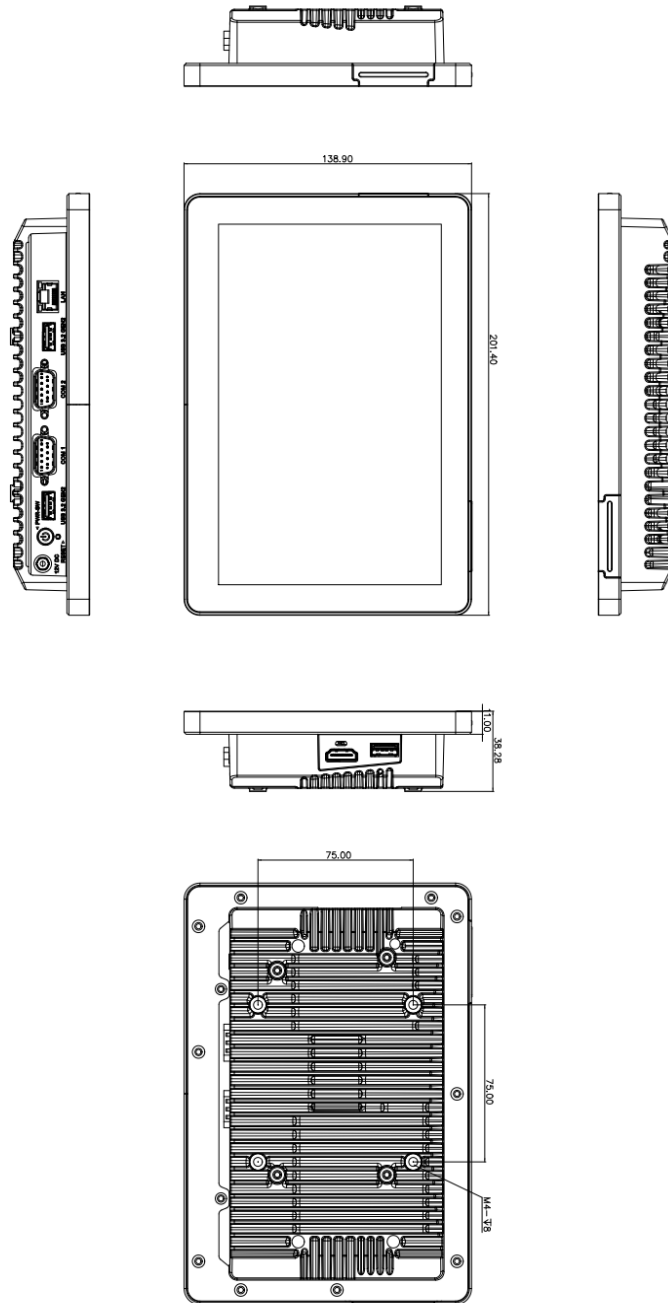


Figure 1-5: AFL4-W08-EHL Dimensions (mm)

Chapter

2

Unpacking

AFL4-W08-EHL Panel PC

2.1 Unpacking

To unpack the panel PC, follow the steps below:



WARNING!

The front side LCD screen has a protective plastic cover stuck to the screen. Only remove the plastic cover after the panel PC has been properly installed. This ensures the screen is protected during the installation process.

Step 1: Open the box.

Step 2: Lift the panel pc out of the boxes.

Step 3: Remove both polystyrene ends, one from each side.

Step 4: Pull the plastic cover off the panel PC.

Step 5: Make sure all the components listed in the packing list are present.

2.2 Packing List



NOTE:

If any of the components listed in the checklist below are missing, do not proceed with the installation. Contact the IEI reseller or vendor the AFL4-W08-EHL was purchased from or contact an IEI sales representative directly by sending an email to sales@ieiworld.com.

The AFL4-W08-EHL panel PC is shipped with the following components:






Quantity	Item	Image
1	AFL4-W08-EHL panel PC	
1	60 W power adapter	
n1	Power cord	

Table 2-1: Packing List

If any of the above items are missing or damaged, contact the distributor or sales representative immediately.

2.3 Optional Items

The following are optional components which may be separately purchased:

Item and Part Number	Image
VESA 75 wall mount kit (P/N: AFLWK-12)	
Stand for VESA 75 (P/N: STAND-C12-R10)	

AFL4-W08-EHL Panel PC


Item and Part Number	Image
LCD monitor stand with adjustable hinge (P/N: VSTAND-A07-R12)	

Table 2-2: Optional Items

Chapter

3

Installation

AFL4-W08-EHL Panel PC

3.1 Anti-static Precautions

**WARNING:**

Failure to take ESD precautions during the maintenance of the AFL4-W08-EHL may result in permanent damage to the AFL4-W08-EHL and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the AFL4-W08-EHL. Dry climates are especially susceptible to ESD. It is therefore critical that whenever AFL4-W08-EHL is accessed internally, or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** *Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.*
- **Self-grounding:** *Before handling the board, touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.*
- **Use an anti-static pad:** *When configuring the AFL4-W08-EHL, place it on an anti-static pad. This reduces the possibility of ESD damaging the AFL4-W08-EHL.*
- **Only handle the edges of the PCB:** *When handling the PCB, hold the PCB by the edges.*

3.2 Installation Precautions

When installing the panel PC, please follow the precautions listed below:

- **Power turned off:** When installing the panel PC, make sure the power is off. Failing to turn off the power may cause severe injury to the body and/or damage to the system.
- **Certified Engineers:** Never open the equipment. For safety reasons, the equipment should be opened only by qualified skilled person. Only certified engineers should install and modify onboard functionalities.

- **Anti-static Discharge:** If a user opens the rear panel of the panel PC, to configure the jumpers or plug in added peripheral devices, ground themselves first and wear an anti-static wristband.

3.3 Installation and Configuration Steps

The following installation steps must be followed.

Step 1: Unpack the panel PC.

Step 2: Install a M.2 module.

Step 3: Configure the system.

Step 4: Connect peripheral devices to the panel PC.

Step 5: Mount the panel PC.

3.4 Removing the Back Cover



WARNING:

Before any internal installation procedures are carried out on the system, make sure the system is turned off and cooled down for 15 minutes. Failing to turn off the system before opening it can cause permanent damage to the system and serious or fatal injury to the user.

Remove the back cover retention screws on the back cover. Lift the cover up to remove.

AFL4-W08-EHL Panel PC

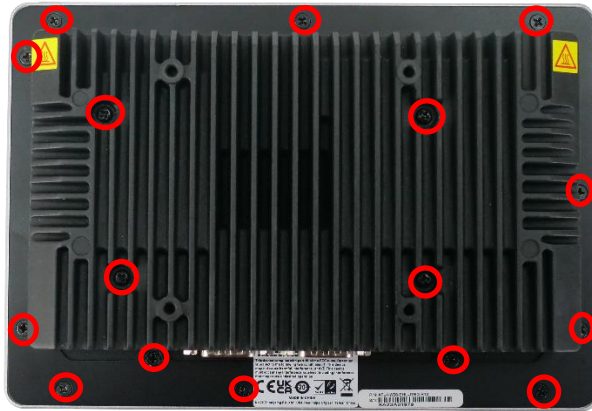


Figure 3-1: Back Cover Retention Screws

3.5 M.2 Module Installation

To install a M.2 module into the AFL4-W08-EHL, please follow the steps below:


Step 1: Remove the back cover. See **Figure 3-1**.

Step 2: Locate the M.2 M-key 2242 card slot. Remove the preinstalled retention screw on the standoff of the M.2 M-key card slot as shown in

M.2 Screws

Step 3:

Step 4: **Figure 3-2**.

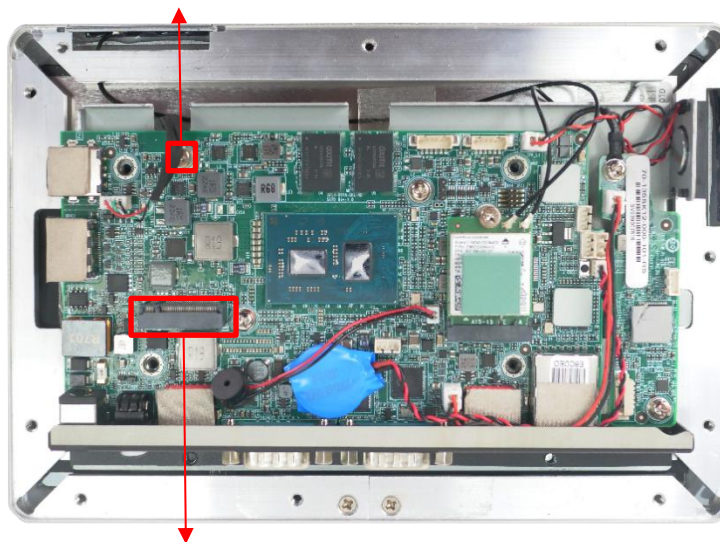

M.2 Module Slot

Figure 3-2: M.2 Module Slot Location

- Step 5:** Line up the notch on the M.2 module with the notch on the connector. Slide the M.2 card into the socket at an angle of about 20°.
- Step 6:** Push the other end of the M.2 module down and secure the module with the previously removed retention screw (**Figure 3-3**).

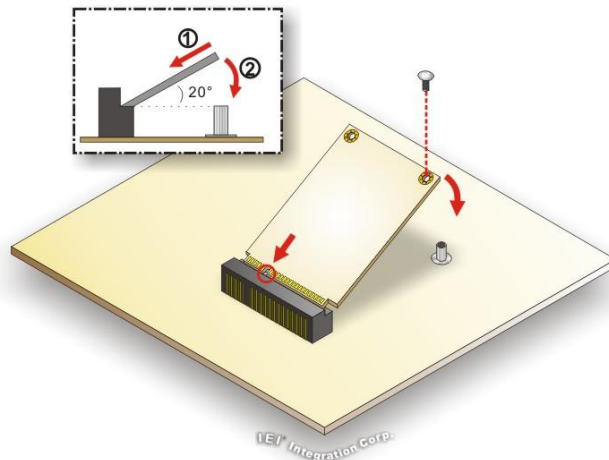


Figure 3-3: M.2 Module Installation

3.6 Clear CMOS

If the AFL4-W08-EHL fails to boot due to improper BIOS settings, the clear CMOS Button clears the CMOS data and resets the system BIOS information. To do this, push the clear CMOS button for three seconds, then restart the system. The clear CMOS button location is shown in **Figure 3-4**.

AFL4-W08-EHL Panel PC

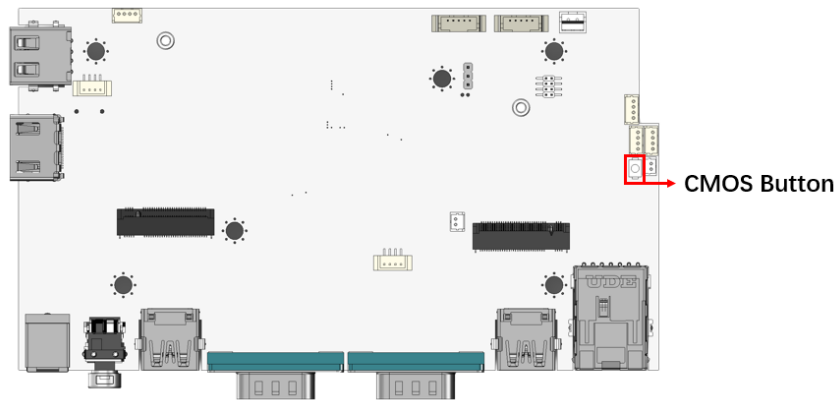


Figure 3-4: Clear CMOS Button Location

3.7 AT/ATX Mode Selection

AT or ATX power mode can be used on the AFL4-W08-EHL. The selection is made through an AT/ATX switch located on the side panel (**Figure 3-5**).

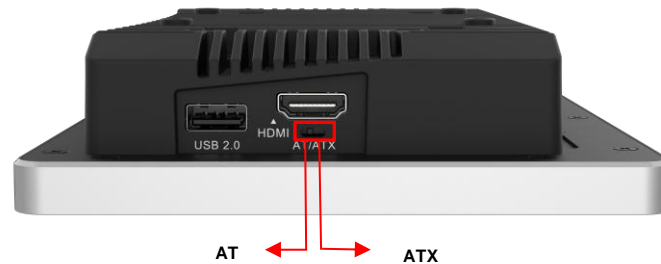


Figure 3-5: AT/ATX Switch Location

3.7.1 AT Power Mode

With the AT mode selected, the power is controlled by a central power unit rather than a power switch. The AFL4-W08-EHL panel PC turns on automatically when the power is

connected. The AT mode benefits a production line to control multiple panel PCs from a central management center and other applications including:

- ATM
- Self-service kiosk
- Plant environment monitoring system
- Factory automation platform
- Manufacturing shop flow

3.7.2 ATX Power Mode

With the ATX mode selected, the AFL4-W08-EHL panel PC goes in a standby mode when it is turned off. The panel PC can be easily turned on via network or a power switch in standby mode. Remote power control is perfect for advertising applications since the broadcasting time for each panel PC can be set individually and controlled remotely. Other possible application includes

- Security surveillance
- Point-of-Sale (POS)
- Advertising terminal

3.8 Mounting the System

The methods of mounting the AFL4-W08-EHL are listed below.

- Wall mounting
- Arm mounting
- Stand mounting
- V-Stand mounting

The mounting methods are described below.

3.8.1 Wall Mounting

To mount the panel PC onto the wall, please follow the steps below.

Step 1: Select the location on the wall for the wall-mounting bracket.

Step 2: Carefully mark the locations of the four screw holes in the bracket on the wall.

AFL4-W08-EHL Panel PC

- Step 3:** Drill four pilot holes at the marked locations on the wall for the bracket retention screws.
- Step 4:** Align the wall-mounting bracket screw holes with the pilot holes.
- Step 5:** Secure the mounting-bracket to the wall by inserting the retention screws into the four pilot holes and tightening them (**Figure 3-6**).


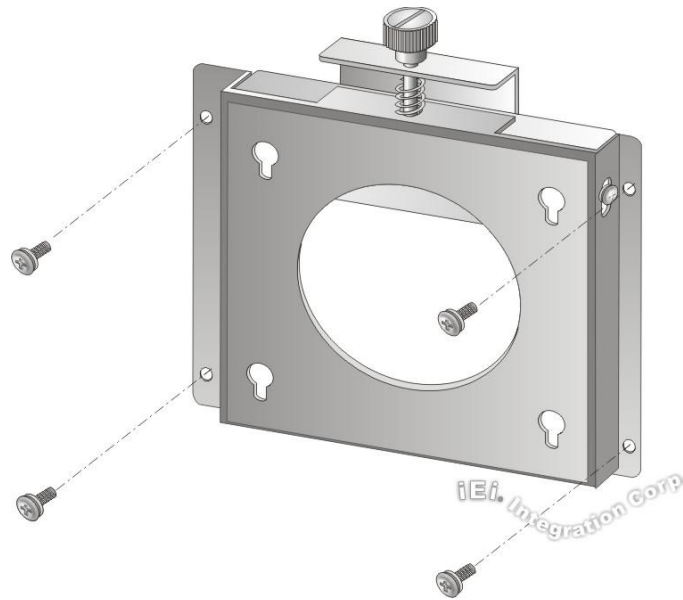


Figure 3-6: Wall-mounting Bracket

- Step 6:** Insert the four monitor mounting screws provided in the wall mount kit into the four screw holes on the rear panel of the panel PC and tighten until the screw shank is secured against the rear panel (**Figure 3-7**).

**WARNING:**

Please use the M4 screws provided in the wall mount kit for the rear panel. If the screw is missing, the thread depth of the replacement screw should be not more than 4 mm.

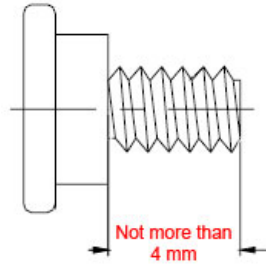

Step 7: Align the mounting screws on the monitor rear panel with the mounting holes on the bracket.

Step 8: Carefully insert the screws through the holes and gently pull the monitor downwards until the monitor rests securely in the slotted holes. Ensure that all four of the mounting screws fit snugly into their respective slotted holes. Always keep the AFL4-W08-EHL in landscape orientation when mounting on the wall.

**NOTE:**

In the diagram below the bracket is already installed on the wall.

AFL4-W08-EHL Panel PC

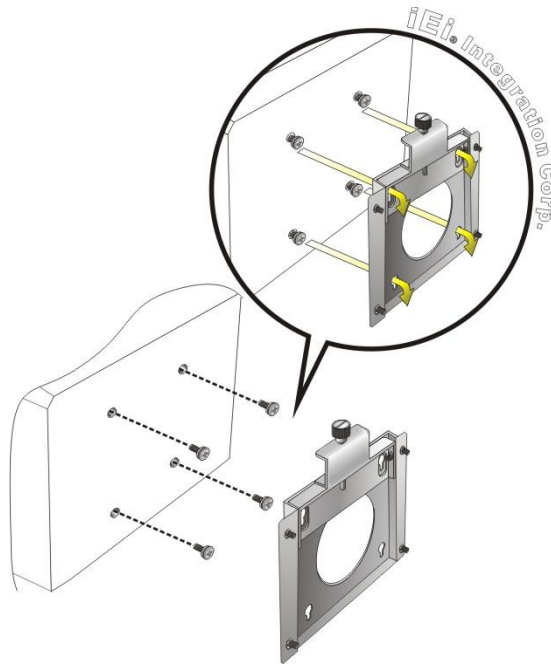


Figure 3-7: Chassis Support Screws

Step 9: Secure the panel PC by fastening the retention screw of the wall-mounting bracket (Figure 3-8).

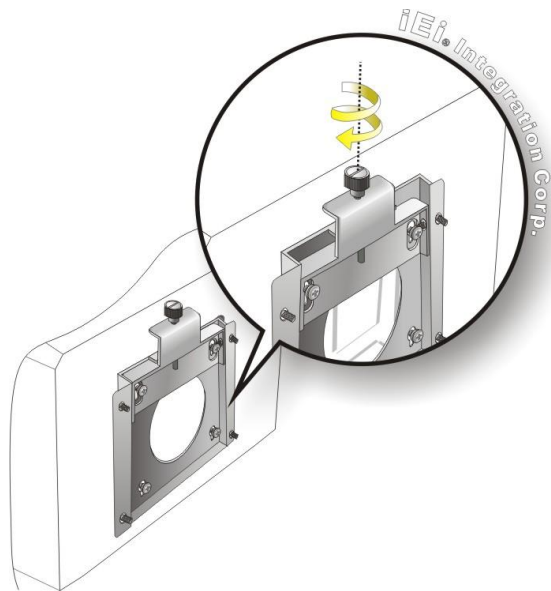


Figure 3-8: Secure the Panel PC

3.8.2 Arm Mounting

The AFL4-W08-EHL is VESA (Video Electronics Standards Association) compliant and can be mounted on an arm with a 75 mm interface pad. To mount the AFL4-W08-EHL on an arm, please follow the steps below.

Step 1: The arm is a separately purchased item. Please correctly mount the arm onto the surface it uses as a base. To do this, refer to the installation documentation that came with the mounting arm.

**NOTE:**

When purchasing the arm please ensure that it is VESA compliant and that the arm has a 75 mm interface pad. If the mounting arm is not VESA compliant it cannot be used to support the AFL4-W08-EHL panel PC.

Step 2: Once the mounting arm has been firmly attached to the surface, lift the panel PC onto the interface pad of the mounting arm.

Step 3: Align the retention screw holes on the mounting arm interface with those in the panel PC (**Figure 3-9**).

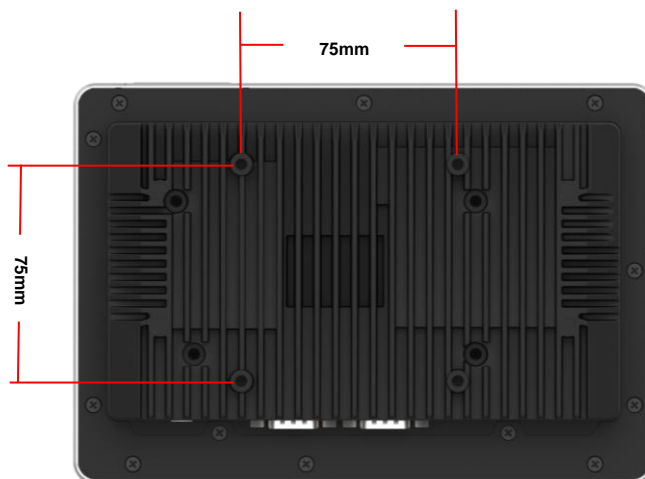


Figure 3-9: Arm Mounting Retention Screw Holes

AFL4-W08-EHL Panel PC

- Step 4:** Secure the AFL4-W08-EHL to the interface pad by inserting four retention screws through the mounting arm interface pad and into the AFL4-W08-EHL.

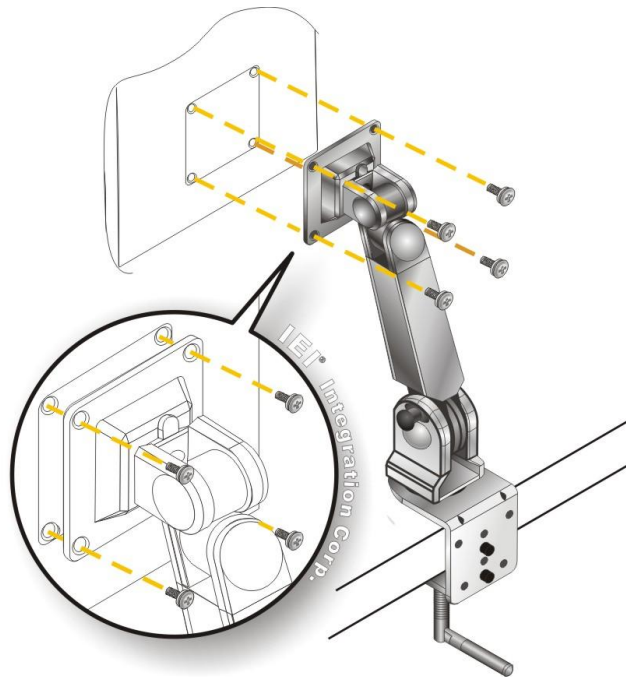


Figure 3-10: Arm Mounting

3.8.3 Stand Mounting

To mount the AFL4-W08-EHL using the stand mounting kit, please follow the steps below.

- Step 1:** Locate the screw holes on the rear of the AFL4-W08-EHL. This is where the bracket will be attached.
- Step 2:** Align the bracket with the screw holes.
- Step 3:** To secure the bracket to the AFL4-W08-EHL insert the retention screws into the screw holes and tighten them.

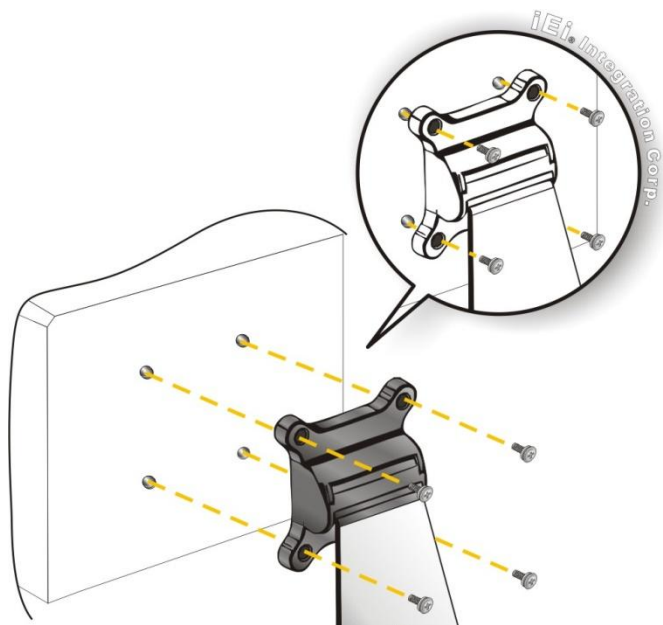


Figure 3-11: Stand Mounting (Stand-Cxx)

3.8.4 V-Stand Mounting

To mount the AFL4-W08-EHL using the optional V-Stand mounting kit, please follow the steps below.

Step 1: Carefully mark the locations of the four V-Stand screw holes on the mounting area. Drill four pilot holes at the marked locations for the V-Stand retention screws.

AFL4-W08-EHL Panel PC

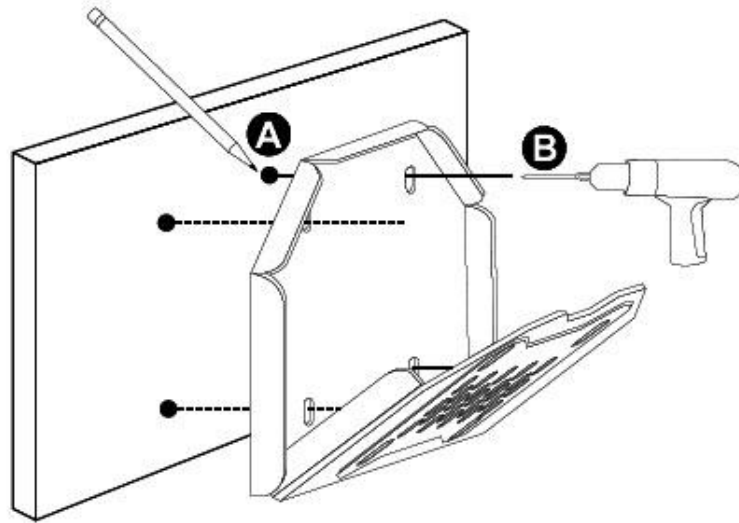


Figure 3-12: Drill Pilot Holes for V-Stand

- Step 2:** Align the screw holes on the V-Stand with the VESA mount screw holes on the system rear panel.
- Step 3:** Insert the four VESA mount screws into the four screw holes on the system rear panel. Adjust the V-Stand to a proper position.
- Step 4:** Tighten until the screw shank is secured against the rear panel.

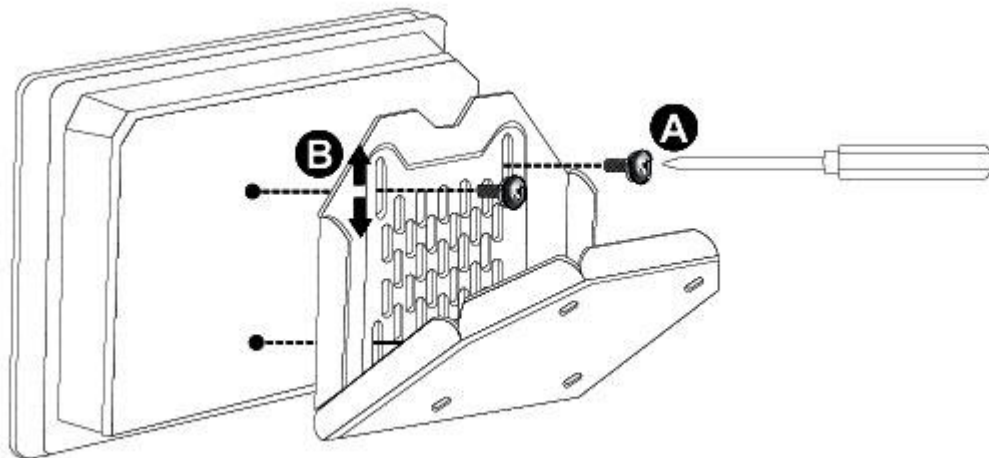


Figure 3-13: Secure V-Stand to System

Step 5: Align the V-Stand screw holes with the pilot holes on the mounting area. Mount the V-Stand by inserting the retention screws into the four pilot holes and tightening them.

Step 6: Adjust the V-Stand to have a best viewing angle to operate the system.

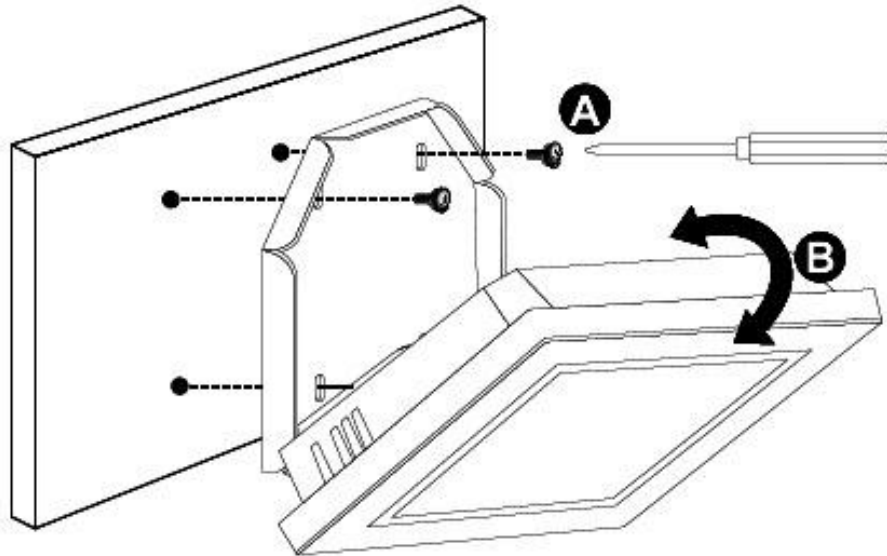


Figure 3-14: Secure V-Stand to Mounting Area

3.9 Powering on the System



WARNING:

To reduce potential safety issues, only the power adapter provided with the product, a replacement power adapter provided by IEI, or a power adapter purchased as an accessory from IEI should be used with the product.

To power on the system, follow the steps below:

AFL4-W08-EHL Panel PC

- Step 1:** Connect the power cord to the power adapter. Connect the other end of the power cord to a power source. Ensure to connect the power cord to a socket-outlet with earthing connection.
- Step 2:** Connect the power adapter to the power connector of the AFL4-W08-EHL. The power LED on the power button turns on in amber.
- Step 3:** Hold down the power button until the power LED turns to blue.



Figure 3-15: Power Button

3.10 Reset the System

The reset button enables user to reboot the system when the system is turned on. The reset button location is shown in **Figure 3-16**. Press the reset button to reboot the system.



Figure 3-16: Reset Button Location

3.11 Software Installation

All the drivers for the AFL4-W08-EHL are available on IEI Resource Download Center (<https://download.ieiworld.com>). Type AFL4-W08-EHL and press Enter to find all the relevant software, utilities, and documentation.


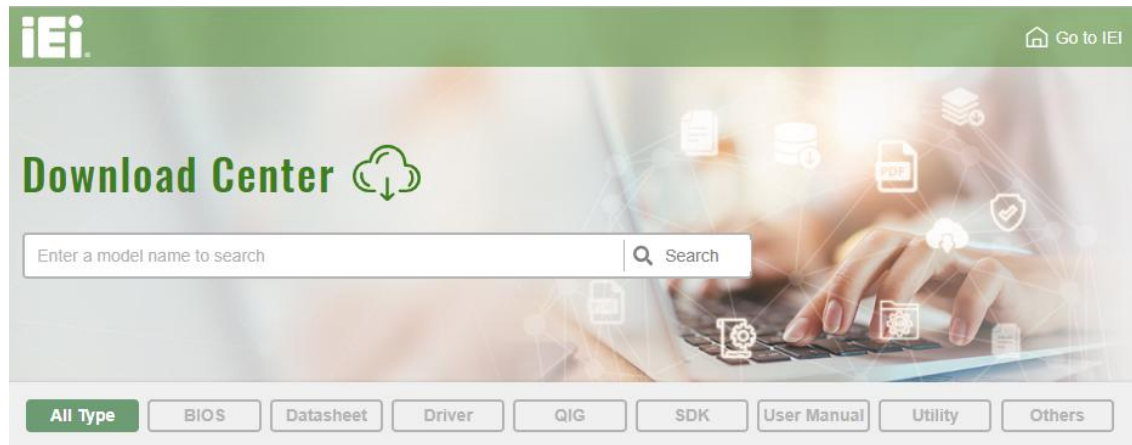


Figure 3-17: IEI Resource Download Center

3.11.1 Driver Download

To download drivers from IEI Resource Download Center, follow the steps below.

Step 1: Go to <https://download.ieiworld.com>. Type AFL4-W08-EHL and press Enter.

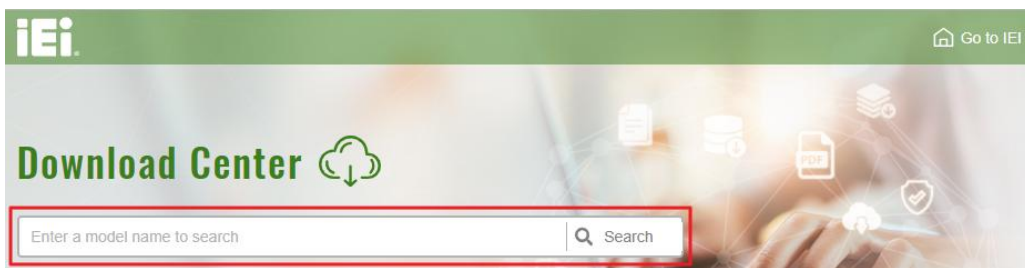

Step 2: All product-related software, utilities, and documentation will be listed. You can choose **Driver** to filter the result.

AFL4-W08-EHL Panel PC

[All Type](#)
[BIOS](#)
[Datasheet](#)
[Driver](#)
[QIG](#)
[SDK](#)
[User Manual](#)
[Utility](#)
[Others](#)

WAFER-BT-i1 [Product Info](#)

[Embedded Computer](#) ▶ [Single Board Computer](#) ▶ [Embedded Board](#)
 3.5" SBC with Intel® 22nm Atom™/Celeron® on-board SoC

Driver

File Name	Published	Version	File Checksum
7B000-001033-RS V2.3.iso (2.23 GB)	2017/10/03	2.30	3B2DB1F792779A93A8F50DDBC3943E30

Step 3: Click the driver file name on the page and you will be prompted with the following window. You can download the entire ISO file (❶), or click the small arrow to find an individual driver and click the file name to download (❷).

7B000-001168-RS_V1.4.iso

❶ [Click here to download entire ISO file. \(2.99 GB\)](#)

* Download individual file *

❷

- Docs
 - 1.Chipset
 - 10.1.1.12.zip (2.7 MB)
 - 2.VGA
 - 3.Audio
 - 4.Lan
 - 5.USB 3.0
 - 6.Serial IO
 - 7.TXE
 - 8.Manual



NOTE:

To install software from the downloaded ISO image file in Windows 10 or 11, double-click the ISO file to mount it as a virtual drive to view its content.

Chapter

4

System Maintenance

AFL4-W08-EHL Panel PC

4.1 System Maintenance Introduction

If the components of the AFL4-W08-EHL fail they must be replaced. Please contact the system reseller or vendor to purchase the replacement parts. Back cover removal instructions for the AFL4-W08-EHL are described below.

4.2 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the maintenance of the AFL4-W08-EHL may result in permanent damage to the AFL4-W08-EHL and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the AFL4-W08-EHL. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the AFL4-W08-EHL is accessed internally, or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** *Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.*
- **Self-grounding:** *Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.*
- **Use an anti-static pad:** *When configuring the AFL4-W08-EHL, place it on an anti-static pad. This reduces the possibility of ESD damaging the AFL4-W08-EHL.*
- **Only handle the edges of the PCB:** - When handling the PCB, hold the PCB by the edges.

4.3 Turn off the Power



WARNING:

Failing to turn off the system before opening it can cause permanent damage to the system and serious or fatal injury to the user.

Before any maintenance procedures are carried out on the system, make sure the system is turned off.

4.4 WLAN Card Replacement

The AFL4-W08-EHL has one WLAN card. To replace the WLAN card, follow the instructions below.

- Step 1:** Follow all anti-static procedures.
- Step 2:** Turn off the power.
- Step 3:** Remove the back cover. See **Section 3.4** above.
- Step 4:** Locate the WLAN module (**Figure 4-1**).

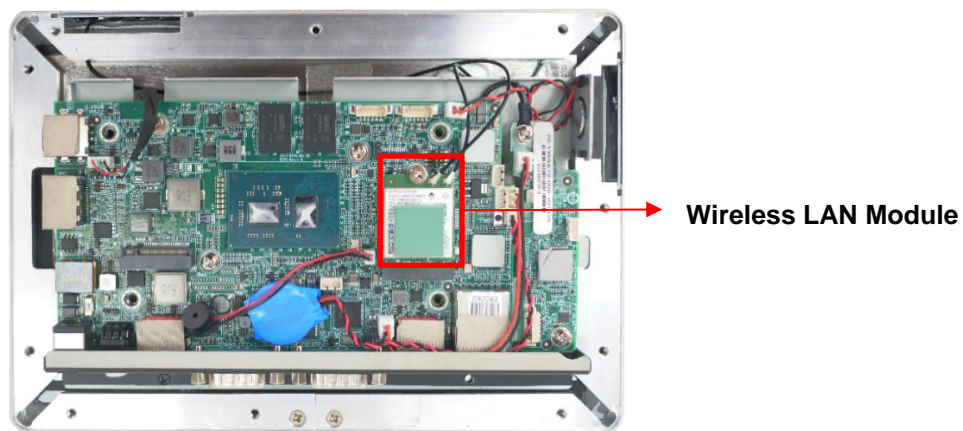


Figure 4-1: WLAN Module Location

AFL4-W08-EHL Panel PC

Step 5: Disconnect the antenna cables on the WLAN module and remove the retention screw to release the WLAN card (**Figure 4-2**).

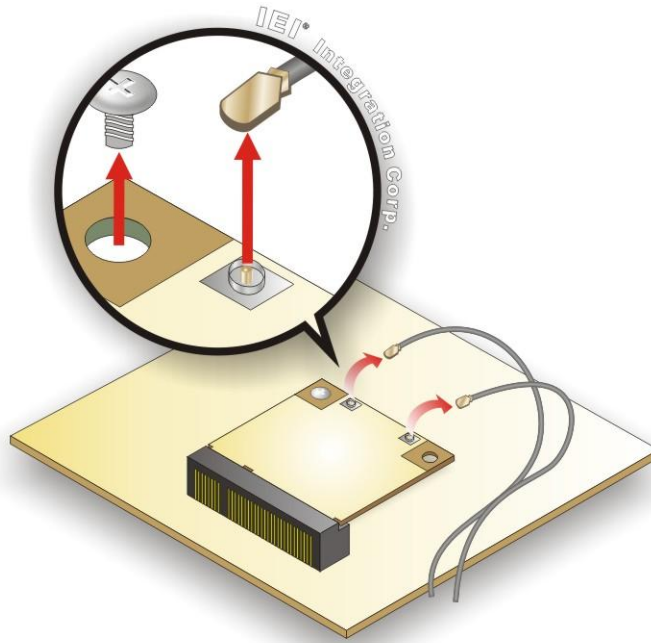


Figure 4-2: Releasing the WLAN Module

Step 6: Grasp the WLAN module by the edges and carefully pull it out of the socket (**Figure 4-3**).

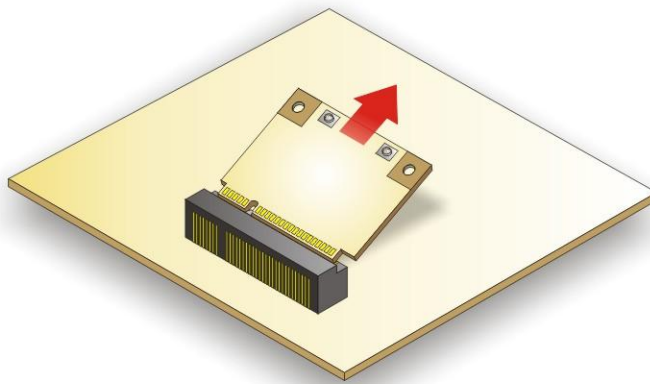


Figure 4-3: Removing the WLAN Module

Step 7: Install a new WLAN module by inserting the module into the slot at an angle.

Step 8: Push the WLAN module down and secure it with the previously removed retention screw.

Step 9: Connect the antenna cables.

Step 10: Replace the back cover and secure it using the previously removed retention screws.

4.5 Reinstalling the Cover



WARNING:

Failing to reinstall the cover may result in permanent damage to the system. Please make sure all coverings are properly installed.

When maintenance procedures are complete, please make sure the back cover is replaced.

Chapter

5

BIOS

5.1 Introduction

The BIOS is programmed onto the BIOS chip. The BIOS setup program allows changes to certain system settings. This chapter outlines the options that can be changed.



NOTE:

Some of the BIOS options may vary throughout the life cycle of the product and are subject to change without prior notice.

5.1.1 Starting Setup

The UEFI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. **Using keyboard:** Press the **DEL** or **F2** as soon as the system is turned on.
2. **Using touchscreen:** Press the **Setup** button on the upper right corner of the BIOS Starting Menu.

If the message disappears before the **DEL** or **F2** key is pressed, restart the computer and try again, then the BIOS Starting Menu will appear. Select "Setup" and press Enter to get into the BIOS Setup.

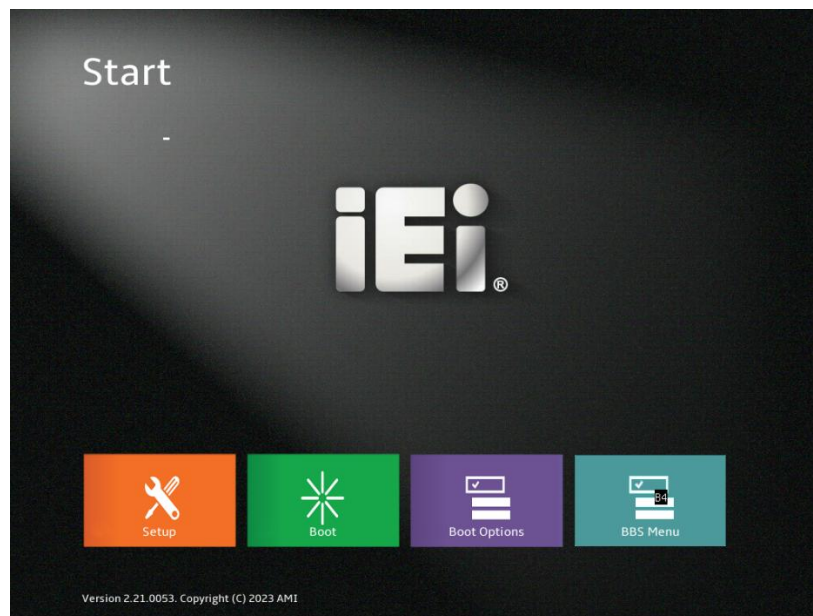


Figure 5-1: BIOS Starting Menu

AFL4-W08-EHL Panel PC

5.1.2 Using Setup

The BIOS Setup menu can be navigated by using a keyboard or a touchscreen.

5.1.2.1 Keyboard Navigation


For keyboard navigation, use the navigation keys shown in **Table 5-1**.

Key	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
+	Increase the numeric value or make changes
-	Decrease the numeric value or make changes
Page Up	Move to the previous page
Page Dn	Move to the next page
Esc	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
F1	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2	Load previous values
F3	Load optimized defaults
F4	Save changes and Exit BIOS
<K>	Scroll help area upwards
<M>	Scroll help area downwards

Table 5-1: BIOS Navigation Keys

5.1.2.2 Touch Navigation

For touchscreen navigation, use the on-screen navigation keys shown below.

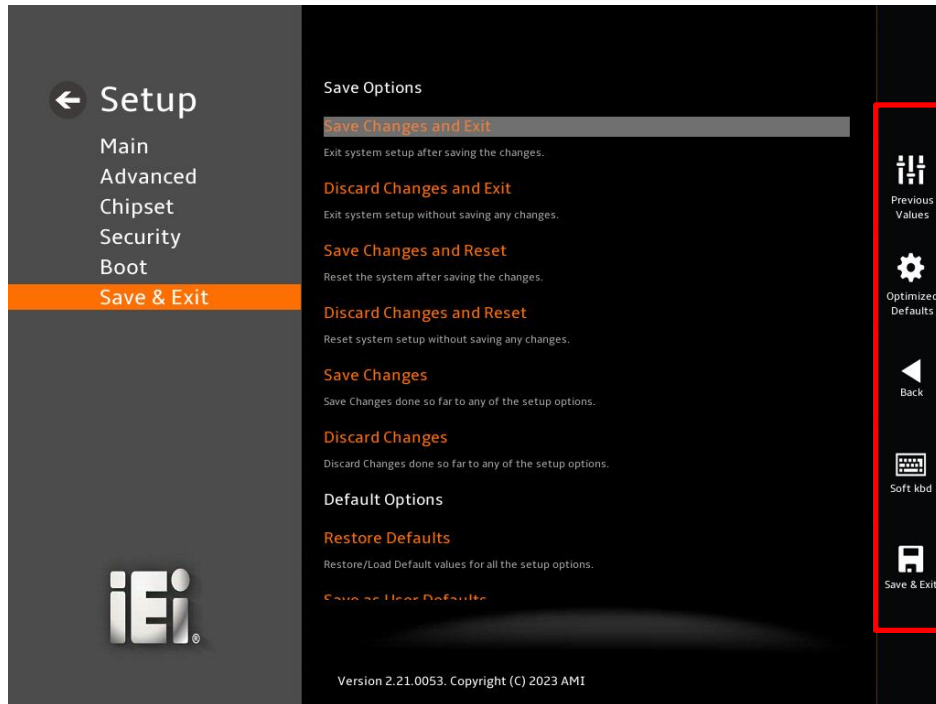

On-screen Button	Function
Previous Values	Load the last value you set.
Optimized Defaults	Load the factory default values in order to achieve the best performance.
Back	Return to the previous menu.
Soft kbd	Display the on-screen keyboard.
Save & Exit	Save the changes made to the BIOS options and reset the system.

Table 5-2: BIOS On-screen Navigation Keys

5.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window, press the **ESC** key.

5.1.4 Unable to Reboot after Configuration Changes

If the computer cannot boot after changes to the system configuration is made, CMOS defaults. Use the clear CMOS button described in **Sections 3.6**.

AFL4-W08-EHL Panel PC

5.1.5 BIOS Menu Bar


The **menu bar** on top of the BIOS screen has the following main items:

- Main – Changes the basic system configuration.
- Advanced – Changes the advanced system settings.
- Chipset – Changes the chipset settings.
- Security – Sets User and Supervisor Passwords.
- Boot – Changes the system boot configuration.
- Save & Exit – Selects exit options and loads default settings


The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.

5.2 Main

The **Main** BIOS menu (**BIOS Menu 1 & BIOS Menu 2**) appears when the **BIOS Setup** program is entered. The **Main** menu gives an overview of the basic system information.

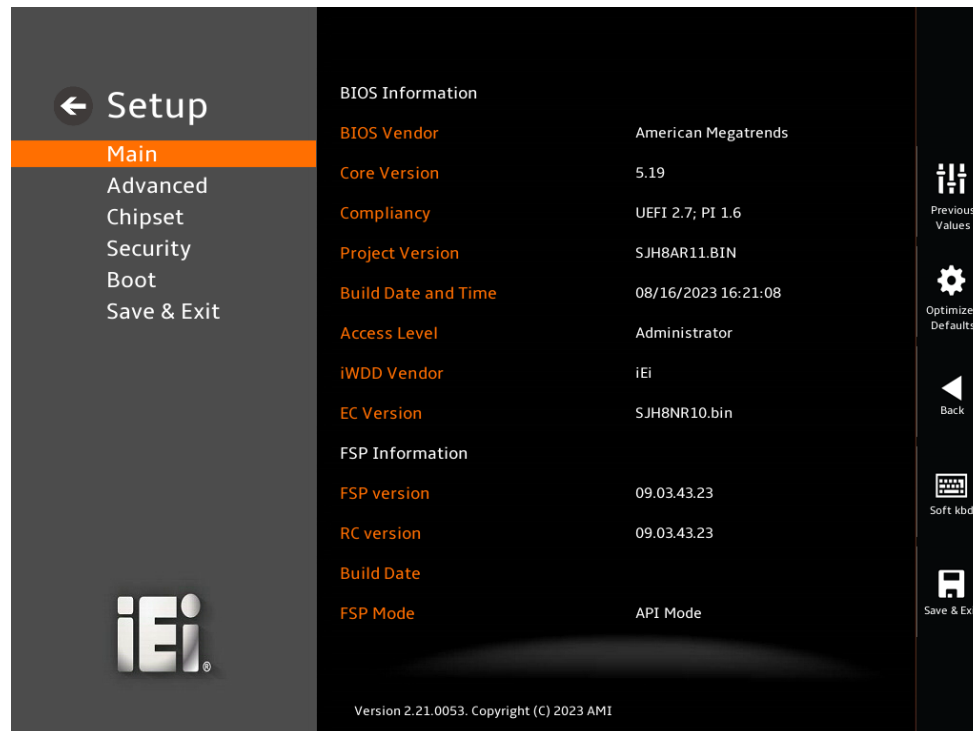

BIOS Menu 1: Main (1/2)

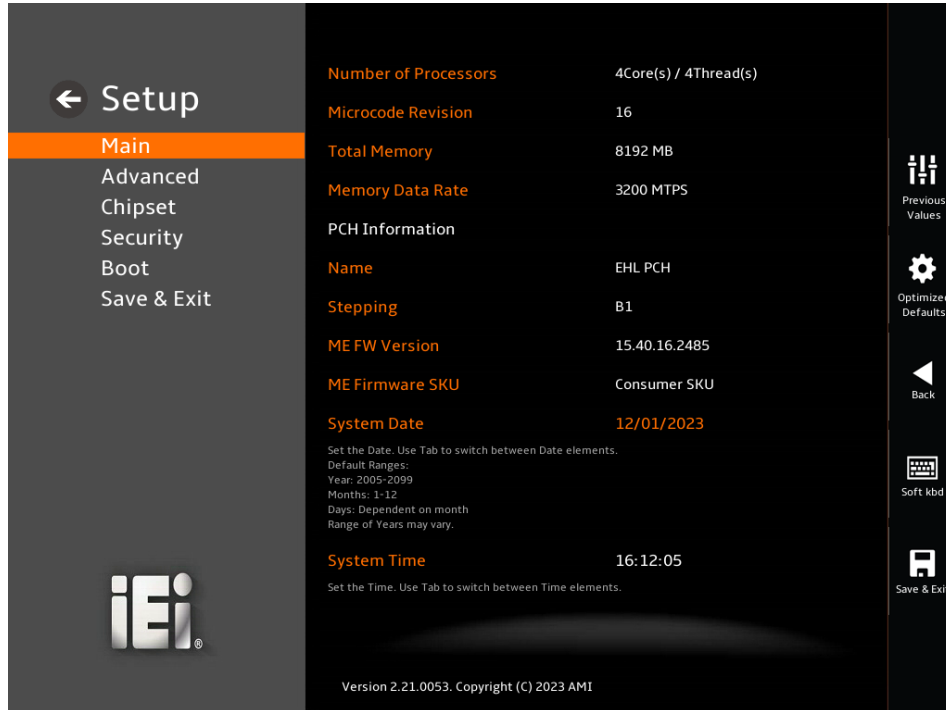

BIOS Menu 2: Main (2/2)

→ **BIOS Information**

The **BIOS Information** lists a brief summary of the BIOS. The fields in **BIOS Information** cannot be changed. The items shown in the system overview include:

- **BIOS Vendor:** Installed BIOS vendor
- **Core Version:** Current BIOS version
- **Compliance:** Current UEFI & PI version
- **Project Version:** the board version
- **Build Date and Time:** Date the current BIOS version was made
- **EC Version:** Current EC version
- BIOS Information

→ **Compute Die Information**

The **Compute Die Information** lists a brief summary of the Processor. The fields in **Compute Die Information** cannot be changed. The items shown in the system overview include:

- **Name:** Displays the Processor Details

AFL4-W08-EHL Panel PC

- **Type:** Displays the Processor Type
- **Speed:** Displays the Processor Speed
- **ID:** Displays the Processor ID
- **Stepping:** Displays the Processor Stepping
- **Number of Processors:** Displays number of CPU cores
- **Microcode Revision:** CPU Microcode Revision
- **Total Memory:** Total Memory in the System
- **Memory Data Rate:** Displays the Data Rate of Memory

→ PCH Information

The **PCH Information** lists a brief summary of the PCH. The fields in **PCH Information** cannot be changed. The items shown in the system overview include:

- **Name:** Displays the PCH Name
- **Stepping:** Displays the PCH Stepping
- **ME FW Version:** Displays the ME Firmware Version
- **ME Firmware SKU:** Displays the ME Firmware SKU

The System Overview field also has two user configurable fields:

→ System Date [xx/xx/xx]

Use the **System Date** option to set the system date. Manually enter the day, month and year.

→ System Time [xx: xx: xx]

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.

5.3 Advanced

Use the **Advanced** menu (**BIOS Menu 3**) to configure the CPU and peripheral devices through the following sub-menus:



WARNING!

Setting the wrong values in the sections below may cause the system to malfunction. Make sure that the settings made are compatible with the hardware.



BIOS Menu 3: Advanced

5.3.1 CPU Configuration

Use the **CPU Configuration** menu (**BIOS Menu 4 & BIOS Menu 5 & BIOS Menu 6**) to view detailed CPU specifications or enable the Intel Virtualization Technology.

AFL4-W08-EHL Panel PC



BIOS Menu 4: CPU Configuration (1/3)

Setup

- Main
- Advanced**
- Chipset
- Security
- Boot
- Save & Exit

Intel (VMX) Virtualization Technology

When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

Active Processor Cores

Number of cores to enable in each processor package.

EIST

Allows more than two frequency ranges to be supported.

C states

Enable/Disable CPU Power Management. Allows CPU to go to C states when it's not 100% utilized.

Turbo Mode

Enable/Disable processor Turbo Mode (requires EMTM enabled too). AUTO means enabled.

Tcc Activation Offset

Offset from factory set Tcc activation temperature at which the Thermal Control Circuit must be activated. Tcc will be activated at: Tcc Activation Temp - Tcc Activation Offset. Tcc Activation Offset range is 0 to 63.

Power Limit 1

Power Limit 1 in Milli Watts. BIOS will round to the nearest 1/8W when programming. 0 = no custom override. For 12.50W, enter 12500. Overclocking SKU: Value must be between Max and Min Power Limits (specified by PACKAGE_POWER_SKU_MSR). Other SKUs: This value must be between Min Power Limit and TDP Limit. If value is 0, BIOS will program TDP value.

Version 2.21.0053. Copyright (C) 2023 AMI

Navigation icons: Previous Values, Optimized Defaults, Back, Soft kbd, Save & Exit.

BIOS Menu 5: CPU Configuration (2/3)

Setup

- Main
- Advanced**
- Chipset
- Security
- Boot
- Save & Exit

C states

Enable/Disable CPU Power Management. Allows CPU to go to C states when it's not 100% utilized.

Turbo Mode

Enable/Disable processor Turbo Mode (requires EMTM enabled too). AUTO means enabled.

Tcc Activation Offset

Offset from factory set Tcc activation temperature at which the Thermal Control Circuit must be activated. Tcc will be activated at: Tcc Activation Temp - Tcc Activation Offset. Tcc Activation Offset range is 0 to 63.

Power Limit 1

Power Limit 1 in Milli Watts. BIOS will round to the nearest 1/8W when programming. 0 = no custom override. For 12.50W, enter 12500. Overclocking SKU: Value must be between Max and Min Power Limits (specified by PACKAGE_POWER_SKU_MSR). Other SKUs: This value must be between Min Power Limit and TDP Limit. If value is 0, BIOS will program TDP value.

Power Limit 1 Time Window

Power Limit 1 Time Window value in seconds. The value may vary from 0 to 128. 0 = default value (28 sec for Mobile and 8 sec for Desktop). Defines time window which TDP value should be maintained.

Power Limit 2

Power Limit 2 value in Milli Watts. BIOS will round to the nearest 1/8W when programming. If the value is 0, BIOS will program this value as 1.25*TDP. For 12.50W, enter 12500. Processor applies control policies such that the package power does not exceed this limit.

Version 2.21.0053. Copyright (C) 2023 AMI

Navigation icons: Previous Values, Optimized Defaults, Back, Soft kbd, Save & Exit.

BIOS Menu 6: CPU Configuration (3/3)

AFL4-W08-EHL Panel PC

→ Intel (VMX) Virtualization Technology [Enabled]

Use the **Intel (VMX) Virtualization Technology** option to enable or disable virtualization on the system. When combined with third party software, Intel® Virtualization technology allows several OSs to run on the same system at the same time.

- **Disabled** Disables Intel Virtualization Technology.
- **Enabled** **DEFAULT** Enables Intel Virtualization Technology.

→ Active Processor Cores [All]

Use the **Active Processor Cores** BIOS option to enable numbers of cores in the processor package.

- **All** **DEFAULT** Enable all cores in the processor package.
- **1** Enable one core in the processor package.
- **2** Enable two cores in the processor package.
- **3** Enable three cores in the processor package.

→ EIST [Enable]

Use the **EIST** option to enable more than two frequency ranges to be supported.

- **Disabled** Disables more than two frequency ranges
- **Enabled** **DEFAULT** Enables more than two frequency ranges

→ C states [Disabled]


Use the **C states** option to enable or disable the CPU Power Management.

- **Disabled** **DEFAULT** Disables CPU to go to C states when it's not 100% utilized.
- **Enabled** Enables CPU to go to C states when it's not 100% utilized.

AFL4-W08-EHL Panel PC

5.3.4 F81804 Super IO Configuration

Use the **F81804 Super IO Configuration** menu (**BIOS Menu 9**) to set or change the configurations for the serial ports.

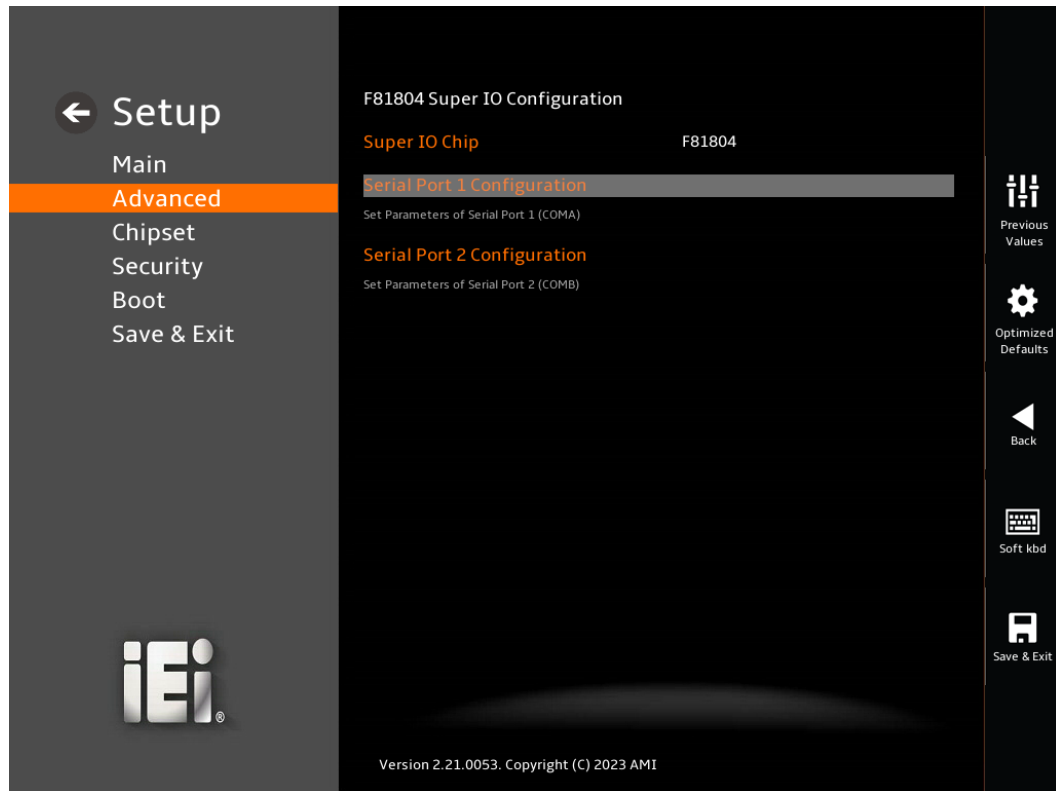

BIOS Menu 9: F81804 Super IO Configuration

→ Device Settings

The **Device Settings** option shows the serial port IO port address and interrupt address.

- **IO=2F8h;** Serial Port I/O port address is 2F8h and the interrupt
IRQ=3 address is IRQ3

→ Device Mode

Use the **Device Mode** option to change the serial port mode.

- **RS232** The serial port mode is RS-232
- RS422 with Register** The serial port mode is RS-422
- RS485 with Register** The serial port mode is RS-485

AFL4-W08-EHL Panel PC

5.3.5 ENE KB9068 Monitor

The ENE KB9068 Monitor menu (**BIOS Menu 12**) contains the smart fan mode configuration submenu and shows the state of H/W real-time operating temperature, fan speeds and system voltages.



BIOS Menu 12: ENE KB9068 Monitor

→ PC Health Status


The following system parameters and values are shown. The system parameters that are monitored are:

- System Temperatures:
 - CPU Temperature
 - SYS Temperature
- Fan1 Speeds:
 - N/A
- Voltages:
 - VCCIN

- o +V12S
- o +V5S
- o VDDQ
- o +V3.3S

5.3.6 Serial Port Console Redirection

The **Serial Port Console Redirection** menu (**BIOS Menu 13**) allows the console redirection options to be configured. Console Redirection allows users to maintain a system remotely by re-directing keyboard input and text output through the serial port.

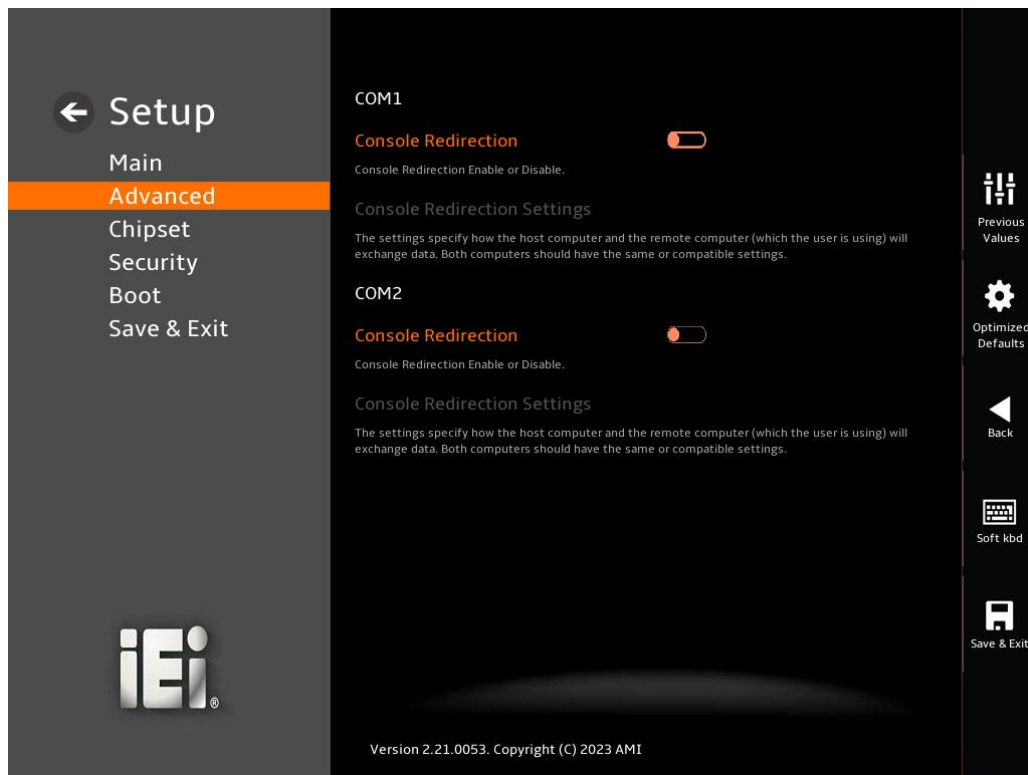

BIOS Menu 13: Serial Port Console Redirection

AFL4-W08-EHL Panel PC

→ Console Redirection [Disabled]

Use **Console Redirection** option to enable or disable the console redirection function.

- **Disabled** **DEFAULT** Disabled the console redirection function
- **Enabled** Enabled the console redirection function

The **Console Redirection Settings** submenu will be available when the **Console Redirection** option is enabled.

5.3.6.1 Console Redirection Settings

The following options are available in the **Console Redirection Settings** submenu (**BIOS Menu 14**) when the **COM Console Redirection** (for COM1 to COM2) option is enabled.



BIOS Menu 14: COM Console Redirection Settings

→ Terminal Type [ANSI]

Use the **Terminal Type** option to specify the remote terminal type.

- **VT100** The target terminal type is VT100
- **VT100+** The target terminal type is VT100+
- **VT-UTF8** The target terminal type is VT-UTF8
- **ANSI** **DEFAULT** The target terminal type is ANSI

→ Bits per second [115200]

Use the **Bits per second** option to specify the serial port transmission speed. The speed must match on the other side. Long or noisy lines may require lower speeds.

- **9600** Sets the serial port transmission speed at 9600.
- **19200** Sets the serial port transmission speed at 19200.
- **38400** Sets the serial port transmission speed at 38400.
- **57600** Sets the serial port transmission speed at 57600.
- **115200** **DEFAULT** Sets the serial port transmission speed at 115200.

→ Data Bits [8]

Use the **Data Bits** option to specify the number of data bits.

- **7** Sets the data bits at 7.
- **8** **DEFAULT** Sets the data bits at 8.

→ Parity [None]

Use the **Parity** option to specify the parity bit that can be sent with the data bits for detecting the transmission errors.

- **None** **DEFAULT** No parity bit is sent with the data bits.
- **Even** The parity bit is 0 if the number of ones in the data bits is even.

5.4 Chipset

Use the **Chipset** menu (**BIOS Menu 16**) to access the PCH IO and System Agent (SA) configuration menus.



WARNING!

Setting the wrong values for the Chipset BIOS selections in the Chipset BIOS menu may cause the system to malfunction.



BIOS Menu 16: Chipset

AFL4-W08-EHL Panel PC

5.4.1 System Agent (SA) Configuration

Use the **System Agent (SA) Configuration** menu (**BIOS Menu 17**) to configure the System Agent (SA) parameters.



BIOS Menu 17: System Agent (SA) Configuration

→ VT-d [Enabled]

Use the **VT-d** option to enable or disable the VT-d capability.

- **Disabled** Disable the VT-d capability
- **Enabled** **DEFAULT** Enable the VT-d capability

5.4.1.1 Memory Configuration

Use the **Memory Configuration** submenu (**BIOS Menu 18**) to view memory information.



BIOS Menu 18: Memory Configuration

AFL4-W08-EHL Panel PC


5.4.1.2 Graphics Configuration

Use the **Graphics Configuration (BIOS Menu 19)** menu to configure the video device connected to the system.



BIOS Menu 19: Graphics Configuration

→ LCD Control

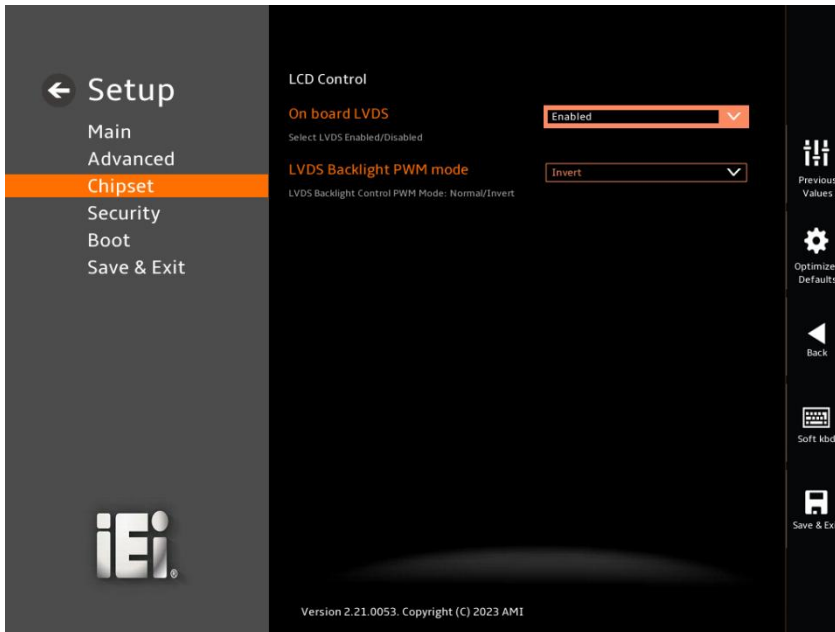

BIOS Menu 20: LCD Control

➔ **On board LVDS [Enabled]**

Use the **On board LVDS** option to select LVDS Enabled or Disabled.

- ➔ **Enabled** **DEFAULT** Enabled on board LVDS.
- ➔ **Disabled** Disabled on board LVDS.

➔ **LVDS Backlight PWM mode[Invert]**

Use the **LVDS Backlight PWM Mode** option to specify a PWM mode for LVDS backlight control.

- ➔ **Invert** **DEFAULT** Set to invert LVDS Backlight.
- ➔ **Normal** Set to normal LVDS Backlight.

- **Power On** The system turns on
- **Last State** **DEFAULT** The system returns to its previous state. If it was on, it turns itself on. If it was off, it remains off.

→ **Power Saving Function(EUP) [Disabled]**

Use the **Power Saving Function(EUP)** BIOS option to enable or disable the power saving function.

- **Disabled** **DEFAULT** Power saving function is disabled.
- **Enabled** Power saving function is enabled. It will reduce power consumption when the system is off.

→ **USB Power SW1 [+5V DUAL]**

Use the **USB Power SW1** BIOS option to configure the USB power source for the corresponding USB connectors (**Figure 5-2**).

- **+5V DUAL** **DEFAULT** Sets the USB power source to +5V dual
- **+5V** Sets the USB power source to +5V

→ **USB Power SW2 [+5V DUAL]**

Use the **USB Power SW2** BIOS option to configure the USB power source for the corresponding USB connectors (**Figure 5-2**).

- **+5V DUAL** **DEFAULT** Sets the USB power source to +5V dual
- **+5V** Sets the USB power source to +5V


BIOS Options	Configured USB Ports
USB Power SW1	USB_CON2 (external USB 3.2 Gen 2 ports)
USB Power SW2	USB_CON3 (external USB 3.2 Gen 2 ports)

Figure 5-2: BIOS Options and Configured USB Ports

AFL4-W08-EHL Panel PC

5.4.2.1 PCI Express Configuration


Use the **PCI Express Configuration** submenu (**BIOS Menu 22**) to configure the PCI Express slots.

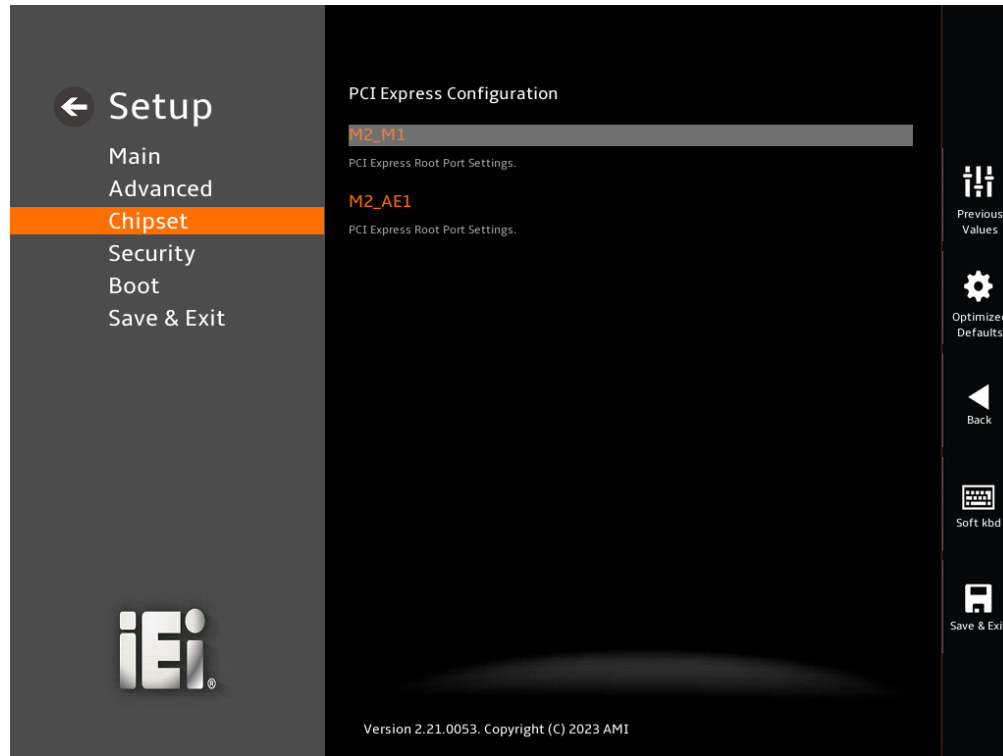

BIOS Menu 22: PCI Express Configuration

5.4.2.1.1 M2_M1

Use the **M2_M1** menu (**BIOS Menu 23**) to change and/or set the configuration of the PCI Express devices installed in the system.

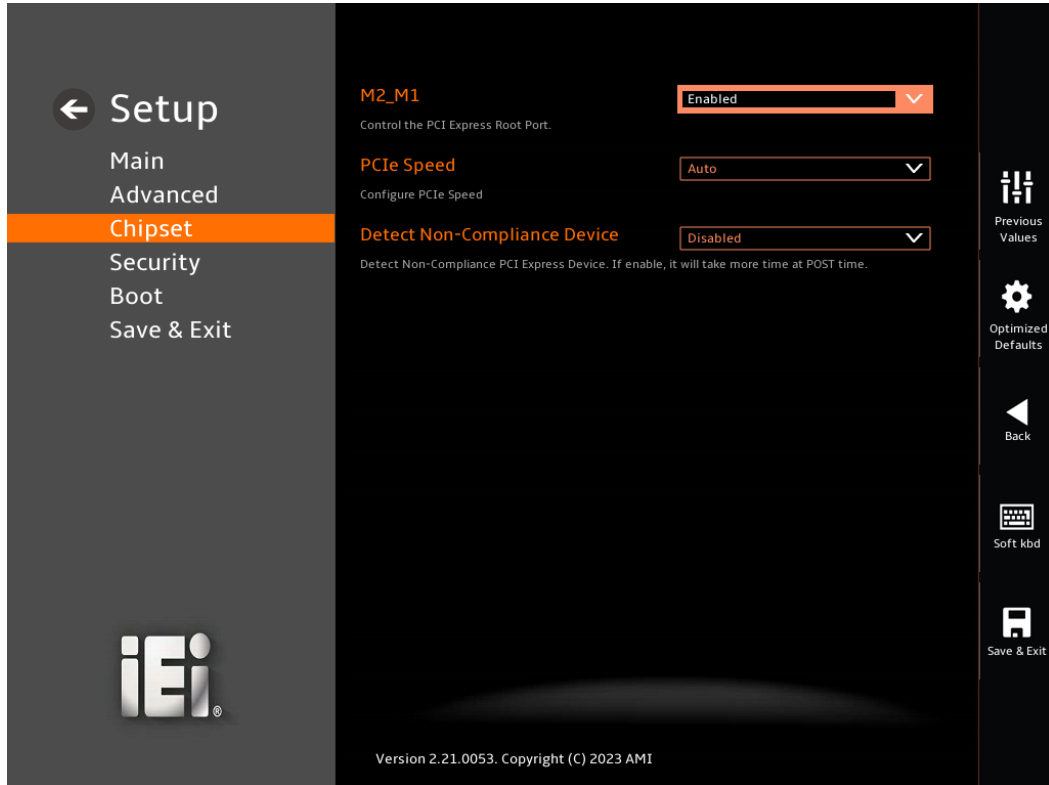

BIOS Menu 23: M2_M1

➔ **PCIe Speed [Auto]**

Use the **PCIe Speed** option to specify the PCI Express port speed. Configuration options are listed below.

- | | | | |
|---|-------------|----------------|-------------------------------|
| ➔ | Auto | DEFAULT | Auto mode. |
| ➔ | Gen1 | | Configure PCIe Speed to Gen1. |
| ➔ | Gen2 | | Configure PCIe Speed to Gen2. |
| ➔ | Gen3 | | Configure PCIe Speed to Gen3. |

AFL4-W08-EHL Panel PC

→ Detect Non-Compliance Device [Disabled]

Use the **Detect Non-Compliance Device** option to configure whether to detect if a non-compliance PCI Express device is connected to the PCI Express port.

- **Disabled** **DEFAULT** Do not detect if a non-compliance PCI Express device is connected to the PCI Express port.
- **Enabled** Detect if a non-compliance PCI Express device is connected to the PCI Express port.

5.4.2.1.2 M2_AE1

Use the **M2_AE1** menu (**BIOS Menu 24**) to change and/or set the configuration of the PCI Express devices installed in the system.



BIOS Menu 24: M2_AE1

→ PCIe Speed [Auto]

Use the **PCIe Speed** option to specify the PCI Express port speed. Configuration options are listed below.

- | | | |
|---------------|----------------|-------------------------------|
| → Auto | DEFAULT | Auto mode. |
| → Gen1 | | Configure PCIe Speed to Gen1. |
| → Gen2 | | Configure PCIe Speed to Gen2. |
| → Gen3 | | Configure PCIe Speed to Gen3. |

→ Detect Non-Compliance Device [Disabled]


Use the **Detect Non-Compliance Device** option to configure whether to detect if a non-compliance PCI Express device is connected to the PCI Express port.

- | | | |
|-------------------|----------------|--|
| → Disabled | DEFAULT | Do not detect if a non-compliance PCI Express device is connected to the PCI Express port. |
| → Enabled | | Detect if a non-compliance PCI Express device is connected to the PCI Express port. |

AFL4-W08-EHL Panel PC

5.4.2.2 SATA Configuration

Use the **SATA Configuration** menu (**BIOS Menu 25**) to change and/or set the configuration of the SATA devices installed in the system.

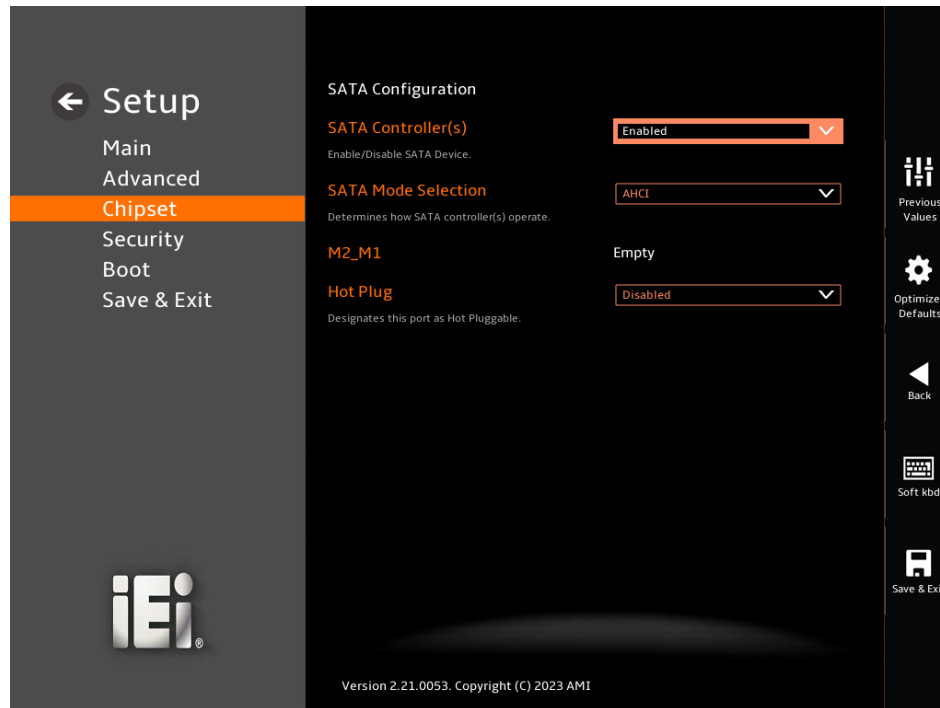

BIOS Menu 25: SATA Configuration

→ **SATA Controller(s) [Enabled]**

Use the **SATA Controller(s)** option to configure the SATA controller(s).

- **Enabled** **DEFAULT** Enables the on-board SATA controller(s).
- **Disabled** Disables the on-board SATA controller(s).

→ **SATA Mode Selection [AHCI]**

Use the **SATA Mode Selection** option to determine how the SATA devices operate.

- **AHCI** **DEFAULT** Configures SATA devices as AHCI device.


→ **Hot Plug [Disabled]**

Use the **Hot Plug** option (for M2_M1) to designate the correspondent port as hot-pluggable.

- **Disabled** **DEFAULT** Disables the hot-pluggable function of the SATA port.
- **Enabled** Designates the SATA port as hot-pluggable.

5.4.2.3 HD Audio Configuration

Use the **HD Audio Configuration** menu (**BIOS Menu 26**) to configure the PCH Azalia settings.

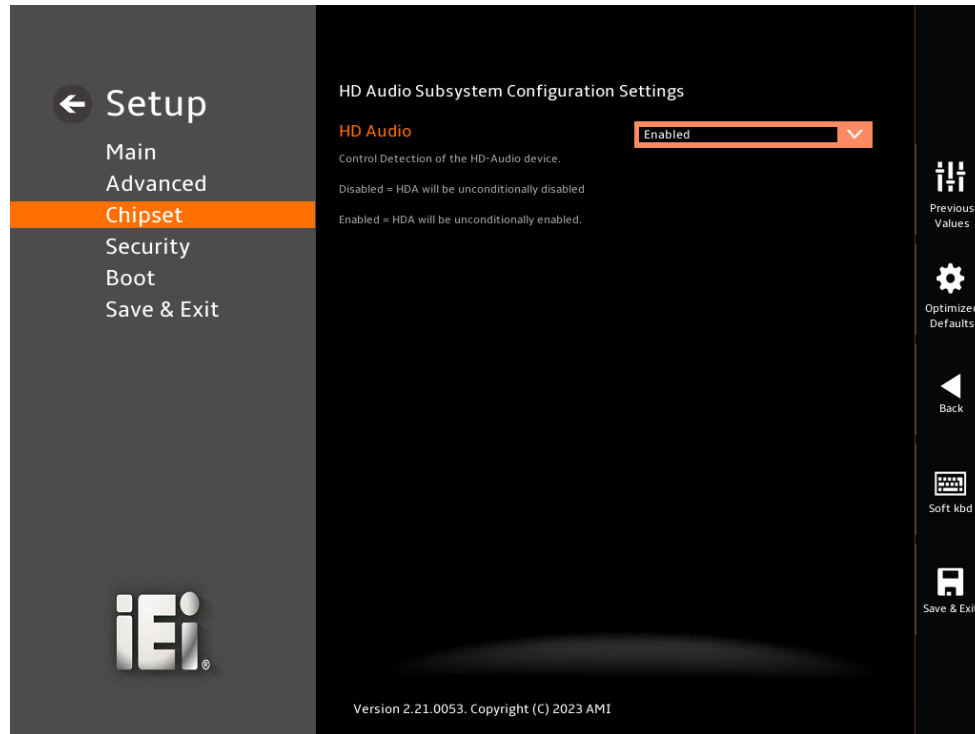

BIOS Menu 26: HD Audio Configuration

→ **HD Audio [Auto]**

Use the **HD Audio** option to enable or disable the High Definition Audio controller.

- **Disabled** The onboard High Definition Audio controller is disabled.
- **Enabled** **DEFAULT** The onboard High Definition Audio controller is enabled.

AFL4-W08-EHL Panel PC

5.5 Security

Use the **Security** menu (**BIOS Menu 27**) to set system and user passwords.

**BIOS Menu 27: Security****→ Administrator Password**


Use the **Administrator Password** to set or change a administrator password.

→ User Password

Use the **User Password** to set or change a user password.

5.6 Boot

Use the **Boot** menu (**BIOS Menu 28**) to configure system boot options.

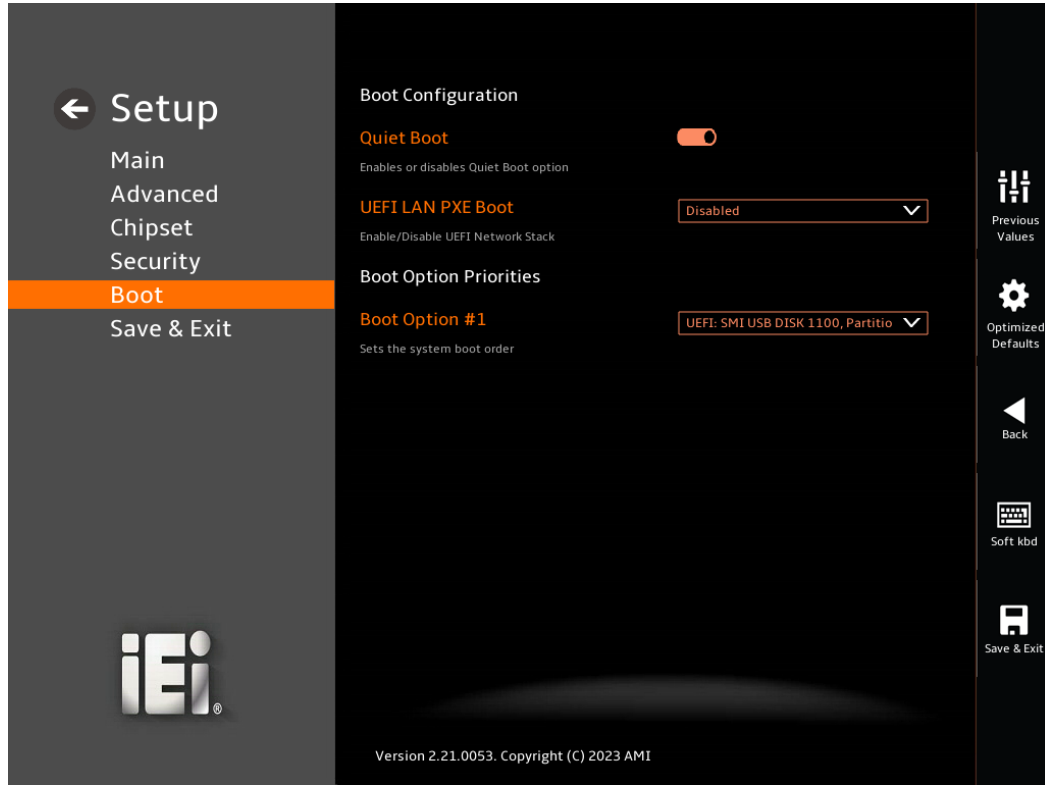

BIOS Menu 28: Boot

5.6.1 Boot Configuration

→ Quiet Boot [Enabled]

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

- **Disabled** Normal POST messages displayed
- **Enabled** **DEFAULT** OEM Logo displayed instead of POST messages

→ UEFI LAN PXE Boot [Disabled]

Use the **UEFI LAN PXE Boot** option to enable or disable UEFI network stack.

AFL4-W08-EHL Panel PC

- **Disabled** **DEFAULT** Ignore all PXE Option ROMs
- **Enabled** Load PXE Option ROMs.

5.6.2 Boot Option Priorities

Use the Boot Option # N to choose the system boots from the peripherals you selected
The following Boot Options are listed as an example.

→ **Boot Option #1**

Sets the system boot order **ADATA SP580** as the first priority.

- **Windows Boot Manager (P1: ADATA SSD SP580 240GB)**
- **Disabled**


→ **Boot Option #2**

Sets the system boot order **USB Partition 1** as the second priority.

- **UEFI: USB, Partition 1**
- **Disabled**

5.7 Save & Exit

Use the **Save & Exit** menu (**BIOS Menu 29**) to load default BIOS values, optimal failsafe values and to save configuration changes.

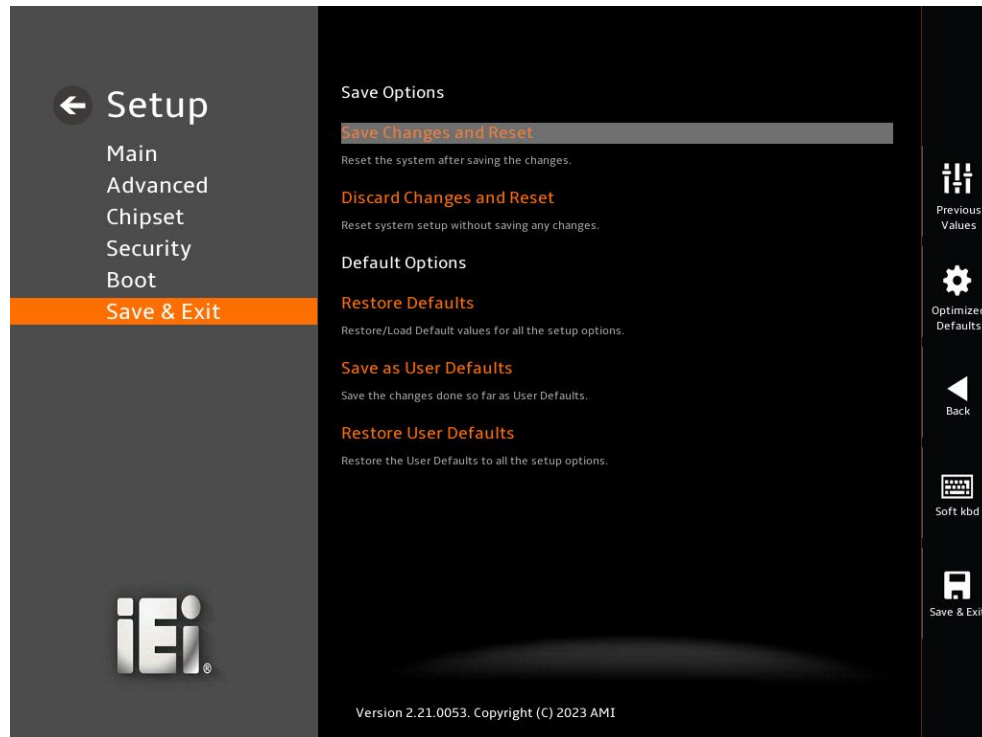

BIOS Menu 29: Save & Exit

→ Save Changes and Reset

Use the **Save Changes and Reset** option to save the changes made to the BIOS options and reset the system.

→ Discard Changes and Reset

Use the **Discard Changes and Reset** option to exit the system without saving the changes made to the BIOS configuration setup program.

→ Restore Defaults

Use the **Restore Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F3 key can be used for this operation.**

AFL4-W08-EHL Panel PC

→ Save as User Defaults

Use the **Save as User Defaults** option to save the changes done so far as user defaults.

→ Restore User Defaults

Use the **Restore User Defaults** option to restore the user defaults to all the setup options.

Chapter

6

Interface Connectors

AFL4-W08-EHL Panel PC

6.1 Peripheral Interface Connectors

The AFL4-W08-EHL panel PC motherboard comes with a number of peripheral interface connectors and configuration jumpers. The connector locations are shown in **Figure 6-1** and **Figure 6-2**. The connector pinouts for these connectors are listed in the following sections.

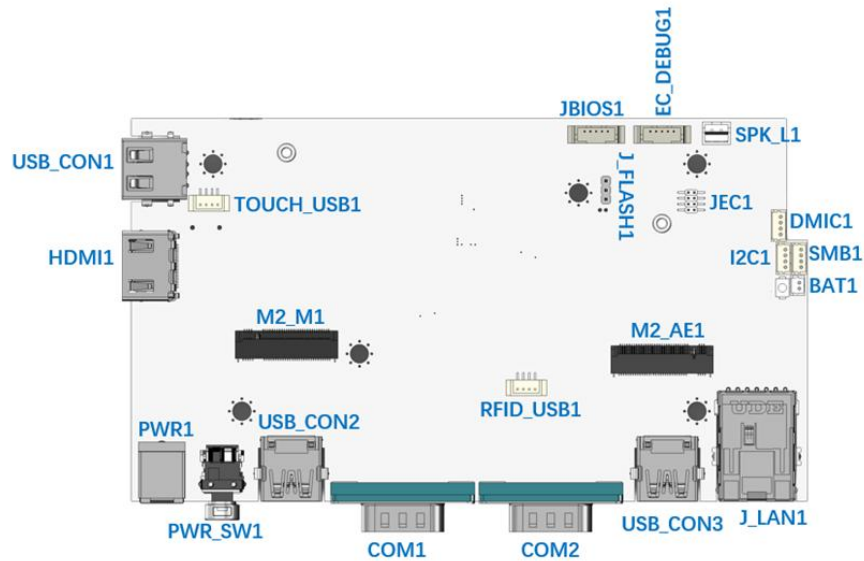


Figure 6-1: Main Board Layout Diagram (Front Side)

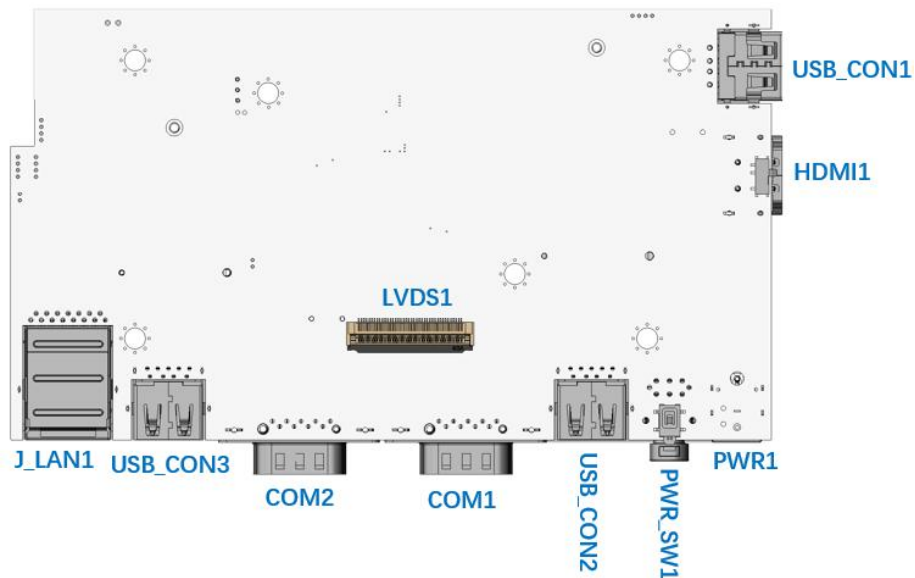


Figure 6-2: Main Board Layout Diagram (Solder Side)

6.2 Internal Peripheral Connectors

Internal peripheral connectors are found on the motherboard and are only accessible when the motherboard is outside of the chassis. The table below shows a list of the peripheral interface connectors on the AFL4-W08-EHL motherboard. Pinouts of these connectors can be found in the following sections.

Connector	Type	Label
Touch Panel connector	4-pin wafer	TOUCH_USB1
SPI flash header	6-pin wafer	JBIOS1
EC debug header	6-pin wafer	EC_DEBUG1
Speaker connector	2-pin wafer	SPK_L1
EC flash header	8-pin header	JEC1
RFID connector	4-pin wafer	RFID_USB1
Digital MIC connector	4-pin wafer	DMIC1
I ² C connector	4-pin wafer	I2C1
SM Bus connector	4-pin wafer	SMB1
Battery connector	2-pin header	BAT1
M.2 M-Key slot	M-key slot	M2_M1
M.2 A-Key slot	Ass-key slot	M2_AE1
LVDS connector	40-pin connector	LVDS1

Table 6-1: Peripheral Interface Connectors

6.2.1 Touch Panel Connector (TOUCH_USB1)

PIN NO.	DESCRIPTION
1	+5V
2	-DATA5
3	+DATA5
4	GND

Table 6-2: Touch Panel Connector (TOUCH_USB1) Pinouts

AFL4-W08-EHL Panel PC

6.2.2 SPI Flash Header (JBIOS1)

PIN NO.	DESCRIPTION
1	+1.8V
2	SPI_CS#
3	SPI_SO
4	SPI_CLK
5	SPI_SI
6	GND




Table 6-3: SPI Flash Header (JBIOS1) Pinouts

6.2.3 EC Debug Header (EC_DEBUG1)

PIN NO.	DESCRIPTION
1	NC
2	EDICS
3	EDIDO
4	EDICLK
5	EDIDI
6	GND

Table 6-4: EC Debug Header (EC_DEBUG1) Pinouts

6.2.4 Speaker Connector (SPK_L1)

PIN NO.	DESCRIPTION
1	SPK-L+
2	SPK-L-

Table 6-5: Speaker Connector (SPK_L1) Pinouts

6.2.5 EC Flash Header (JEC1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	SPI_CS#	2	+3.3V
3	SPI_SO	4	NC
5	EC_DET_FLASH	6	SPI_CLK

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
7	GND	8	SPI_SI

Table 6-6: EC Flash Header (JEC1) Pinouts

6.2.6 RFID Connector (RFID_USB1)

PIN NO.	DESCRIPTION
1	+5V
2	-DATA5
3	+DATA5
4	GND

Table 6-7: RFID Connector (RFID_USB1) Pinouts

6.2.7 Digital MIC Connector (DMIC1)

PIN NO.	DESCRIPTION
1	DMIC_CLK
2	VCC
3	DMIC_DATA
4	GND

Table 6-8: Digital MIC Connector (DMIC1) Pinouts

6.2.8 I²C Connector (I2C1)


PIN NO.	DESCRIPTION	
1	GND	
2	SMB_DATA_LIGHT	
3	SMB_CLK_LIGHT	
4	+V5S	

Table 6-9: I²C Connector (I2C1) Pinouts

AFL4-W08-EHL Panel PC

6.2.9 SMBus Connector (SMB1)


PIN NO.	DESCRIPTION	
1	GND	
2	SMB_DATA	
3	SMB_CLK	
4	+5V	

Table 6-10: SMBus Connector (SMB1) Pinouts

6.2.10 Battery Connector (BAT1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	+V3.3A_DSW	2	GND

Table 6-11: Battery Connector (BAT1) Pinouts

6.2.11 M.2 A-Key Slot (M2_AE1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	+3.3V
3	USB2_DP	4	+3.3V
5	USB2_DN	6	NC
7	GND	8	NC
9	NC	10	NC
11	NC	12	NC
13	NC	14	NC
15	NC	16	NC
17	NC	18	GND
19	NC	20	NC
21	NC	22	NC
23	GND	24	GND
25	NC	26	NC
27	NC	28	NC
29	GND	30	GND
31	NC	32	NC

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
33	GND	34	NC
35	PETP0	36	GND
37	PETN0	38	NC
39	GND	40	NC
41	PERP0	42	NC
43	PERN0	44	NC
45	GND	46	NC
47	PCIE_CLK+	48	NC
49	PCIE_CLK-	50	NC
51	GND	52	PLT_RST
53	CLKREQ0#	54	Pull up
55	PCIE_WAKE	56	W_DIS
57	GND	58	I2C_DAT
59	NC	60	I2C_CLK
61	NC	62	NC
63	GND	64	NC
65	NC	66	NC
67	NC	68	NC
69	GND	70	+3.3V
71	NC	72	+3.3V
73	NC	74	+3.3V
75	GND		

Table 6-12: M.2 A-Key Slot (M2_AE1) Pinouts

AFL4-W08-EHL Panel PC

6.2.12 M.2 M-Key Slot (M2_M1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	+3.3V
3	GND	4	+3.3V
5	PERN0	6	NC
7	PERP0	8	NC
9	GND	10	DAS/DSS#
11	PETN0	12	+3.3V
13	PETP0	14	+3.3V
15	GND	16	+3.3V
17	PERN1	18	+3.3V
19	PERP1	20	NC
21	GND	22	NC
23	PETN1	24	NC
25	PETP1	26	NC
27	GND	28	NC
29	PERN2	30	NC
31	PERP2	32	NC
33	GND	34	NC
35	PETN2	36	NC
37	PETP2	38	DEVSLP
39	GND	40	NC
41	PERN3	42	NC
43	PERP3	44	NC
45	GND	46	NC
47	PETN3	48	NC
49	PETP3	50	PERST#
51	GND	52	CLKREQ
53	PCIECLKN	54	PEWAKE
55	PCIECLKP	56	NC
57	GND	58	NC
59	Module Key	60	Module Key
61	Module Key	62	Module Key

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
63	Module Key	64	Module Key
65	Module Key	66	Module Key
67	NC	68	NC
69	PEDET	70	+3.3V
71	GND	72	+3.3V
73	GND	74	+3.3V
75	GND		

Table 6-13: M.2 M-Key Slot (M2_M1) Pinouts

AFL4-W08-EHL Panel PC

6.2.13 LVDS Connector (LVDS1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	LCD_VCOM	2	LCD_VCC
3	LCD_VCC	4	NC
5	LCD_RST	6	LCD_STBYB
7	GND	8	LVDS_A0-
9	LVDS_A0+	10	GND
11	LVDS_A1-	12	LVDS_A1+
13	GND	14	LVDS_A2-
15	LVDS_A2+	16	GND
17	LVDS_A_CLK-	18	LVDS_A_CLK+
19	GND	20	LVDS_A3-
21	LVDS_A3+	22	GND
23	NC	24	NC
25	LVDS_RESET	26	NC
27	LCD_DIMO	28	LCD_SEL
29	LCD_VCC	30	GND
31	VLED-	32	VLED-
33	LCD_LR	34	LCD_UD
35	LCD_VGL	36	LCD_CABC_EN1
37	LCD_CABC_EN0	38	LCD_VGH
39	LCD_VLED+	40	LCD_VLED+

Table 6-14: LVDS Connector (LVDS1) Pinouts

6.3 Jumper

Jumper	Type	Label
Flash mode header	3-pin header	J_FLASH1

Table 6-15: Table of Jumper

6.3.1 Flash Descriptor Security Override


J_FLASH1	DESCRIPTION	
1-2(default)*	LOW = Disabled (No override)	
Short 2-3	High = Enabled (OVERRIDE)	

Table 6-16: J_FLASH1 Connector

6.4 External Interface Panel Connectors

The table below lists the rear panel connectors on the AFL4-W08-EHL motherboard. Pinouts of these connectors can be found in the following sections.

Connector	Type	Label
USB 2.0 Connectors	USB 2.0 port	USB_CON1
USB 3.2 Gen 2 Connectors	USB 3.2 Gen 2 port	USB_CON2/ USB_CON3
DC Input Connector	DC jack	PWR1
Power Button	Push button	PWR_SW1
RS-232/422/485 Serial ports	DB-9	COM1/COM2
2.5GbE LAN Connector	RJ45	J_LAN1
HDMI Connector	HDMI	HDMI1

Table 6-17: Rear Panel Connectors

AFL4-W08-EHL Panel PC

6.4.1 USB 2.0 Connector (USB_CON1)

PIN NO.	DESCRIPTION
1	VCC
2	USB_PN-
3	USB_PP+
4	GND

Table 6-18: USB 2.0 Connector (USB_CON1) Pinouts

6.4.2 USB 3.2 Gen 2 Connector (USB_CON2/3)

PIN NO.	DESCRIPTION
1	VCC
2	USB_PN-
3	USB_PP+
4	GND
5	USB3_RX_N
6	USB3_RX_P
7	GND
8	USB3_TX_N
9	USB3_TX_P

Table 6-19: USB 3.2 Gen 2 Connector (USB_CON2/3) Pinouts

6.4.3 DC Jack (PWR1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	VCC 12V	2	GND

Table 6-20: DC Jack (PWR1)

6.4.4 Power Button (PWR_SW1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	+3V	2	GND

Table 6-21: Power Button (PWR_SW1)

6.4.5 RS-232/422/485 Serial Ports (COM1/COM2)

PIN NO.	DESCRIPTION
1	DATA CARRIER DETECT (DCD)
2	RECEIVE DATA (RXD)
3	TRANSMIT DATA (TXD)
4	DATA TERMINAL READY (DTR)
5	GND (GND)
6	DATA SET READY (DSR)
7	REQUEST TO SEND (RTS1/2)
8	CLEAR TO SEND (CTS1/2)
9	RING INDICATOR (RI1/2)

Table 6-22: RS-232/422/485 Serial Ports (COM1/2) Pinouts

6.4.6 2.5GbE LAN Connector (J_LAN1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
R1	GND	R7	TRD1P2
R2	TRD1P0	R8	TRD1N2
R3	TRD1N0	R9	TRD1P3
R4	TRD1P1	R10	TRD1N3
R5	TRD1N1	R11	GND
R6	GND		

Table 6-23: 2.5GbE LAN Connector (J_LAN1) Pinouts

AFL4-W08-EHL Panel PC

6.4.7 HDMI Connector (HDMI1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	HDMI_DATA2	13	N/C
2	GND	14	N/C
3	HDMI_DATA2#	15	HDMI_SCL
4	HDMI_DATA1	16	HDMI_SDA
5	GND	17	GND
6	HDMI_DATA1#	18	+5V
7	HDMI_DATA0	19	HDMI_HPD
8	GND	G1	HDMI_GND
9	HDMI_DATA0#	G2	HDMI_GND
10	HDMI_CLK	G3	HDMI_GND
11	GND	G4	HDMI_GND
12	HDMI_CLK#	G5	HDMI_GND

Table 6-24: HDMI1 Connector (HDMI1) Pinouts

Appendix

A

Regulatory Compliance

DECLARATION OF CONFORMITY



This equipment is in conformity with the following EU directives:

- EMC Directive (2014/30/EU)
- Low-Voltage Directive (2014/35/EU)
- RoHS II Directive (2015/863/EU)

If the user modifies and/or install other devices in the equipment, the CE conformity declaration may no longer apply.

If this equipment has telecommunications functionality, it also complies with the requirements of the Radio Equipment Directive 2014/53/EU.

Hereby, IEI INTEGRATION CORP declares that the radio equipment type AFL4-W07-EHL is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
<https://www.ieiworld.com>

	AT	BE	BG	CH	CY	CZ	DE	DK	EE	EL	ES
	FI	FR	HR	HU	IE	IS	IT	LI	LT	LU	LV
	MT	NL	NO	PL	PT	RO	SE	SI	SK	TR	UK (NI)

English

IEI Integration Corp declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Български [Bulgarian]

IEI Integration Corp. декларира, че този оборудване е в съответствие със съществените изисквания и другите приложими правила на Директива 2014/53/EU.

Česky [Czech]

IEI Integration Corp tímto prohlašuje, že tento zařízení je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 2014/53/EU.

Dansk [Danish]

IEI Integration Corp erklærer herved, at følgende udstyr overholder de væsentlige krav og øvrige relevante krav i direktiv 2014/53/EU.

Deutsch [German]

IEI Integration Corp, erklärt dieses Gerät entspricht den grundlegenden Anforderungen und den weiteren entsprechenden Vorgaben der Richtlinie 2014/53/EU.

Eesti [Estonian]

IEI Integration Corp deklareerib seadme seadme vastavust direktiivi 2014/53/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

Español [Spanish]

IEI Integration Corp declara que el equipo cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 2014/53/EU.

Ελληνική [Greek]

IEI Integration Corp ΔΗΛΩΝΕΙ ΟΤΙ ΕΞΟΠΛΙΣΜΟΣ ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 2014/53/EU.

Français [French]

IEI Integration Corp déclare que l'appareil est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 2014/53/EU.

Italiano [Italian]

IEI Integration Corp dichiara che questo apparecchio è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 2014/53/EU.

Latviski [Latvian]

IEI Integration Corp deklarē, ka iekārta atbilst būtiskajām prasībām un citiem ar to saistītajiem noteikumiem Direktīvas 2014/53/EU.

Lietuvių [Lithuanian]

IEI Integration Corp deklaruoja, kad šis įranga atitinka esminius reikalavimus ir kitas 2014/53/EU Direktyvos nuostatas.

Nederlands [Dutch]

IEI Integration Corp dat het toestel toestel in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 2014/53/EU.

AFL4-W08-EHL Panel PC

Malti [Maltese]

IEI Integration Corp jiddikjara li dan prodott jikkonforma mal-ħtiġijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Dirrettiva 2014/53/EU.

Magyar [Hungarian]

IEI Integration Corp nyilatkozom, hogy a berendezés megfelel a vonatkozó alapvető követelményeknek és az 2014/53/EU irányelv egyéb előírásainak.

Polski [Polish]

IEI Integration Corp oświadcza, że wyrobu jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 2014/53/EU.

Português [Portuguese]

IEI Integration Corp declara que este equipamento está conforme com os requisitos essenciais e outras disposições da Directiva 2014/53/EU.

Româna [Romanian]

IEI Integration Corp declară că acest echipament este în conformitate cu cerințele esențiale și cu celelalte prevederi relevante ale Directivei 2014/53/EU.

Slovensko [Slovenian]

IEI Integration Corp izjavlja, da je ta opreme v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 2014/53/EU.

Slovensky [Slovak]

IEI Integration Corp týmto vyhlasuje, že zariadenia spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 2014/53/EU.

Suomi [Finnish]

IEI Integration Corp vakuuttaa täten että laitteet on direktiivin 2014/53/EU oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

Svenska [Swedish]

IEI Integration Corp förklarar att denna utrustningstyp står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 2014/53/EU.

ROHS STATEMENT



The label on the product indicates this product conforms to European (EU) Restriction of Hazardous Substances (RoHS) that set maximum concentration limits on hazardous materials used in electrical and electronic equipment.



UKCA WARNING

Hereby, IEI INTEGRATION CORP declares that the radio equipment type AFL4-W08-EHL is in compliance with the Radio Equipment Regulations 2017(S.I. 2017/1206)

The full text of the system UK declaration of conformity is available at :

<https://www.ieiworld.com>



AFL4-W08-EHL Panel PC

FCC WARNING



This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and

This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body.

CHINA ROHS



The label on the product indicates the estimated “Environmentally Friendly Use Period” (EFUP). This is an estimate of the number of years that these substances would “not leak out or undergo abrupt change.” This product may contain replaceable sub-assemblies/components which have a shorter EFUP such as batteries and lamps. These components will be separately marked.

Appendix

B

Safety Precautions

**WARNING:**

The precautions outlined in this chapter should be strictly followed. Failure to follow these precautions may result in permanent damage to the AFL4-W08-EHL.

B.1 Safety Precautions

Please follow the safety precautions outlined in the sections that follow:

B.1.1 General Safety Precautions

Please ensure the following safety precautions are adhered to at all times.

- **Follow the electrostatic precautions** outlined below whenever the device is opened.
- **Make sure the power is turned off and the power cord is disconnected** whenever the AFL4-W08-EHL is being installed, moved or modified.
- **To prevent the risk of electric shock, make sure power cord is unplugged from wall socket.** To fully disengage the power to the unit, please disconnect the power cord from the AC outlet. Refer servicing to qualified service personnel. The AC outlet shall be readily available and accessible.
- **Do not apply voltage levels that exceed the specified voltage range.** Doing so may cause fire and/or an electrical shock. Use a power cord that matches the voltage of the power outlet, which has been approved and complies with the safety standard of your particular country.
- **Electric shocks can occur** if the AFL4-W08-EHL chassis is opened when it is running. To avoid risk of electric shock, this device must only be connected to a supply mains with protective earth.
- **Do not drop or insert any objects** into the ventilation openings of the AFL4-W08-EHL.

- **If considerable amounts of dust, water, or fluids enter the device**, turn off the power supply immediately, unplug the power cord, and contact the AFL4-W08-EHL vendor.
- **RTC battery safety precautions:**
 - RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE
 - Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion
 - Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas
 - A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas

DO NOT:

- Drop the device against a hard surface.
- Strike or exert excessive force onto the LCD panel.
- Touch any of the LCD panels with a sharp object
- In a site where the ambient temperature exceeds the rated temperature

B.1.2 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the installation of the AFL4-W08-EHL may result in permanent damage to the AFL4-W08-EHL and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the AFL4-W08-EHL. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the AFL4-W08-EHL is opened and any of the electrical components are handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** Wearing a simple anti-static wristband can help to prevent ESD from damaging any electrical component.

AFL4-W08-EHL Panel PC

- **Self-grounding:** Before handling any electrical component, touch any grounded conducting material. During the time the electrical component is handled, frequently touch any conducting materials that are connected to the ground.
- **Use an anti-static pad: When configuring or** working with an electrical component, place it on an anti-static pad. This reduces the possibility of ESD damage.
- **Only handle the edges of the electrical component:** When handling the electrical component, hold the electrical component by its edges.

B.1.3 Product Disposal




CAUTION:

Risk of explosion if battery is replaced by an incorrect type. Only certified engineers should replace the on-board battery.

Dispose of used batteries according to instructions and local regulations.

- Outside the European Union—If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority so as to comply with the correct disposal method.
- Within the European Union—The device that produces less waste and is easier to recycle is classified as electronic device in terms of the European Directive 2012/19/EU (WEEE), and must not be disposed of as domestic garbage.

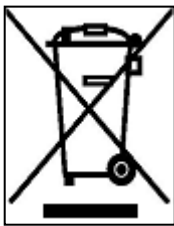

EU-wide legislation, as implemented in each Member State, requires that waste electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes monitors and electrical accessories, such as signal cables or power cords. When you need to dispose of your display products, please follow the guidance of your local authority, or ask

the shop where you purchased the product. The mark on electrical and electronic products only applies to the current European Union Member States.

Please follow the national guidelines for electrical and electronic product disposal.

B.2 Maintenance and Cleaning Precautions

When maintaining or cleaning the AFL4-W08-EHL, please follow the guidelines below.



WARNING:

For safety reasons, turn-off the power and unplug the panel PC before cleaning.

If you dropped any material or liquid such as water onto the panel PC when cleaning, unplug the power cable immediately and contact your dealer or the nearest service center. Always make sure your hands are dry when unplugging the power cable.

B.2.1 Maintenance and Cleaning

Prior to cleaning any part or component of the AFL4-W08-EHL, please read the details below.

- Except for the LCD panel, never spray or squirt liquids directly onto any other components. To clean the LCD panel, gently wipe it with a piece of soft dry cloth or a slightly moistened cloth.
- The interior of the device does not require cleaning. Keep fluids away from the device interior.
- Be cautious of all small removable components when vacuuming the device.
- Never drop any objects or liquids through the openings of the device.
- Be cautious of any possible allergic reactions to solvents or chemicals used when cleaning the device.
- Avoid eating, drinking and smoking within vicinity of the device.

AFL4-W08-EHL Panel PC

B.2.2 Cleaning Tools

Some components in the AFL4-W08-EHL may only be cleaned using a product specifically designed for the purpose. In such case, the product will be explicitly mentioned in the cleaning tips. Below is a list of items to use when cleaning the AFL4-W08-EHL.

- **Cloth**—Although paper towels or tissues can be used, a soft, clean piece of cloth is recommended when cleaning the device.
- **Water or rubbing alcohol**—A cloth moistened with water or rubbing alcohol can be used to clean the device.
- **Using solvents**—The use of solvents is not recommended when cleaning the device as they may damage the plastic parts.
- **Vacuum cleaner**—Using a vacuum specifically designed for computers is one of the best methods of cleaning the device. Dust and dirt can restrict the airflow in the device and cause its circuitry to corrode.
- **Cotton swabs**—Cotton swabs moistened with rubbing alcohol or water are excellent tools for wiping hard to reach areas.
- **Foam swabs**—Whenever possible, it is best to use lint free swabs such as foam swabs for cleaning.

Appendix

C

Watchdog Timer

AFL4-W08-EHL Panel PC



NOTE:

The following discussion applies to DOS. Contact IEI support or visit the IEI website for drivers for other operating systems.

The Watchdog Timer is a hardware-based timer that attempts to restart the system when it stops working. The system may stop working because of external EMI or software bugs. The Watchdog Timer ensures that standalone systems like ATMs will automatically attempt to restart in the case of system problems.

A BIOS function call (INT 15H) is used to control the Watchdog Timer.

INT 15H:

AH – 6FH Sub-function:	
AL – 2:	Sets the Watchdog Timer's period.
BL:	Time-out value (Its unit-second is dependent on the item "Watchdog Timer unit select" in CMOS setup).

Table C-1: AH-6FH Sub-function

Call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer starts counting down. When the timer value reaches zero, the system resets. To ensure that this reset condition does not occur, calling sub-function 2 must periodically refresh the Watchdog Timer. However, the watchdog timer is disabled if the time-out value is set to zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.

**NOTE:**

The Watchdog Timer is activated through software. The software application that activates the Watchdog Timer must also deactivate it when closed. If the Watchdog Timer is not deactivated, the system will automatically restart after the Timer has finished its countdown.

EXAMPLE PROGRAM:

```
; INITIAL TIMER PERIOD COUNTER
```

```
;
```

```
W_LOOP:
```

```
;
```

```
    MOV     AX, 6F02H      ;setting the time-out value  
    MOV     BL, 30        ;time-out value is 48 seconds  
    INT     15H
```

```
;
```

```
; ADD THE APPLICATION PROGRAM HERE
```

```
;
```

```
    CMP     EXIT_AP, 1     ;is the application over?  
    JNE     W_LOOP        ;No, restart the application
```

```
    MOV     AX, 6F02H      ;disable Watchdog Timer  
    MOV     BL, 0         ;  
    INT     15H
```

```
;
```

```
; EXIT ;
```

Appendix

D

Hazardous Materials Disclosure

D.1 RoHS II Directive (2015/863/EU)

The details provided in this appendix are to ensure that the product is compliant with the RoHS II Directive (2015/863/EU). The table below acknowledges the presences of small quantities of certain substances in the product, and is applicable to RoHS II Directive (2015/863/EU).

Please refer to the following table.

Part Name	Toxic or Hazardous Substances and Elements									
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)	Bis(2-ethylhexyl) phthalate (DEHP)	Butyl benzyl phthalate (BBP)	Dibutyl phthalate (DBP)	Diisobutyl phthalate (DIBP)
Housing	O	O	O	O	O	O	O	O	O	O
Printed Circuit Board	O	O	O	O	O	O	O	O	O	O
Metal Fasteners	O	O	O	O	O	O	O	O	O	O
Cable Assembly	O	O	O	O	O	O	O	O	O	O
Fan Assembly	O	O	O	O	O	O	O	O	O	O
Power Supply Assemblies	O	O	O	O	O	O	O	O	O	O
Battery	O	O	O	O	O	O	O	O	O	O
<p>O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in Directive (EU) 2015/863.</p> <p>X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in Directive (EU) 2015/863.</p>										

AFL4-W08-EHL Panel PC

D.2 China RoHS

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有“环境友好使用期限”的标签，此期限是估算这些物质“不会有泄漏或突变”的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
壳体	○	○	○	○	○	○
印刷电路板	○	○	○	○	○	○
金属螺帽	○	○	○	○	○	○
电缆组装	○	○	○	○	○	○
风扇组装	○	○	○	○	○	○
电力供应组装	○	○	○	○	○	○
电池	○	○	○	○	○	○
<p>O: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T11364-2014 與 GB/T26572-2011 标准规定的限量要求以下。</p> <p>X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11364-2014 與 GB/T26572-2011 标准规定的限量要求。</p>						