


IPX-9S-RS-R40

9-Slot Backplane with 8 PCI Bus User Manual Ver. 4.0


1. PW2: ATX Power Connector

Pin	Description	Pin	Description
1	+3.3Vdc	11	+3.3Vdc
2	+3.3Vdc	12	-12Vdc
3	GND	13	GND
4	+5Vdc	14	PS-ON
5	GND	15	GND
6	+5Vdc	16	GND
7	GND	17	GND
8	PWR-OK	18	-5Vdc
9	+5VSB	19	+5Vdc
10	+12Vdc	20	+5Vdc

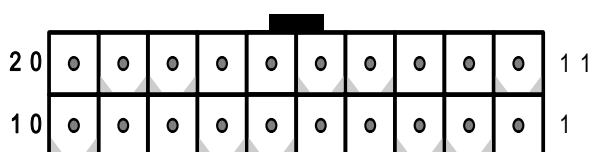


2. PW1: AT Power Connector

Pin	Description	Pin	Description
1	PWRGD	7	GND
2	+5V	8	GND
3	+12V	9	-5V
4	-12V	10	+5V
5	GND	11	+5V
6	GND	12	+5V




3. CN2: Backplane to Mainboard ATX power control connector

Pin	Description
1	GND
2	PSON#
3	5VSB

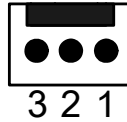


4. CN3, CN5: Fan Connector

Pin	Description
1	GND
2	+12V
3	NC

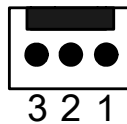

5. CN1: Voltage Connector

Pin	Description
1	+5V
2	+5V
3	-5V
4	-12V
5	+12V
6	+3.3V
7	GND
8	GND

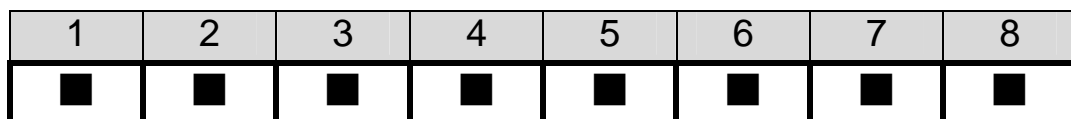


6. PCI routing table:

PCI SLOT	1	2	3	4	5	6	7	8
IDSEL	AD19	AD20	AD22	3_AD20	3_AD21	3_AD22	3_AD23	3_AD24
INTA	A	D	B	C	D	A	B	C
INTB	B	A	C	D	A	B	C	D
INTC	C	B	D	A	B	C	D	A
INTD	D	C	A	B	C	D	A	B

7. Notice:

Recommend to use 6mm width spacer to install

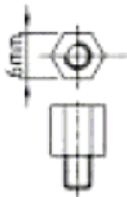

b. Torsion must less than 6lb-inch

8. Dimension:

