



**MODEL:**  
**IMB-ARL-Q870**

**Micro-ATX motherboard supports LGA1851 Intel® 15th Generation Ultra™ processor, DDR5, Quadruple independent displays, triple LAN, M.2, USB 3.2, SATA 6Gb/s, HD Audio and RoHS**

# User Manual

# Revision

---

Date	Version	Changes
December 5, 2025	1.00	Initial release

# Copyright

---

## **COPYRIGHT NOTICE**

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

## **TRADEMARKS**

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

# Manual Conventions

---



## **WARNING**

Warnings appear where overlooked details may cause damage to the equipment or result in personal injury. Warnings should be taken seriously.



## **CAUTION**

Cautionary messages should be heeded to help reduce the chance of losing data or damaging the product.



## **NOTE**

These messages inform the reader of essential but non-critical information. These messages should be read carefully as any directions or instructions contained therein can help avoid making mistakes.

# Table of Contents

<b>1 INTRODUCTION.....</b>	<b>12</b>
1.1 INTRODUCTION.....	13
1.2 FEATURES.....	14
1.3 CONNECTORS .....	15
1.4 DIMENSIONS.....	16
1.5 DATA FLOW .....	17
1.6 TECHNICAL SPECIFICATIONS .....	18
<b>2 PACKING LIST.....</b>	<b>21</b>
2.1 ANTI-STATIC PRECAUTIONS.....	22
2.2 UNPACKING PRECAUTIONS.....	22
2.3 PACKING LIST .....	23
2.4 OPTIONAL ITEMS.....	24
<b>3 CONNECTORS .....</b>	<b>26</b>
3.1 PERIPHERAL INTERFACE CONNECTORS.....	27
3.1.1 <i>IMB-ARL-Q870 Layout</i> .....	27
3.1.2 <i>Peripheral Interface Connectors</i> .....	28
3.1.3 <i>External Interface Panel Connectors</i> .....	29
3.2 INTERNAL PERIPHERAL CONNECTORS .....	30
3.2.1 <i>ATX CPU 12V Power Connector</i> .....	30
3.2.2 <i>AT/ATX Power Mode Setting</i> .....	31
3.2.3 <i>Clear CMOS Jumper</i> .....	32
3.2.4 <i>Audio Connector for IEI AC-KIT-888S Kit</i> .....	33
3.2.5 <i>ATX Power Connector</i> .....	34
3.2.6 <i>RTC Battery Connector</i> .....	35
3.2.7 <i>Chassis Intrusion Connector</i> .....	36
3.2.8 <i>DDR5 DIMM Sockets</i> .....	37
3.2.9 <i>Digital I/O Connector</i> .....	38

3.2.10 CPU_FAN1 Connector.....	39
3.2.11 SYS_FAN Connector.....	40
3.2.12 Front Panel Connector .....	41
3.2.13 P <sup>2</sup> C Connector .....	42
3.2.14 LAN Link LED Connector.....	43
3.2.15 Serial Port, RS-232 .....	44
3.2.16 SATA 6Gb/s Connectors.....	45
3.2.17 SMBus Connector .....	46
3.2.18 Flash SPI ROM Connector .....	47
3.2.19 EC_Flash1 EC ROM Connector.....	48
3.2.20 Internal USB 2.0 Connector .....	49
3.2.21 PCIE x4 Slots .....	50
3.2.22 PCIE x16 Slots.....	51
<b>3.3 EXTERNAL PERIPHERAL INTERFACE CONNECTOR PANEL .....</b>	<b>52</b>
3.3.1 External RS-232/422/485 Combo Connector .....	52
3.3.2 External HDMI&DP Combo Connector.....	53
3.3.3 External 2.5GbE RJ-45 and Dual USB 3.2 Gen 2 Combo Connector .....	54
<b>4 INSTALLATION .....</b>	<b>56</b>
4.1 ANTI-STATIC PRECAUTIONS.....	57
4.2 INTERNAL PERIPHERAL DEVICE CONNECTIONS.....	57
4.2.1 SATA Drive Connection .....	57
4.3 INSTALLATION CONSIDERATIONS.....	60
4.4 SOCKET LGA1851 CPU INSTALLATION.....	61
4.5 SOCKET LGA1851 COOLING KIT INSTALLATION .....	64
4.6 DIMM INSTALLATION .....	66
4.7 M.2 MODULE INSTALLATION.....	67
4.8 SOFTWARE INSTALLATION .....	69
4.9 DRIVER DOWNLOAD .....	69
<b>5 BIOS.....</b>	<b>71</b>
5.1 INTRODUCTION.....	72
5.1.1 Starting Setup.....	72
5.1.2 Using Setup .....	73
5.1.2.1 Keyboard Navigation .....	73

5.1.2.2 Touch Navigation .....	74
5.1.3 Getting Help.....	75
5.1.4 Unable to Reboot after Configuration Changes .....	75
5.1.5 BIOS Menu Bar.....	75
5.2 MAIN.....	76
5.3 ADVANCED.....	79
5.3.1 CPU Configuration .....	80
5.3.1.1 Efficient-core Information .....	84
5.3.1.2 Performance-core Information.....	84
5.3.2 System Agent (SA) Configuration .....	86
5.3.2.1 Memory Configuration .....	87
5.3.2.2 Graphics Configuration.....	88
5.3.2.3 VMD Setup menu .....	89
5.3.3 PCIE Configuration.....	90
5.3.4 PCH-IO Configuration .....	91
5.3.4.1 SATA Configuration.....	94
5.3.4.2 HD Audio Configuration.....	95
5.3.5 AMT Configuration .....	96
5.3.6 Trusted Computing.....	97
5.3.7 iEi One Key Recovery .....	98
5.3.8 RTC Wake Settings .....	98
5.3.9 F81866 Super IO Configuration .....	100
5.3.9.1 Serial Port 1 Configuration .....	101
5.3.9.2 Serial Port 2 Configuration .....	102
5.3.9.3 Serial Port 3 Configuration .....	104
5.3.9.4 Serial Port 4 Configuration .....	105
5.3.9.5 Serial Port 5 Configuration .....	106
5.3.9.6 Serial Port 6 Configuration .....	107
5.3.10 EC ITE5571 H-W Monitor.....	108
5.3.10.1 Smart Fan Mode Configuration .....	109
5.3.11 Serial Port Console Redirection.....	112
5.3.11.1 Console Redirection Settings .....	113
5.3.12 PCI Subsystem Settings.....	116
5.3.13 NVMe Configuration.....	117
5.4 SECURITY.....	118

5.5 BOOT.....	119
5.5.1 Boot Configuration .....	119
5.6 SAVE & EXIT .....	120
5.7 MEBX .....	122
5.8 SERVER MGMT .....	123
<b>A REGULATORY COMPLIANCE .....</b>	<b>124</b>
<b>B PRODUCT DISPOSAL .....</b>	<b>126</b>
<b>C BIOS OPTIONS .....</b>	<b>128</b>
<b>D WATCHDOG TIMER .....</b>	<b>132</b>
<b>E ERROR BEEP CODE.....</b>	<b>135</b>
E.1 PEI BEEP CODES.....	136
E.2 DXE BEEP CODES .....	136
<b>F HAZARDOUS MATERIALS DISCLOSURE.....</b>	<b>137</b>
F.1 RoHS II DIRECTIVE (2015/863/EU) .....	138
F.2 CHINA RoHS.....	139

# List of Figures

Figure 1-1: IMB-ARL-Q870 .....	13
Figure 1-2: Connectors .....	15
Figure 1-3: IMB-ARL-Q870 Dimensions (mm).....	16
Figure 1-4: Data Flow Diagram.....	17
Figure 3-1: Peripheral Interface Connectors .....	27
Figure 3-2: ATX CPU 12V power connector location .....	30
Figure 3-3: AT/ATX Power Mode Switch Locations .....	31
Figure 3-4: Clear CMOS Jumper Location .....	32
Figure 3-5: Audio Connector for IEI AC-KIT-888S Kit Location .....	33
Figure 3-6: ATX Power Connector Location .....	34
Figure 3-7: RTC Battery Connector Location .....	35
Figure 3-8: Chassis Intrusion Connector Location .....	36
Figure 3-9: DDR5 UDIMM Sockets Location .....	37
Figure 3-10: Digital I/O Connector Location .....	38
Figure 3-11: CPU Fan Connector Location .....	39
Figure 3-12: System FAN1 Location .....	40
Figure 3-13: Front Panel Connector Location .....	41
Figure 3-14: I <sup>2</sup> C Connector Location .....	42
Figure 3-15: LAN LED Connector Locations .....	43
Figure 3-16: RS-232 Serial Port Connector Location.....	44
Figure 3-17: SATA 6Gb/s Connector Locations .....	45
Figure 3-18: SMBus Connector Location .....	46
Figure 3-19: Flash SPI ROM Connector Location .....	47
Figure 3-20: EC_Flash1 EC ROM Connector Location .....	48
Figure 3-21: Internal USB 2.0 Connector Locations .....	49
Figure 3-22: PCIe x4 Slot Locations .....	50
Figure 3-23: PCIe x8 Slot Locations .....	51
Figure 3-24: External Peripheral Interface Connector .....	52
Figure 3-25: HDMI Connector .....	53
Figure 3-26: DP++ Connector .....	54
Figure 3-27: LAN LED Location.....	55

<b>Figure 4-1: SATA Drive Cable Connection.....</b>	<b>58</b>
<b>Figure 4-2: SATA Power Drive Connection.....</b>	<b>59</b>
<b>Figure 4-3: Disengage the CPU Socket Load Lever.....</b>	<b>62</b>
<b>Figure 4-4: Remove Protective Cover.....</b>	<b>62</b>
<b>Figure 4-5: Insert the Socket LGA1851 CPU.....</b>	<b>63</b>
<b>Figure 4-6: Close the Socket LGA1851.....</b>	<b>64</b>
<b>Figure 4-7: Cooling Kit Support Bracket.....</b>	<b>65</b>
<b>Figure 4-8: DIMM Installation.....</b>	<b>66</b>
<b>Figure 4-9: Inserting the M.2 Module into the Slot at an Angle.....</b>	<b>67</b>
<b>Figure 4-10: Securing the M.2 Module.....</b>	<b>68</b>
<b>Figure 4-11: IEI Resource Download Center.....</b>	<b>69</b>
<b>Figure 5-1: BIOS Starting Menu.....</b>	<b>72</b>

# List of Tables

Table 1-1: IMB-ARL-Q870 Specifications .....	20
Table 2-1: Packing List.....	23
Table 2-2: Optional Items .....	25
Table 3-1: Peripheral Interface Connectors .....	29
Table 3-2: Rear Panel Connectors .....	29
Table 3-3: AT/ATX Power Mode Switch Settings.....	31
Table 3-4: Clear CMOS Jumper Pinouts.....	32
Table 3-5: Audio Connector for IEI AC-KI-888S Kit Pinouts .....	33
Table 3-6: ATX Power Connector Pinouts.....	35
Table 3-7: RTC Battery Connector Pinouts.....	35
Table 3-8: Chassis Intrusion Connector Pinouts .....	36
Table 3-9: Digital I/O Connector Pinouts.....	38
Table 3-10: CPU Fan Connector Pinouts.....	39
Table 3-11: System FAN1 Pinout .....	40
Table 3-12: Front Panel Connector Pinouts.....	41
Table 3-13: I <sup>2</sup> C Connector Pinouts.....	42
Table 3-14: LAN LED Connector Pinouts .....	43
Table 3-15: RS-232 Serial Port Connector Pinouts .....	45
Table 3-16: SATA 6Gb/s Connector Pinouts.....	46
Table 3-17: SMBus Connector Pinouts .....	47
Table 3-18: Flash SPI ROM Connector Pinouts.....	47
Table 3-19: EC_Flash1 EC ROM Connector Pinouts.....	48
Table 3-20: Internal USB 2.0 Connector Pinouts.....	49
Table 3-21: External RS-232/422/485 Connector Pinouts .....	52
Table 3-22: HDMI Connector Pinouts .....	53
Table 3-23: DP++ Connector Pinouts .....	54
Table 3-24: USB 3.2 Gen 2 Connector .....	54
Table 3-25: 2.5 GbE RJ-45 Connector.....	55
Table 3-26: LAN LED Pinouts .....	55
Table 5-1: BIOS Navigation Keys .....	73
Table 5-2: BIOS On-screen Navigation Keys .....	74

Chapter


1

# Introduction

---

## IMB-ARL-Q870

### 1.1 Introduction

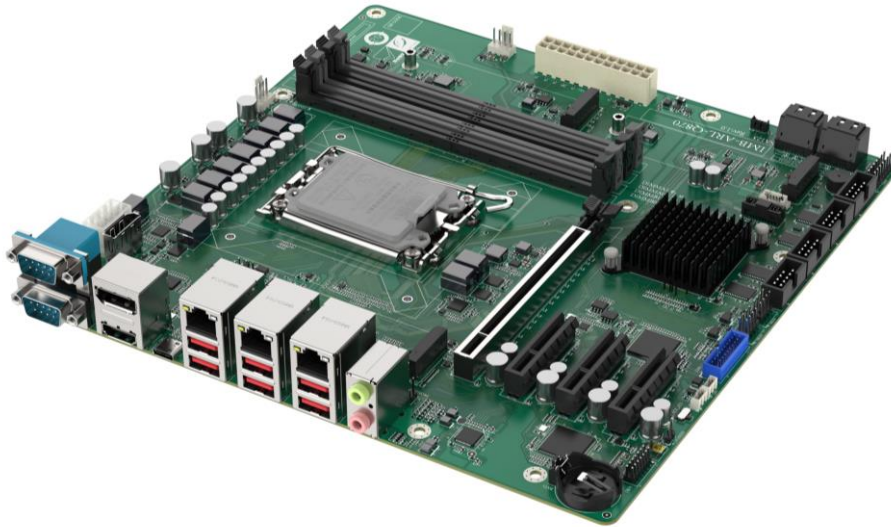

**Figure 1-1: IMB-ARL-Q870**

The IMB-ARL-Q870 is a micro-ATX motherboard. It accepts a Socket LGA1851 Intel® 15th Generation Ultra™ processor and supports four 288-pin 5600MHz dual-channel DDR5 Clocked Unbuffered DIMM (CUDIMM) up to 192 GB. The integrated Intel® Q870 chipset supports four SATA 6Gb/s drives. Moreover, the IMB-ARL-Q870 includes DP, HDMI/DP interfaces for Quad independent display.

The IMB-ARL-Q870 provides two 2.5GbE interfaces through the Intel® I226V controller , Expansion and I/O include one PCIe x16 slot, three PCIe x4 slots, two COM ports, six USB 3.2 Gen 2, two USB 3.2 Gen 1 and four USB 2.0 via internal pin headers and four COM ports via internal pin headers.

## 1.2 Features

Some of the IMB-ARL-Q870 motherboard features are listed below:

- ATX form factor
- LGA1851 15th generation Arrow Lake-S Intel® Ultra Processor supported
- Intel® Q870 chipset
- Two 288-pin 5600MHz Dual-Channel DDR5 SDRAM Unbuffered, Clocked Unbuffered DIMM (CUDIMM) supported up to 192 GB
- One Intel® I226V 2.5GbE controller
- One Intel® I226-LM 2.5GbE controller
- Quad independent display by DP, HDMI and USB4 interfaces
- Four SATA 6Gb/s connectors
- Six USB 3.2 Gen 2 ports on the rear panel
- One PCIe x16 slot
- Three PCIe x4 slots
- Six serial ports (two on rear panel, the others via internal pin header)
- TPM 2.0 security function supported by PTT (Platform Trust Technology), based on BIOS setting
- RoHS compliant

IMB-ARL-Q870

1.3 Connectors

The connectors on the IMB-ARL-Q870 are shown in the figure below.

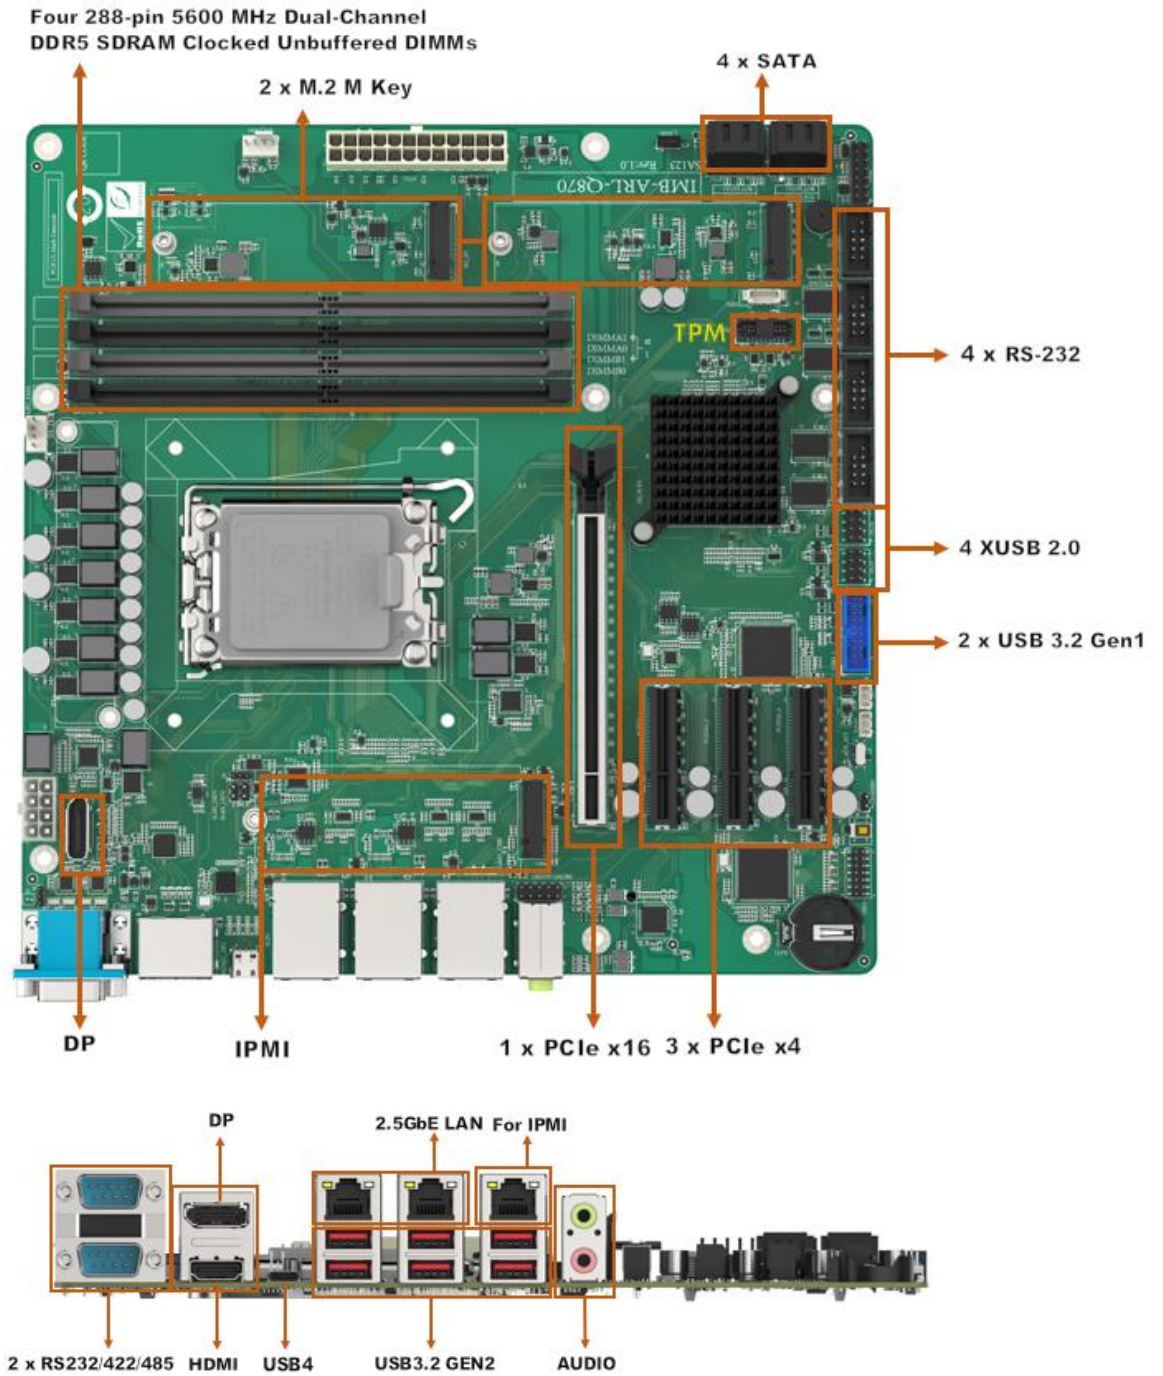


Figure 1-2: Connectors

## 1.4 Dimensions

The main dimensions of the IMB-ARL-Q870 are shown in the diagram below.

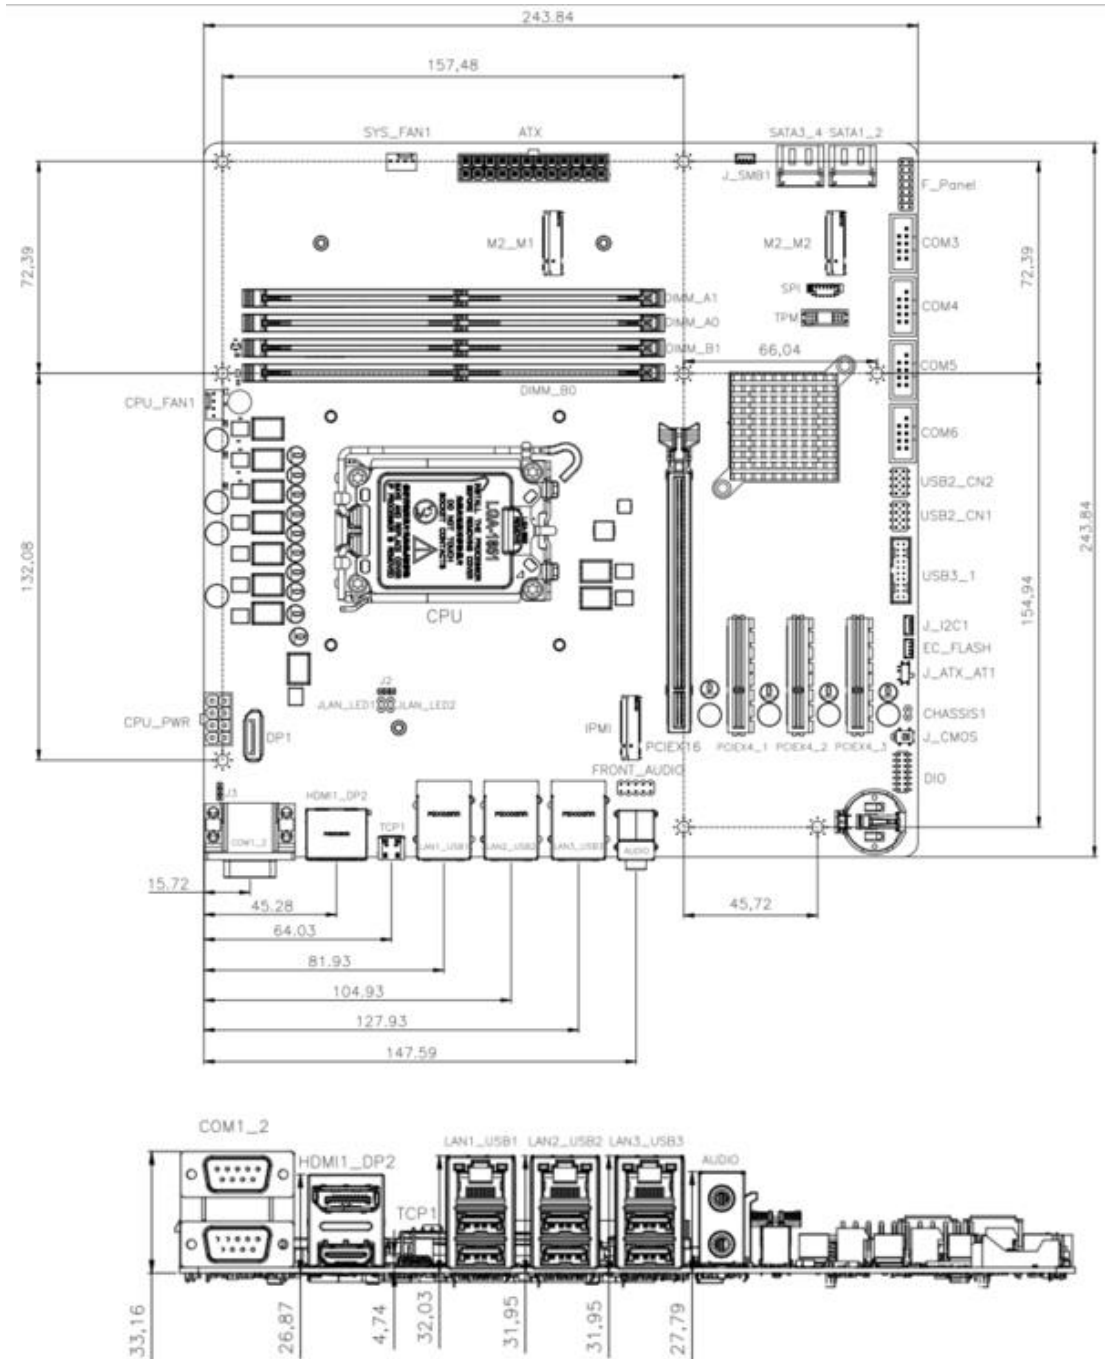


Figure 1-3: IMB-ARL-Q870 Dimensions (mm)

IMB-ARL-Q870

1.5 Data Flow

Figure 1-4 shows the data flow between the system chipset, the CPU and other components installed on the motherboard.

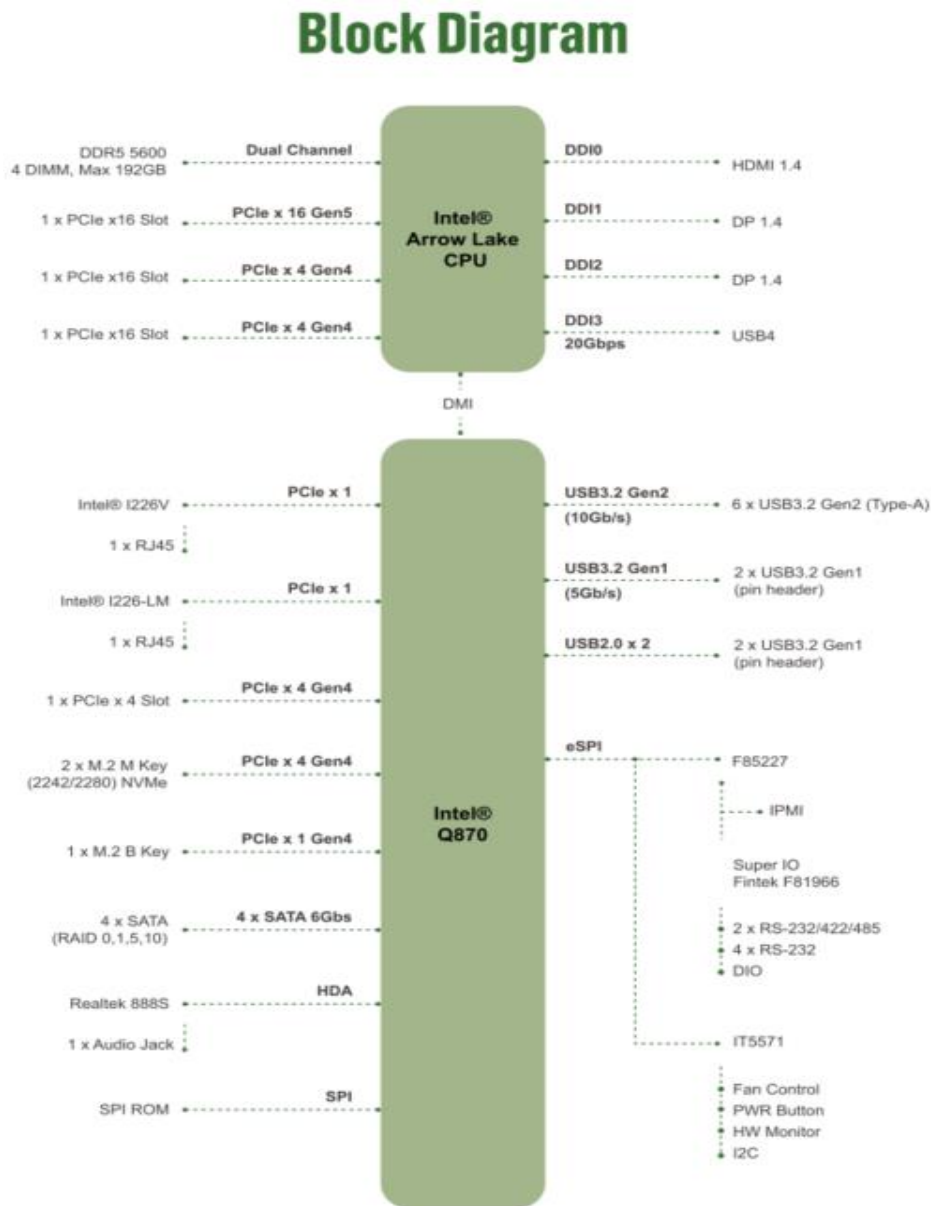


Figure 1-4: Data Flow Diagram

## 1.6 Technical Specifications

The IMB-ARL-Q870 technical specifications are listed below.

Specification/Model	IMB-ARL-Q870
<b>Form Factor</b>	ATX
<b>CPU Supported</b>	LGA1851 socket supports 15th generation Arrow Lake-S Intel® Ultra Processor (Series 2, up to 125W TDP CPU)
<b>Chipset</b>	Intel®Q870
<b>Memory</b>	Four 288-pin 5600 MHz Dual-Channel DDR5 SDRAM Unbuffered · Clocked Unbuffered DIMM(CUDIMM) supported up to 192GB (ECC & non-ECC support)
<b>Graphics Engine</b>	New Intel® Xe Graphics architecture with SRIOV, Genlock
<b>Display Output</b>	Quad independent display 1 x DP1.4 (up to 4K@60Hz) 1 x HDMI2.0(up to 4K@60Hz) 1 x USB4(40Gb/s speed, support DP 4096 x 2304 @60Hz,up to 15W per port power for accessories ) 1 x DP1.4 (up to 4K@60Hz) internal
<b>Ethernet Controllers</b>	LAN1: Intel® I226-LM 2.5GbE controller LAN2: Intel® I226V 2.5GbE controller
<b>Audio</b>	Realtek ALC888S HD codec 2 x Audio Jack (Line-in, Line-out) on rear IO 1 x Analog audio (2x5 pin)
<b>BIOS</b>	AMI UEFI BIOS
<b>Super I/O Controller</b>	Fintek F81966D
<b>Watchdog Timer</b>	Software programmable supports 1~255 sec. system reset

## IMB-ARL-Q870

<b>Expansions</b>	<p>1 x PCIe x16 with Signal Gen5</p> <p>3 x PCIe x4 open-end Gen4</p> <p>1 x M.2 M Key (2280, PCIe x4) NVMe support</p> <p>1 x M.2 M Key (2280, PCIe x4) NVMe support</p> <p>1 x M.2 B key for IRIS2-2600</p>
<b>I/O Interface Connectors</b>	
<b>Chassis Intrusion</b>	1 x Chassis intrusion (1x2 pin)
<b>Digital I/O</b>	1 x 12-bit digital I/O (2x7 pin)
<b>Fan</b>	<p>1 x CPU fan connector (1x4 pin)</p> <p>1 x System fan connector (1x4 pin)</p>
<b>I<sup>2</sup>C</b>	1 x I2C (1x4 pin)
<b>LAN LED</b>	2 x LAN LED (1x2 pin)
<b>Serial ATA</b>	4 x SATA 6Gb/s (RAID 0/1/5/10 supported)
<b>Serial Ports</b>	<p>2 x RS-232/422/485 (RS-485 support AFC)</p> <p>4 x RS-232 (2x5 pin, P=2.54)</p>
<b>SMBus</b>	1 x SMBus (1x4 pin)
<b>USB Ports</b>	<p>6 x USB 3.2 Gen2 (Type-A) (10Gb/s)</p> <p>4 x USB 2.0 (2x4 pin, P=2.54)</p> <p>2 x USB 3.2 Gen1 (2 X 10PIN P=2.00 pin wafer) (5Gb/s)</p>
<b>Environmental and Power Specifications</b>	
<b>Power Supply</b>	<p>ATX/AT power supply</p> <p>Support AT/ATX mode</p> <p>ErP/EuP Compliant</p>
<b>Power Consumption</b>	TBD
<b>Operating Temperature</b>	0°C ~ 60°C
<b>Storage Temperature</b>	-30°C ~ 70°C
<b>Operating Humidity</b>	5% ~ 95% (non-condensing)
<b>Physical Specifications</b>	
<b>Dimensions</b>	244 mm x 244 mm

<b>Weight (GW/NW)</b>	1200 g/700 g
<b>Certification</b>	CE/FCC compliant

**Table 1-1: IMB-ARL-Q870 Specifications**

Chapter

2

# Packing List

---

## 2.1 Anti-static Precautions

---



### WARNING!

Static electricity can destroy certain electronics. Make sure to follow the ESD precautions to prevent damage to the product, and injury to the user.

---

Make sure to adhere to the following guidelines:

- **Wear an anti-static wristband:** Wearing an anti-static wristband can prevent electrostatic discharge.
- **Self-grounding:** Touch a grounded conductor every few minutes to discharge any excess static buildup.
- **Use an anti-static pad:** When configuring any circuit board, place it on an anti-static mat.
- **Only handle the edges of the PCB:** Don't touch the surface of the motherboard. Hold the motherboard by the edges when handling.

## 2.2 Unpacking Precautions

When the IMB-ARL-Q870 is unpacked, please do the following:

- Follow the anti-static guidelines above.
- Make sure the packing box is facing upwards when opening.
- Make sure all the packing list items are present.

**IMB-ARL-Q870**





**2.3 Packing List**



**NOTE:**

If any of the components listed in the checklist below are missing, do not proceed with the installation. Contact the IEI reseller or vendor the IMB-ARL-Q870 was purchased from or contact an IEI sales representative directly by sending an email to [sales@ieiworld.com](mailto:sales@ieiworld.com).



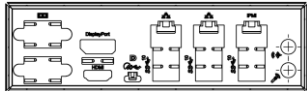




The IMB-ARL-Q870 is shipped with the following components:

Quantity	Item and Part Number	Image
1	IMB-ARL-Q870 single board computer	
2	SATA cable (P/N: 32801-012500-100-RS)	
1	I/O shielding (P/N: 45014-0118C0-00-HF)	
1	Quick installation guide (P/N: 51000-025560-HF)	 <p><b>IMB-ARL-Q870</b> Micro-ATX Industrial Motherboard</p> <p><b>Quick Installation Guide</b> Version 1.00      October, 2025</p> <div style="border: 1px solid black; padding: 5px;"> <p><b>Features</b></p> <ul style="list-style-type: none"> <li>• LGA1851 Intel® 10th Generation Ultra processor</li> <li>• Dual-channel DDR4 memory</li> <li>• Support DisplayPort, HDMI and USB4</li> <li>• Support Intel vPro</li> <li>• Support one PCIe x16 and three PCIe x4</li> </ul> <p><b>Packing List</b></p> <ul style="list-style-type: none"> <li>• 1 x IMB-ARL-Q870 single board computer</li> <li>• 1 x I/O Shielding</li> <li>• 2 x SATA cable</li> <li>• 1 x QIG (Quick Installation Guide)</li> </ul> </div>



**Table 2-1: Packing List**

## 2.4 Optional Items

The following are optional components which may be separately purchased:

Item and Part Number	Image
Dual-port USB cable with bracket (P/N: CB-USB02-RS)	
SATA power cable (P/N: 32102-000100-200-RS)	
USB 3.0 cable with bracket (P/N: 19800-010500-200-RS)	
RS-232 cable, 230mm · P=2.54 (P/N: 32205-000702-100-RS)	
Realtek ALC888S 7.1 Channel HD Audio peripheral board, RoHS (P/N: AC-KIT-888S-R20)	
High-performance cooler, 65W (72 x 70 x 25.5 mm) (P/N: 19100-000323-00-RS)	
High-performance cooler, 125W (87.8 x 66.5 x 75 mm) (P/N: 19100-000326-00-RS)	

**IMB-ARL-Q870**

Item and Part Number	Image
High-performance cooler, 80W (72 x 48.5 x 73.5 mm) (P/N: 19100-000333-00-RS)	
IPMI 2.0 adapter card with AST2600 BMC chip with KVM function for iEi iRIS2 Connector IPMI 2.0 module (P/N: IRIS2-2600-R10)	

**Table 2-2: Optional Items**

Chapter

**3**

# Connectors

---

## IMB-ARL-Q870

### 3.1 Peripheral Interface Connectors

This chapter details all the peripheral interface connectors.

#### 3.1.1 IMB-ARL-Q870 Layout

The figures below show all the peripheral interface connectors.

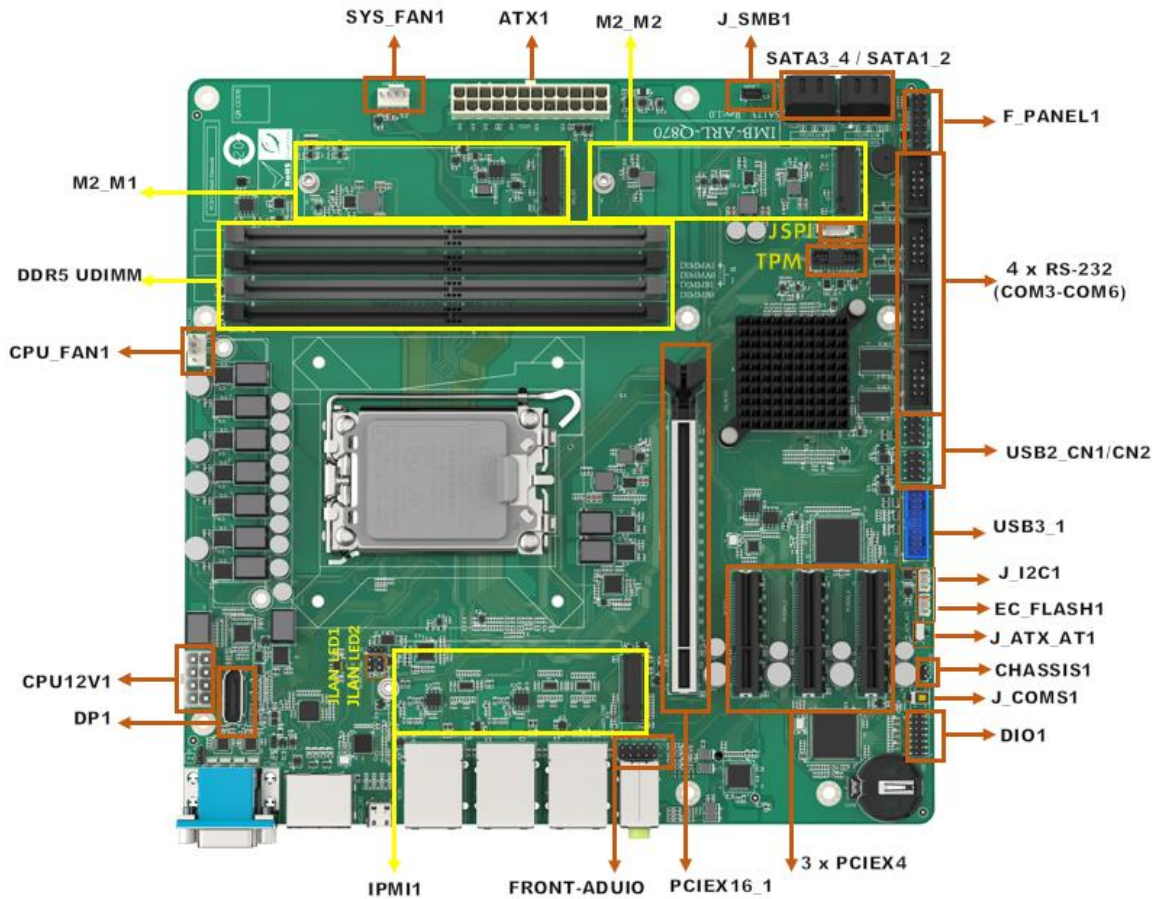


Figure 3-1: Peripheral Interface Connectors

### 3.1.2 Peripheral Interface Connectors

The table below lists all the connectors on the board.

Connector	Type	Label
AT/ATX power mode setting	3-pin slide switch	J_ATX_AT1
Clear CMOS jumper	4-pin tact switch	J_CMOS1
Flash Descriptor security override jumper	4-pin wafer, P=1.25mm	EC_FLASH1
Audio connector for IEI AC-KIT-888S kit	10-pin header, P=2.54mm	FRONT-AUDIO
ATX power connector	24-pin connector	ATX1
ATX CPU 12V power connector	8-pin connector	CPU12V1
RTC battery connector	Battery holder	BAT1
Chassis intrusion connector	2-pin header, P=2.54MM	CHASSIS1
DDR5 UDIMM slots	288-pin socket	BIIMMA0/B0, BIMMA1/B1
Digital I/O connector	14-pin header, P=2.00MM	DIO1
Fan connectors	4-pin wafer	CPU_FAN1, SYS_FAN1,
Front panel connector	14-pin header, P=2.54MM	F_PANEL1
I <sup>2</sup> C connector	4-pin wafer, P=1.25mm	J_I2C1
LAN link LED connector	2-pin header, P=2.54MM	JLAN_LED1, JLAN_LED2
RS-232 serial port connectors	9-pin header, P=2.54MM	COM3, COM4, COM5, COM6
SATA 6Gb/s connectors	14- pin SATA double Layer	SATA1_2, SATA3_4
SMBus connector	4-pin wafer, P=1.25mm	J_SMB1
Flash SPI ROM connector	6-pin wafer, P=1.25MM	JSPI1

Connector	Type	Label
Internal USB 2.0 connector	8-pin header, P=2.54MM	USB2_CN1 USB2_CN2
Display Port	DIP,20pin,180° display port	DP1
PCIe x4 slot	PCIe x4 slot	PCIEX4_1 PCIEX4_2 PCIEX4_4
PCIe x16 slot	PCIe x16 slot	PCIEX16

**Table 3-1: Peripheral Interface Connectors**

### 3.1.3 External Interface Panel Connectors

The table below lists the connectors on the external I/O panel.

Connector	Type	Label
External RS-232/422/485 Connector	Dual DB-9	COM1_2
External HDMI&DP combo connector	DisplayPort, HDMI	HDMI_DP1
External 2.5GbE RJ-45 and dual USB 3.2 Gen 2 combo connector	RJ-45, dual USB 3.2 Gen 2	LAN1_USB1 LAN2_USB2 LAN3_USB3
USB Type C Receptacle Connector	USB4 TYPE C	TCP1
Audio JACK	Audio JACK	Audio1

**Table 3-2: Rear Panel Connectors**


### 3.2 Internal Peripheral Connectors

The section describes all of the connectors on the IMB-ARL-Q870.

#### 3.2.1 ATX CPU 12V Power Connector

- CN Label:** CPU12V1
- CN Type:** 8-pin Molex power connector
- CN Location:** See **Figure 3-2**.

The ATX CPU 12V power connector Supply 12V power to the CPU.

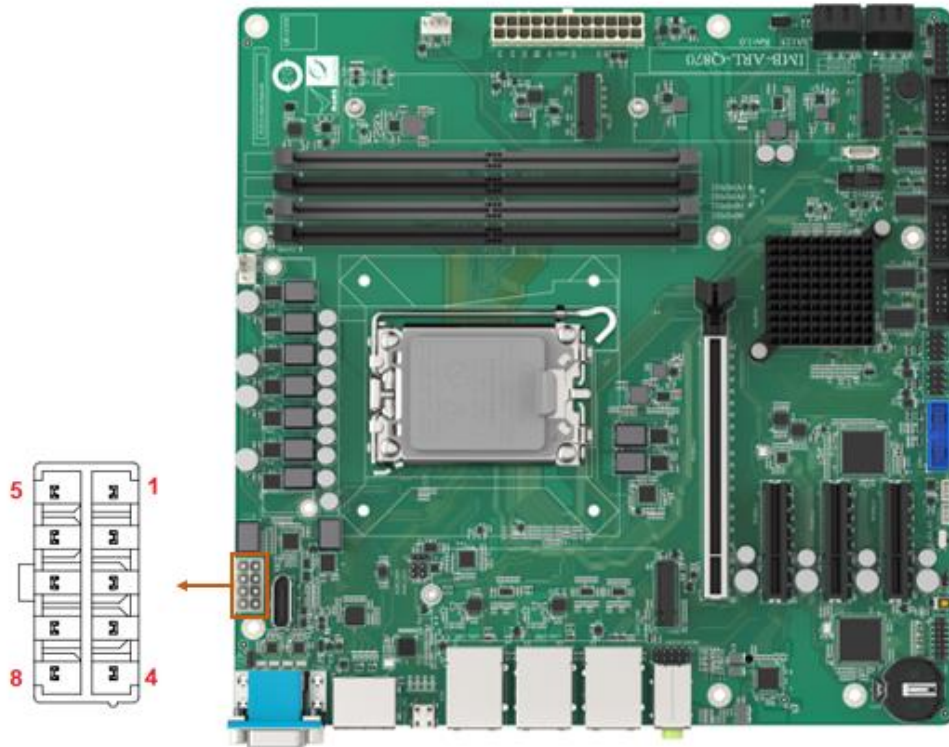


**Figure 3-2: ATX CPU 12V power connector location**

**IMB-ARL-Q870**

**3.2.2 AT/ATX Power Mode Setting**

- CN Label:** J\_ATX\_AT1
- CN Type:** 3-pin slide switch
- CN Location:** See **Figure 3-3**
- CN Pinouts:** See **Table 3-3**

The AT/ATX power mode selection is made through the AT/ATX power mode switch which is shown in Figure3-6.

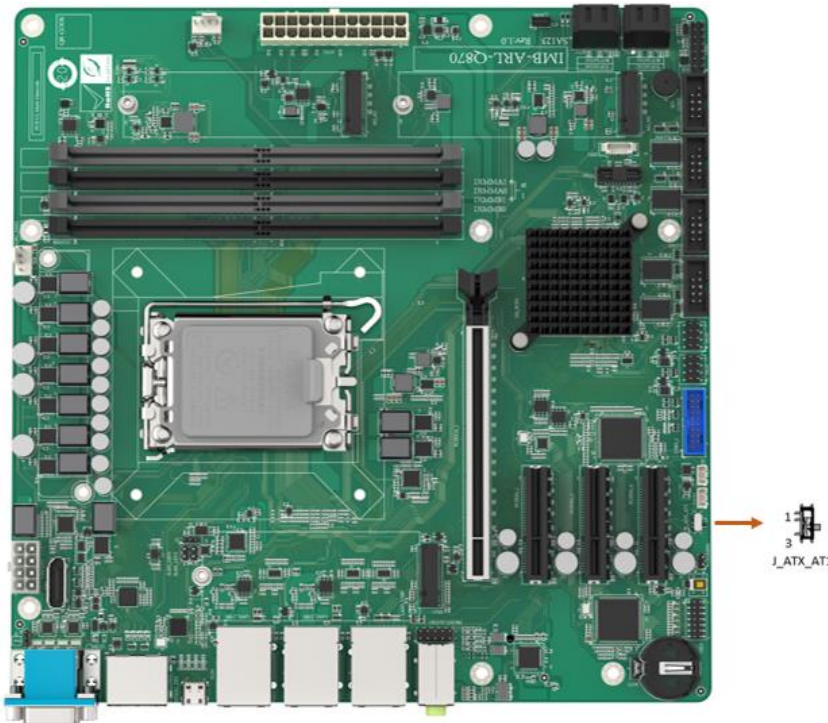

**Figure 3-3: AT/ATX Power Mode Switch Locations**


Pin	Description	Pin	Description
Short 1 - 2	ATX Power Mode (default)	Short 2 - 3	AT Power Mode

**Table 3-3: AT/ATX Power Mode Switch Settings**

### 3.2.3 Clear CMOS Jumper

- CN Label:** J\_CMOS1
- CN Type:** 4-pin tact switch
- CN Location:** See Figure 3-4
- CN Pinouts:** See Table 3-4

The J\_CMOS1 is used for reset PCH registers in the RTC WELL to their default value.

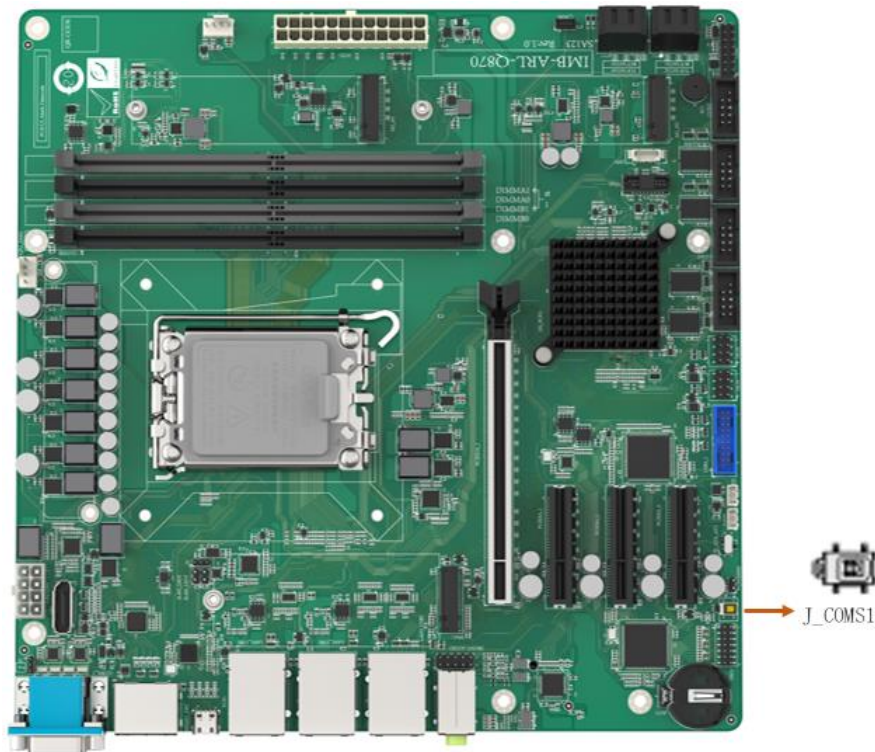

**Figure 3-4: Clear CMOS Jumper Location**

Pin	Description
Open (default)	Keep CMOS Setup (Normal Operation)
Short	Clear CMOS Setup


**Table 3-4: Clear CMOS Jumper Pinouts**

**IMB-ARL-Q870**

**3.2.4 Audio Connector for IEI AC-KIT-888S Kit**

- CN Label:** FRONT-AUDIO
- CN Type:** 10-pin header, P=2.54 mm
- CN Location:** See Figure 3-5
- CN Pinouts:** See Table 3-5

This connector connects to speakers, a microphone and an audio input.

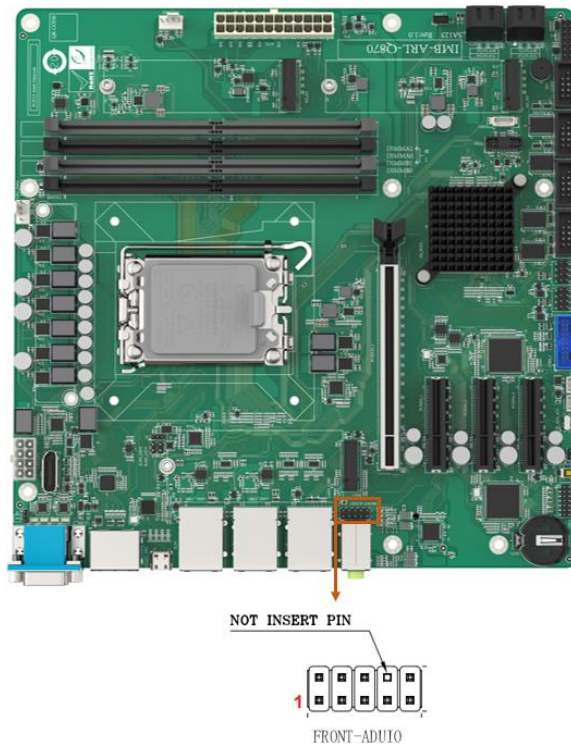

**Figure 3-5: Audio Connector for IEI AC-KIT-888S Kit Location**


Pin	Description	Pin	Description
1	HDA_SYNC_R	2	HDA_BCLK_R
3	HDA_SDO_R	4	HDA_PCBEPC
5	HDA_SDI_0_R	6	HDA_RST_R
7	+5V	8	GND
9	+12V	10	GND

**Table 3-5: Audio Connector for IEI AC-KI-888S Kit Pinouts**

### 3.2.5 ATX Power Connector

- CN Label:** ATX1
- CN Type:** 24-pin connector
- CN Location:** See Figure 3-6
- CN Pinouts:** See Table 3-6

The ATX power connector connects to an ATX power supply.

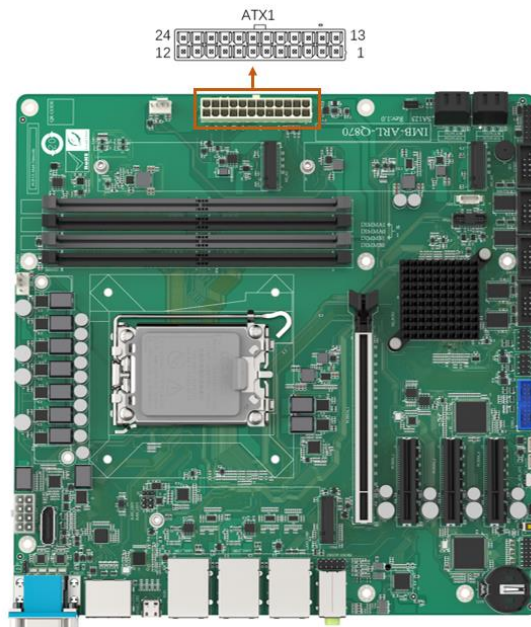

**Figure 3-6: ATX Power Connector Location**

Pin	Description	Pin	Description
1	+3.3V	13	+3.3V
2	+3.3V	14	-12V
3	GND	15	GND
4	+5V	16	PS_ON
5	GND	17	GND
6	+5V	18	GND
7	GND	19	GND
8	Power good	20	-5V

IMB-ARL-Q870

Pin	Description	Pin	Description
9	5VSB	21	+5V
10	+12V	22	+5V
11	+12V	23	+5V
12	+3.3V	24	GND

Table 3-6: ATX Power Connector Pinouts

3.2.6 RTC Battery Connector

- CN Label:** BAT1
- CN Type:** Battery holder
- CN Location:** See Figure 3-7
- CN Pinouts:** See Table 3-7

The RTC battery connector use for connect battery to supply RTC.

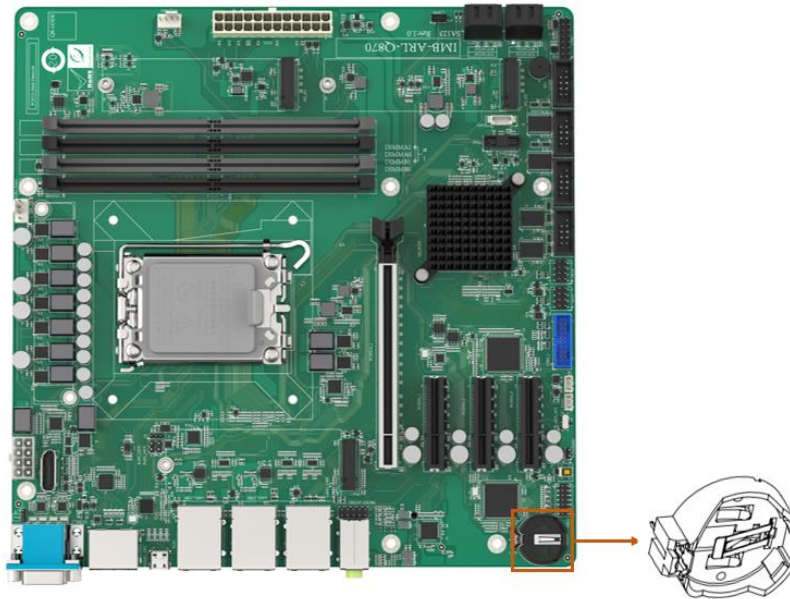


Figure 3-7: RTC Battery Connector Location


Pin	Description	Pin	Description
1	VBATT	2	GND

Table 3-7: RTC Battery Connector Pinouts

### 3.2.7 Chassis Intrusion Connector

- CN Label:** CHASSIS1
- CN Type:** 2-pin header, P=2.54mm
- CN Location:** See **Figure 3-8**
- CN Pinouts:** See **Table 3-8**

The chassis intrusion connector is for a chassis intrusion detection sensor or switch that detects if a chassis component is removed or replaced.

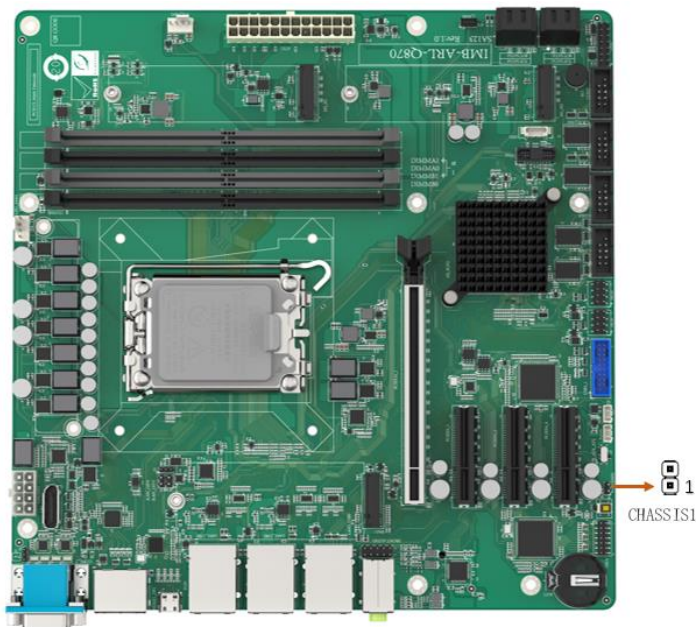

**Figure 3-8: Chassis Intrusion Connector Location**

Pin	Description
1	CASEOPEN_N
2	GND

**Table 3-8: Chassis Intrusion Connector Pinouts**

## IMB-ARL-Q870


### 3.2.8 DDR5 DIMM Sockets

**CN Label:** BIMMA0/B0, BIMMA1/B1

**CN Type:** DDR5 288-pin socket

**CN Location:** See **Figure 3-9**

The DIMM slots are for DDR5 UDIMM memory modules

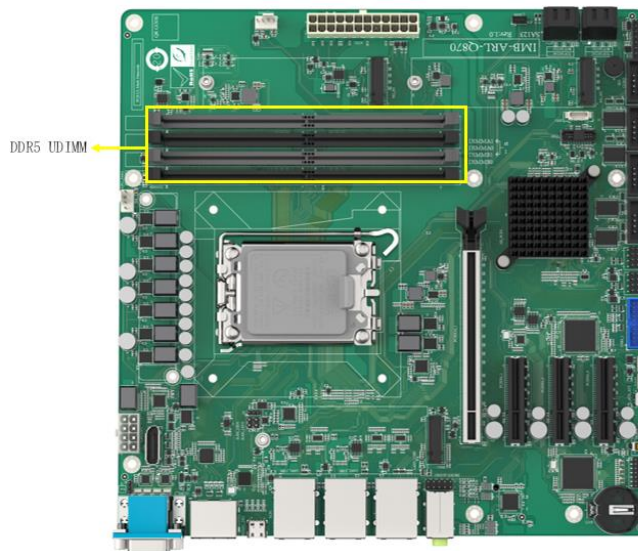


**Figure 3-9: DDR5 UDIMM Sockets Location**

### 3.2.9 Digital I/O Connector

- CN Label:** DIO1
- CN Type:** 14-pin header, P=2.0 mm
- CN Location:** See **Figure 3-10**
- CN Pinouts:** See **Table 3-9**

The Digital I/O connector provides programmable input and output for external devices.

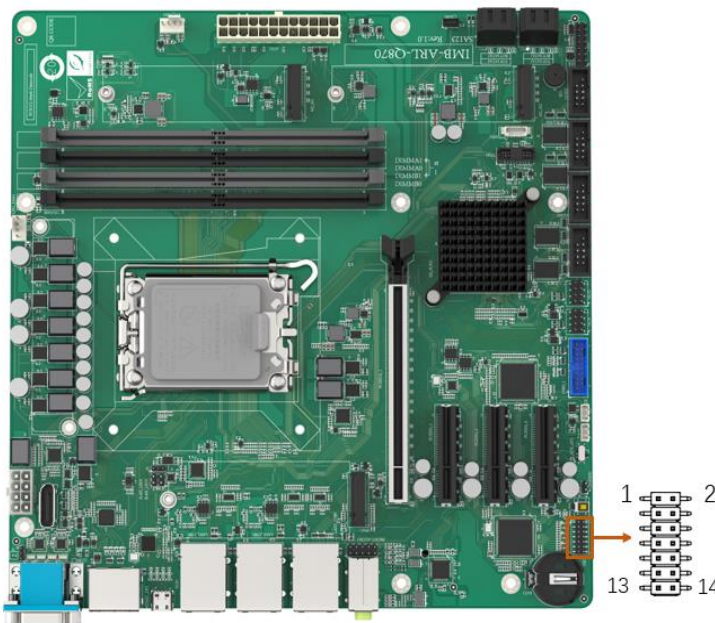

**Figure 3-10: Digital I/O Connector Location**

Pin	Description	Pin	Description
1	GND	2	VCC
3	Output 5	4	Output 4
5	Output 3	6	Output 2
7	Output 1	8	Output 0
9	Input 5	10	Input 4
11	Input 3	12	Input 2
13	Input 1	14	Input 0


**Table 3-9: Digital I/O Connector Pinouts**

**IMB-ARL-Q870**

**3.2.10 CPU\_FAN1 Connector**

- CN Label:** CPU\_FAN1
- CN Type:** 4-pin wafer
- CN Location:** See Figure 3-11
- CN Pinouts:** See Table 3-10

The fan connector attaches to a CPU cooling fan.

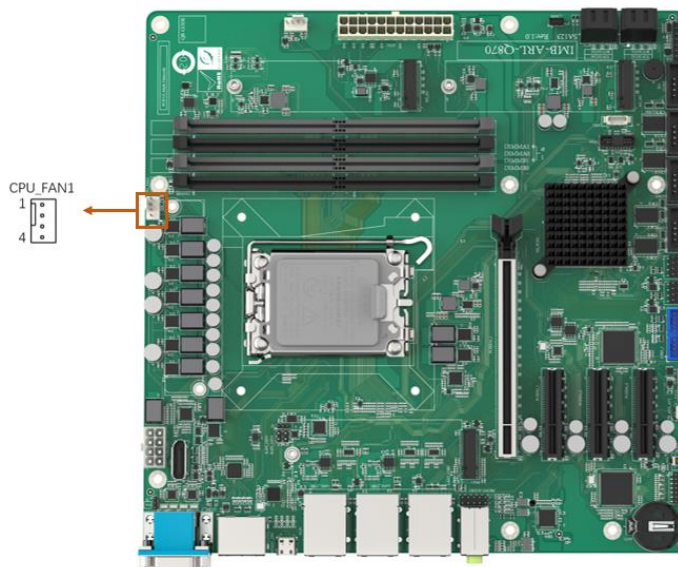

**Figure 3-11: CPU Fan Connector Location**


Pin	Description	Pin	Description
1	GND	3	FANIO
2	+12V	4	PWM(+5V)

**Table 3-10: CPU Fan Connector Pinouts**

### 3.2.11 SYS\_FAN Connector

- CN Label:** SYS\_FAN1
- CN Type:** 4-pin wafer
- CN Location:** See Figure 3-12
- CN Pinouts:** See Table 3-11

SYS\_FAN1 connector attaches to a system cooling fan.

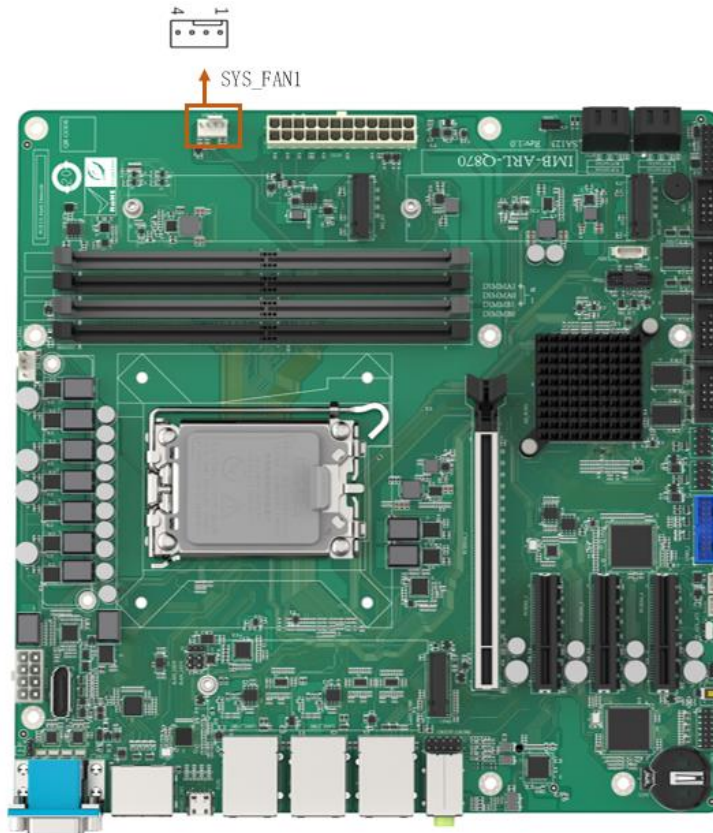

**Figure 3-12: System FAN1 Location**


Pin	Description	Pin	Description
1	GND	3	FANIO
2	+12V	4	PWM(+5V)

**Table 3-11: System FAN1 Pinout**

**IMB-ARL-Q870**

**3.2.12 Front Panel Connector**

- CN Label:** F\_PANEL1
- CN Type:** 14-pin header, p=2.54 mm
- CN Location:** See Figure 3-13
- CN Pinouts:** See Table 3-12

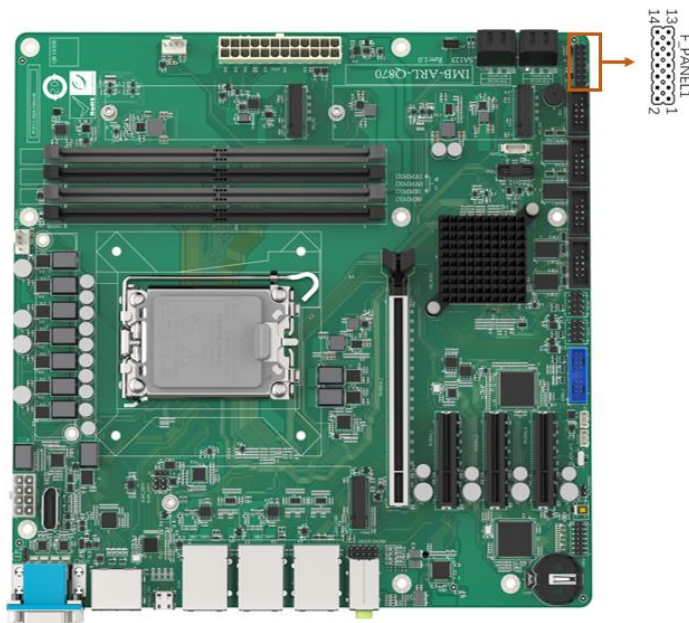

**Figure 3-13: Front Panel Connector Location**


	Pin	Description	Pin	Description	
PWRLED	1	PWR_LED+	2	SPKR+	SPKR
	3	NC	4	NC	
	5	PWR_LED-	6	NC	
PWRBTN	7	PWR_BTN+	8	SPKR-	
	9	PWR_BTN-	10	NC	
HDDLED	11	HDD_LED+	12	Reset+	RESET
	13	HDD_LED-	14	Reset-	

**Table 3-12: Front Panel Connector Pinouts**

### 3.2.13 I<sup>2</sup>C Connector

- CN Label:** J\_I2C1
- CN Type:** 4-pin wafer, P=1.25 mm
- CN Location:** See **Figure 3-14**
- CN Pinouts:** See **Table 3-13**

The I<sup>2</sup>C connector is used to connect I<sup>2</sup>C-bus devices to the mainboard.

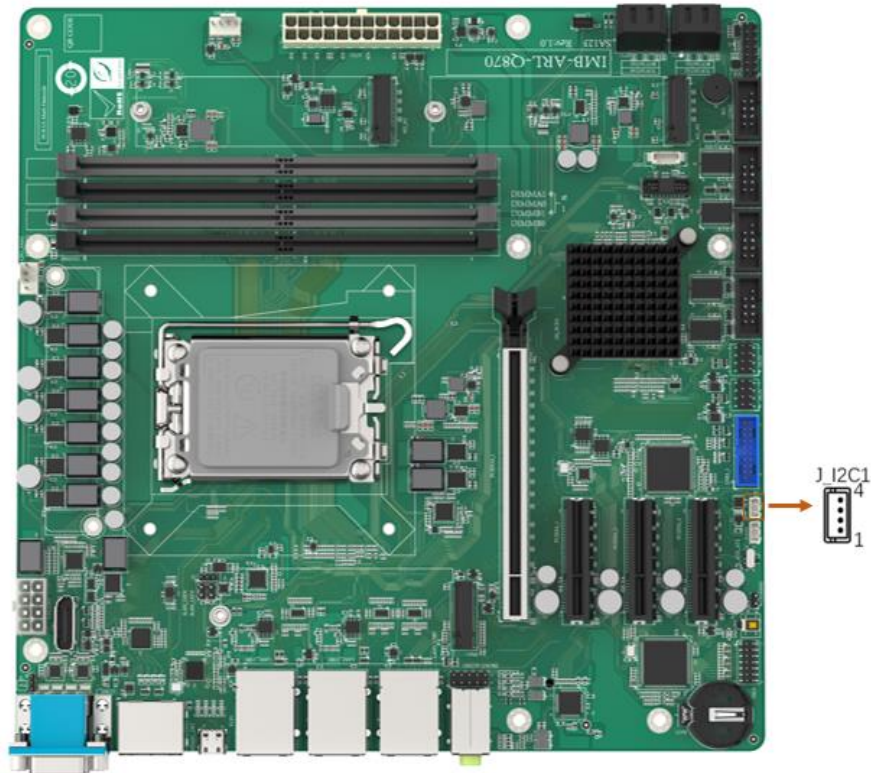

**Figure 3-14: I<sup>2</sup>C Connector Location**

Pin	Description	Pin	Description
1	GND	3	I2C_CLK
2	I2C_DAT	4	+5V


**Table 3-13: I<sup>2</sup>C Connector Pinouts**

**IMB-ARL-Q870**

**3.2.14 LAN Link LED Connector**

- CN Label:** JLAN\_LED1, JLAN\_LED2
- CN Type:** 2-pin header, P=2.54 mm
- CN Location:** See **Figure 3-15**
- CN Pinouts:** See **Table 3-14**

The LAN LED connectors are used to connect to the LAN LED indicators on the chassis to indicate users the link activities of the LAN1 and LAN2 ports.

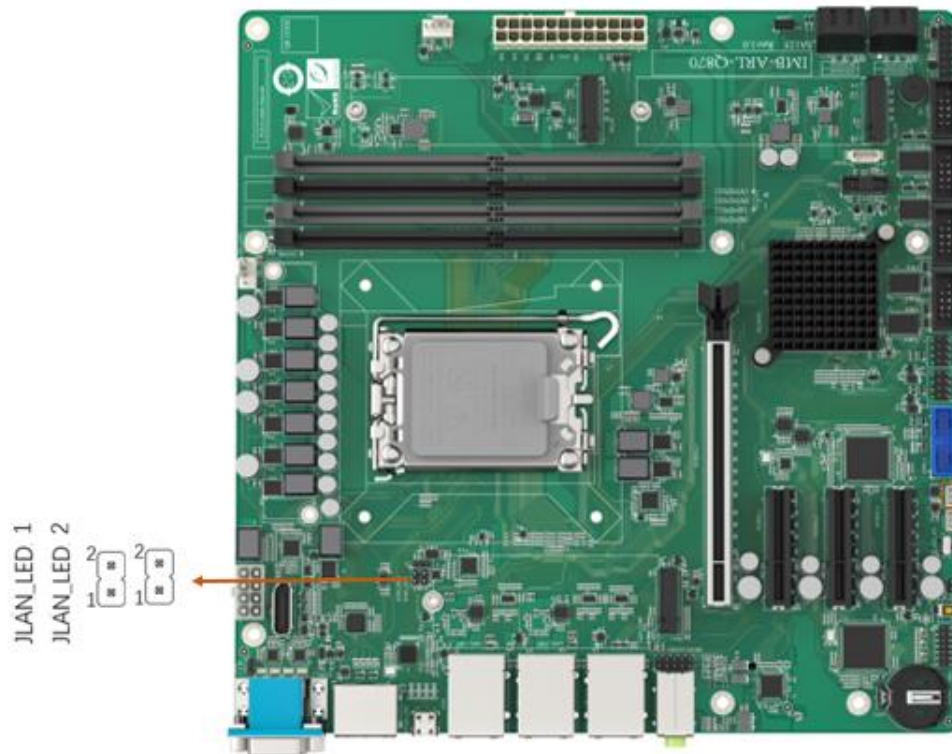

**Figure 3-15: LAN LED Connector Locations**


Pin	Description
1	+3.3V
2	LAN1_LED_LINK#_ACT

**Table 3-14: LAN LED Connector Pinouts**

**3.2.15 Serial Port, RS-232**

- CN Label:** COM3, COM4, COM5, COM6
- CN Type:** 10-pin header, P=2.54mm
- CN Location:** See Figure 3-16
- CN Pinouts:** See Table 3-15

Each of these connectors provides RS-232 connections.

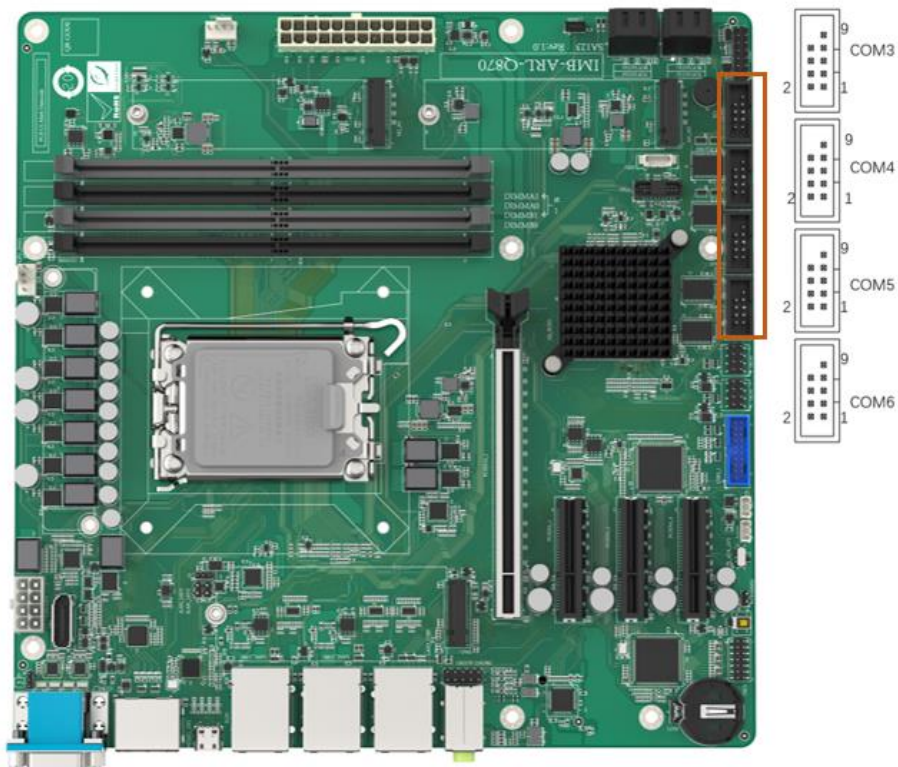

**Figure 3-16: RS-232 Serial Port Connector Location**

Pin	Description	Pin	Description
1	DCD	2	DSR
3	RXD	4	RTS
5	TXD	6	CTS
7	DTR	8	RI

**IMB-ARL-Q870**


Pin	Description	Pin	Description
9	GND	10	GND

**Table 3-15: RS-232 Serial Port Connector Pinouts**

**3.2.16 SATA 6Gb/s Connectors**

- CN Label:** SATA1\_2, SATA3\_4
- CN Type:** 14- pin SATA Double Layer, 90°
- CN Location:** See Figure 3-17
- CN Pinouts:** See Table 3-16

The SATA drive connectors can be connected to SATA drives and support up to 6Gb/s data transfer rate.

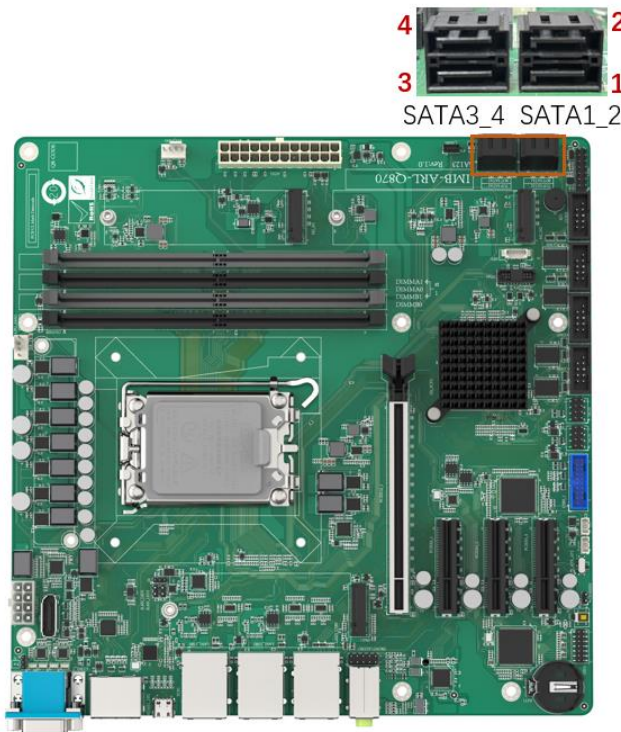

**Figure 3-17: SATA 6Gb/s Connector Locations**

Pin	Description
1	GND


Pin	Description
2	SATA_TX+
3	SATA_TX-
4	GND
5	SATA_RX-
6	SATA_RX+
7	GND
8	N/C

**Table 3-16: SATA 6Gb/s Connector Pinouts**

### 3.2.17 SMBus Connector

- CN Label:** J\_SMB1
- CN Type:** 4-pin wafer, P=1.25 mm
- CN Location:** See **Figure 3-18**
- CN Pinouts:** See **Table 3-17**

The SMBus (System Management Bus) connector provides low-speed system management communications.

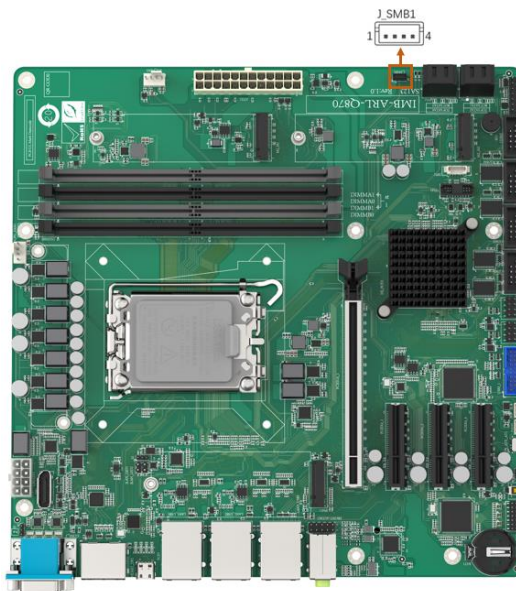

**Figure 3-18: SMBus Connector Location**

IMB-ARL-Q870

Pin	Description
1	GND
2	SMB_DATA
3	SMB_CLK
4	+5V

Table 3-17: SMBus Connector Pinouts

3.2.18 Flash SPI ROM Connector

- CN Label:** JSPI1
- CN Type:** 6-pin wafer, P=1.25 mm
- CN Location:** See Figure 3-19
- CN Pinouts:** See Table 3-18

The Flash SPI ROM connector is used to flash the SPI ROM.

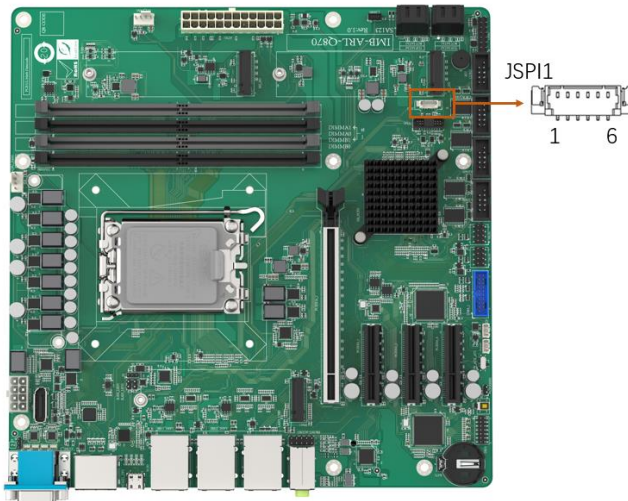


Figure 3-19: Flash SPI ROM Connector Location


Pin	Description	Pin	Description
1	+3.3V	4	SPI_CLK
2	SPI_CS#	5	SPI_SI
3	SPI_SO	6	GND

Table 3-18: Flash SPI ROM Connector Pinouts

### 3.2.19 EC\_Flash1 EC ROM Connector

- CN Label:** EC\_Flash1
- CN Type:** 4-pin header, P=1.25mm
- CN Location:** See Figure 3-20
- CN Pinouts:** See Table 3-19

The Flash EC ROM connector is used to flash the EC ROM.

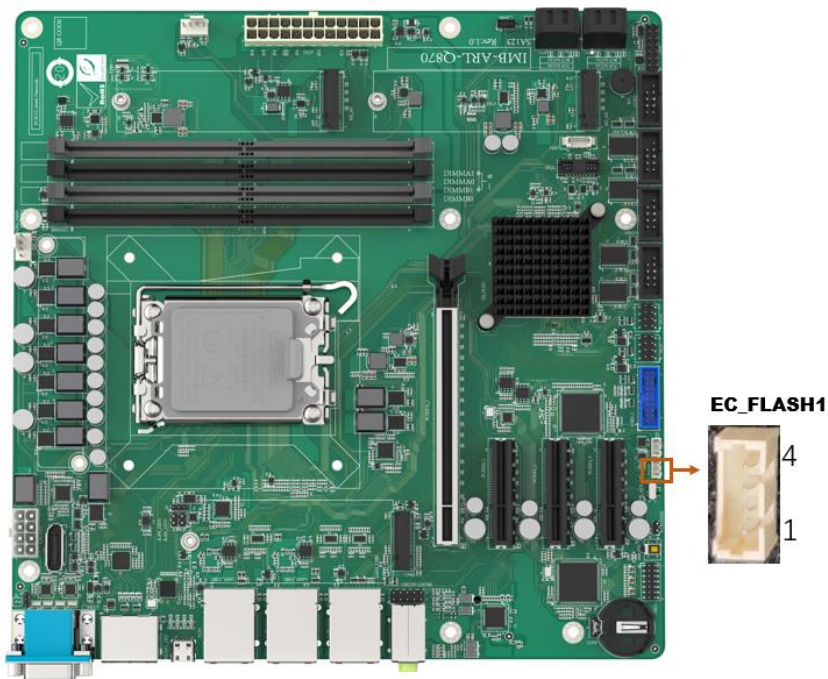

**Figure 3-20: EC\_Flash1 EC ROM Connector Location**

Pin	Description	Pin	Description
1	GND	2	EC_FLASH_DAI
3	EC_FLASH_CLK	4	NC


**Table 3-19: EC\_Flash1 EC ROM Connector Pinouts**

**IMB-ARL-Q870**

**3.2.20 Internal USB 2.0 Connector**

- CN Label:** USB2\_CN1, USB2\_CN2
- CN Type:** 8-pin header, P=2.54 mm
- CN Location:** See Figure 3-21
- CN Pinouts:** See Table 3-20

The Internal USB 2.0 connector connects to USB 2.0 devices.

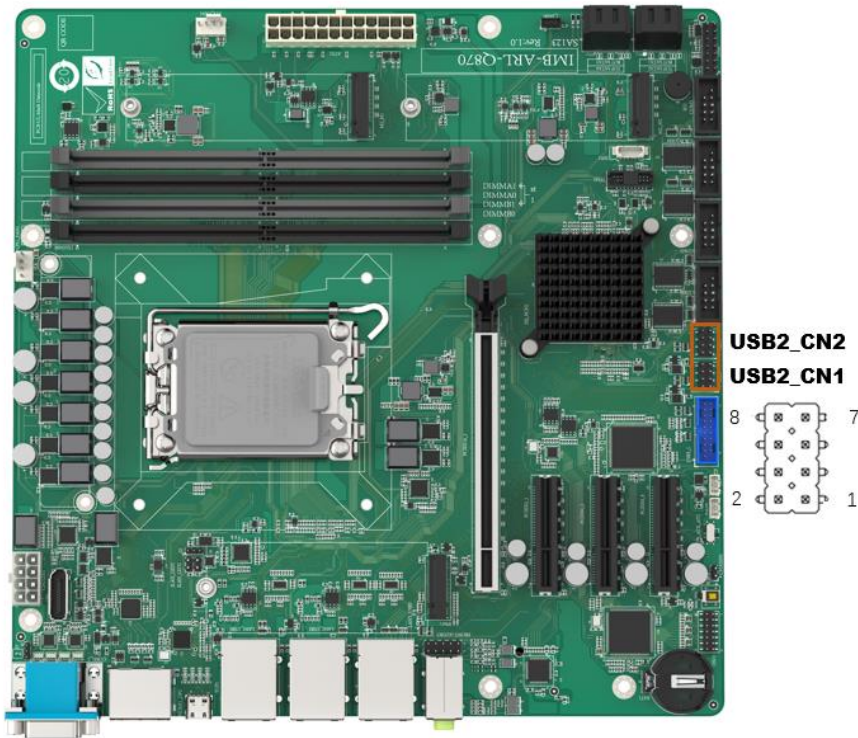

**Figure 3-21: Internal USB 2.0 Connector Locations**

Pin	Description	Pin	Description
1	VCC	2	GND
3	USB_DATA-	4	USB_DATA+
5	USB_DATA+	6	USB_DATA-
7	GND	8	VCC

**Table 3-20: Internal USB 2.0 Connector Pinouts**


### 3.2.21 PCIE x4 Slots

**CN Label:** PCIEX4\_1, PCIEX4\_2, PCIEX4\_4

**CN Type:** Socket, PCIEx4 GEN4

**CN Location:** See Figure 3-22

The PCIe x4 expansion card slots are for PCIe x4 expansion cards.

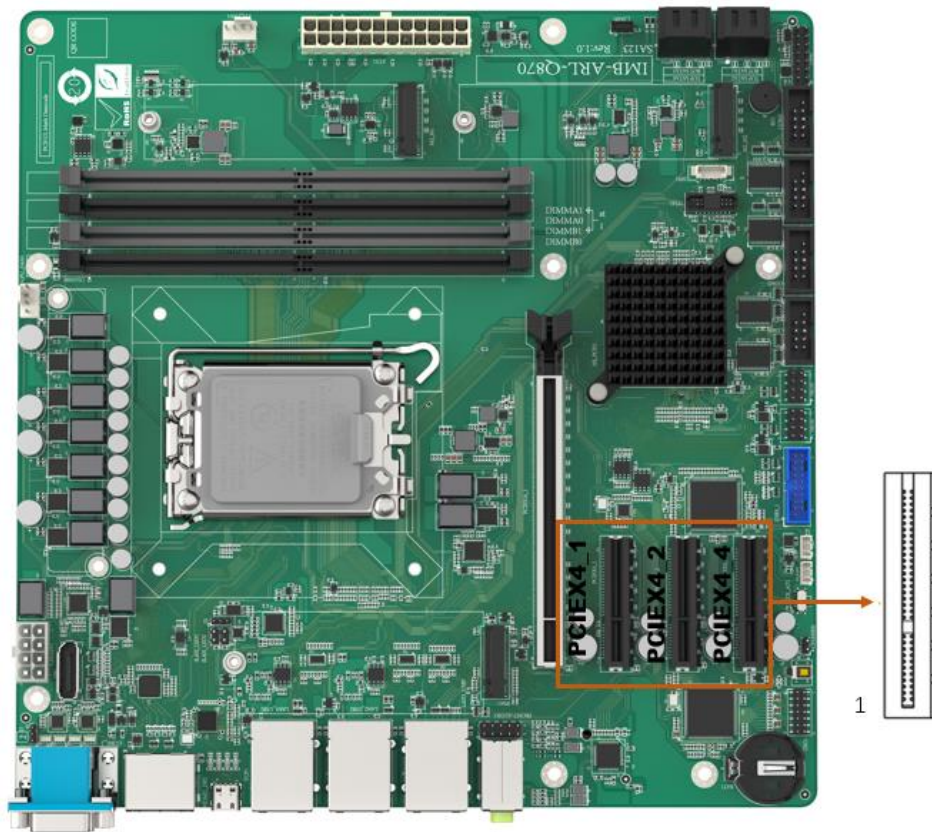

**Figure 3-22: PCIe x4 Slot Locations**

## IMB-ARL-Q870

### 3.2.22 PCIe x16 Slots

- CN Label:** PCIE1
- CN Type:** PCIe x16 slot
- CN Location:** See Figure 3-23

The PCIe x16 expansion card slots are for PCIe x16 expansion cards.


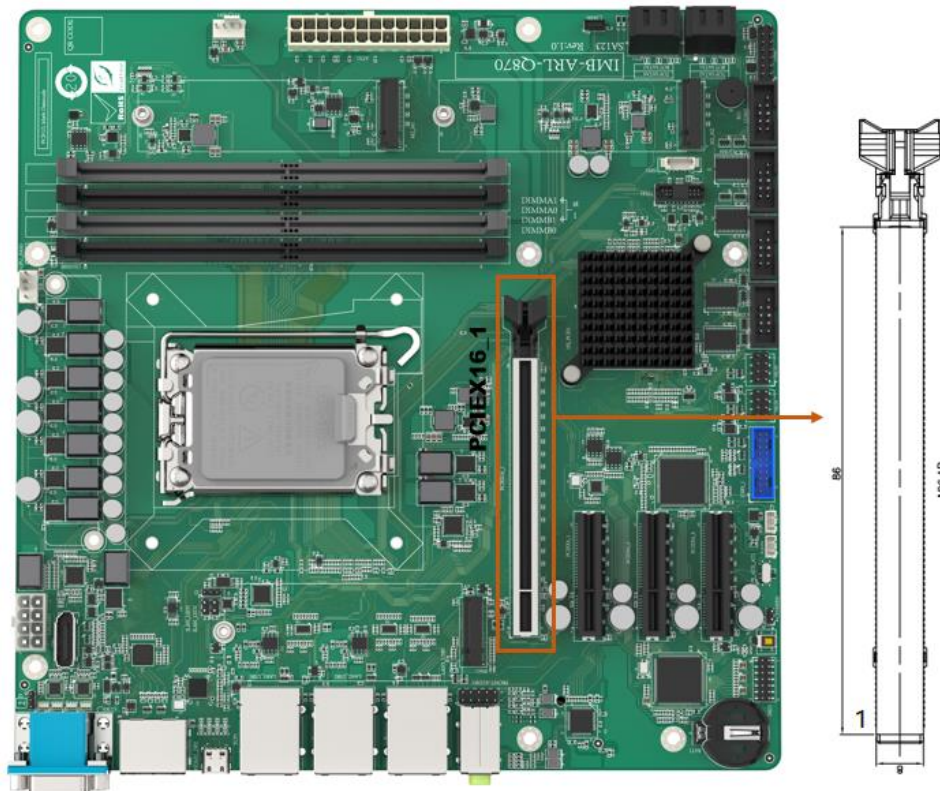


Figure 3-23: PCIe x8 Slot Locations

### 3.3 External Peripheral Interface Connector Panel

The figure below shows the external peripheral interface connector (EPIC) panel. The EPIC panel consists of the following:

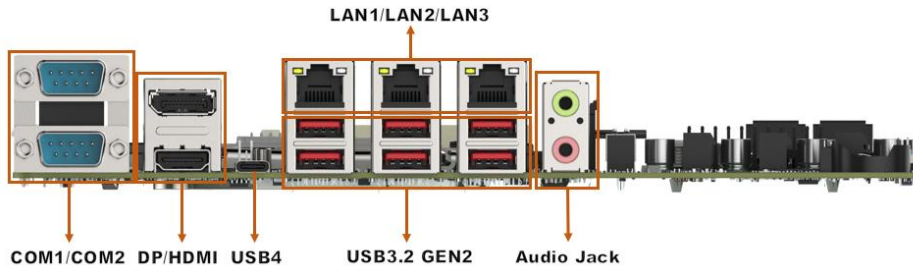

**Figure 3-24: External Peripheral Interface Connector**

#### 3.3.1 External RS-232/422/485 Combo Connector

- CN Label:** COM1\_2
- CN Type:** Dual DB-9
- CN Location:** See Figure 3-24
- CN Pinouts:** See Table 3-21

The COM1&COM2 connector connects to a serial device that supports RS-232/422/485 communications.

<b>PIN</b>	<b>RS-232</b>	<b>RS-422</b>	<b>RS-485</b>
1	DCD	TXD422-	TXD485-
2	RXD	TXD422+	TXD485+
3	TXD	RXD422+	
4	DTR	RXD422-	
5	GND		
6	DSR		
7	RTS		
8	CTS		
9	RI		

**Table 3-21: External RS-232/422/485 Connector Pinouts**

**3.3.2 External HDMI&DP Combo Connector**

- CN Label:** HDMI1\_DP2
- CN Type:** HDMI, DisplayPort
- CN Location:** See **Figure 3-24**
- CN Pinouts:** See **Table 3-22** and **Table 3-23**

The HDMI connector can connect to an HDMI device.

Pin	Description	Pin	Description
21	HDMI_DATA2P	31	GND
22	GND	32	HDMI_CLKN
23	HDMI_DATA2N	33	N/C
24	HDMI_DATA1P	34	N/C
25	GND	35	HDMI_CLK
26	HDMI_DATA1N	36	HDMI_SDA
27	HDMI_DATA0P	37	GND
28	GND	38	+5V
29	HDMI_DATA0N	39	HDMI_HPD
30	HDMI_CLKP		

**Table 3-22: HDMI Connector Pinouts**




**Figure 3-25: HDMI Connector**

The DP++ connector connects to a display device with DisplayPort interface.

Pin	Description	Pin	Description
1	LANE0P	11	GND
2	GND	12	LANE3N
3	LANE0N	13	CONFIG_A_1
4	LANE1P	14	CONFIG_A_2
5	GND	15	AUXP

Pin	Description	Pin	Description
6	LANE1N	16	GND
7	LANE2P	17	AUXN
8	GND	18	HPD
9	LANE2N	19	GND
10	LANE3P	20	+5V

**Table 3-23: DP++ Connector Pinouts**

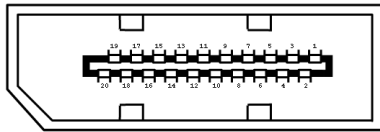

**Figure 3-26: DP++ Connector**

### 3.3.3 External 2.5GbE RJ-45 and Dual USB 3.2 Gen 2 Combo Connector

**CN Label:** LAN1\_USB1, LAN2\_USB2, LAN3\_USB3

**CN Type:** RJ45+USB 3.2 GEN2

**CN Location:** See **Figure 3-24**

**CN Pinouts:** See **Table 3-24** and **Table 3-25**

The external 2.5GbE RJ-45 and dual USB 3.2 Gen 2 connector on the IMB-ARL-Q870.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	VCC	10	VCC
2	USB_DATA-	11	USB_DATA-
3	USB_DATA+	12	USB_DATA+
4	GND	13	GND
5	USB3_RX-	14	USB3_RX-
6	USB3_RX+	15	USB3_RX+
7	GND	16	GND
8	USB3_TX-	17	USB3_TX-
9	USB3_TX+	18	USB3_TX+


**Table 3-24: USB 3.2 Gen 2 Connector**

**IMB-ARL-Q870**

<b>PIN</b>	<b>DESCRIPTION</b>	<b>PIN</b>	<b>DESCRIPTION</b>
1	LAN1_MD0+	5	LAN1_MD2+
2	LAN1_MD0-	6	LAN1_MD2-
3	LAN1_MD1+	7	LAN1_MD3+
4	LAN1_MD1-	8	LAN1_MD3-

**Table 3-25: 2.5 GbE RJ-45 Connector**

**LED A    LED B**

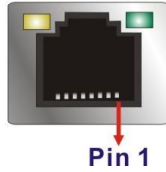

**Figure 3-27: LAN LED Location**

<b>LED</b>	<b>DESCRIPTION</b>	<b>LED</b>	<b>DESCRIPTION</b>
A	on: linked blinking: data is being sent/received	B	off: 10 Mb/s orange: 100 Mb/s green: 1000 Mb/s

**Table 3-26: LAN LED Pinouts**

Chapter

4

# Installation

---

## 4.1 Anti-static Precautions

---



### WARNING:

Failure to take ESD precautions during the installation of the IMB-ARL-Q870 may result in permanent damage to the IMB-ARL-Q870 and severe injury to the user.

---

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the IMB-ARL-Q870. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the IMB-ARL-Q870 or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- **Self-grounding:** Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- **Use an anti-static pad:** When configuring the IMB-ARL-Q870, place it on an anti-static pad. This reduces the possibility of ESD damaging the IMB-ARL-Q870.
- **Only handle the edges of the PCB:** When handling the PCB, hold the PCB by the edges.

## 4.2 Internal Peripheral Device Connections


This section outlines the installation of peripheral devices to the onboard connectors.

### 4.2.1 SATA Drive Connection

The IMB-ARL-Q870 is shipped with two SATA drive cables. To connect the SATA drives to the connectors, please follow the steps below.

**Step 1: Locate the connectors.** The locations of the SATA drive connectors are shown in **Chapter 3**.

**Step 2:** **Insert the cable connector.** Insert the cable connector into the on-board SATA drive connector until it clips into place. See **Figure 4-1**.

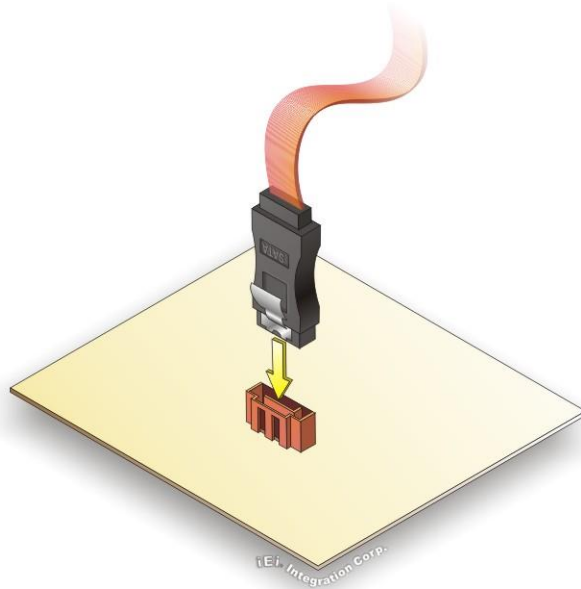


**Figure 4-1: SATA Drive Cable Connection**

**Step 3:** **Connect the cable to the SATA disk.** Connect the connector on the other end of the cable to the connector at the back of the SATA drive. See **Figure 4-2**.

**Step 4:** **Connect the SATA power cable.** Connect the SATA power connector to the back of the SATA drive. See **Figure 4-2**.

**IMB-ARL-Q870**

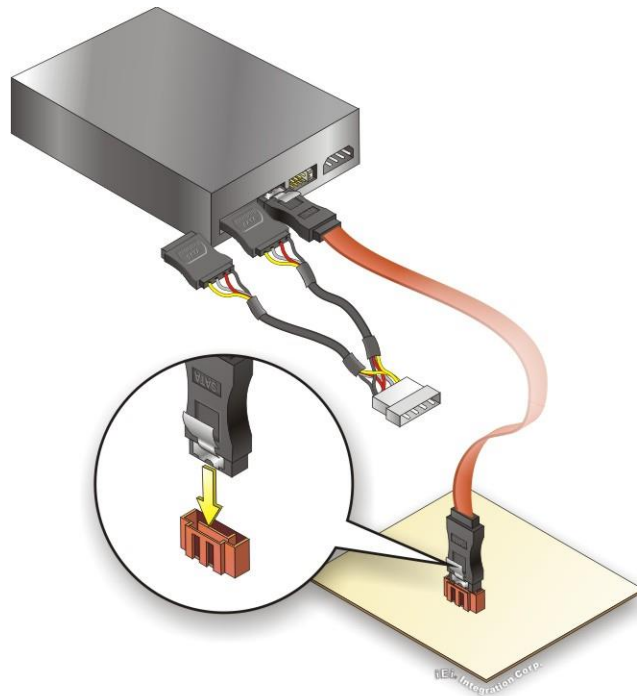

**Figure 4-2: SATA Power Drive Connection**

The SATA power cable can be bought from IEI. See Optional Items in Section 2.4.

### 4.3 Installation Considerations

---

**NOTE:**

The following installation notices and installation considerations should be read and understood before installation. All installation notices must be strictly adhered to. Failing to adhere to these precautions may lead to severe damage and injury to the person performing the installation.

---

---

**WARNING:**

The installation instructions described in this manual should be carefully followed in order to prevent damage to the components and injury to the user.

---

Before and during the installation please **DO** the following:

- Read the user manual:
  - The user manual provides a complete description of the IMB-ARL-Q870 installation instructions and configuration options.
- Wear an electrostatic discharge cuff (ESD):
  - Electronic components are easily damaged by ESD. Wearing an ESD cuff removes ESD from the body and helps prevent ESD damage.
- Place the IMB-ARL-Q870 on an anti-static pad:
  - When installing or configuring the motherboard, place it on an anti-static pad. This helps to prevent potential ESD damage.
- Turn all power to the IMB-ARL-Q870 off:
  - When working with the IMB-ARL-Q870, make sure that it is disconnected from all power supplies and that no electricity is being fed into the system.

Before and during the installation of the IMB-ARL-Q870, **DO NOT:**

## IMB-ARL-Q870

- Remove any of the stickers on the PCB board. These stickers are required for warranty validation.
- Use the product before verifying all the cables and power connectors are properly connected.
- Allow screws to come in contact with the PCB circuit, connector pins, or its components.

### 4.4 Socket LGA1851 CPU Installation

---



#### **WARNING:**


CPUs are expensive and sensitive components. When installing the CPU please be careful not to damage it in anyway. Make sure the CPU is installed properly and ensure the correct cooling kit is properly installed.

DO NOT touch the pins at the bottom of the CPU. When handling the CPU, only hold it on the sides.

---

To install the CPU, follow the steps below.


- Step 1:** Disengage the load lever by pressing the lever down and slightly outward to clear the retention tab. Fully open the lever. See **Figure 4-3**.

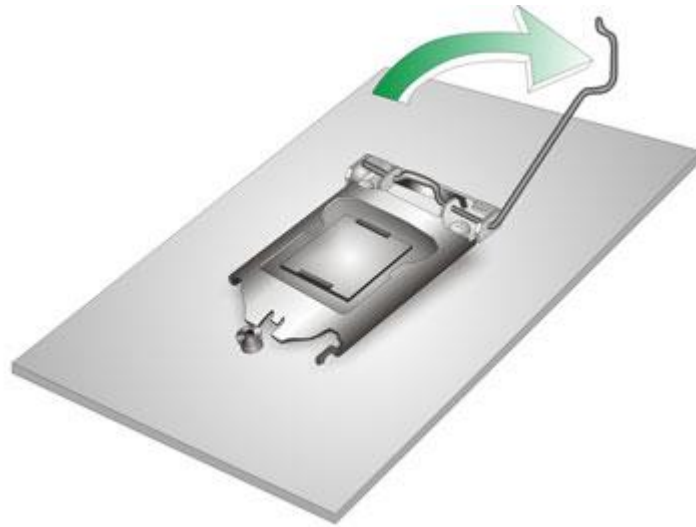

**Figure 4-3: Disengage the CPU Socket Load Lever**

**Step 2:** Open the socket and remove the protective cover. The black protective cover can be removed by pulling up on the tab labeled "Remove". See

**Figure 4-4.**

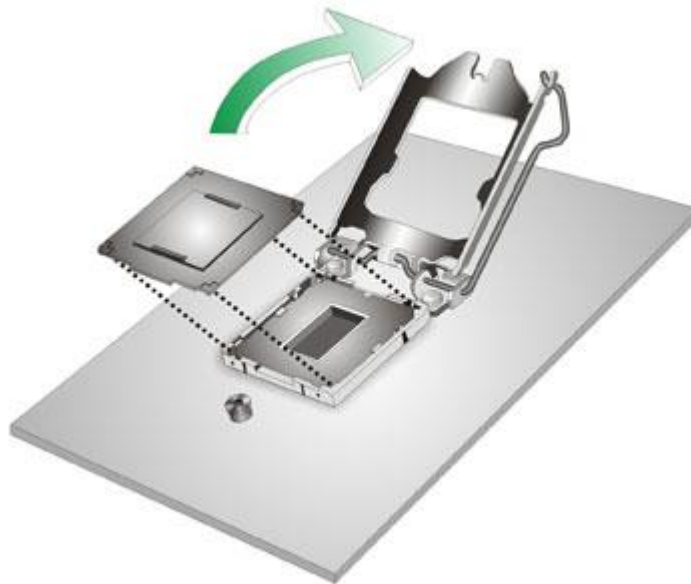

**Figure 4-4: Remove Protective Cover**

**Step 3:** **Inspect the CPU socket.** Make sure there are no bent pins and make sure the socket contacts are free of foreign material. If any debris is found, remove it with compressed air.

## IMB-ARL-Q870

**Step 4: Orientate the CPU properly.** The contact array should be facing the CPU socket.

**WARNING:**


DO NOT touch the pins at the bottom of the CPU. When handling the CPU, only hold it on the sides.

---

**Step 5: Correctly position the CPU.** Match the Pin 1 mark with the cut edge on the CPU socket.

**Step 6: Align the CPU pins.** Locate pin 1 and the two orientation notches on the CPU. Carefully match the two orientation notches on the CPU with the socket alignment keys.

**Step 7: Insert the CPU.** Gently insert the CPU into the socket. If the CPU pins are properly aligned, the CPU should slide into the CPU socket smoothly. See **Figure 4-5.**

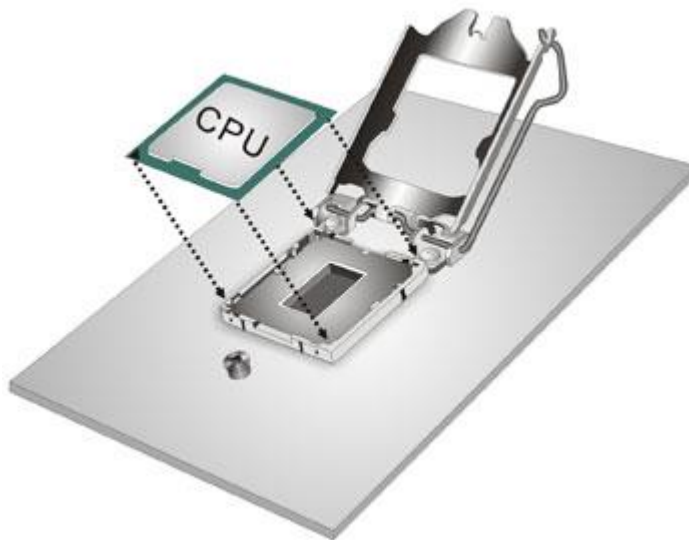

**Figure 4-5: Insert the Socket LGA1851 CPU**

**Step 8: Close the CPU socket.** Close the load plate and pull the load lever back a little to have the load plate be able to secure to the knob. Engage the load lever by pushing it back to its original position (**Figure 4-6**). There will be some resistance, but will not require extreme pressure.

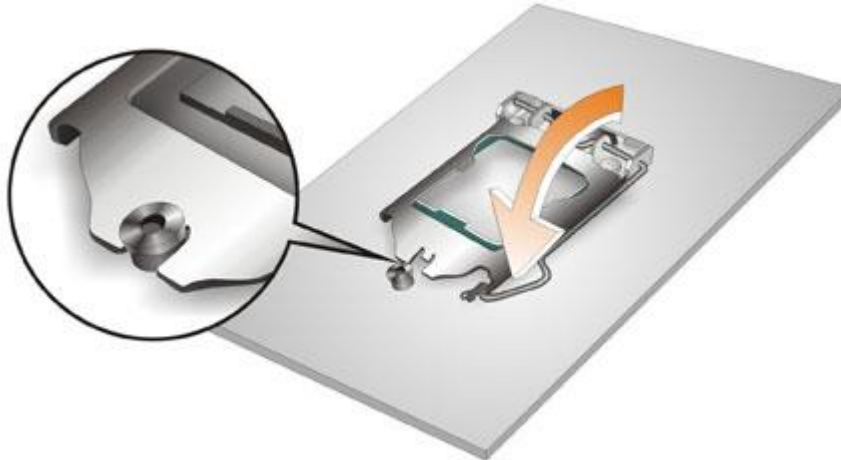


Figure 4-6: Close the Socket LGA1851

**Step 9: Connect the 12 V power to the board.** Connect the 12V power from the power supply to the board.

## 4.5 Socket LGA1851 Cooling Kit Installation



### WARNING:

**DO NOT** attempt to install a push-pin cooling fan.

The pre-installed support bracket prevents the board from bending and is **ONLY** compatible with captive screw type cooling fans.

---


The cooling kit can be bought from IEI. The cooling kit has a heat sink and fan.

**WARNING:**

Do not wipe off (accidentally or otherwise) the pre-sprayed layer of thermal paste on the bottom of the heat sink. The thermal paste between the CPU and the heat sink is important for optimum heat dissipation.

To install the cooling kit, follow the instructions below.

**Step 10:** A cooling kit bracket is pre-installed on the rear of the motherboard. See **Figure 4-7**.

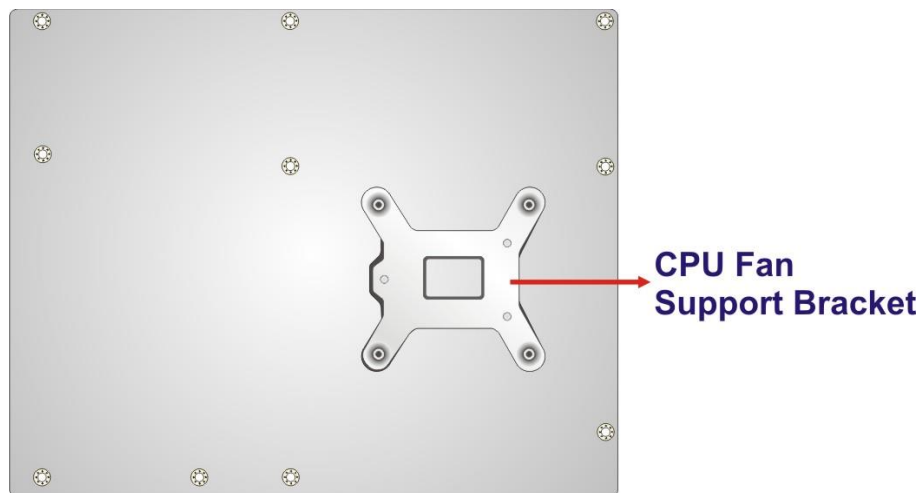

**Figure 4-7: Cooling Kit Support Bracket**

**Step 11:** Place the cooling kit onto the socket LGA1851 CPU. Make sure the CPU cable can be properly routed when the cooling kit is installed.


**Step 12:** Mount the cooling kit. Gently place the cooling kit on top of the CPU. Make sure the four threaded screws on the corners of the cooling kit properly pass through the holes of the cooling kit bracket.

**Step 13: Tighten the screws.** Use a screwdriver to tighten the four screws. In a diagonal pattern, tighten each screw a few turns then move to the next one, until they are all secured. Do not overtighten the screws.

**Step 14: Connect the fan cable.** Connect the cooling kit fan cable to the CPU fan connector on the IMB-ARL-Q870. Carefully route the cable and avoid heat generating chips and fan blades.

## 4.6 DIMM Installation

To install a DIMM, please follow the steps below and refer to **Figure 4-8**.

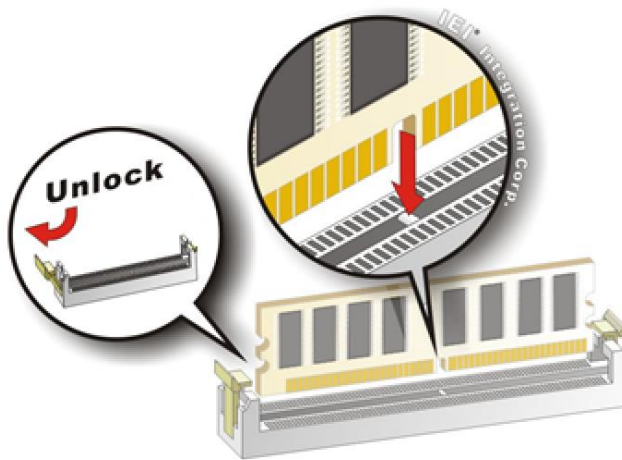

**Figure 4-8: DIMM Installation**

- Step 1: Open the DIMM5 socket single latch handle.** Open the handle outwards as far as they can.
- Step 2: Align the DIMM with the socket.** Align the DIMM so the notch on the memory lines up with the notch on the memory socket. See **Figure 4-8**.
- Step 3: Insert the DIMM.** Once aligned, press down until the DIMM is properly seated. Clip the single handles into place. See **Figure 4-8**.
- Step 4: Removing a DIMM.** To remove a DIMM, push **single handle** outward. Pinch the memory stick with your hand and pull it vertically upwards.

## IMB-ARL-Q870


**CAUTION:**

For quad channel configuration, install four identical memory modules that feature the same capacity, timings, voltage, number of ranks and the same brand.

## 4.7 M.2 Module Installation


The IMB-ARL-Q870 provide two M.2 expansion card. Please follow the steps below.

- Step 1:** Locate the M.2 module slot. See **Chapter 3**.
- Step 2:** Remove the retention screw secured on the motherboard.
- Step 3:** Line up the notch on the module with the notch on the slot. Slide the M.2 module into the socket at an angle of about 20° (**Figure 4-9**).

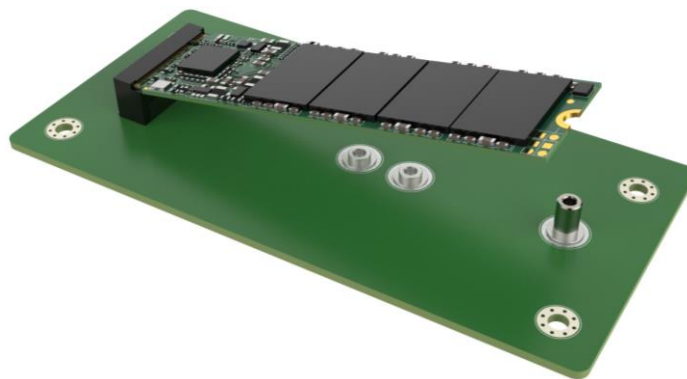

**Figure 4-9: Inserting the M.2 Module into the Slot at an Angle**

- Step 4:** Secure the M.2 module with the previously removed retention screw (**Figure 4-10**).

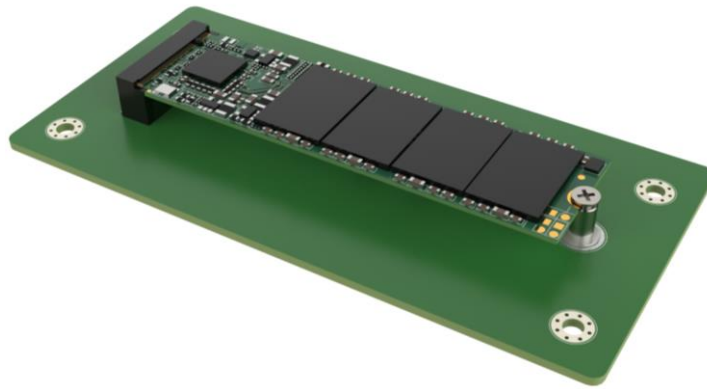

**Figure 4-10: Securing the M.2 Module**

## IMB-ARL-Q870

## 4.8 Software Installation

All the drivers for the IMB-ARL-Q870 are available on IEI Resource Download Center (<https://download.ieiworld.com>). Type IMB-ARL-Q870 and press Enter to find all the relevant software, utilities, and documentation.


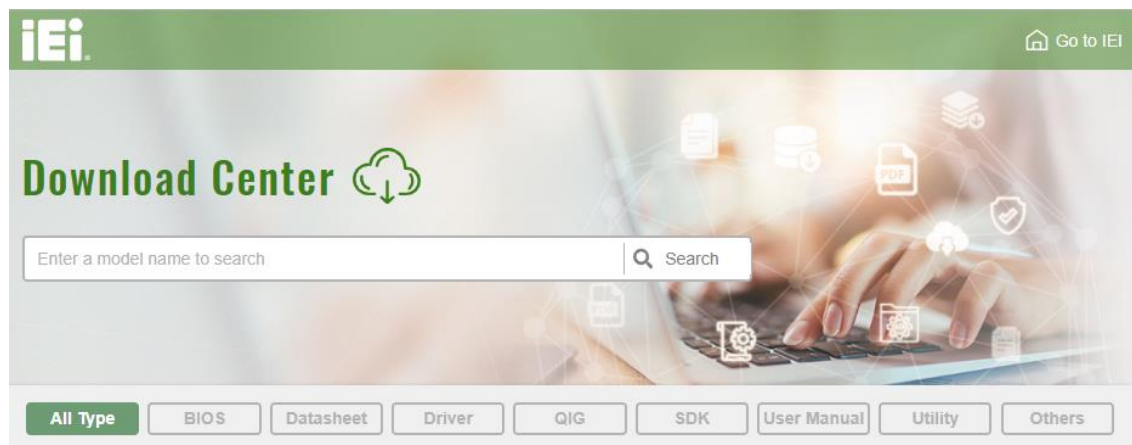


Figure 4-11: IEI Resource Download Center

## 4.9 Driver Download

To download drivers from IEI Resource Download Center, follow the steps below.

**Step 1:** Go to <https://download.ieiworld.com>. Type IMB-ARL-Q870 and press Enter.

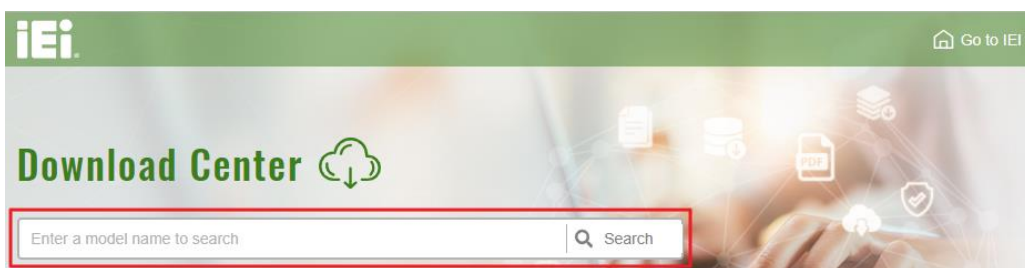

**Step 2:** All product-related software, utilities, and documentation will be listed. You can choose **Driver** to filter the result.

[All Type](#)
[BIOS](#)
[Datasheet](#)
[Driver](#)
[QIG](#)
[SDK](#)
[User Manual](#)
[Utility](#)
[Others](#)

**WAFER-BT-i1** [Product Info](#)

[Embedded Computer](#) ▶ [Single Board Computer](#) ▶ [Embedded Board](#)  
 3.5" SBC with Intel® 22nm Atom™/Celeron® on-board SoC

**Driver**

File Name	Published	Version	File Checksum
<a href="#">7B000-001033-RS V2.3.iso (2.23 GB)</a>	2017/10/03	2.30	3B2DB1F792779A93A8F50DDBC3943E30

**Step 3:** Click the driver file name on the page and you will be prompted with the following window. You can download the entire ISO file (❶), or click the small arrow to find an individual driver and click the file name to download (❷).

7B000-001168-RS\_V1.4.iso

❶ [Click here to download entire ISO file. \(2.99 GB\)](#)

\* Download individual file \*

- Docs
  - ❷ 1.Chipset
    - 10.1.1.12.zip (2.7 MB)
    - 2.VGA
    - 3.Audio
    - 4.Lan
    - 5.USB 3.0
    - 6.Serial IO
    - 7.TXE
    - 8.Manual



**NOTE:**

To install software from the downloaded ISO image file in Windows 8, 8.1 or 10, double-click the ISO file to mount it as a virtual drive to view its content. On Windows 7 system, an additional tool (such as Virtual CD-ROM Control Panel from Microsoft) is needed to mount the file.

Chapter

**5**

# **BIOS**

---

## 5.1 Introduction

The BIOS is programmed onto the BIOS chip. The BIOS setup program allows changes to certain system settings. This chapter outlines the options that can be changed.



### NOTE:

Some of the BIOS options may vary throughout the life cycle of the product and are subject to change without prior notice.

---

### 5.1.1 Starting Setup

The UEFI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. **Using keyboard:** Press the **DEL** or **F2** as soon as the system is turned on.
2. **Using touchscreen:** Press the **Setup** button on the upper right corner of the BIOS Starting Menu.

If the message disappears before the **DEL** or **F2** key is pressed, restart the computer and try again, then the BIOS Starting Menu will appear. Select "Setup" and press Enter to get into the BIOS Setup.

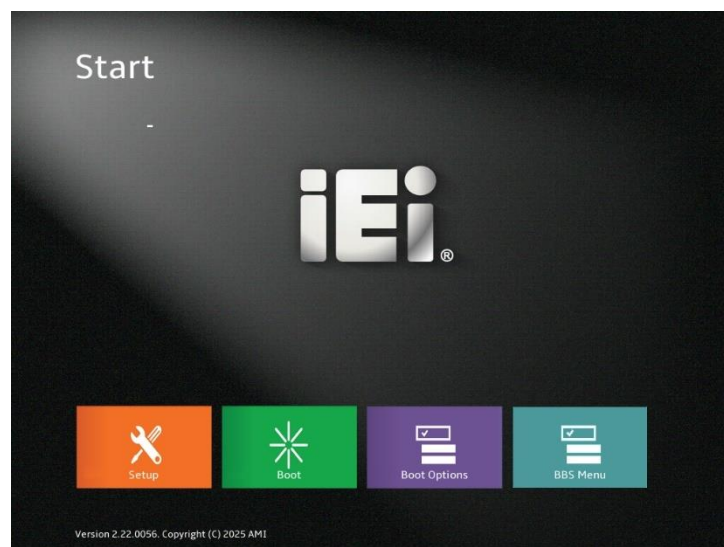


Figure 5-1: BIOS Starting Menu

## IMB-ARL-Q870

## 5.1.2 Using Setup

The BIOS Setup menu can be navigated by using a keyboard or a touchscreen.

### 5.1.2.1 Keyboard Navigation


For keyboard navigation, use the navigation keys shown in **Table 5-1**.

Key	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
+	Increase the numeric value or make changes
-	Decrease the numeric value or make changes
Page Up	Move to the previous page
Page Dn	Move to the next page
Esc	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
F1	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2	Load previous values
F3	Load optimized defaults
F4	Save changes and Exit BIOS
<K>	Scroll help area upwards
<M>	Scroll help area downwards

**Table 5-1: BIOS Navigation Keys**

### 5.1.2.2 Touch Navigation

For touchscreen navigation, use the on-screen navigation keys shown below.

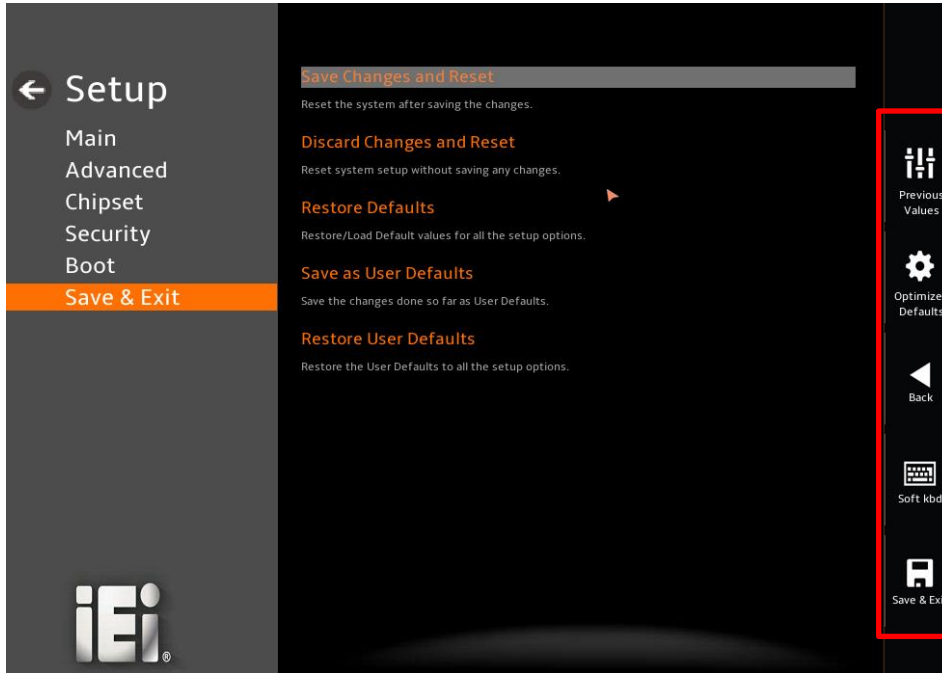

On-screen Button	Function
Previous Values	Load the last value you set.
Optimized Defaults	Load the factory default values in order to achieve the best performance.
Back	Return to the previous menu.
Soft kbd	Display the on-screen keyboard.
Save & Exit	Save the changes made to the BIOS options and reset the system.

**Table 5-2: BIOS On-screen Navigation Keys**

## IMB-ARL-Q870

### 5.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window, press the **Esc** key.

### 5.1.4 Unable to Reboot after Configuration Changes

If the computer cannot boot after changes to the system configuration is made, CMOS defaults. Use the clear CMOS button described in **Chapter 4**.

### 5.1.5 BIOS Menu Bar


The **menu bar** on top of the BIOS screen has the following main items:

- Main – Changes the basic system configuration.
- Advanced – Changes the advanced system settings.
- Chipset – Changes the chipset settings.
- Security – Sets User and Supervisor Passwords.
- Boot – Changes the system boot configuration.
- Save & Exit – Selects exit options and loads default settings

The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.

## 5.2 Main

The **Main** BIOS menu (**BIOS Menu 1 & BIOS Menu 2 & BIOS Menu 3**) appears when the **BIOS Setup** program is entered. The **Main** menu gives an overview of the basic system information.

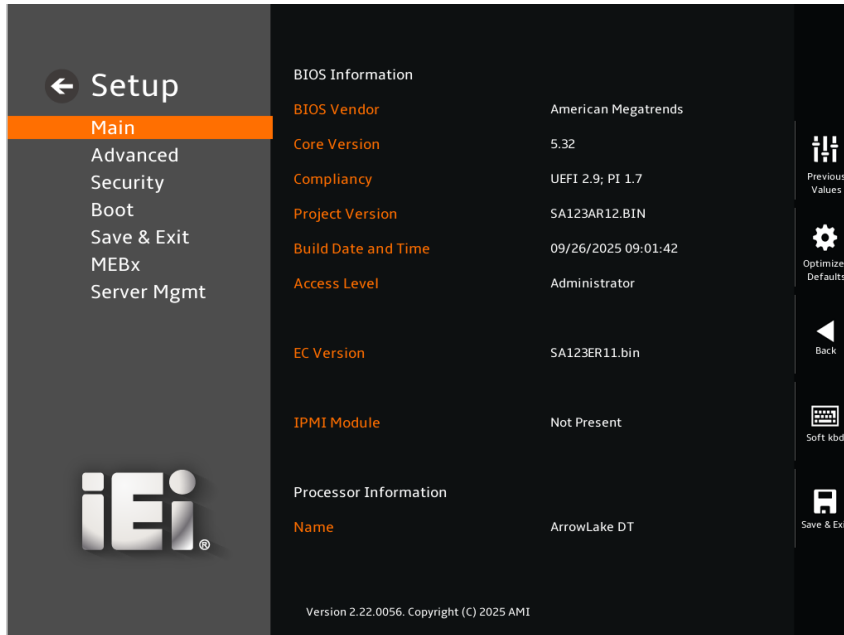


### BIOS Menu 1: Main (1/3)



### BIOS Menu 2: Main (2/3)

## IMB-ARL-Q870

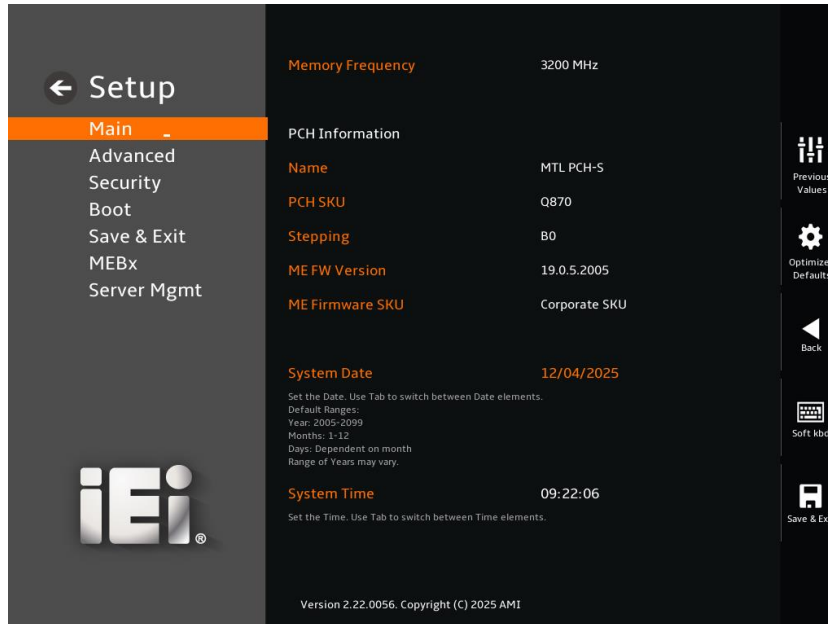**BIOS Menu 3: Main (3/3)****→ BIOS Information**

The **BIOS Information** lists a brief summary of the BIOS. The fields in **BIOS Information** cannot be changed. The items shown in the system overview include:

- **BIOS Vendor:** Installed BIOS vendor
- **Core Version:** Current BIOS version
- **Compliance:** Current UEFI & PI version
- **Project Version:** the board version
- **Build Date and Time:** Date the current BIOS version was made
- **Access Level:** Administrator
- **EC Version:** Current EC version
- **IPMI Module:** Not Present

**→ Processor Information**

The **Processor Information** lists a brief summary of the Processor. The fields in **Processor Information** cannot be changed. The items shown in the system overview include:

- **Name:** Displays the Processor Details
- **Type:** Displays the Processor Type

- **Speed:** Displays the Processor Speed
- **ID:** Displays the Processor ID
- **Stepping:** Displays the Processor Stepping
- **Microcode Revision:** CPU Microcode Revision
- **Total Memory:** Total Memory in the System
- **Memory Frequency:** Displays the Frequency of Memory

#### → PCH Information

The **PCH Information** lists a brief summary of the PCH. The fields in **PCH Information** cannot be changed. The items shown in the system overview include:

- **Name:** Displays the PCH Name
- **PCH SKU:** Displays the PCH SKU
- **Stepping:** Displays the PCH Stepping
- **ME FW Version:** Displays the ME Firmware Version
- **ME Firmware SKU:** Displays the ME Firmware SKU

The System Overview field also has two user configurable fields:

#### → System Date [xx/xx/xx]

Use the **System Date** option to set the system date. Manually enter the day, month and year.

#### → System Time [xx:xx:xx]

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.

## 5.3 Advanced

Use the **Advanced** menu (**BIOS Menu 4**) to configure the CPU and peripheral devices through the following sub-menus:



### WARNING!


Setting the wrong values in the sections below may cause the system to malfunction. Make sure that the settings made are compatible with the hardware.



**BIOS Menu 4: Advanced**

### 5.3.1 CPU Configuration

Use the **CPU Configuration** menu (**BIOS Menu 5 & BIOS Menu 6 & BIOS Menu 7**) to view detailed CPU specifications or enable the Intel Virtualization Technology.

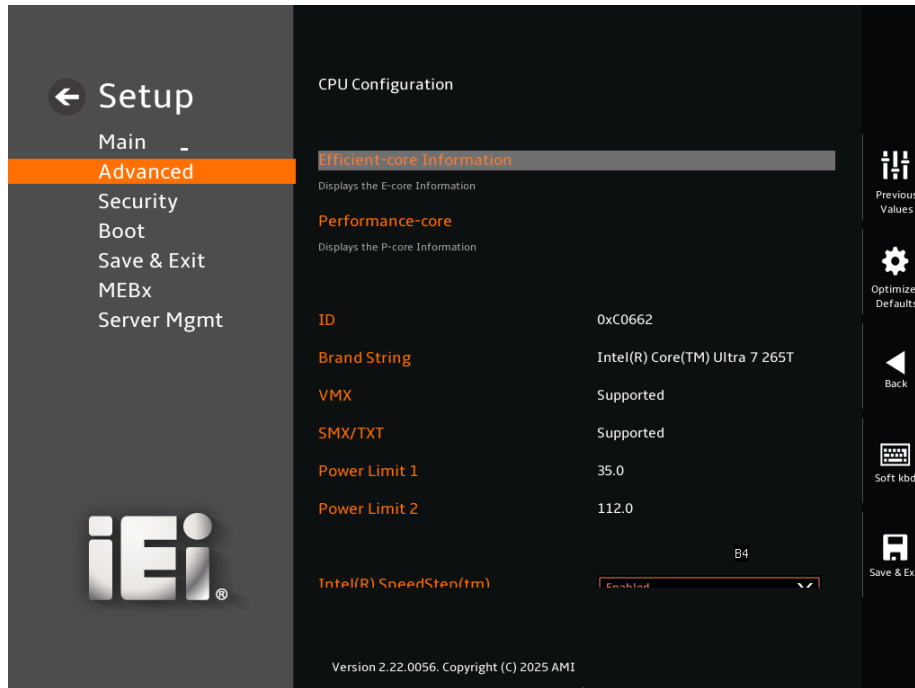

### BIOS Menu 5: CPU Configuration (1/3)

# IMB-ARL-Q870

**Setup**

- Main
- Advanced**
- Security
- Boot
- Save & Exit
- MEBx
- Server Mgmt

**Intel(R) SpeedStep(tm)**

Allows more than two frequency ranges to be supported.

**C states**

Enable/Disable CPU Power Management. Allows CPU to go to C states when it's not 100% utilized.

**Turbo Mode**

Enable/Disable processor Turbo Mode.

**Intel (VMX) Virtualization Technology**

When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

**Active Performance-cores**

Number of P-cores to enable in each processor package. Note: Number of Cores and E-Cores are looked at together. When both are (0,0), Pcode will enable all cores.

**Active Efficient-cores**

Number of E-cores to enable in each processor package. Note: Number of Cores and E-Cores are looked at together. When both are (0,0), Pcode will enable all cores.

**Power Limit 1**

Power Limit 1 in Milli Watts. BIOS will round to the nearest 1/8W when programming. 0 = no custom override. For 12.50W, enter 12500. Overclocking SKU: Value must be between Max and Min Power Limits. Other SKUs: This value must be between Min Power Limit and Processor Base Power (TDP) Limit. If value is 0, BIOS will program Processor Base Power (TDP) value.

Version 2.22.0056. Copyright (C) 2025 AM1

Navigation: Previous Values, Optimized Defaults, Back, Soft kbd, Save & Exit

## BIOS Menu 6: CPU Configuration (2/3)

**Setup**

- Main
- Advanced**
- Security
- Boot
- Save & Exit
- MEBx
- Server Mgmt

**Intel (VMX) Virtualization Technology**

When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

**Active Performance-cores**

Number of P-cores to enable in each processor package. Note: Number of Cores and E-Cores are looked at together. When both are (0,0), Pcode will enable all cores.

**Active Efficient-cores**

Number of E-cores to enable in each processor package. Note: Number of Cores and E-Cores are looked at together. When both are (0,0), Pcode will enable all cores.

**Power Limit 1**

Power Limit 1 in Milli Watts. BIOS will round to the nearest 1/8W when programming. 0 = no custom override. For 12.50W, enter 12500. Overclocking SKU: Value must be between Max and Min Power Limits. Other SKUs: This value must be between Min Power Limit and Processor Base Power (TDP) Limit. If value is 0, BIOS will program Processor Base Power (TDP) value.

**Power Limit 1 Time Window**

Power Limit 1 Time Window value in seconds. The value may vary from 0 to 128. 0 = default value (28 sec for Mobile and 8 sec for Desktop). Defines time window which Processor Base Power (TDP) value should be maintained.

**Power Limit 2**

Power Limit 2 value in Milli Watts. BIOS will round to the nearest 1/8W when programming. If the value is 0, BIOS will program this value as 1.25\*Processor Base Power (TDP). For 12.50W, enter 12500. Processor applies control policies such that the package power does not exceed this limit.

Version 2.22.0056. Copyright (C) 2025 AM1

Navigation: Previous Values, Optimized Defaults, Back, Soft kbd, Save & Exit

## BIOS Menu 7: CPU Configuration (3/3)

➔ **Intel (VMX) Virtualization Technology [Disabled]**

Use the **Intel (VMX) Virtualization Technology** option to enable or disable virtualization on the system. When combined with third party software, Intel® Virtualization technology allows several OSs to run on the same system at the same time.

- ➔ **Disabled** Disables Intel Virtualization Technology.
- ➔ **Enabled** **DEFAULT** Enables Intel Virtualization Technology.

➔ **Active Processor Cores [All]**

Use the **Active Processor Cores** BIOS option to enable numbers of cores in the processor package.

➔	All	DEFAULT	Enable all cores in the processor package.
➔	1		Enable one core in the processor package.
➔	2		Enable two cores in the processor package.
➔	3		Enable three cores in the processor package.
➔	4		Enable four cores in the processor package.
➔	5		Enable five cores in the processor package.
➔	6		Enable six cores in the processor package.
➔	7		Enable seven cores in the processor package.

➔ **Active Efficient-cores [All]**

➔	All	DEFAULT	Enable all cores in the processor package.
➔	0		Enable zero core in the processor package.
➔	1		Enable one core in the processor package.
➔	2		Enable two cores in the processor package.
➔	3		Enable three cores in the processor package.

## IMB-ARL-Q870

→ **Hyper-Threading [Enabled]**

Use the **Hyper-Threading** option to enable or disable the **Hyper-Threading** Technology.

- **Disabled** Disables Hyper-Threading Technology
- **Enabled** **DEFAULT** Enables Hyper-Threading Technology

→ **Intel(R) SpeedStep(tm) [Enabled]**

Use the **Intel(R) SpeedStep(tm)** option to enable or disable the Intel® SpeedStep Technology which allows more than two frequency ranges to be supported.

- **Disabled** Disables Intel® SpeedStep Technology
- **Enabled** **DEFAULT** Enables Intel® SpeedStep Technology

→ **Turbo Mode**

Use the **Turbo Mode** option to enable or disable Turbo Mode which requires Intel Speed Step or Intel Speed Shift to be available and enabled.

- **Disabled** **DEFAULT** Disables Turbo Mode Technology
- **Enabled** Enables Turbo Mode Technology

→ **C states [Disabled]**

Use the **C states** option to enable or disable CPU power management which allows CPU to go to C states when it is not 100% utilized.

- **Disabled** **DEFAULT** Disables CPU power management
- **Enabled** Enables CPU power management

→ **Power Limit 1 Override [Disabled]**

Enable/Disable Power Limit 1 override. If this option is disabled. BIOS will program the default values for Limit 1 and Power Limit 1 Time Window.

➔ **Power Limit 1 Time Window**


Use the **Power Limit 1 Time Window** option to select the PL1 time duration. The value may vary from 0 to 128. For 0 is the default value.

➔ **Power Limit 2 [Disabled]**

Power Limit 1 in Milli Watts. BIOS will round to the nearest 1/8W when programming. 0 = no custom override. For 12.50W, enter 12500.

**5.3.1.1 Efficient-core Information**


Use the **Efficient-core Information (BIOS Menu 8)** to view information about Efficient-core.

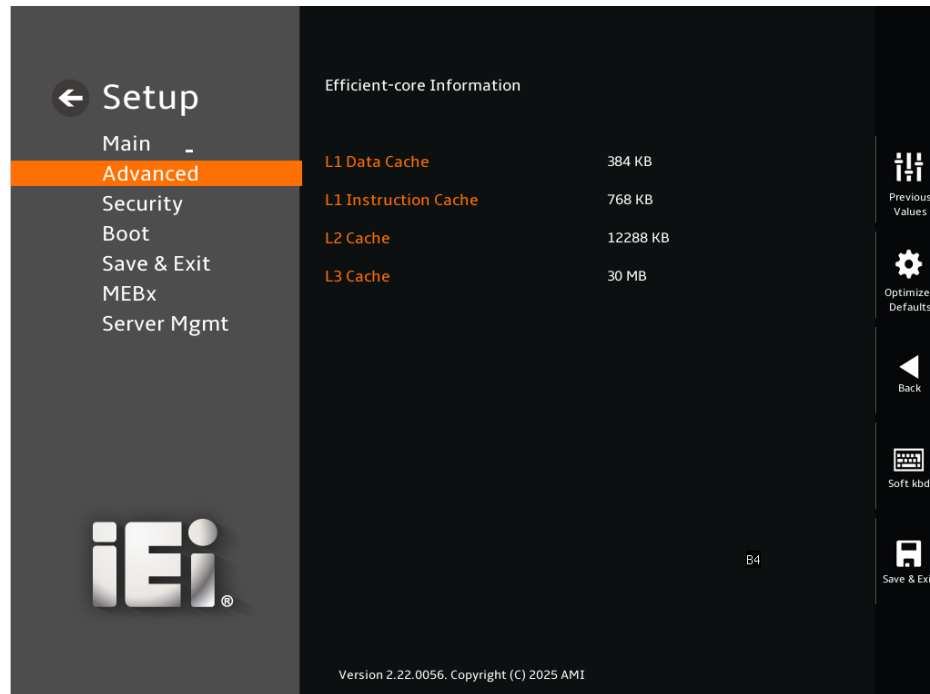

**BIOS Menu 8: Efficient-core Information**

**5.3.1.2 Performance-core Information**

Use the **Performance-core Information (BIOS Menu 9)** to view information about Performance-core.

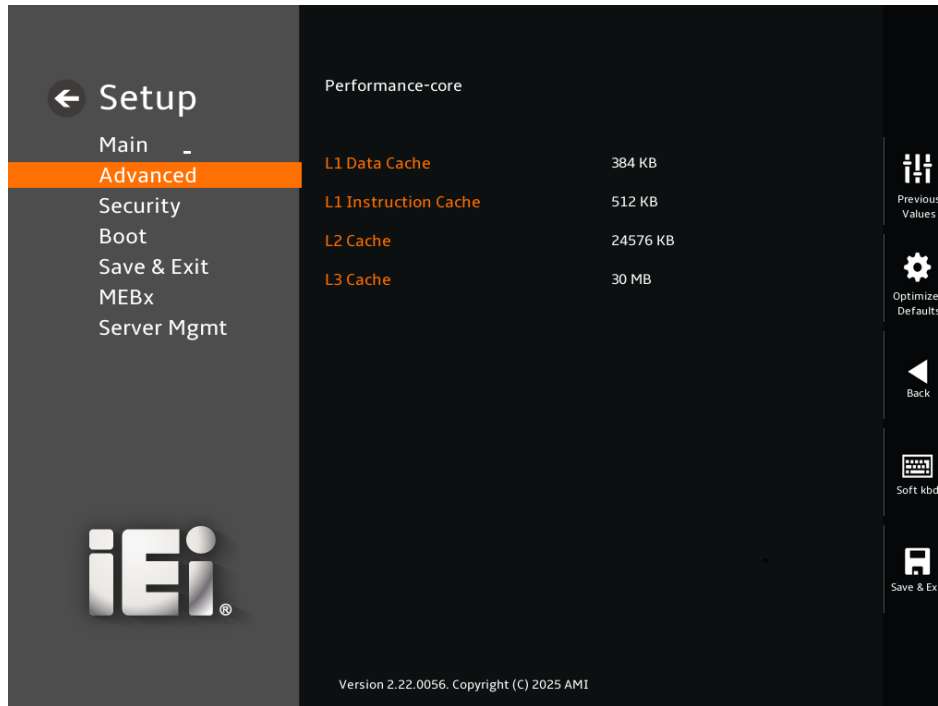

BIOS Menu 9: Performance-core Information

### 5.3.2 System Agent (SA) Configuration

Use the System Agent (SA) Configuration menu (**BIOS Menu 10**) to communicate and resource allocation between the CPU and memory, PCIe, graphics core, DMI, PCH, etc.



#### BIOS Menu 10: System Agent (SA) Configuration

➔ **VT-d [Enabled]**

Use the **VT-d** option to enable or disable the VT-d capability.

- ➔ **Disabled**                                      Disable the VT-d capability
- ➔ **Enabled**                      **DEFAULT**              Enable the VT-d capability

➔ **NPU Device [B0:D11:F0]**

Use the **NPU Device** option to enable or disable the NPU (Neural Processing Unit) at Bus 0, Device 11, Function 0 (B0:D11:F0).

- ➔ **Disabled**                                      Disable the Neural Processing Unit
- ➔ **Enabled**                      **DEFAULT**              Enable the Neural Processing Unit

### 5.3.2.1 Memory Configuration


Use the **Memory Configuration** submenu (**BIOS Menu 11**) to view memory information.



### BIOS Menu 11: Memory Configuration

### 5.3.2.2 Graphics Configuration

Use the **Graphics Configuration (BIOS Menu 12)** menu to configure the video device connected to the system.

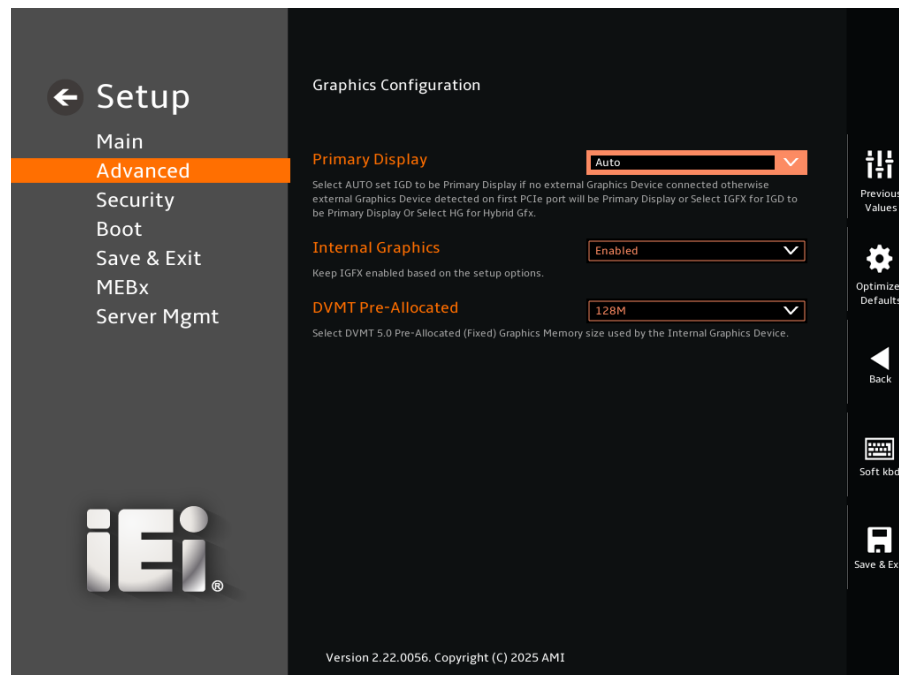

#### BIOS Menu 12: Graphics Configuration

##### → Primary Display [Auto]

Use the **Primary Display** option to select the primary graphics controller the system uses.

The following options are available:

- Auto                   **Default**
- IGFX
- PEG
- PCI
- SG

##### → Internal Graphics [Enabled]

Use the **Internal Graphics** option to configure whether to keep IGFX enabled. If user wants to support dual display by internal graphics and external graphics, this Internal Graphics

**IMB-ARL-Q870**

option should be set to Enabled and the above Primary Display option should be set to IGFX.


- ➔ **Auto** Auto mode
- ➔ **Disabled** Disables IGFX.
- ➔ **Enabled** **Default** Enables IGFX.

➔ **DVMT Pre-Allocated [160M]**

Use the **DVMT Pre-Allocated** option to set the amount of system memory allocated to the integrated graphics processor when the system boots. The system memory allocated can then only be used as graphics memory, and is no longer available to applications or the operating system. Configuration options are listed below.

**5.3.2.3 VMD Setup menu**


Use the **VMD Setup menu (BIOS Menu 13)** to enable/disable settings for the VMD controller.

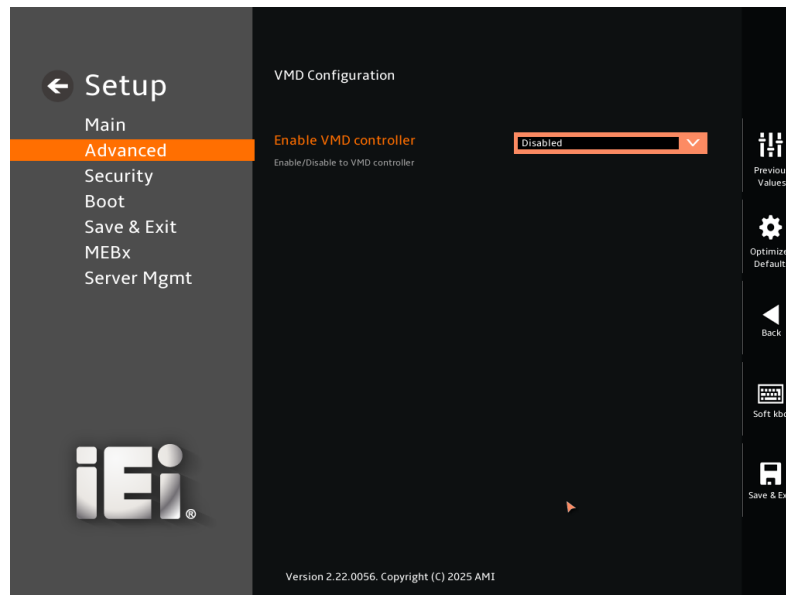


**BIOS Menu 13: VMD Setup menu**

### 5.3.3 PCIE Configuration

Use the **PCIE Configuration** submenu (**BIOS Menu 14&BIOS Menu 15** ) to configure the PCI Express slots. Use the **PCIEX16\_1, PCIEX4\_2, PCIEX4\_1, IPMI, M2\_M2, PCIEX4\_4, PCIEX1\_2, M2\_M1** submenu to configure the PCI Express Root Port Setting.

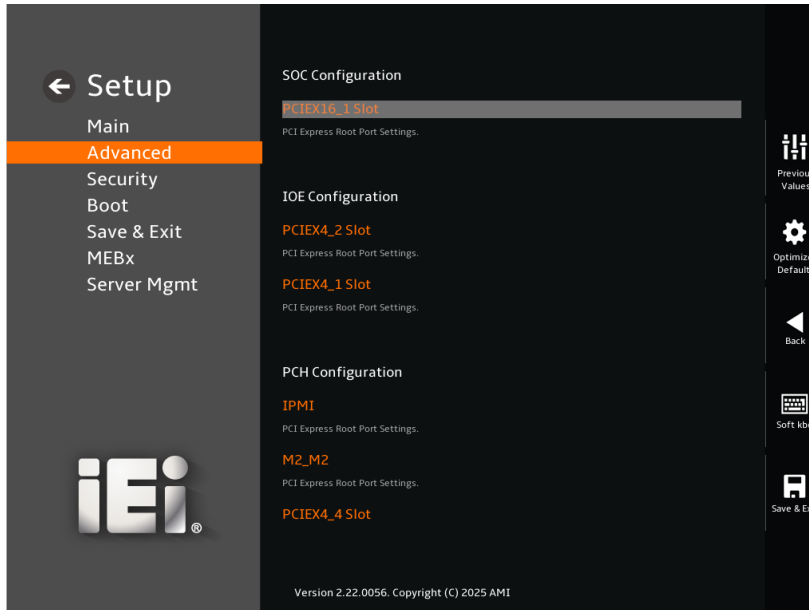


#### BIOS Menu 14: PCIE Configuration (1/2)

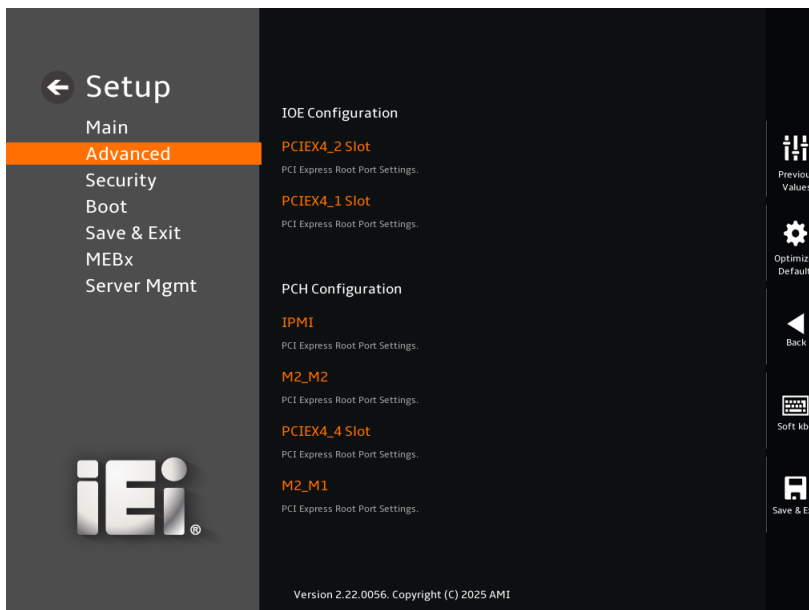

#### BIOS Menu 15: PCIE Configuration (2/2)

### 5.3.4 PCH-IO Configuration

Use the **PCH-IO Configuration** submenu (BIOS Menu 16 & BIOS Menu 17 ) to configure the PCH parameters

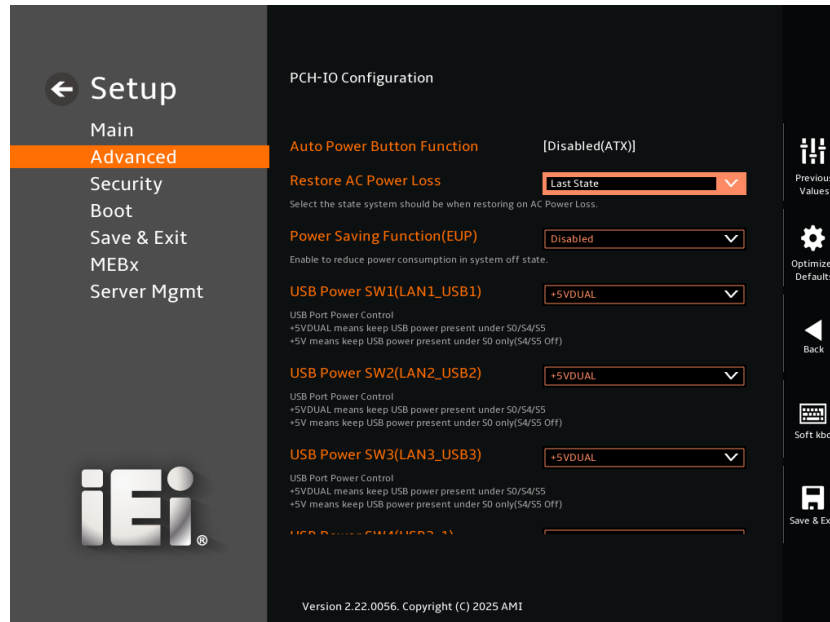

#### BIOS Menu 16: PCH-IO Configuration (1/2)



#### BIOS Menu 17: PCH-IO Configuration (2/2)

➔ **Auto Power Button Function [Disabled (ATX)]**

Use the **Auto Power Button Function** BIOS option to show the power mode state. Use the **J\_ATX\_AT1** to switch the AT/ATX power mode.

- ➔ **Enabled (AT)**                      The system power mode is AT.

➔ **Restore AC Power Loss [Last State]**

Use the **Auto Power Button Function** BIOS option to show the power mode state. Use the **J\_ATX\_AT1** to switch the AT/ATX power mode.

- ➔ **Enabled (AT)**                      The system power mode is AT.

➔ **Power Saving Function (EUP) [Disabled]**

Use the **Power Saving Function (EUP)** BIOS option to enable or disable the power saving function.

- ➔ **Disabled      DEFAULT**      Power saving function is disabled.
- ➔ **Enabled**                              Power saving function is enabled. It will reduce power consumption when the system is off.

➔ **USB Power SW1(LAN1\_USB1) [+5VDUAL]**

Use the **USB Power SW1(LAN1\_USB1)** to enable or disable the USB Power.

- ➔ **+5VDUAL                      DEFAULT**      USB Power is on.
- ➔ **+5V**                                      USB Power is off.

➔ **USB Power SW2(LAN2\_USB2) [+5VDUAL]**

Use the **USB Power SW2(LAN2\_USB2)** to enable or disable the USB Power.

- ➔ **+5VDUAL                      DEFAULT**      USB Power is on.
- ➔ **+5V**                                      USB Power is off.

➔ **USB Power SW3(LAN3\_USB3) [+5VDUAL]**

Use the **USB Power SW3(LAN3\_USB3)** to enable or disable the USB Power.

## IMB-ARL-Q870

→ **+5VDUAL**                      **DEFAULT**    USB Power is on.

→ **+5V**    USB Power is off.

### → **USB Power SW4(USB3\_1) [+5VDUAL]**

Use the **USB Power SW4(USB3\_1)** to enable or disable the USB Power.

→ **+5VDUAL**                      **DEFAULT**    USB Power is on.

→ **+5V**    USB Power is off.

### → **USB Power SW5(USB2\_CN1) [+5VDUAL]**

Use the **USB Power SW5(USB2\_CN1)** to enable or disable the USB Power.

→ **+5VDUAL**                      **DEFAULT**    USB Power is on.

→ **+5V**    USB Power is off.

### → **USB Power SW6(USB2\_CN2) [+5VDUAL]**

Use the **USB Power SW6(USB2\_CN2)** to enable or disable the USB Power.

→ **+5VDUAL**                      **DEFAULT**    USB Power is on.

→ **+5V**    USB Power is off.

### → **ME OVERRIDE [Disabled]**


Use the **USB Power state option** to enable or disable the ME OVERRIDE.

→ **Disabled**                      **DEFAULT**    Disable the ME OVERRIDE.

→ **Enabled**    Enable or disable the ME OVERRIDE.

### 5.3.4.1 SATA Configuration


Use the **SATA Configuration** submenu (**BIOS Menu 18**) to change and/or set the configuration of the SATA devices installed in the system.

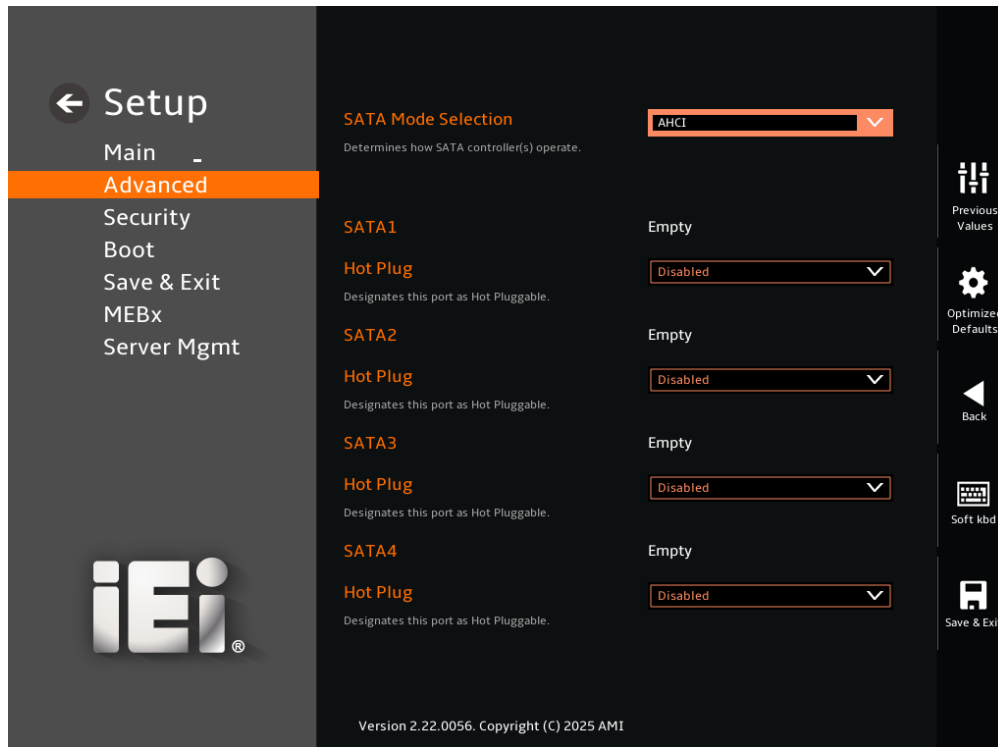

BIOS Menu 18: SATA Configuration

### 5.3.4.2 HD Audio Configuration

Use the **HD Audio Configuration** menu (**BIOS Menu 19**) to configure the PCH Azalia settings.

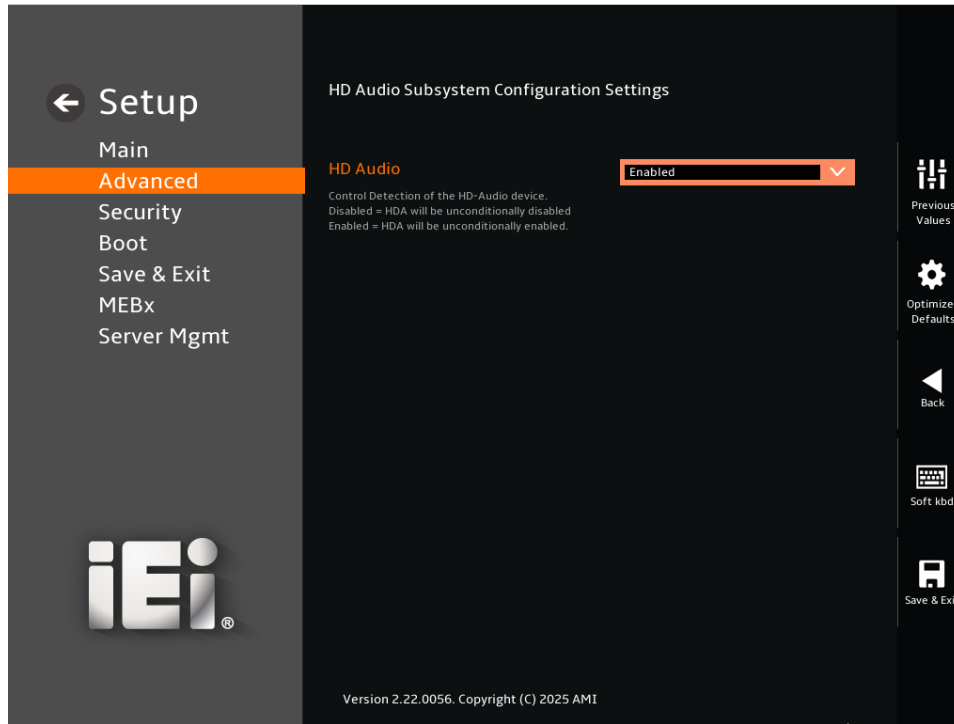

#### BIOS Menu 19: HD Audio Configuration


##### → HD Audio [Enabled]

Use the **HD Audio** option to enable or disable the High Definition Audio controller.

- **Disabled**                      The onboard High Definition Audio controller is disabled.
- **Enabled**    **DEFAULT**      The onboard High Definition Audio controller is enabled.

### 5.3.5 AMT Configuration

Use the **AMT Configuration** menu (**BIOS Menu 20**) to configure ME with resetting MEBx password.

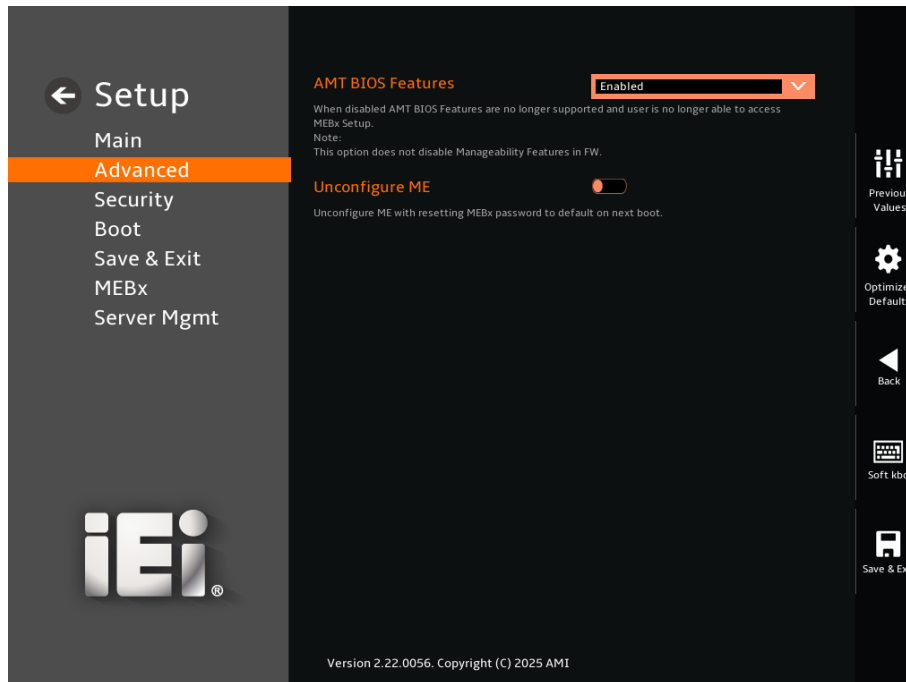

#### BIOS Menu 20: AMT Configuration


##### ➔ AMT BIOS Features [Enabled]

Use the **AMT BIOS Features** option to allow IT personnel to remotely manage computers before the system boots up, after an OS crash, or even when the system is powered off.

- ➔ **Disabled**                      Completely disabled (generally disabled by default on consumer devices)
- ➔ **Enabled**    **DEFAULT**      Enables remote management (requires ME firmware support)

### 5.3.6 Trusted Computing

Use the **Trusted Computing** menu (**BIOS Menu 21**) to configure settings related to the Trusted Computing Group (TCG) Trusted Platform Module (TPM).

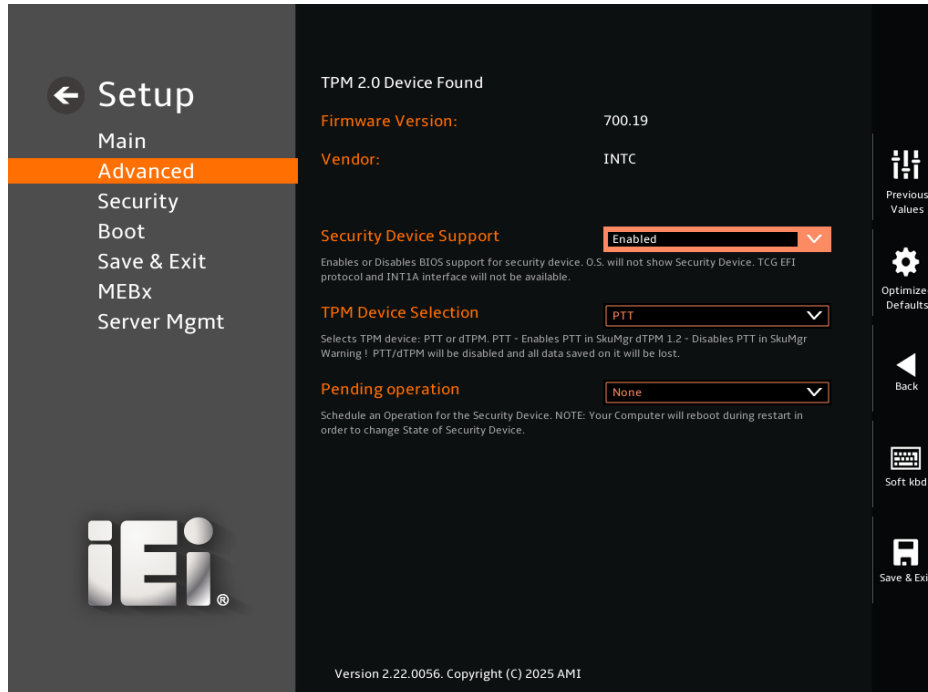

#### BIOS Menu 21: PCH-FW Configuration

##### ➔ Security Device Support [Disable]

Use the **Security Device Support** option to configure support for the TPM.

- ➔ **Disable**                                      TPM support is disabled.
- ➔ **Enable**                                      DEFAULT      TPM support is enabled.

##### ➔ Pending Operation [None]

Use the **Pending Operation** option to schedule an operation for the security device.

- ➔ **None**                                      DEFAULT      TPM information is previous.S
- ➔ **TPM Clear**                                      TPM information is cleared

### 5.3.7 iEi One Key Recovery

Use the **iEi One Key Recovery** menu (**BIOS Menu 22**) to set or change the configurations for the Auto Recovery Function.



#### BIOS Menu 22: iEi One Key Recovery


##### ➔ Auto Recovery Function [disabled]

Use the **Auto Recovery Function** option to enable or disable the **watch dog function**, when OS crashes It will automatically recover system.

- ➔ **Disabled**      **DEFAULT**      Disables watch dog function
- ➔ **Enabled**                Enables watch dog function

### 5.3.8 RTC Wake Settings

Use the **RTC Wake Setting** menu (**BIOS Menu 23**) to enable or disable Wake system with Fixed Time.

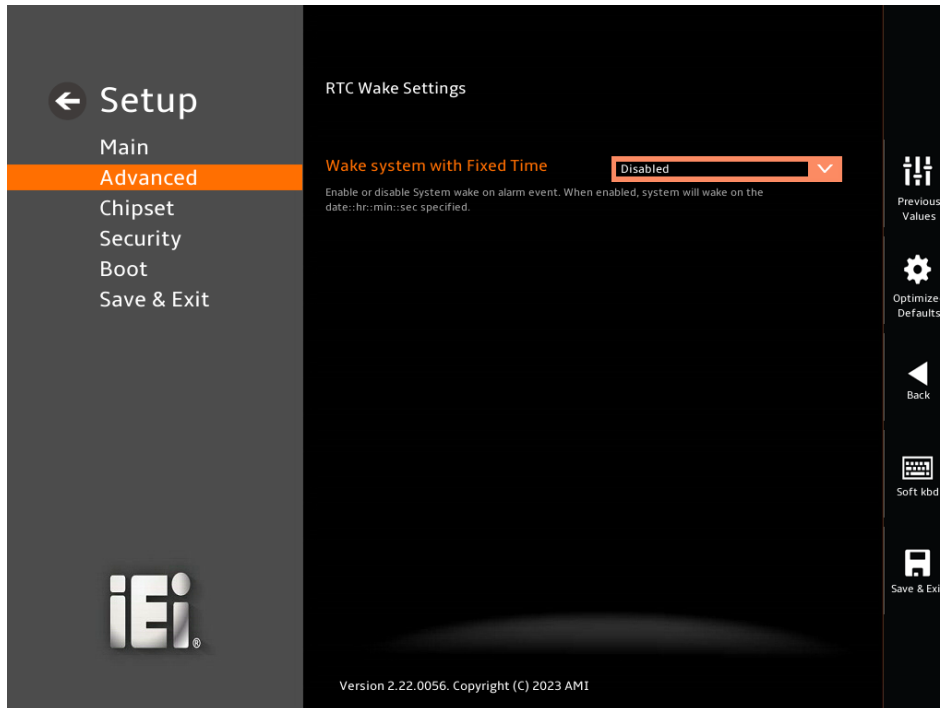

**BIOS Menu 23: RTC Wake Setting**


➔ **RTC Wake Setting [disabled]**

Use the **RTC Wake Setting** option to enable or disable the **System wake on alarm event** Technology, when enabled, system will wake on the date.

- ➔ **Disabled**      **DEFAULT**      Disables System wake on alarm event Technology
- ➔ **Enabled**                Enables System wake on alarm event Technology

### 5.3.9 F81866 Super IO Configuration


Use the **F81866 Super IO Configuration** menu (**BIOS Menu 24**) to set or change the configurations for the parallel ports and serial ports.

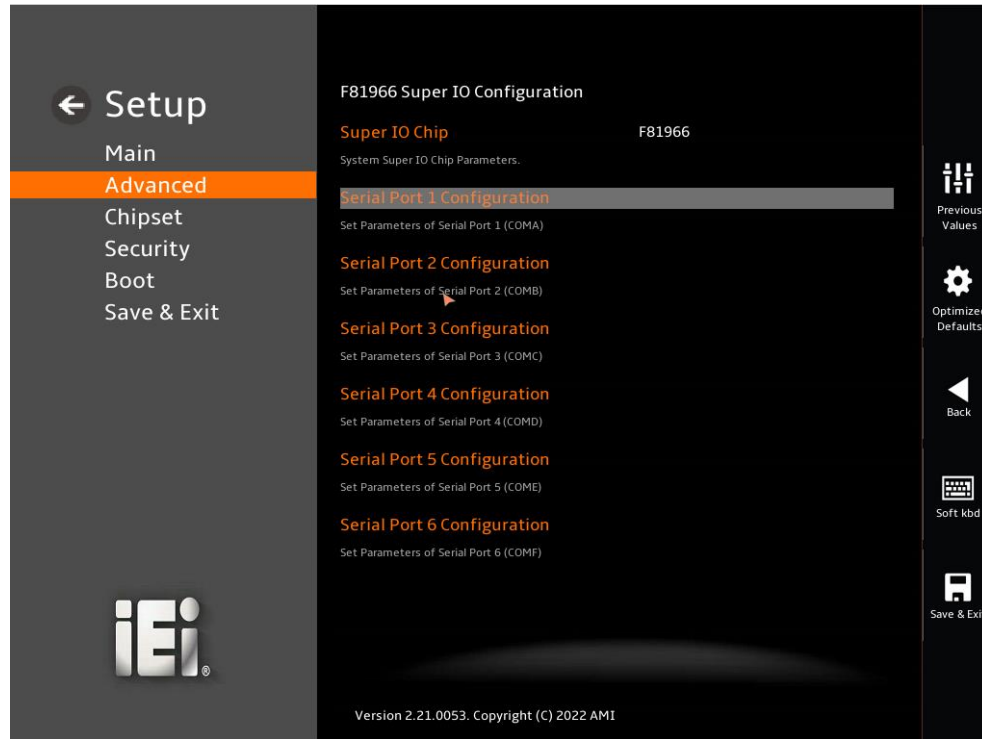

**BIOS Menu 24: F81866 Super IO Configuration**

### 5.3.9.1 Serial Port 1 Configuration

Use the **Serial Port 1 Configuration** menu (**BIOS Menu 25**) to configure the serial port n.

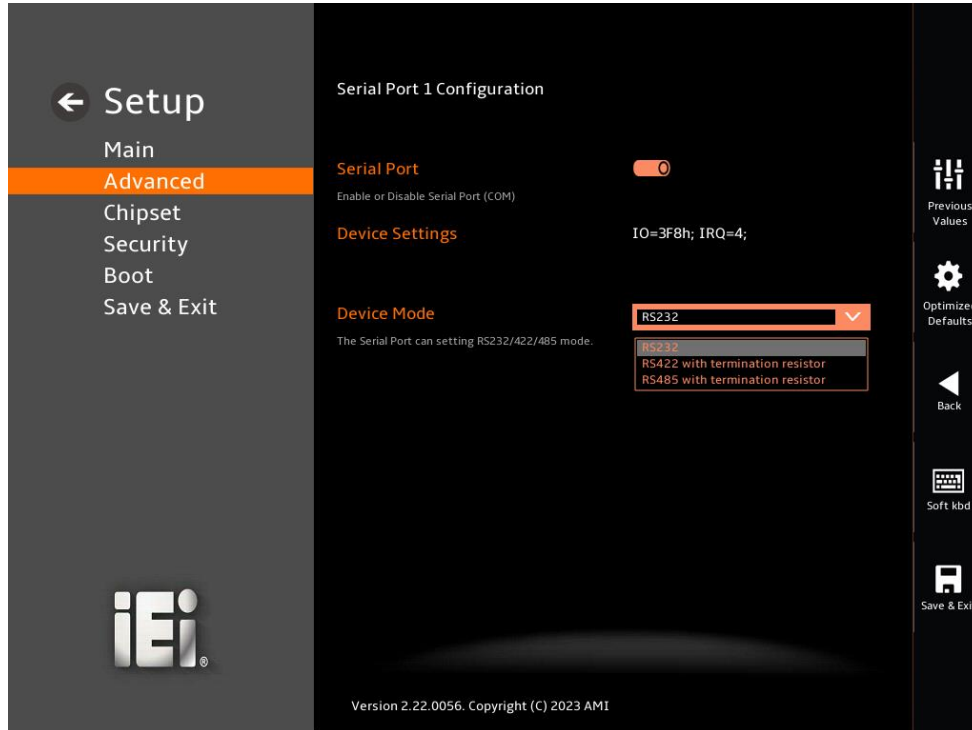

#### BIOS Menu 25: Serial Port 1 Configuration Menu

##### ➔ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- ➔ **Disabled**                      Disable the serial port
- ➔ **Enabled**      **DEFAULT**      Enable the serial port

##### ➔ Device Settings

Use the **Device Settings** option to change the serial port IO port address and interrupt address.


- ➔ **IO=3F8h;**                      Serial Port I/O port address is 3F8h and the interrupt  
**IRQ=4**                              address is IRQ4

→ **Device Mode [RS232]**

- **RS232**            **DEFAULT**    The Device Mode is RS232.
- **RS422 with termination resistor**            The Device Mode is RS422.
- **RS485 with termination resistor**            The Device Mode is RS485.

**5.3.9.2 Serial Port 2 Configuration**

Use the **Serial Port 2 Configuration** menu (**BIOS Menu 26**) to configure the serial port n.

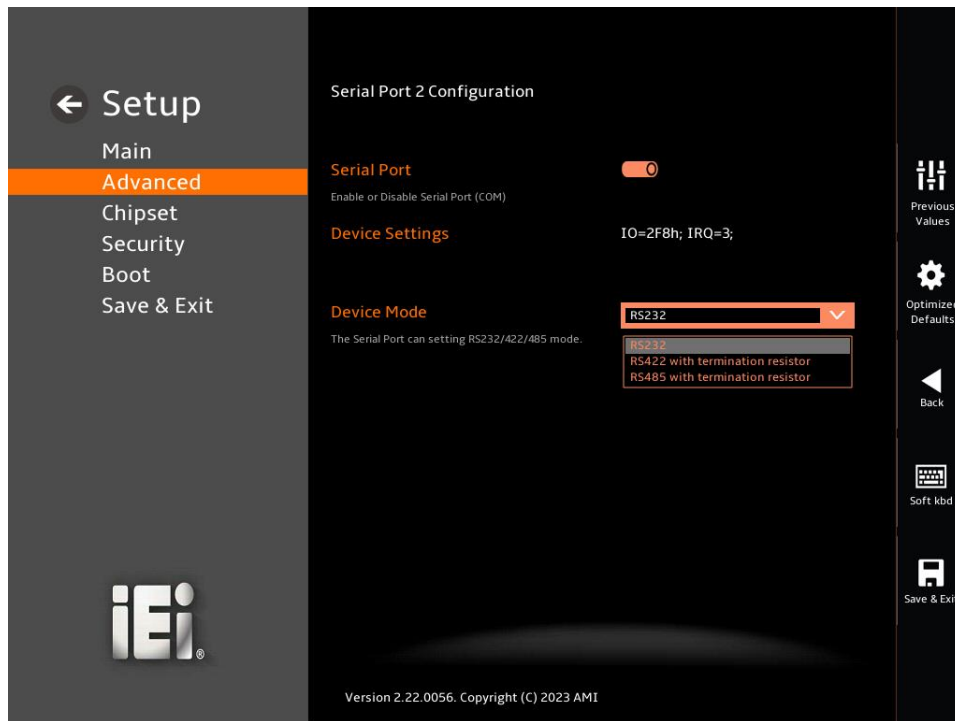

**BIOS Menu 26: Serial Port 2 Configuration Menu**

→ **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the serial port.

## IMB-ARL-Q870

- **Disabled**                      Disable the serial port
- **Enabled**            **DEFAULT**            Enable the serial port

→ **Device Settings**

Use the **Device Settings** option to change the serial port IO port address and interrupt address.


- **IO=2F8h;**                      Serial Port I/O port address is 2F8h and the interrupt  
**IRQ=3**                              address is IRQ3

→ **Device Mode [RS232]**

- **RS232**                      **DEFAULT**            The Device Mode is RS232.
- **RS422 with**                      The Device Mode is RS422.  
**termination**
- **RS485 with**                      The Device Mode is RS485.  
**termination**  
**resistor**

### 5.3.9.3 Serial Port 3 Configuration

Use the **Serial Port 3 Configuration** menu (**BIOS Menu 27**) to configure the serial port 3.

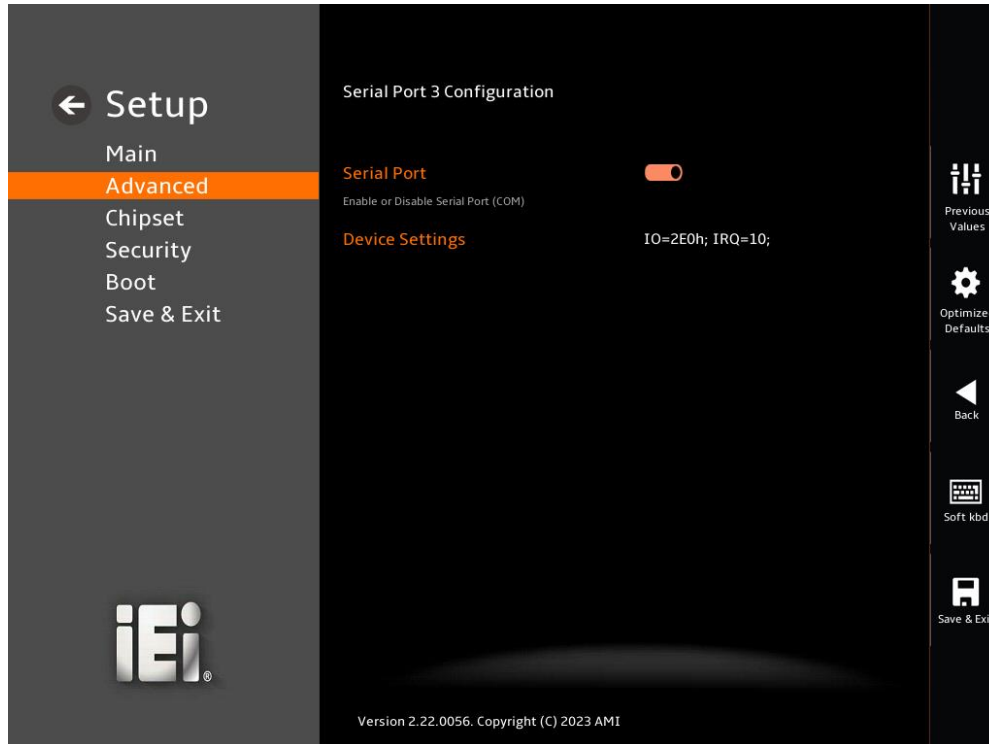

#### BIOS Menu 27: Serial Port 3 Configuration Menu

##### ➔ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

➔ **Disabled**                      Disable the serial port

➔ **Enabled**      **DEFAULT**      Enable the serial port


##### ➔ Device Settings

Use the **Device Settings** option to change the serial port IO port address and interrupt address.

➔ **IO=2E0h;**                      Serial Port I/O port address is 2E0h and the interrupt  
**IRQ=10**                              address is IRQ10

### 5.3.9.4 Serial Port 4 Configuration

Use the **Serial Port 4 Configuration** menu (**BIOS Menu 28**) to configure the serial port 4.

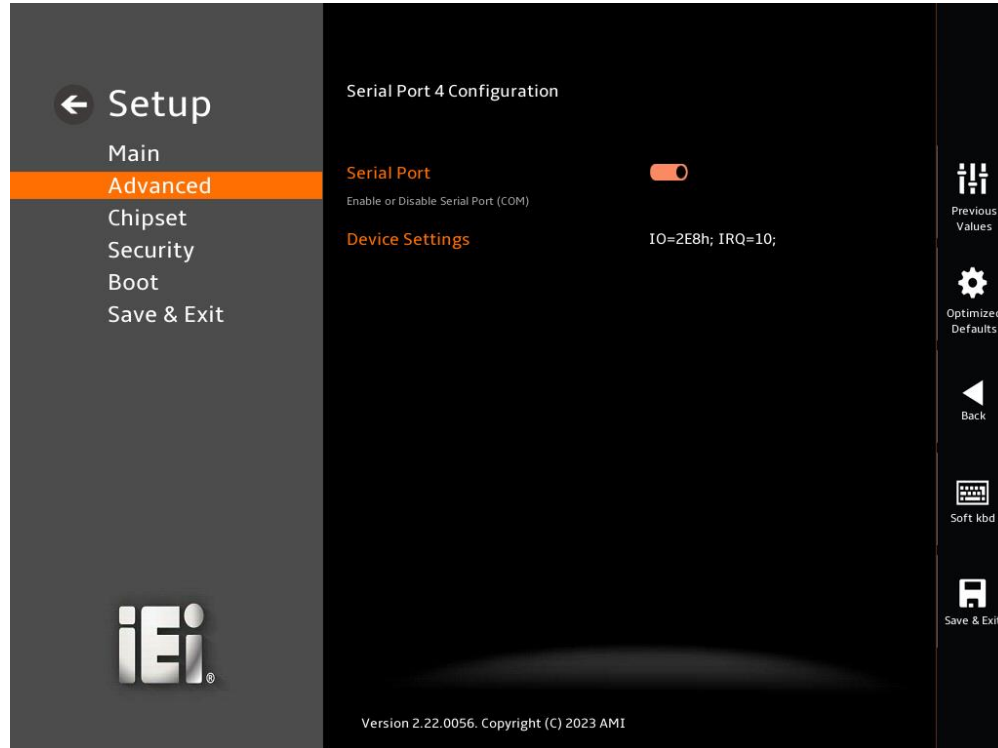

#### BIOS Menu 28: Serial Port 4 Configuration Menu

##### → Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled**                      Disable the serial port
- **Enabled**      **DEFAULT**      Enable the serial port


##### → Device Settings

Use the **Device Settings** option to change the serial port IO port address and interrupt address.

- **IO=2E8h;**                      Serial Port I/O port address is 2E8h and the interrupt  
**IRQ=10**                              address is IRQ10

### 5.3.9.5 Serial Port 5 Configuration

Use the **Serial Port 5 Configuration** menu (**BIOS Menu 29**) to configure the serial port 5.

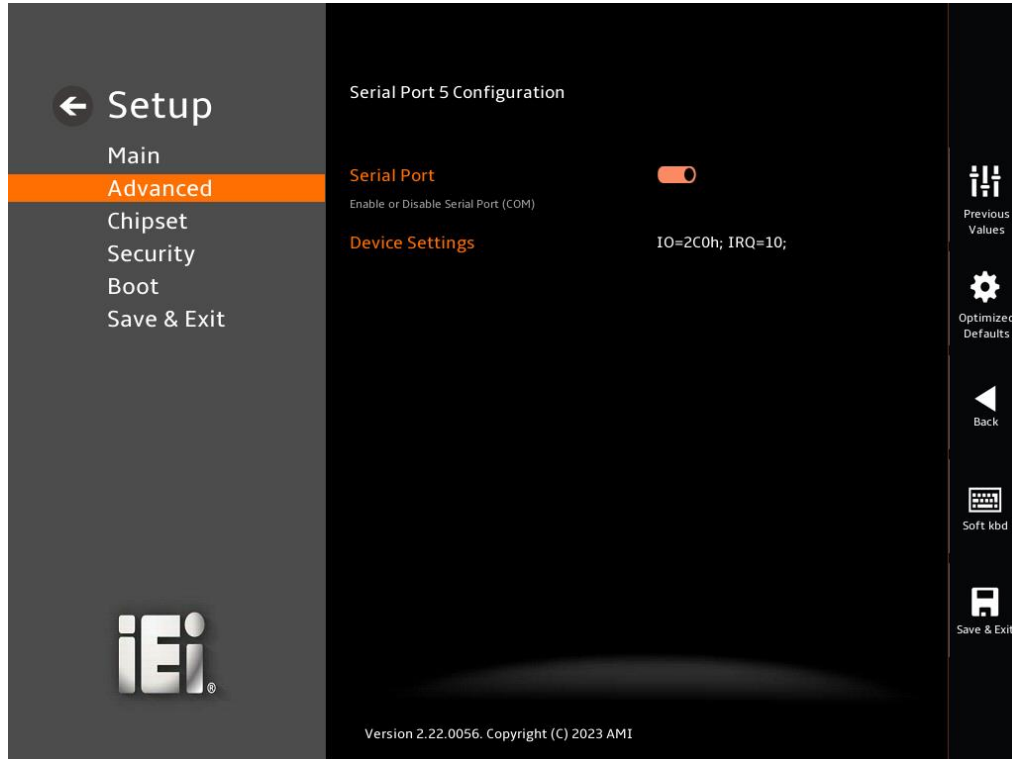

#### BIOS Menu 29: Serial Port 5 Configuration Menu

##### ➔ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- ➔ **Disabled**                      Disable the serial port
- ➔ **Enabled**      **DEFAULT**      Enable the serial port


##### ➔ Device Settings

Use the **Device Settings** option to change the serial port IO port address and interrupt address.

- ➔ **IO=2C0h;**                      Serial Port I/O port address is 2C0h and the interrupt address is IRQ10
- IRQ=10**

### 5.3.9.6 Serial Port 6 Configuration

Use the **Serial Port 6 Configuration** menu (**BIOS Menu 30**) to configure the serial port 6.

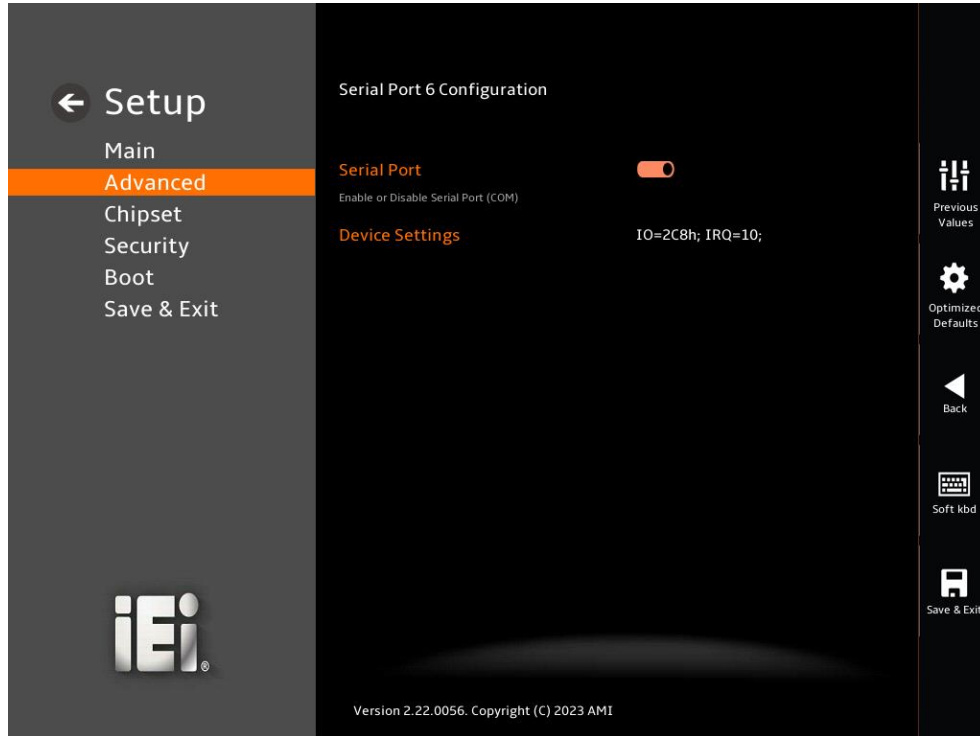

#### BIOS Menu 30: Serial Port 6 Configuration Menu

##### → Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled**                      Disable the serial port
- **Enabled**      **DEFAULT**      Enable the serial port


##### → Device Settings

Use the **Device Settings** option to change the serial port IO port address and interrupt address.

- **IO=2C8h;**                      Serial Port I/O port address is 2C8h and the interrupt  
**IRQ=10**                              address is IRQ10

### 5.3.10 EC ITE5571 H-W Monitor

The EC ITE5571 H-W Monitor menu (**BIOS Menu 31** ) contains the smart fan mode configuration submenu and shows the state of H/W real-time operating temperature, fan speeds and system voltages.

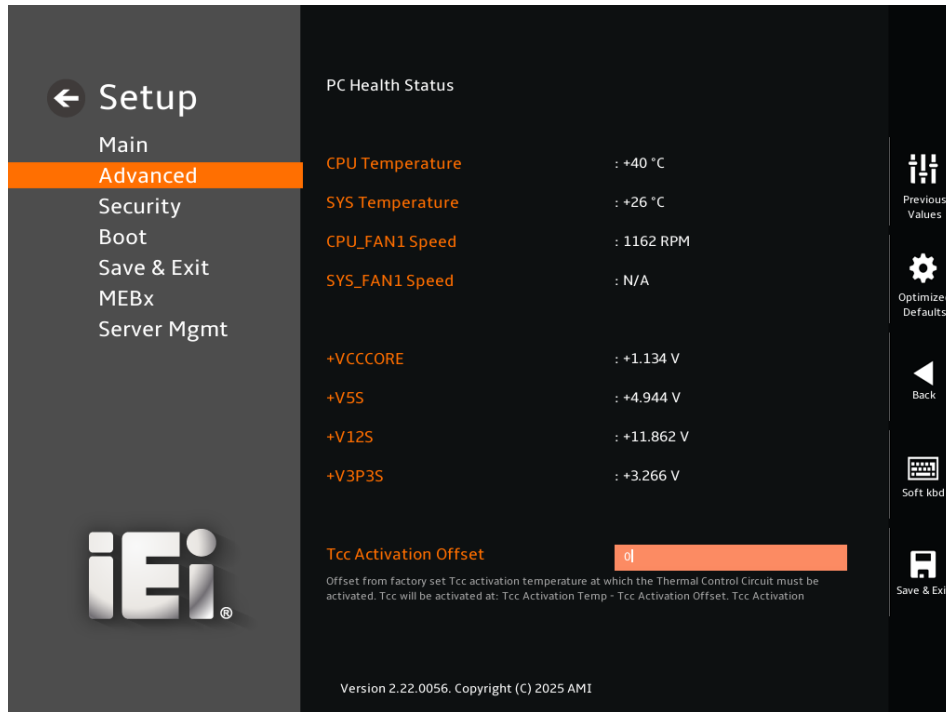

#### BIOS Menu 31: EC ITE5571 H-W Monitor


##### → PC Health Status

The following system parameters and values are shown. The system parameters that are monitored are:


- CPU Temperature
- SYS Temperature
- CPU\_FAN1 Speed
- SYS\_FAN1 Speed
- + VCCCORE
- +V5S
- +V12S
- +V3P3S

### 5.3.10.1 Smart Fan Mode Configuration

Use the **Smart Fan Mode Configuration** submenu (**BIOS Menu 32 & BIOS Menu 33**) to configure the CPU/system fan start/off temperature and control mode.

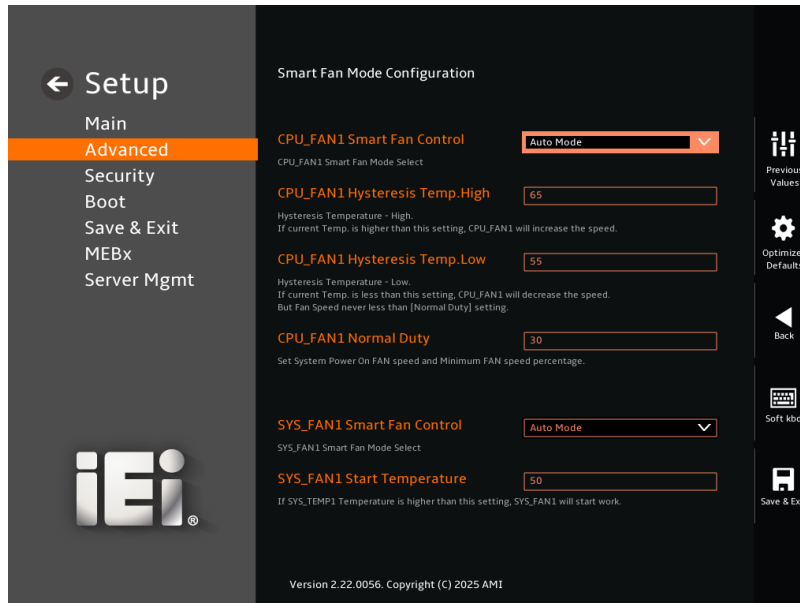

### BIOS Menu 32: Smart Fan Mode Configuration (1/2)

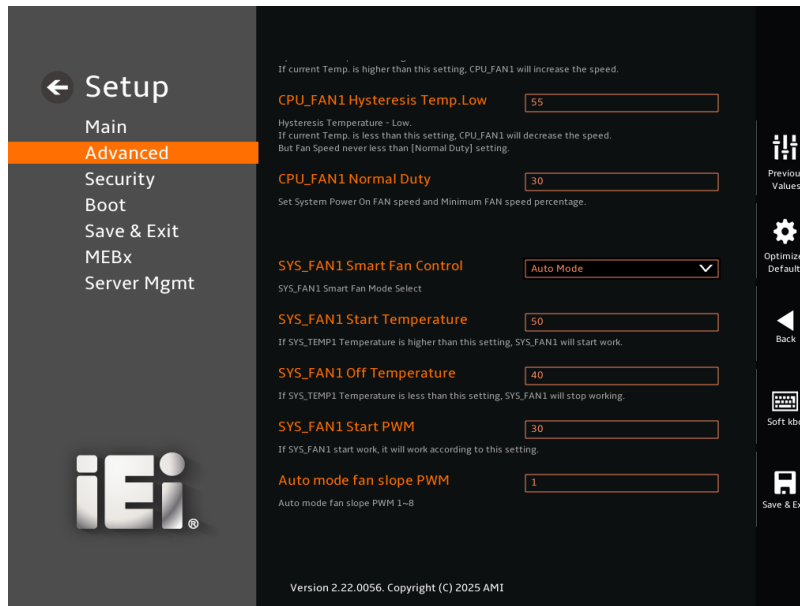

### BIOS Menu 33: Smart Fan Mode Configuration (2/2)

**→ CPU\_FAN1 Smart Fan Control [Auto Mode]**

Use the **CPU\_FAN1 Smart Fan Control** option to configure the CPU Smart Fan.

- Manual Mode**                      The fan spins at the speed set in Manual Mode settings.
- Auto Mode**              **DEFAULT**      The fan adjusts its speed using Auto Mode settings.

**→ Hysteresis Temp.High**

Use the **Hysteresis Temp.High** option to control CPU\_FAN1 speed when temperature is change. If current Temp.is higher than this setting, Fan will increase the speed. Use the + or – key to change the value or enter a decimal number between 1 and 100.

**→ Hysteresis Temp.Low**

Use the **Hysteresis Temp.Low** option to control CPU\_FAN1 speed when temperature is change. If current Temp.is lower than this setting, Fan will decrease the speed. Use the + or – key to change the value or enter a decimal number between 1 and 100. But Fan Speed never less than [Normal Duty] setting.

**→ Normal Duty**

Use the **Normal Duty** option to set CPU\_FAN1 Power On FAN speed and Minimum FAN speed percentage.

**→ SYS\_FAN1 Smart Fan Control [Auto Mode]**

Use the **SYS\_FAN1 Smart Fan Control** option to configure the System Smart Fan.

- Manual Mode**                      The fan spins at the speed set in Manual Mode settings.
- Auto Mode**              **DEFAULT**      The fan adjusts its speed using Auto Mode settings.

**IMB-ARL-Q870****→ SYS\_FAN1 Start Temperature**

If the System temperature is between **fan off** and **fan start**, the fan speed change to **fan start PWM**. To set a value, Use the + or – key to change the value or enter a decimal number between 1 and 100.

**→ SYS\_FAN1 Off Temperature**

If the System temperature is lower than the value set this option, the fan speed change to be lowest. To set a value, Use the + or – key to change the value or enter a decimal number between 1 and 100.

**→ SYS\_FAN1 Start PWM**


Use the **SYS\_Fan1 Start PWM** option to set the PWM start value. Use the + or – key to change the value or enter a decimal number between 1 and 100.

**→ Auto Mode Fan Slope PWM**


Use the **Auto Mode Fan Slope PWM** option to select the linear rate at which the PWM mode increases with respect to an increase in temperature. Use the + or – key to change the value or enter a decimal number between 1 and 8.

### 5.3.11 Serial Port Console Redirection

The **Serial Port Console Redirection** menu (**BIOS Menu 34 & BIOS Menu 35**) allows the console redirection options to be configured. Console Redirection allows users to maintain a system remotely by re-directing keyboard input and text output through the serial port.

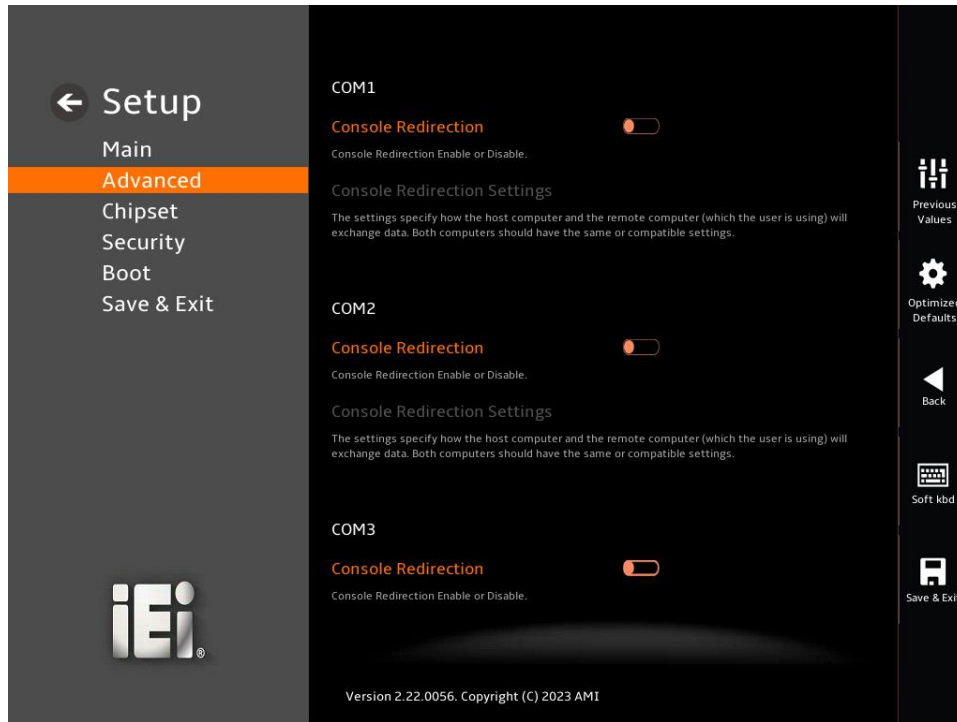

**BIOS Menu 34: Serial Port Console Redirection (1/2)**

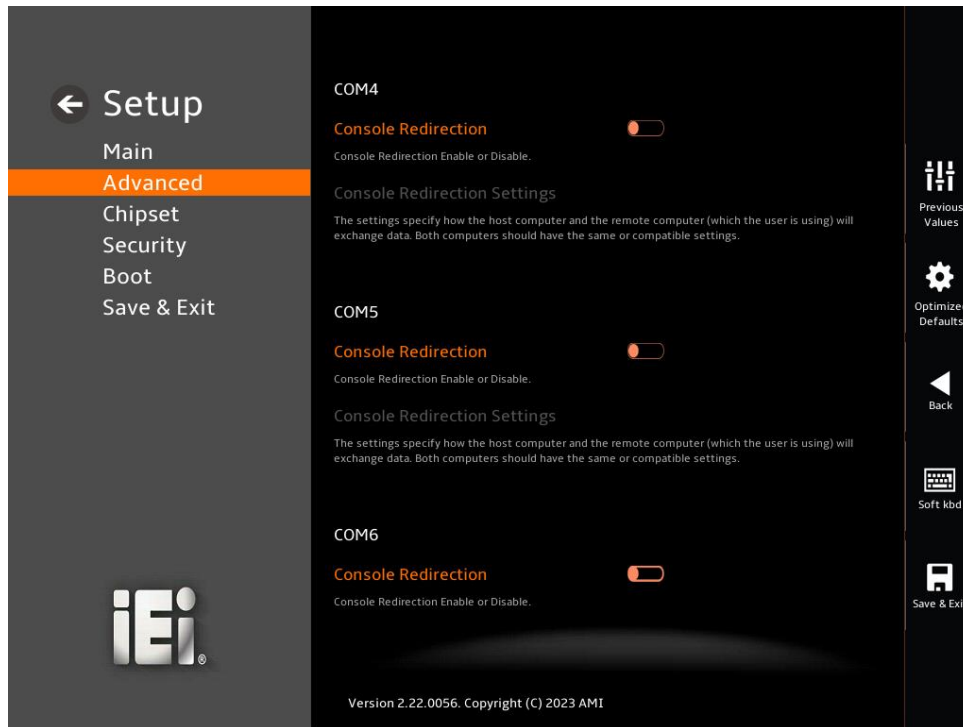

### BIOS Menu 35: Serial Port Console Redirection (2/2)

#### → Console Redirection [Disabled]


Use **Console Redirection** option to enable or disable the console redirection function.

- **Disabled**    **DEFAULT**    Disabled the console redirection function
- **Enabled**                    Enabled the console redirection function

The **Console Redirection Settings** submenu will be available when the **Console Redirection** option is enabled.

#### 5.3.11.1 Console Redirection Settings

The following options are available in the **Console Redirection Settings** submenu (**BIOS Menu 36**) when the **COM Console Redirection** (for COM1 to COM6) option is enabled.

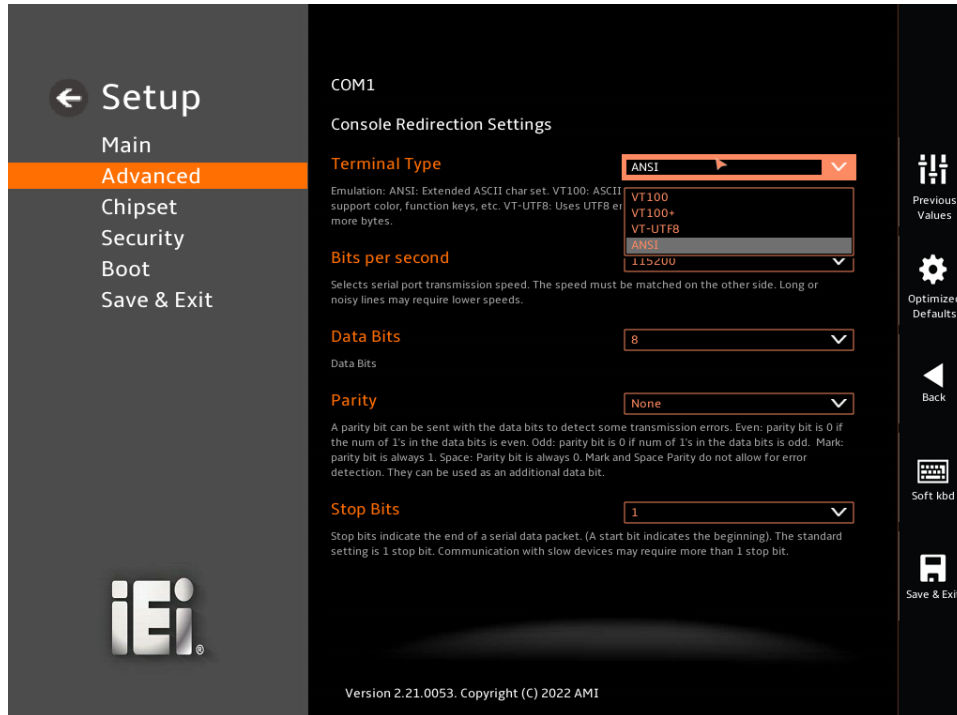

### BIOS Menu 36: COM Console Redirection Settings

#### → Terminal Type [ANSI]

Use the **Terminal Type** option to specify the remote terminal type.

- **VT100**                                      The target terminal type is VT100
- **VT100+**                                    The target terminal type is VT100+
- **VT-UTF8**                                  The target terminal type is VT-UTF8
- **ANSI**                                      **DEFAULT**                                    The target terminal type is ANSI

#### → Bits per second [115200]

Use the **Bits per second** option to specify the serial port transmission speed. The speed must match on the other side. Long or noisy lines may require lower speeds.

- **9600**                                        Sets the serial port transmission speed at 9600.
- **19200**                                      Sets the serial port transmission speed at 19200.
- **38400**                                      Sets the serial port transmission speed at 38400.

## IMB-ARL-Q870

- **57600** Sets the serial port transmission speed at 57600.
- **115200**      **DEFAULT** Sets the serial port transmission speed at 115200.

→ **Data Bits [8]**

Use the **Data Bits** option to specify the number of data bits.

- **7** Sets the data bits at 7.
- **8**      **DEFAULT** Sets the data bits at 8.

→ **Parity [None]**

Use the **Parity** option to specify the parity bit that can be sent with the data bits for detecting the transmission errors.

- **None**      **DEFAULT** No parity bit is sent with the data bits.
- **Even** The parity bit is 0 if the number of ones in the data bits is even.
- **Odd** The parity bit is 0 if the number of ones in the data bits is odd.
- **Mark** The parity bit is always 1. This option does not allow for error detection.
- **Space** The parity bit is always 0. This option does not allow for error detection.


→ **Stop Bits [1]**

Use the **Stop Bits** option to specify the number of stop bits used to indicate the end of a serial data packet. Communication with slow devices may require more than 1 stop bit.

- **1**      **DEFAULT** Sets the number of stop bits at 1.
- **2** Sets the number of stop bits at 2.

### 5.3.12 PCI Subsystem Settings

Use the **PCI Subsystem Settings (BIOS Menu 37 )** to set options related to the PCI (Peripheral Component Interconnect) subsystem.

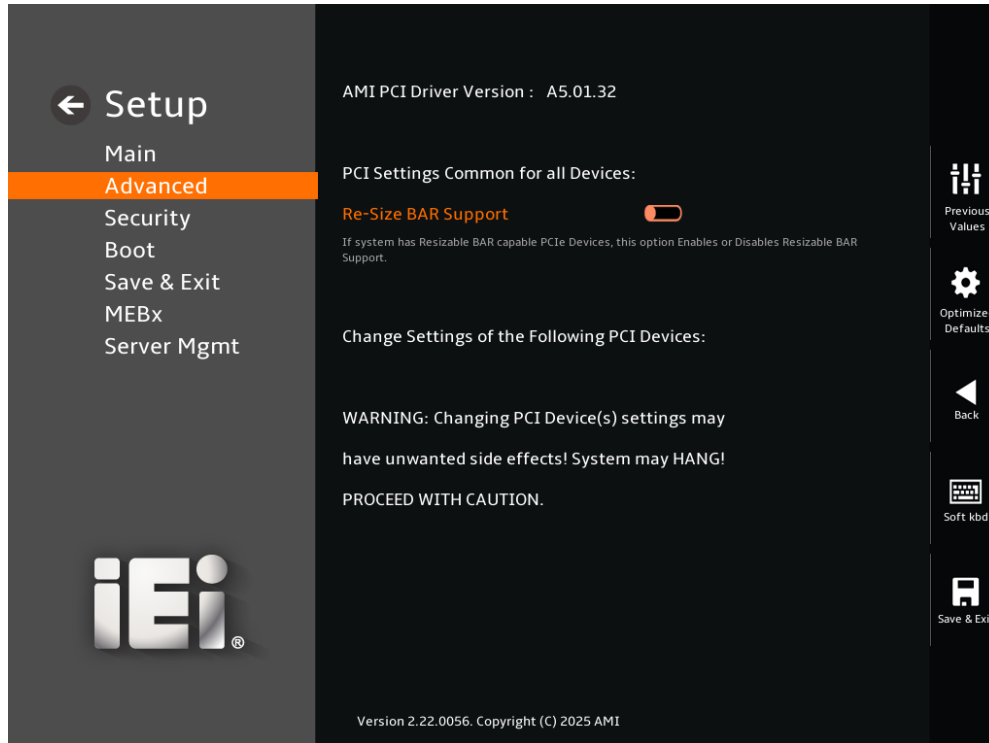


### BIOS Menu 37: PCI Subsystem Settings

## IMB-ARL-Q870

## 5.3.13 NVMe Configuration

Use the **NVMe Configuration (BIOS Menu 38)** menu to display the NVMe controller and device information.

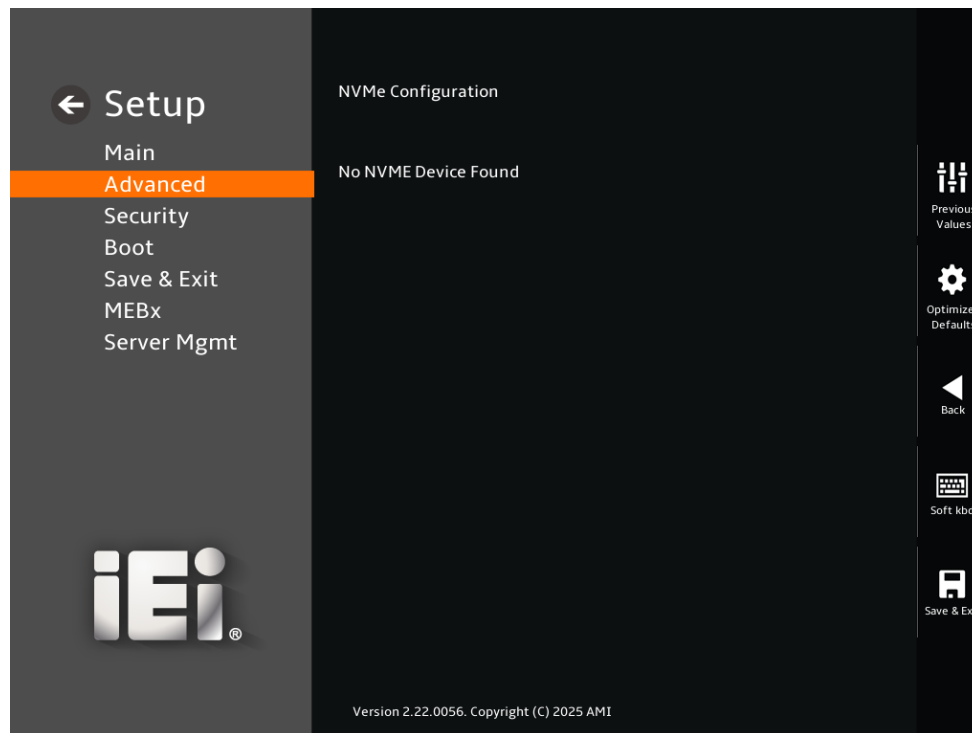

## BIOS Menu 38: NVMe Configuration

## 5.4 Security

Use the **Security** menu (**BIOS Menu 39 & BIOS Menu 40**) to set system and user passwords.



### BIOS Menu 39: Security (1/2)



### BIOS Menu 40: Security (2/2)

## IMB-ARL-Q870

### → Administrator Password


Use the **Administrator Password** to set or change an administrator password.

### → User Password

Use the **User Password** to set or change a user password.

## 5.5 Boot

Use the **Boot** menu (**BIOS Menu 41**) to configure system boot options.

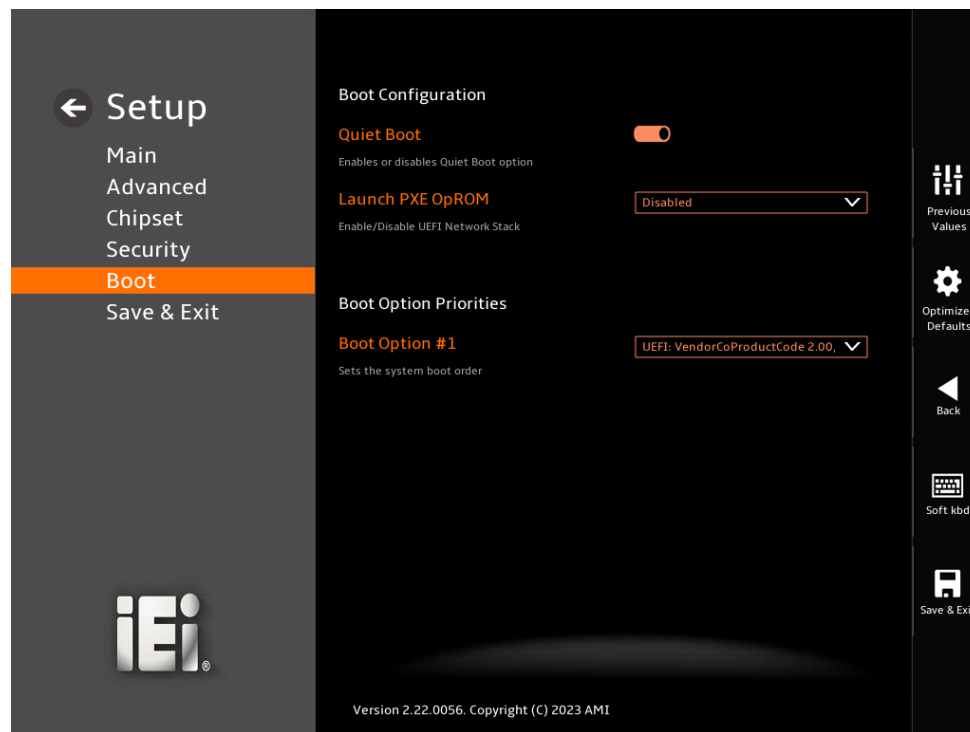

### BIOS Menu 41: Boot

#### 5.5.1 Boot Configuration

### → Quiet Boot [Enabled]

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

→ **Disabled** Normal POST messages displayed

➔ **Enabled**    **DEFAULT**    OEM Logo displayed instead of POST messages

➔ **Launch PXE OpROM [Disabled]**


Use the **Launch PXE OpROM** option to enable or disable boot option for legacy network devices.

➔ **Disabled**    **DEFAULT**    Ignore all PXE Option ROMs

➔ **Enabled**    Load PXE Option ROMs.

## 5.6 Save & Exit

Use the **Save & Exit** menu (**BIOS Menu 42**) to load default BIOS values, optimal failsafe values and to save configuration changes.

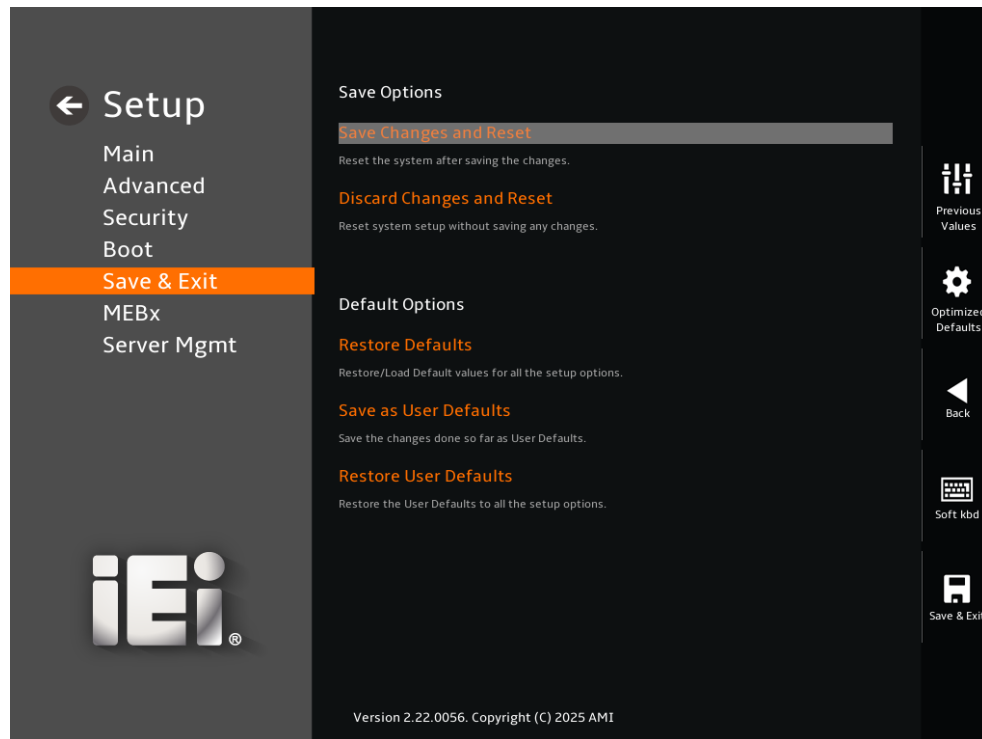

**BIOS Menu 42: Save & Exit**

## IMB-ARL-Q870

### → **Save Changes and Reset**

Use the **Save Changes and Reset** option to save the changes made to the BIOS options and reset the system.

### → **Discard Changes and Reset**

Use the **Discard Changes and Reset** option to exit the system without saving the changes made to the BIOS configuration setup program.

### → **Restore Defaults**

Use the **Restore Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F3 key can be used for this operation.**

### → **Save as User Defaults**


Use the **Save as User Defaults** option to save the changes done so far as user defaults.

### → **Restore User Defaults**

Use the **Restore User Defaults** option to restore the user defaults to all the setup options.

## 5.7 MEBX


Use the **MEBX** menu (**BIOS Menu 43**) to login MEBx.

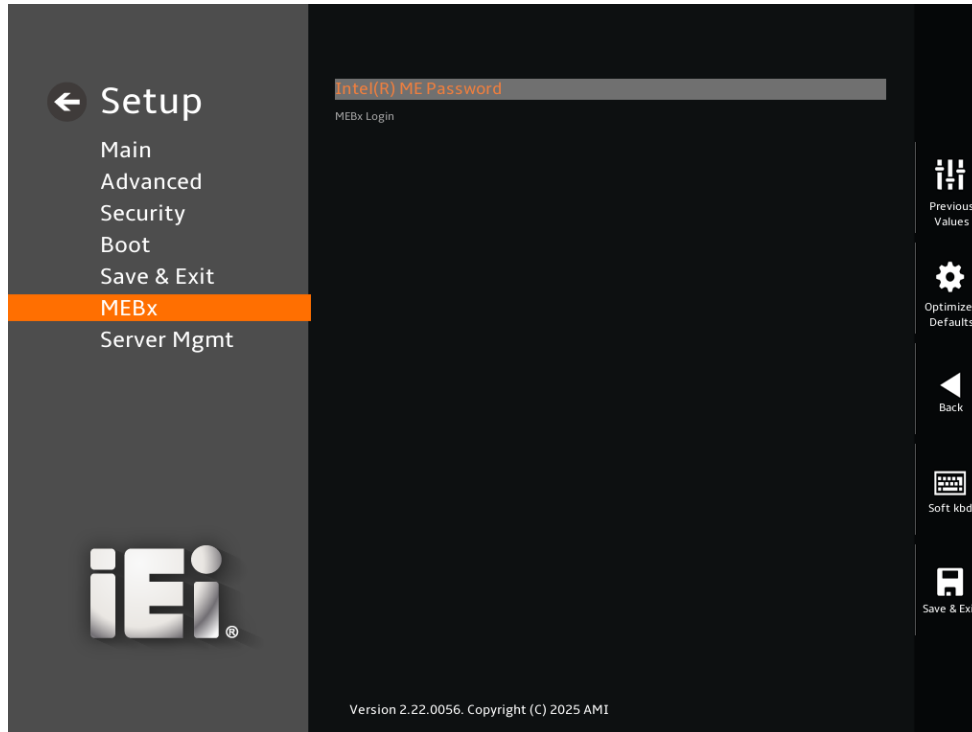

### BIOS Menu 43: Save & Exit

## 5.8 Server Mgmt

Use the **Server Mgmt** menu (**BIOS Menu 44**) to communicate with BMC.

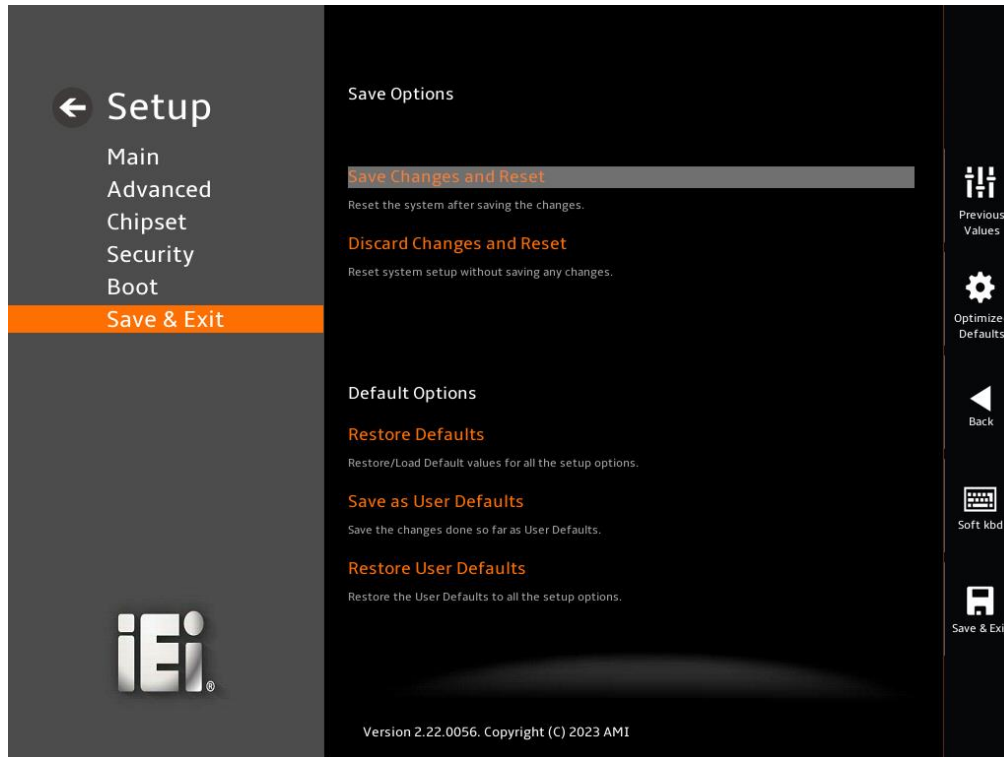

**BIOS Menu 44: Server Mgmt**

Appendix

**A**

# Regulatory Compliance

---

**DECLARATION OF CONFORMITY**



This equipment has been tested and found to comply with specifications for CE marking. If the user modifies and/or installs other devices in the equipment, the CE conformity declaration may no longer apply.

**FCC WARNING**



This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Appendix

**B**

# Product Disposal


---

**CAUTION:**

Risk of explosion if battery is replaced by an incorrect type. Only certified engineers should replace the on-board battery.

Dispose of used batteries according to instructions and local regulations.

- Outside the European Union–If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority so as to comply with the correct disposal method.
- Within the European Union–The device that produces less waste and is easier to recycle is classified as electronic device in terms of the European Directive 2012/19/EU (WEEE), and must not be disposed of as domestic garbage.

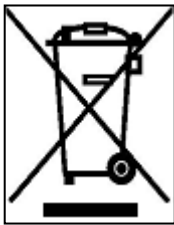

EU-wide legislation, as implemented in each Member State, requires that waste electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes monitors and electrical accessories, such as signal cables or power cords. When you need to dispose of your device, please follow the guidance of your local authority, or ask the shop where you purchased the product. The mark on electrical and electronic products only applies to the current European Union Member States.

Please follow the national guidelines for electrical and electronic product disposal.

Appendix

C

# BIOS Options

---

## IMB-ARL-Q870

Below is a list of BIOS configuration options in the BIOS chapter.

➔ BIOS Information .....	77
➔ Processor Information.....	77
➔ PCH Information.....	78
➔ System Date [xx/xx/xx] .....	78
➔ System Time [xx:xx:xx] .....	78
➔ Intel (VMX) Virtualization Technology [Disabled].....	81
➔ Active Processor Cores [All] .....	82
➔ Active Efficient-cores [All] .....	82
➔ Hyper-Threading [Enabled].....	83
➔ Intel(R) SpeedStep(tm) [Enabled].....	83
➔ Turbo Mode.....	83
➔ C states [Disabled].....	83
➔ Power Limit 1 Override [Disabled] .....	83
➔ Power Limit 1 Time Window .....	84
➔ Power Limit 2 [Disabled] .....	84
➔ VT-d [Enabled].....	86
➔ NPU Device [B0:D11:F0].....	86
➔ Primary Display [Auto] .....	88
➔ Internal Graphics [Enabled].....	88
➔ DVMT Pre-Allocated [160M] .....	89
➔ Auto Power Button Function [Disabled (ATX)].....	92
➔ Restore AC Power Loss [Last State] .....	92
➔ Power Saving Function (EUP) [Disabled].....	92
➔ USB Power SW1(LAN1_USB1) [+5VDUAL] .....	92
➔ USB Power SW2(LAN2_USB2) [+5VDUAL] .....	92
➔ USB Power SW3(LAN3_USB3) [+5VDUAL] .....	92
➔ USB Power SW4(USB3_1) [+5VDUAL].....	93
➔ USB Power SW5(USB2_CN1) [+5VDUAL] .....	93
➔ USB Power SW6(USB2_CN2) [+5VDUAL] .....	93
➔ ME OVERRIDE [Disabled] .....	93
➔ HD Audio [Enabled] .....	95
➔ AMT BIOS Features [Enabled].....	96
➔ Security Device Support [Disable] .....	97

- ➔ Pending Operation [None] .....97
- ➔ Auto Recovery Function [disabled] .....98
- ➔ RTC Wake Setting [disabled] .....99
- ➔ Serial Port [Enabled].....101
- ➔ Device Settings .....101
- ➔ Device Mode [RS232].....102
- ➔ Serial Port [Enabled].....102
- ➔ Device Settings .....103
- ➔ Device Mode [RS232].....103
- ➔ Serial Port [Enabled].....104
- ➔ Device Settings .....104
- ➔ Serial Port [Enabled].....105
- ➔ Device Settings .....105
- ➔ Serial Port [Enabled].....106
- ➔ Device Settings .....106
- ➔ Serial Port [Enabled].....107
- ➔ Device Settings .....107
- ➔ PC Health Status .....108
- ➔ CPU\_FAN1 Smart Fan Control [Auto Mode] .....110
- ➔ Hysteresis Temp.High .....110
- ➔ Hysteresis Temp.Low .....110
- ➔ Normal Duty.....110
- ➔ SYS\_FAN1 Smart Fan Control [Auto Mode].....110
- ➔ SYS\_FAN1 Start Temperature .....111
- ➔ SYS\_FAN1 Off Temperature .....111
- ➔ SYS\_FAN1 Start PWM .....111
- ➔ Auto Mode Fan Slope PWM .....111
- ➔ Console Redirection [Disabled].....113
- ➔ Terminal Type [ANSI].....114
- ➔ Bits per second [115200].....114
- ➔ Data Bits [8] .....115
- ➔ Parity [None].....115
- ➔ Stop Bits [1].....115
- ➔ Administrator Password .....119
- ➔ User Password .....119

## IMB-ARL-Q870

→ Quiet Boot [Enabled] .....	119
→ Launch PXE OpROM [Disabled] .....	120
→ Save Changes and Reset .....	121
→ Discard Changes and Reset .....	121
→ Restore Defaults .....	121
→ Save as User Defaults .....	121
→ Restore User Defaults .....	121

Appendix

**D**

# Watchdog Timer

---

**NOTE:**

The following discussion applies to DOS environment. Contact IEI support or visit the IEI website for specific drivers for other operating systems.

The Watchdog Timer is provided to ensure that standalone systems can always recover from catastrophic conditions that cause the CPU to crash. This condition may have occurred by external EMIs or a software bug. When the CPU stops working correctly, Watchdog Timer either performs a hardware reset (cold boot) or a Non-Maskable Interrupt (NMI) to bring the system back to a known state.

A BIOS function call (INT 15H) is used to control the Watchdog Timer.

INT 15H:

<b>AH – 6FH Sub-function:</b>	
AL – 2:	Sets the Watchdog Timer's period.
BL:	Time-out value (Its unit-second is dependent on the item "Watchdog Timer unit select" in CMOS setup).

**Table D-1: AH-6FH Sub-function**

Call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer starts counting down. When the timer value reaches zero, the system resets. To ensure that this reset condition does not occur, calling sub-function 2 must periodically refresh the Watchdog Timer. However, the watchdog timer is disabled if the time-out value is set to zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.

**NOTE:**

When exiting a program it is necessary to disable the Watchdog Timer, otherwise the system resets.

**EXAMPLE PROGRAM:**

**; INITIAL TIMER PERIOD COUNTER**

;

**W\_LOOP:**

;

```
MOV     AX, 6F02H      ;setting the time-out value
MOV     BL, 30         ;time-out value is 48 seconds
INT     15H
```

;

**; ADD THE APPLICATION PROGRAM HERE**

;

```
CMP     EXIT_AP, 1     ;is the application over?
JNE     W_LOOP        ;No, restart the application
```

```
MOV     AX, 6F02H      ;disable Watchdog Timer
MOV     BL, 0          ;
INT     15H
```

;

**; EXIT ;**

Appendix

E

# Error Beep Code

---

## E.1 PEI Beep Codes

Number of Beeps	Description
4	Memory not Installed
1	Memory was installed twice (InstallPeiMemory routine in PEI Core called twice)
2	Recovery started
3	DXE IPL was not found
3	DXE Core Firmware Volume was not found
4	Recovery failed
4	S3 Resume failed
7	Reset PPI is not available

## E.2 DXE Beep Codes

Number of Beeps	Description
1	Invalid password
4	Some of the Architectural Protocols are not available
5	No Console Output Devices are found
5	No Console Input Devices are found
6	Flash update is failed
7	Reset protocol is not available
8	Platform PCI resource requirements cannot be met



**NOTE:**

If you have any question, please contact IEI for further assistance.

Appendix

**F**

# **Hazardous Materials Disclosure**

---

### F.1 RoHS II Directive (2015/863/EU)

The details provided in this appendix are to ensure that the product is compliant with the RoHS II Directive (2015/863/EU). The table below acknowledges the presences of small quantities of certain substances in the product, and is applicable to RoHS II Directive (2015/863/EU).

Please refer to the following table.

Part Name	Toxic or Hazardous Substances and Elements									
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)	Bis(2-ethylhexyl) phthalate (DEHP)	Butyl benzyl phthalate (BBP)	Dibutyl phthalate (DBP)	Diisobutyl phthalate (DIBP)
Housing	O	O	O	O	O	O	O	O	O	O
Printed Circuit Board	O	O	O	O	O	O	O	O	O	O
Metal Fasteners	O	O	O	O	O	O	O	O	O	O
Cable Assembly	O	O	O	O	O	O	O	O	O	O
Fan Assembly	O	O	O	O	O	O	O	O	O	O
Power Supply Assemblies	O	O	O	O	O	O	O	O	O	O
Battery	O	O	O	O	O	O	O	O	O	O
<p>O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in Directive (EU) 2015/863.</p> <p>X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in Directive (EU) 2015/863.</p>										

## F.2 China RoHS

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有“环境友好使用期限”的标签，此期限是估算这些物质“不会有泄漏或突变”的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
壳体	○	○	○	○	○	○
印刷电路板	○	○	○	○	○	○
金属螺帽	○	○	○	○	○	○
电缆组装	○	○	○	○	○	○
风扇组装	○	○	○	○	○	○
电力供应组装	○	○	○	○	○	○
电池	○	○	○	○	○	○
<p>O: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T11364-2014 與 GB/T26572-2011 标准规定的限量要求以下。</p> <p>X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11364-2014 與 GB/T26572-2011 标准规定的限量要求。</p>						