



MODEL:

AFL-08AH-N270-CR

**Fanless 8.4" Panel PC with
1.6 GHz Intel® Atom™ Processor
TFT LCD, Wireless LAN, Touch Screen, Six USB Ports**

User Manual

Rev. 1.02 – 1 October, 2012



Revision

Date	Version	Changes
1 October, 2012	1.02	Added Manual Conventions Added warning messages on page 22, 24 and 39.
5 October, 2010	1.01	Minor changes
9 September, 2010	1.00	Initial release

Copyright

COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Manual Conventions



WARNING!

Warnings appear where overlooked details may cause damage to the equipment or result in personal injury. Warnings should be taken seriously. Warnings are easy to recognize. The word “warning” is written as “**WARNING**,” both capitalized and bold and is followed by text. The text is the warning message. A warning message is shown below:



WARNING:

This is an example of a warning message. Failure to adhere to warning messages may result in permanent damage to the AFL-08AH-N270-CR or personal injury to the user. Please take warning messages seriously.



CAUTION!

Cautionary messages should also be heeded to help reduce the chance of losing data or damaging the AFL-08AH-N270-CR. Cautions are easy to recognize. The word “caution” is written as “**CAUTION**,” both capitalized and bold and is followed. The italicized text is the cautionary message. A caution message is shown below:



CAUTION:

This is an example of a caution message. Failure to adhere to cautions messages may result in permanent damage to the AFL-08AH-N270-CR. Please take caution messages seriously.

AFL-08AH-N270-CR Panel PC



NOTE:

These messages inform the reader of essential but non-critical information. These messages should be read carefully as any directions or instructions contained therein can help avoid making mistakes. Notes are easy to recognize. The word “note” is written as “**NOTE**,” both capitalized and bold and is followed by text. The text is the cautionary message. A note message is shown below:



NOTE:

This is an example of a note message. Notes should always be read. Notes contain critical information about the AFL-08AH-N270-CR. Please take note messages seriously.



WARNING:

This equipment has been tested and found to comply with the limits for a Class A and Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any change or modifications to the equipment not expressly approve by the party responsible for compliance could void your authority to operate such equipment.

Manufacturer:
ICP Electronics, Inc.
<http://www.icpems.com>

Table of Contents

1 INTRODUCTION.....	1
1.1 OVERVIEW.....	2
1.1.1 Features	2
1.1.2 Application.....	3
1.2 EXTERNAL OVERVIEW.....	3
1.2.1 General Description.....	3
1.2.2 Front Panel	3
1.2.3 Rear Panel	4
1.2.4 I/O Interface Panel	4
1.2.5 Top Panel and Side Panels.....	5
1.3 INTERNAL OVERVIEW.....	6
1.4 SYSTEM SPECIFICATIONS.....	7
2 DETAILED SPECIFICATIONS	9
2.1 DIMENSIONS.....	10
2.2 INTEL® ATOM™ PROCESSOR.....	11
2.3 MOTHERBOARD COMPONENTS.....	11
2.3.1 Installed Memory	11
2.3.2 Additional Memory	12
2.3.3 Storage Capacity.....	12
2.4 EXTERNAL PERIPHERAL INTERFACE CONNECTORS.....	12
2.4.1 LAN Connectivity.....	12
2.4.2 External USB Connectors.....	13
2.5 FRONT SIDE.....	14
2.5.1 Monitor	14
2.5.2 Touch-Screen Module.....	14
2.6 AUDIO	15
2.6.1 Audio Codec Controller.....	15
2.6.2 Stereo Speakers	15
2.7 SYSTEM POWER	16

2.7.1	<i>Power Adapter</i>	16
2.7.2	<i>Power Connector</i>	16
2.8	WIRELESS CONNECTIONS	16
3	UNPACKING	18
3.1	UNPACKING	19
3.1.1	<i>Packing List</i>	20
4	INSTALLATION	21
4.1	ANTI-STATIC PRECAUTIONS	22
4.2	INSTALLATION PRECAUTIONS	23
4.3	PREINSTALLED COMPONENTS	23
4.4	INSTALLATION AND CONFIGURATION STEPS	23
4.5	REMOVING THE BACK COVER	24
4.6	JUMPER SETTINGS	25
4.6.1	<i>Access the Jumpers</i>	25
4.6.2	<i>Clear CMOS Jumper</i>	26
4.7	MOUNTING THE SYSTEM	26
4.7.1	<i>Wall Mounting</i>	27
4.7.2	<i>Panel Mounting</i>	30
4.7.3	<i>Arm Mounting</i>	31
4.7.4	<i>Cabinet and Rack Installation</i>	32
4.8	BOTTOM PANEL CONNECTORS	35
4.8.1	<i>LAN Connection</i>	35
4.8.2	<i>USB Device Connection</i>	36
5	SYSTEM MAINTENANCE	38
5.1	SYSTEM MAINTENANCE INTRODUCTION	39
5.2	ANTI-STATIC PRECAUTIONS	39
5.3	TURN OFF THE POWER	40
5.4	OPENING THE SYSTEM.....	40
5.4.1	<i>Removing the Back Cover</i>	40
5.4.2	<i>Internal Aluminum Cover Removal</i>	41
5.5	REPLACING COMPONENTS.....	42
5.5.1	<i>Memory Module Replacement</i>	42
5.5.2	<i>CF Card Replacement</i>	43

AFL-08AH-N270-CR Panel PC

5.6 REINSTALLING THE COVERS	44
6 AMI BIOS SETUP	46
6.1 INTRODUCTION.....	47
6.1.1 Starting Setup.....	47
6.1.2 Using Setup	47
6.1.3 Getting Help.....	48
6.1.4 Unable to Reboot After Configuration Changes.....	48
6.1.5 BIOS Menu Bar.....	48
6.2 MAIN.....	49
6.3 ADVANCED	50
6.3.1 CPU Configuration.....	51
6.3.2 IDE Configuration	52
6.3.2.1 IDE Master, IDE Slave	54
6.3.3 Super IO Configuration	58
6.3.4 Hardware Health Configuration.....	59
6.3.5 Power Configuration.....	62
6.3.5.1 ACPI configuration	63
6.3.6 APM Configuration.....	64
6.3.7 Remote Configuration	66
6.3.8 USB Configuration.....	69
6.4 PCI/PNP.....	71
6.5 BOOT.....	73
6.5.1 Boot Settings Configuration.....	73
6.6 SECURITY	76
6.7 CHIPSET	77
6.7.1 North Bridge Chipset Configuration	78
6.7.2 SouthBridge Configuration.....	80
6.8 EXIT	81
A SYSTEM SPECIFICATIONS.....	83
A.1 MOTHERBOARD SPECIFICATIONS.....	84
A.2 PROCESSOR SPECIFICATIONS	84
A.3 SCREEN SPECIFICATIONS	85
A.4 TOUCH SCREEN SPECIFICATIONS	86

B SAFETY PRECAUTIONS	87
B.1 SAFETY PRECAUTIONS.....	88
<i>B.1.1 General Safety Precautions</i>	88
<i>B.1.2 Explanation of Graphical Symbols</i>	89
<i>B.1.3 Classification</i>	89
<i>B.1.4 Anti-static Precautions</i>	89
<i>B.1.5 Product Disposal</i>	90
B.2 MAINTENANCE AND CLEANING PRECAUTIONS	91
<i>B.2.1 Maintenance and Cleaning</i>	91
<i>B.2.2 Cleaning Tools</i>	92
C BIOS CONFIGURATION OPTIONS.....	93
C.1 BIOS CONFIGURATION OPTIONS	94
D WATCHDOG TIMER	97
E INTERNATIONAL STANDARDS COMPLIANCE	100
E.1 UL 60601-1 AND CAN/CSA C22.2 NO. 601.1	101
E.2 EN 60601-1	101
E.3 EN 60601-1, EN 60601-2.....	101
E.4 FCC.....	101

List of Figures

Figure 1-1: AFL-08AH-N270-CR Flat Panel PC	2
Figure 1-2: AFL-08AH-N270-CR Front View	4
Figure 1-3: AFL-08AH-N270-CR Rear View	4
Figure 1-4: AFL-08AH-N270-CR I/O Interface Connector Panel	5
Figure 1-5: AFL-08AH-N270-CR Top View	5
Figure 1-6: AFL-08AH-N270-CR Side View	6
Figure 2-1: AFL-08AH-N270-CR Dimensions (mm)	10
Figure 2-2: Preinstalled DDR2 SO-DIMM	12
Figure 2-3: RJ-45 Ethernet Connectors	13
Figure 2-4: External USB Ports	14
Figure 2-5: LCD Screen	14
Figure 2-6: Audio Jack	15
Figure 2-7: Stereo Speakers	15
Figure 2-8: Power Connector	16
Figure 2-9: PIFA Antenna and Wireless Module	17
Figure 4-1: Back Cover Retention Screws	24
Figure 4-2: Aluminum Back Cover Retention Screws	25
Figure 4-3: Wall-mounting Bracket	27
Figure 4-4: Chassis Support Screws	29
Figure 4-5: Secure the Panel PC	29
Figure 4-6: AFL-08AH-N270-CR Panel Opening	30
Figure 4-7: Tighten the Panel Mounting Clamp Screws	31
Figure 4-8: Arm Mounting Retention Screw Holes	32
Figure 4-9: The Rack/Cabinet Bracket	33
Figure 4-10: Secure the Rack/Cabinet Bracket	34
Figure 4-11: Install into a Rack/Cabinet	34
Figure 4-12: LAN Connection	35
Figure 4-13: USB Device Connection	37
Figure 5-1: Back Cover Retention Screws	41
Figure 5-2: Aluminum Back Cover Retention Screws	42
Figure 5-3: AFL-10A-N270 SO-DIMM Socket Location	42

Figure 5-4: DDR SO-DIMM Module Installation.....43
Figure 5-5: CF Card Location44

List of Tables

Table 1-1: AFL-08AH-N270-CR System Specifications.....	8
Table 4-1: Clear CMOS Jumper Settings.....	26
Table 6-1: BIOS Navigation Keys	48

Chapter

1

Introduction

1.1 Overview



Figure 1-1: AFL-08AH-N270-CR Flat Panel PC

The AFL-08AH-N270-CR is Intel® Atom™ powered flat panel PC with a rich variety of functions and peripherals.

An Intel® 945GSE graphics memory controller hub (GMCH) coupled with an Intel® ICH7-M input/output controller hub ensures optimal memory, graphics, and peripheral I/O support. The system comes with 1.0 GB of preinstalled DDR2 SDRAM and supports a maximum of 2.0 GB of DDR2 SDRAM ensuring smooth data throughputs with reduced bottlenecks and fast system access.

Six external USB 2.0 ports ensure simplified connectivity to a variety of external peripheral devices. Wi-Fi capabilities and two RJ-45 Ethernet connectors ensure smooth connection of the system to an external LAN.

1.1.1 Features

The AFL-08AH-N270-CR features the following:

- Intel® Atom™ processor
- Intel® 945GSE chipset
- 1GB 533 MHz DDR2 SDRAM preinstalled
- 802.11 b/g wireless module

AFL-08AH-N270-CR Panel PC

- Six USB 2.0 ports
- Watchdog timer that triggers a system reset if the system hangs for some reason
- IPX0 compliant front panel
- Touch screen
- RoHS compliance

1.1.2 Application

The AFL-08AH-N270-CR is designed for easy and simplified integration into a variety of medical settings including medical billing, administration, imaging, medical carts, and nurse stations.

1.2 External Overview

1.2.1 General Description

The stylish AFL-08AH-N270-CR panel PC comprises of a screen, rear panel, top panel, bottom panel and two side panels (left and right). An ABS/PC plastic front frame surrounds the front screen. The rear panel provides screw holes for a wall-mounting bracket compliant with VESA FDMI standard. An I/O interface panel on the bottom panel of the AFL-08AH-N270-CR provides access to external interface connectors that include LAN, USB 2.0, reset button, power connector and power switch.

1.2.2 Front Panel

The front side of the AFL-08AH-N270-CR is a flat panel TFT LCD screen surrounded by an ABS/PC plastic frame. The top of the front panel has a power LED.

AFL-08AH-N270-CR Panel PC

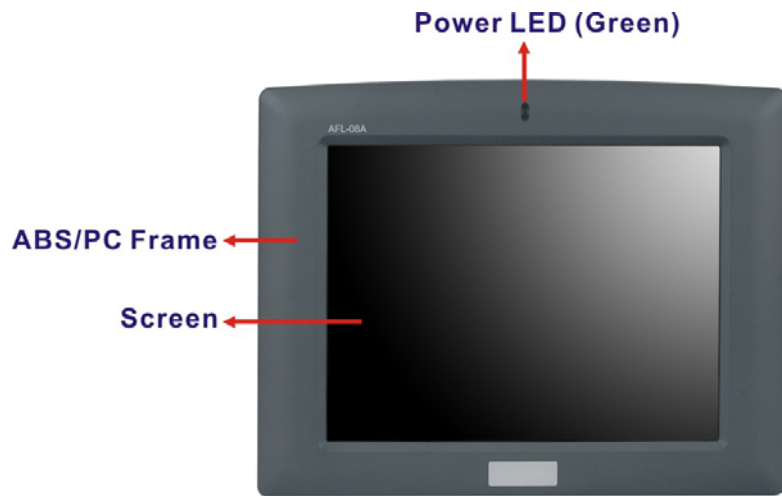


Figure 1-2: AFL-08AH-N270-CR Front View

1.2.3 Rear Panel

The rear panel provides access to retention screw holes that support the wall mounting. Refer to **Figure 1-3**.

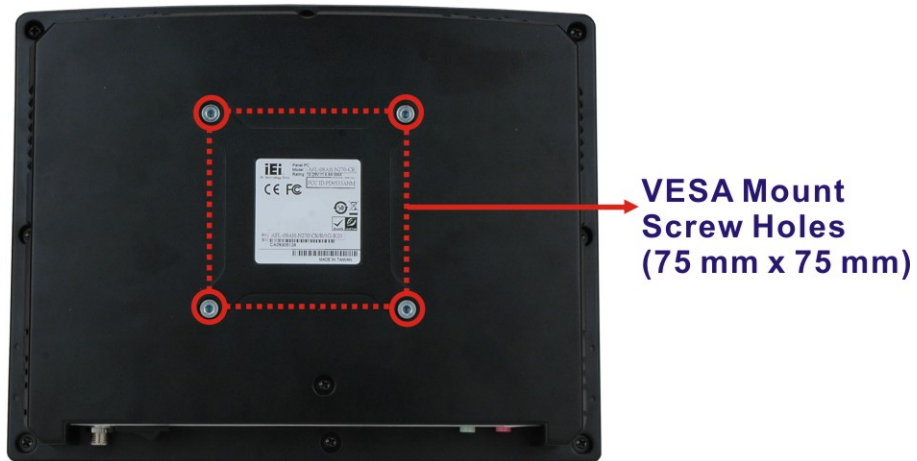


Figure 1-3: AFL-08AH-N270-CR Rear View

1.2.4 I/O Interface Panel

The I/O interface panel located on the bottom of the AFL-08AH-N270-CR has the following I/O interface connectors:

AFL-08AH-N270-CR Panel PC

- 1 x Audio line-out connector
- 1 x Audio mic-in connector
- 1 x 12 V DC In connector
- 2 x LAN connectors
- 6 x USB 2.0 connectors
- 1 x Power switch
- 1 x Reset button

The external I/O interface connector panel is shown in **Figure 1-4**.

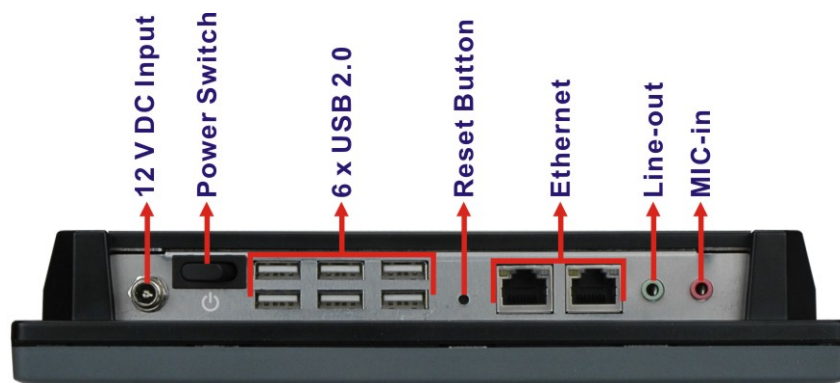


Figure 1-4: AFL-08AH-N270-CR I/O Interface Connector Panel

1.2.5 Top Panel and Side Panels

The top panel and side panels of AFL-08AH-N270-CR provide access to slots that support panel mount and rack mount (**Figure 1-5**).



Figure 1-5: AFL-08AH-N270-CR Top View



Figure 1-6: AFL-08AH-N270-CR Side View

1.3 Internal Overview

The AFL-08AH-N270-CR has the following components installed internally:

- 1 x Motherboard
- 1 x 1.0 GB 533 MHz DDR2 SDRAM SO-DIMM
- 1 x Wireless module
- 1 x CF card

AFL-08AH-N270-CR Panel PC

1.4 System Specifications

The technical specifications for the AFL-08AH-N270-CR systems are listed in **Table 1-1**.

Specification	AFL-08AH-N270-CR
LCD Size	8.4"
Max. Resolution	800 x 600
Contrast Ratio	600:1
Brightness (cd/m ²)	450
LCD Color	262K
Pixel Pitch (H x V) (mm)	0.213 x 0.213
Viewing Angle (H-V)	140 / 120
Backlight MTBF	50,000 hours
SBC Model	AFLMB-945GSE-N270-CR-R10
CPU	1.6 GHz Intel® Atom™ N270 processor
GMCH	Intel® 945GSE
Memory	One 1.0 GB 533 MHz DDR2 SDRAM SO-DIMM pre-installed (Supports up to 2 GB 533/400 MHz DDR2 SDRAM)
SSD	1 x CF card
Watchdog Timer	Software Programmable supports 1 sec. ~ 255 sec. system reset
Audio	AMP 1.5 W + AMP 1.5 W (built-in stereo speakers)
Expansion	1 x PCIe mini card (wireless LAN 802.11 b/g module)
Construction Material	ABS + PC plastic front frame
Mounting	Panel Wall Stand Arm (VESA 75 mm x 75 mm)
Front Panel Color	Gray 7539U
Dimensions (W x H x D) (mm)	234 x 184 x 41.09
Temperature	Operation: -10°C ~ 50°C with CF card Storage/Transportation: -20°C ~ 60°C
Humidity	Operation: 30%~70% Storage/Transportation: 10%~95%
Net weight	0.8 kg

AFL-08AH-N270-CR Panel PC

EMC	CE, FCC and CCC
Safety	CB
Touch Screen	Resistive Type 4-wire (touch controller is on board)
Power Adapter	60 W
	Input: 100 VAC ~ 240 VAC @ 47 Hz ~ 63 Hz
	Output: 12 V DC @ 5 A
Power Consumption	45 W
I/O Ports and Switches	1 x 12 V DC input jack
	1 x Audio line-out connector
	1 x Audio mic-in connector
	2 x RJ-45 for LAN
	6 x USB 2.0 ports
	1 x Power switch
	1 x Reset button

Table 1-1: AFL-08AH-N270-CR System Specifications

Chapter

2

Detailed Specifications

2.1 Dimensions

The AFL-08AH-N270-CR dimensions are shown in **Figure 2-1**

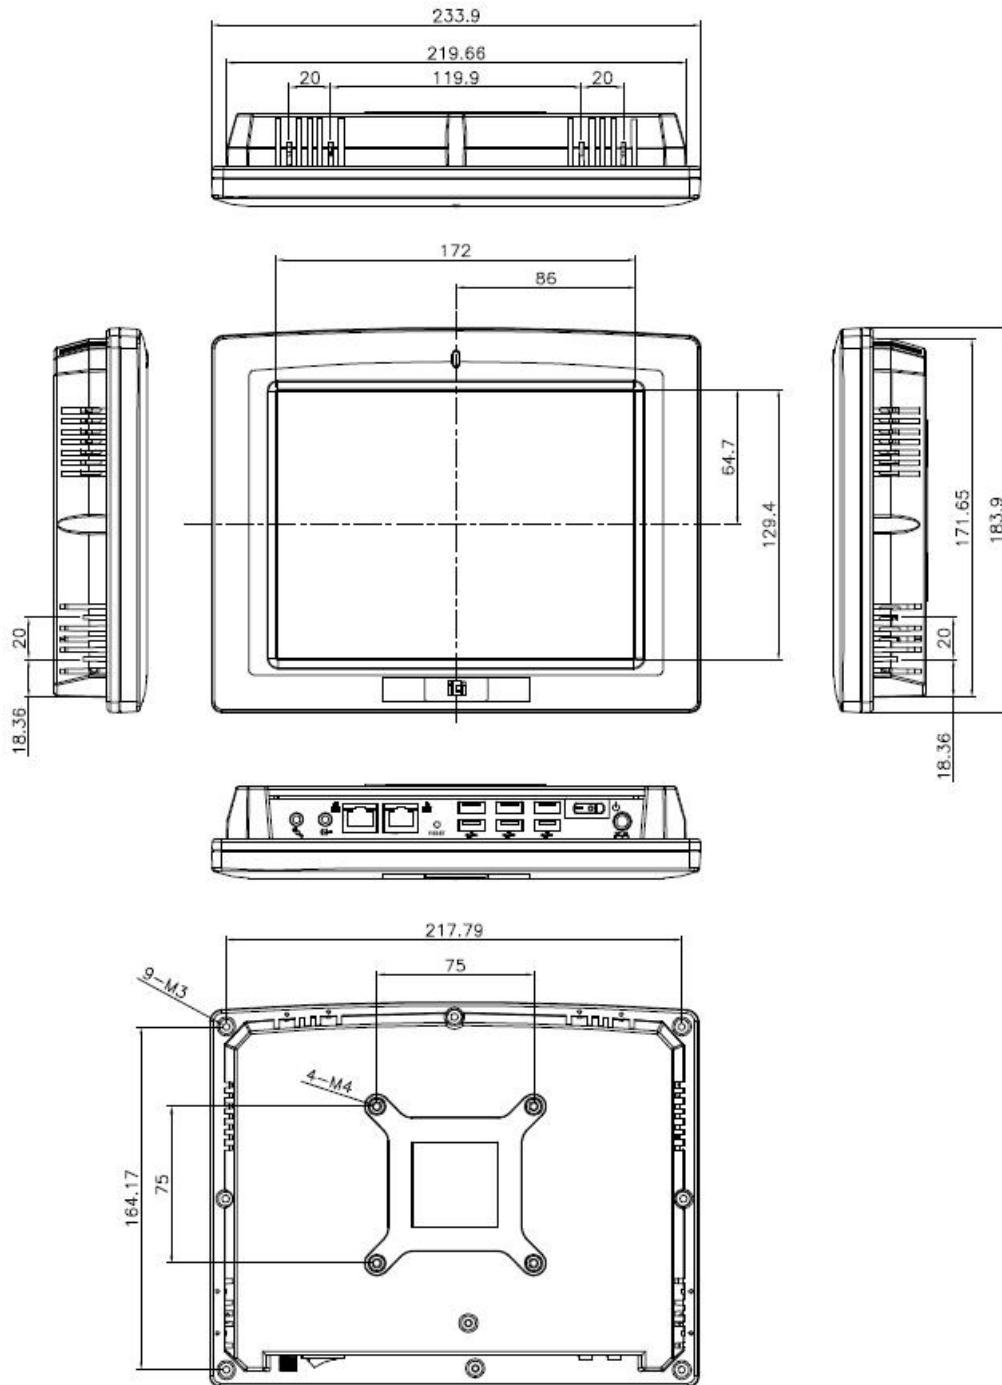


Figure 2-1: AFL-08AH-N270-CR Dimensions (mm)

AFL-08AH-N270-CR Panel PC

2.2 Intel® Atom™ Processor

A 45nm N270 Intel® Atom™ processor is installed in the system. The processor has a CPU speed of 1.6 GHz and a 533 MHz front side bus (FSB). The processor also comes with a 512 KB L2 cache and a 1.6 GHz L2 cache speed. Some of the features of the Intel® Atom™ processor N270 are listed below:

- On-die, primary 32-kB instructions cache and 24-kB write-back data cache
- 533-MHz source-synchronous front side bus (FSB)
- 2-Threads support
- On-die 512-kB, 8-way L2 cache
- Support for IA 32-bit architecture
- Intel® Streaming SIMD Extensions-2 and -3 (Intel® SSE2 and Intel® SSE3) support and Supplemental Streaming SIMD Extension 3 (SSSE3) support
- Micro-FCBGA8 packaging technologies
- Thermal management support via Intel® Thermal Monitor 1 and Intel Thermal Monitor 2
- FSB Lane Reversal for flexible routing
- Supports C0/C1(e)/C2(e)/C4(e)
- L2 Dynamic Cache Sizing
- Advanced power management features including Enhanced Intel SpeedStep® Technology
- Execute Disable Bit support for enhanced security

2.3 Motherboard Components

The following sections describe some of the features on the motherboard.

2.3.1 Installed Memory

One 200-pin 1.0 GB 533 MHz DDR2 SDRAM SO-DIMM is installed in the AFL-08AH-N270-CR and controlled by the Intel® 945GSE GMCH installed on the internal motherboard.

Preinstalled 1.0 GB 533 MHz DDR2 SO-DIMM



Figure 2-2: Preinstalled DDR2 SO-DIMM

2.3.2 Additional Memory

The Intel® 945GSE is capable of supporting one 200-pin 2.0 GB (max.) 533 MHz or 400 MHz DDR2 SDRAM SO-DIMM. If additional memory is required, please contact a sales representative and discuss the necessary system requirement.

2.3.3 Storage Capacity

The AFL-08AH-N270-CR supports an easily installed CompactFlash® Type II (CF Type II) memory disk.

2.4 External Peripheral Interface Connectors

The following section describes the external peripheral interface connectors on the bottom panel of the subsystem.

2.4.1 LAN Connectivity

The AFL-08AH-N270-CR has two RJ-45 LAN connectors on the bottom panel.

AFL-08AH-N270-CR Panel PC

Two PCIe GbE RJ-45 Connectors



Figure 2-3: RJ-45 Ethernet Connectors

The PCIe lane from the Intel® ICH7 chipset of the AFL-08AH-N270-CR is interfaced to the Realtek RTL8111CP PCIe gigabit Ethernet (GbE) controllers. The RTL8111CP controllers are then connected directly to the RJ-45 connectors on the bottom panel and provides external GbE connectivity. Some of the RTL8111CP controller features are listed below:

- Integrated 10/100/1000 transceiver
- Supports PCI Express™ 1.1
- Fully compliant with IEEE 802.3, IEEE 802.3u, IEEE 802.3ab
- Supports IEEE 802.1P Layer 2 Priority Encoding
- Supports IEEE 802.1Q VLAN tagging
- Serial EEPROM
- Transmit/Receive on-chip buffer support
- 64-pin QFN package (Green package)

2.4.2 External USB Connectors

There are six USB 2.0 connectors on the bottom panel of the AFL-08AH-N270-CR. All USB 2.0 connectors are interfaced directly to the USB controllers on the ICH7-M southbridge. These USB connectors are fully compliant with USB specification Revision 2.0 and USB specification Revision 1.1 and can be interfaced to both USB 1.1 and USB 2.0 compliant devices.

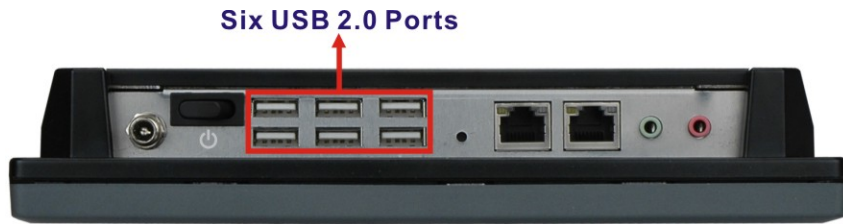


Figure 2-4: External USB Ports

2.5 Front Side

2.5.1 Monitor

A LCD screen is installed on the front of the AFL-08AH-N270-CR. The monitor maximum resolution is 800 x 600. The screen is shown in **Figure 2-5** below.

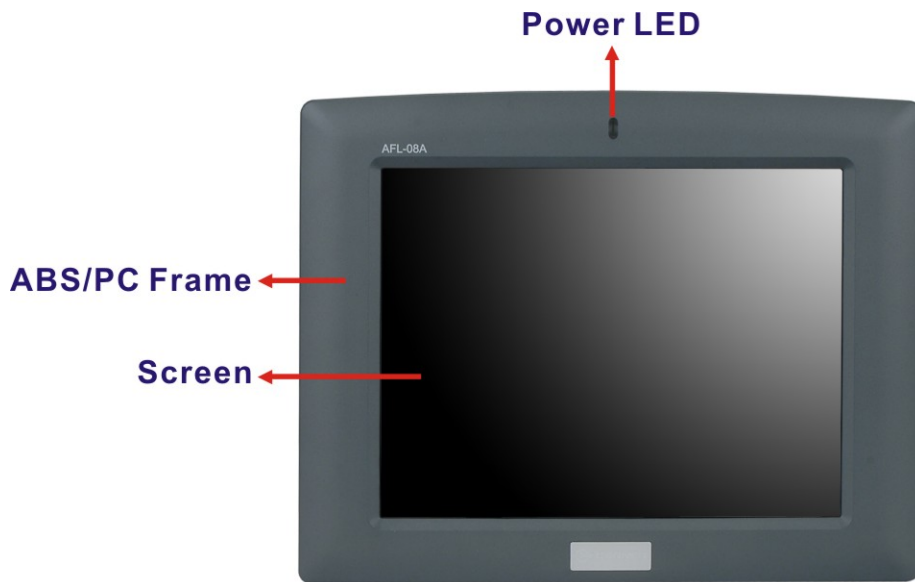


Figure 2-5: LCD Screen

2.5.2 Touch-Screen Module

A controller for the 4-wire resistive touch screen is installed on the motherboard. The sensitive touch screen is accurate, reliable and durable.

2.6 Audio

2.6.1 Audio Codec Controller

The integrated audio controller on the Intel® ICH7 Southbridge is integrated to a RealTek ALC888 audio codec. The RealTek ALC888 is connected to external audio line out jack and mic-in jack. The RealTek ALC888 is a 7.1+2 channel High Definition Audio codec. The audio connectors are shown in **Figure 2-6**.



Figure 2-6: Audio Jack

2.6.2 Stereo Speakers

Two internal 1.5 W stereo speakers on the sides of the AFL-08AH-N270-CR are interfaced to the system through a Philips TDA1517p integrated class-B dual output amplifier.

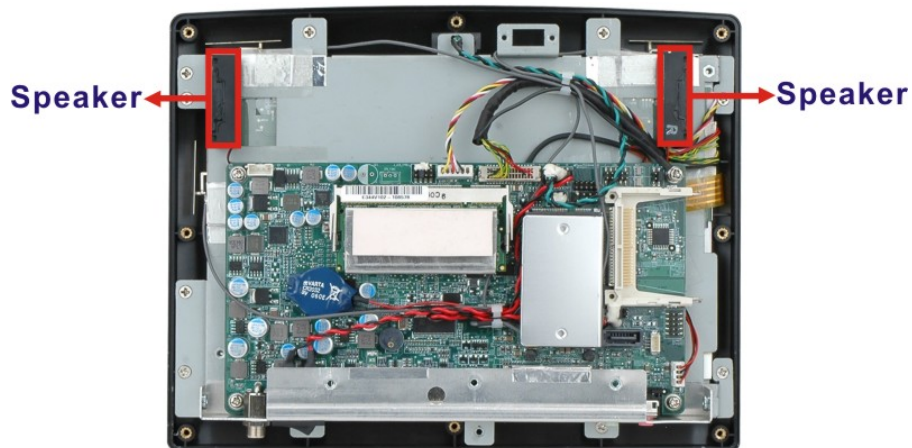


Figure 2-7: Stereo Speakers

2.7 System Power

2.7.1 Power Adapter

The system is shipped with a 100 V to 240 V AC medical power adapter that has a maximum power output of 60 W. The power adapter has a lockable 12 V DC output connector.

2.7.2 Power Connector

There is one 12 V power input connector on the bottom panel. The power connector is shown in **Figure 2-8** below.



Figure 2-8: Power Connector

2.8 Wireless Connections

An integrate PIFA antenna on the AFL-08AH-N270-CR ensures an uninterrupted wireless connection. PIFA antennas can receive high-quality, uniform signals in any location from all directions without any signal degradation or impedance and are the most efficient antennas on the market.

AFL-08AH-N270-CR Panel PC

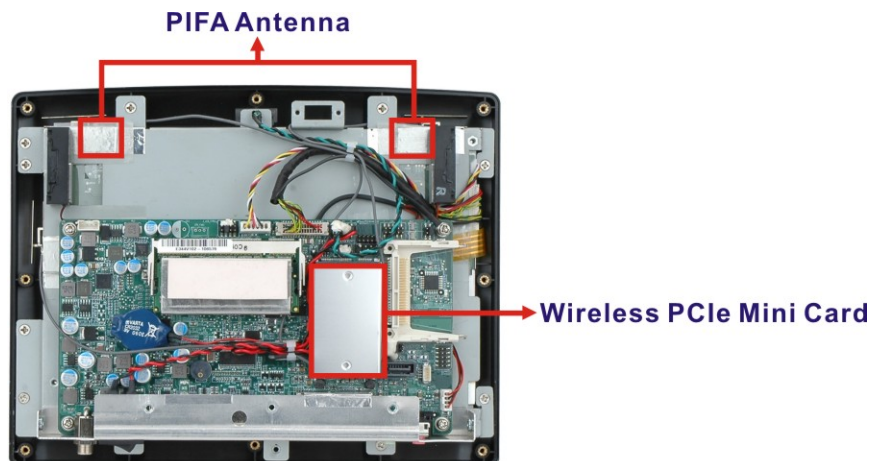


Figure 2-9: PIFA Antenna and Wireless Module

Chapter

3

Unpacking

3.1 Unpacking

To unpack the flat panel PC, follow the steps below:



WARNING!







The front side LCD screen has a protective plastic cover stuck to the screen. Only remove the plastic cover after the flat panel PC has been properly installed. This ensures the screen is protected during the installation process.

-
- Step 1:** Use box cutters, a knife or a sharp pair of scissors that seals the top side of the external (second) box.
 - Step 2:** Open the external (second) box.
 - Step 3:** Use box cutters, a knife or a sharp pair of scissors that seals the top side of the internal (first) box.
 - Step 4:** Lift the monitor out of the boxes.
 - Step 5:** Remove both polystyrene ends, one from each side.
 - Step 6:** Pull the plastic cover off the flat panel PC.
 - Step 7:** Make sure all the components listed in the packing list are present.

AFL-08AH-N270-CR Panel PC

3.1.1 Packing List

The AFL-08AH-N270-CR flat panel PC is shipped with the following components:

Quantity	Item	Image
Standard		
1	AFL-08AH-N270-CR	
1	Power adapter (PMP60-12-B12)	
1	Power cord	
1	Screw kit	
1	User manual CD and driver CD	
1	Touch pen	

If any of these items are missing or damaged, contact the distributor or sales representative immediately.

Chapter

4

Installation

4.1 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the maintenance of the AFL-08AH-N270-CR may result in permanent damage to the AFL-08AH-N270-CR and severe injury to the user.



WARNING:

To avoid risk of electric shock, the AFL-08AH-N270-CR must only be connected to a supply mains with protective earth.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the AFL-08AH-N270-CR. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the AFL-08AH-N270-CR is accessed internally, or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- ***Wear an anti-static wristband:*** - Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- ***Self-grounding:*** - Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- ***Use an anti-static pad:*** - When configuring the AFL-08AH-N270-CR, place it on an anti-static pad. This reduces the possibility of ESD damaging the AFL-08AH-N270-CR.
- ***Only handle the edges of the PCB:*** - When handling the PCB, hold the PCB by the edges.

AFL-08AH-N270-CR Panel PC

4.2 Installation Precautions

When installing the flat panel PC, please follow the precautions listed below:

- **Power turned off:** When installing the flat panel PC, make sure the power is off. Failing to turn off the power may cause severe injury to the body and/or damage to the system.
- **Certified Engineers:** Only certified engineers should install and modify onboard functionalities.
- **Anti-static Discharge:** If a user open the rear panel of the flat panel PC, to configure the jumpers or plug in added peripheral devices, ground themselves first and wear an anti-static wristband.

4.3 Preinstalled Components

The following components are all preinstalled.

- Motherboard
- TFT LCD screen
- 1.0 GB DDR2 memory module
- Resistive type touch screen
- Wireless LAN module
- CF card

Component installation is described in **the following sections**.

4.4 Installation and Configuration Steps

The following installation steps must be followed.

Step 1: Unpack the flat panel PC

Step 2: Configure the system

Step 3: Connect peripheral devices to the bottom panel of the flat panel PC

Step 4: Mount the flat panel PC

4.5 Removing the Back Cover



WARNING:

Do not modify this equipment without authorization of the manufacturer.

Only certified engineers should install and modify the hardware settings. Incorrect settings can cause irreparable damage to the system.



WARNING:

Over-tightening back cover screws will crack the plastic frame. Maximum torque for cover screws is 5 kg-cm (0.36 lb-ft/0.49 Nm).

To access the AFL-08AH-N270-CR internally the back cover must be removed. To remove the back cover, please follow the steps below.

Step 1: Remove the retention screws (**Figure 4-1**) and lift the cover off the flat panel PC.



Figure 4-1: Back Cover Retention Screws

Step 2: Lift the back cover off the system.

AFL-08AH-N270-CR Panel PC

Step 3: Remove the retention screws securing the internal aluminum cover (**Figure 5-2**).

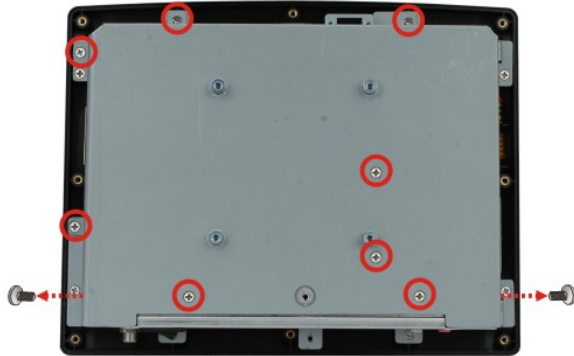


Figure 4-2: Aluminum Back Cover Retention Screws


Step 4: Lift the aluminum cover off the AFL-08AH-N270-CR.

4.6 Jumper Settings



NOTE:

A jumper is a metal bridge used to close an electrical circuit. It consists of two or three metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To CLOSE/SHORT a jumper means connecting the pins of the jumper with the plastic clip and to OPEN a jumper means removing the plastic clip from a jumper.

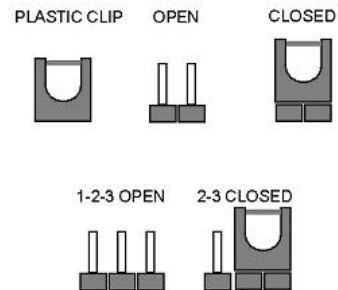

4.6.1 Access the Jumpers

To access the jumpers, remove the back cover. To remove the back cover, please refer to **Section 4.5**.

4.6.2 Clear CMOS Jumper

- Jumper Label:** J_CMOS1
- Jumper Type:** 3-pin header
- Jumper Settings:** See **Table 4-1**

If the AFL-08AH-N270-CR fails to boot due to improper BIOS settings, the clear CMOS jumper clears the CMOS data and resets the system BIOS information. To do this, use the jumper cap to close the pins for a few seconds then remove the jumper clip.

If the “CMOS Settings Wrong” message is displayed during the boot up process, the fault may be corrected by pressing the F1 to enter the CMOS Setup menu. Do one of the following:

- Enter the correct CMOS setting
- Load Optimal Defaults
- Load Failsafe Defaults.

After having done one of the above, save the changes and exit the CMOS Setup menu.

The clear CMOS jumper settings are shown in **Table 4-1**.

Clear CMOS	Description	
Short 1 - 2	Keep CMOS Setup	Default
Short 2 - 3	Clear CMOS Setup	

Table 4-1: Clear CMOS Jumper Settings

4.7 Mounting the System



WARNING!

When mounting the flat panel PC onto an arm, onto the wall or onto a panel, it is better to have more than one person to help with the installation to make sure the panel PC does not fall down and get damaged.

AFL-08AH-N270-CR Panel PC

The four methods of mounting the AFL-08AH-N270-CR are listed below.

- Wall mounting
- Panel mounting
- Arm mounting
- Rack mounting

The four mounting methods are described below.

4.7.1 Wall Mounting

To mount the flat panel PC onto the wall, please follow the steps below.

Step 1: Select the location on the wall for the wall-mounting bracket.

Step 2: Carefully mark the locations of the four screw holes in the bracket on the wall.

Step 3: Drill four pilot holes at the marked locations on the wall for the bracket retention screws.

Step 4: Align the wall-mounting bracket screw holes with the pilot holes.

Step 5: Secure the mounting-bracket to the wall by inserting the retention screws into the four pilot holes and tightening them (**Figure 4-3**).

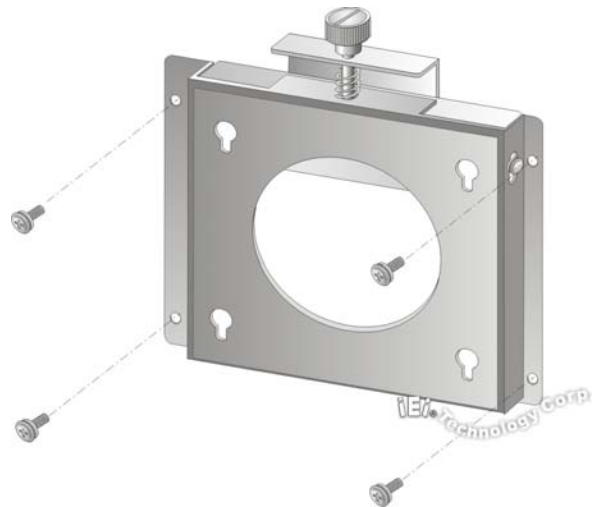



Figure 4-3: Wall-mounting Bracket

Step 6: Insert the four monitor mounting screws provided in the wall mount kit into the four screw holes on the rear panel of the flat panel PC and tighten until the screw shank is secured against the rear panel (**Figure 4-4**).



WARNING:

Please use the M4 screws provided in the wall mount kit for the rear panel. If the screw is missing, the thread depth of the replacement screw should be not more than 4 mm.

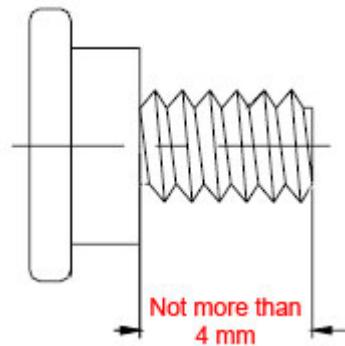

Step 7: Align the mounting screws on the monitor rear panel with the mounting holes on the bracket.

Step 8: Carefully insert the screws through the holes and gently pull the monitor downwards until the monitor rests securely in the slotted holes (**Figure 4-4**). Ensure that all four of the mounting screws fit snugly into their respective slotted holes.



NOTE:

In the diagram below the bracket is already installed on the wall.

AFL-08AH-N270-CR Panel PC

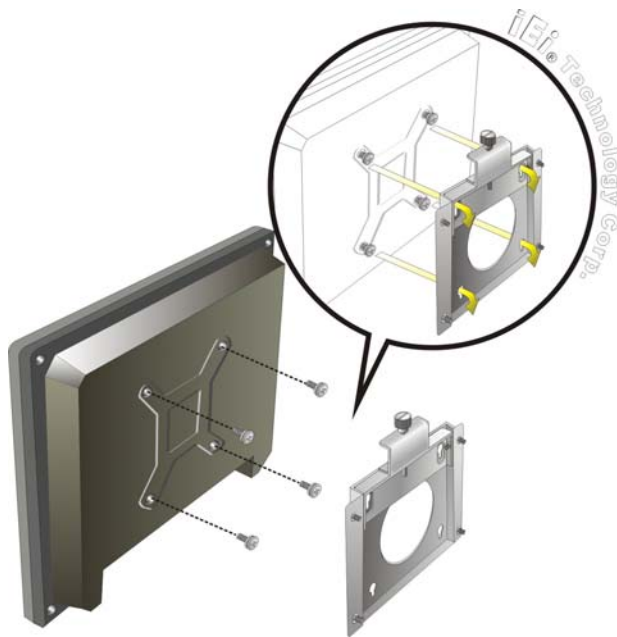


Figure 4-4: Chassis Support Screws

Step 9: Secure the panel PC by fastening the retention screw of the wall-mounting bracket. (Figure 4-5).

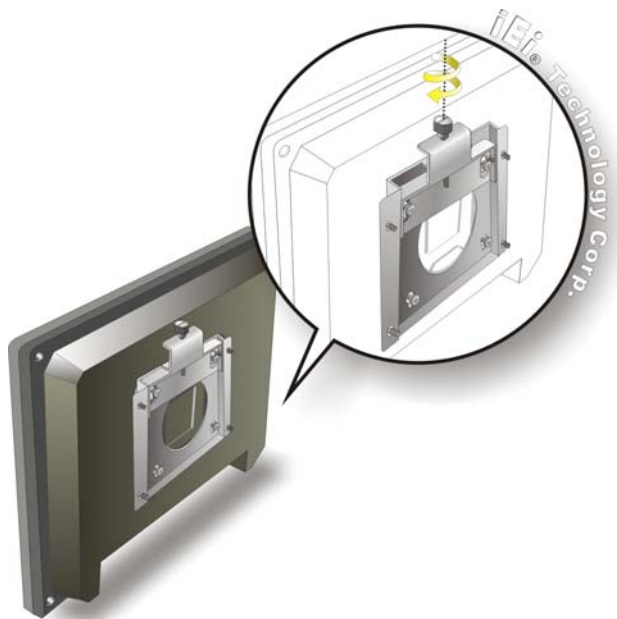


Figure 4-5: Secure the Panel PC

4.7.2 Panel Mounting

To mount the AFL-08AH-N270-CR flat panel PC into a panel, please follow the steps below.

- Step 1:** Select the position on the panel to mount the flat panel PC.
- Step 2:** Cut out a section from the panel that corresponds to the rear panel dimensions of the flat panel PC. Take care that the panel section that is cut out is smaller than the overall size of the frame that surrounds the flat panel PC but just large enough for the rear panel of the flat panel PC to fit through (see **Figure 4-6**).

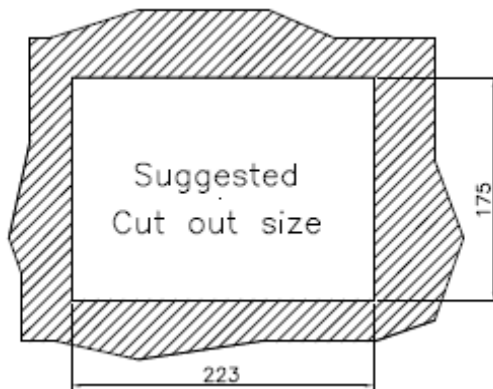


Figure 4-6: AFL-08AH-N270-CR Panel Opening

- Step 3:** Slide the flat panel PC through the hole until the frame is flush against the panel.
- Step 4:** Insert the panel mounting clamps into the pre-formed holes along the edges of the chassis, behind the frame.
- Step 5:** Tighten the screws that pass through the panel mounting clamps until the plastic caps at the front of all the screws are firmly secured to the panel (**Figure 4-7**).

AFL-08AH-N270-CR Panel PC

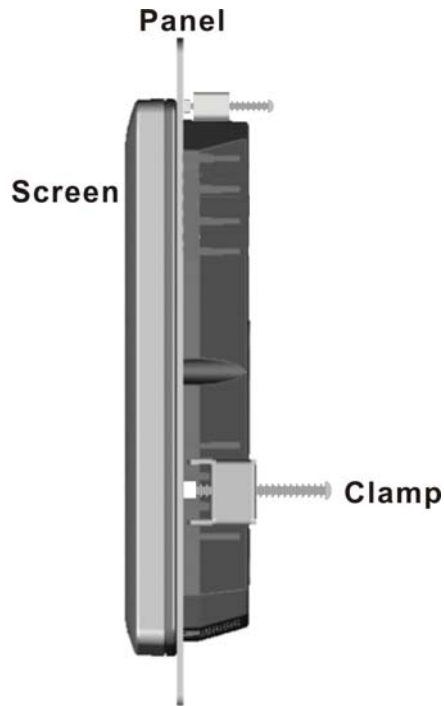


Figure 4-7: Tighten the Panel Mounting Clamp Screws

4.7.3 Arm Mounting

The AFL-08AH-N270-CR is VESA (Video Electronics Standards Association) compliant and can be mounted on an arm with a 75mm interface pad. To mount the AFL-08AH-N270-CR on an arm, please follow the steps below.

Step 1: The arm is a separately purchased item. Please correctly mount the arm onto the surface it uses as a base. To do this, refer to the installation documentation that came with the mounting arm.



NOTE:

When purchasing the arm please ensure that it is VESA compliant and that the arm has a 75 mm interface pad. If the mounting arm is not VESA compliant it cannot be used to support the AFL-08AH-N270-CR flat panel PC.

AFL-08AH-N270-CR Panel PC

Step 2: Once the mounting arm has been firmly attached to the surface, lift the flat panel PC onto the interface pad of the mounting arm.

Step 3: Align the retention screw holes on the mounting arm interface with those in the flat panel PC. The AFL-08AH-N270-CR arm mount retention screw holes are shown in **Figure 4-8**.



Figure 4-8: Arm Mounting Retention Screw Holes

Step 4: Secure the flat panel PC to the interface pad by inserting four retention screws through the bottom of the mounting arm interface pad and into the flat panel PC.

4.7.4 Cabinet and Rack Installation

The AFL-08AH-N270-CR flat panel PC can be installed into a cabinet or rack. The installation procedures are similar to the panel mounting installation. To do this, please follow the steps below:

AFL-08AH-N270-CR Panel PC



NOTE:

When purchasing the cabinet/rack installation bracket, make sure it is compatible with both the AFL-08AH-N270-CR flat panel PC and the rack/cabinet into which the AFL-08AH-N270-CR is installed.

- Step 1:** Slide the rear chassis of the AFL-08AH-N270-CR flat panel PC through the rack/cabinet bracket until the aluminum frame is flush against the front of the bracket (**Figure 4-9**).

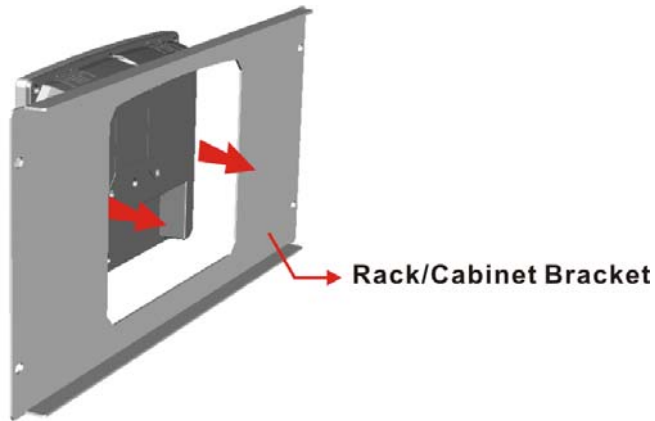


Figure 4-9: The Rack/Cabinet Bracket

- Step 2:** Insert the rack mounting clamps into the pre-formed holes along the edges of the flat panel PC, behind the ABS/PC plastic frame. There are a total of 4 rack mounting clamps.
- Step 3:** Tighten the screws that pass through the rack mounting clamps until the plastic caps at the front of all the screws are firmly secured to the bracket (**Figure 4-10**).

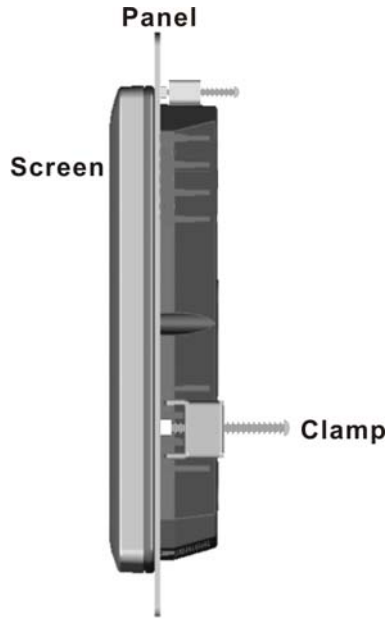


Figure 4-10: Secure the Rack/Cabinet Bracket

Step 4: Slide the flat panel PC with the attached rack/cabinet bracket into a rack or cabinet (Figure 4-11).

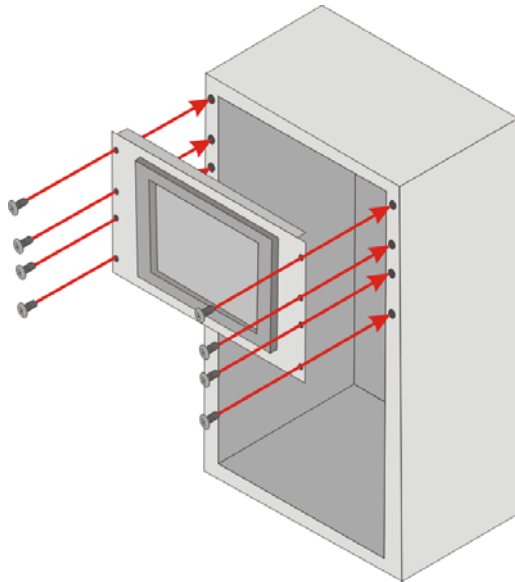


Figure 4-11: Install into a Rack/Cabinet

AFL-08AH-N270-CR Panel PC

Step 5: Once the flat panel PC with the attached rack/cabinet bracket has been properly inserted into the rack or cabinet, secure the front of the rack/cabinet bracket to the front of the rack or cabinet (**Figure 4-11**).

4.8 Bottom Panel Connectors

4.8.1 LAN Connection

There are two external RJ-45 LAN connectors. The RJ-45 connector enables connection to an external network. To connect a LAN cable with an RJ-45 connector, please follow the instructions below.

Step 1: **Locate the RJ-45 connectors** on the bottom panel of the AFL-08AH-N270-CR.

Step 2: **Align the connectors.** Align the RJ-45 connector on the LAN cable with one of the RJ-45 connectors on the bottom panel of the AFL-08AH-N270-CR. See **Figure 4-12**.

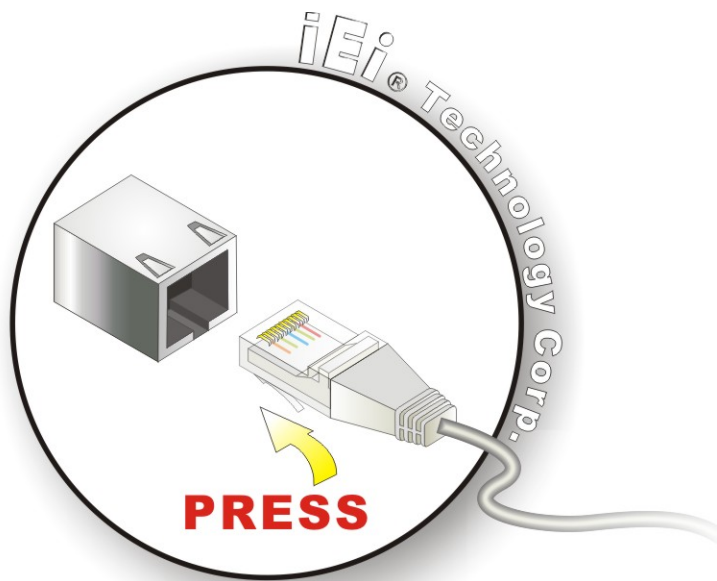


Figure 4-12: LAN Connection

Step 3: **Insert the LAN cable RJ-45 connector.** Once aligned, gently insert the LAN cable RJ-45 connector into the onboard RJ-45 connector.

4.8.2 USB Device Connection



WARNING:

Accessory equipment connected to the analog and digital interfaces must be in compliance with the respective nationally harmonized IEC standards (i.e. IEC 60950 for data processing equipment, IEC 60065 for video equipment, IEC 61010-1 for laboratory equipment, and IEC 60601-1 for medical equipment.)

Furthermore all configurations shall comply with the system standard IEC 60601-1-1. Everybody who connects additional equipment to the signal input part or signal output part configures a medical system, and is therefore, responsible that the system complies with the requirements of the system standard IEC 60601-1-1.

The unit is for exclusive interconnection with IEC 60601-1 certified equipment in the patient environment and IEC 60XXX certified equipment outside of the patient environment. If in doubt, consult the technical services department or your local representative.

There are six external USB 2.0 connectors. To connect a USB 2.0 or USB 1.1 device, please follow the instructions below.

Step 1: Located the USB connectors. The locations of the USB connectors are shown in **Chapter 2**.

Step 2: Align the connectors. Align the USB device connector with one of the connectors on the bottom panel. See **Figure 4-13**.

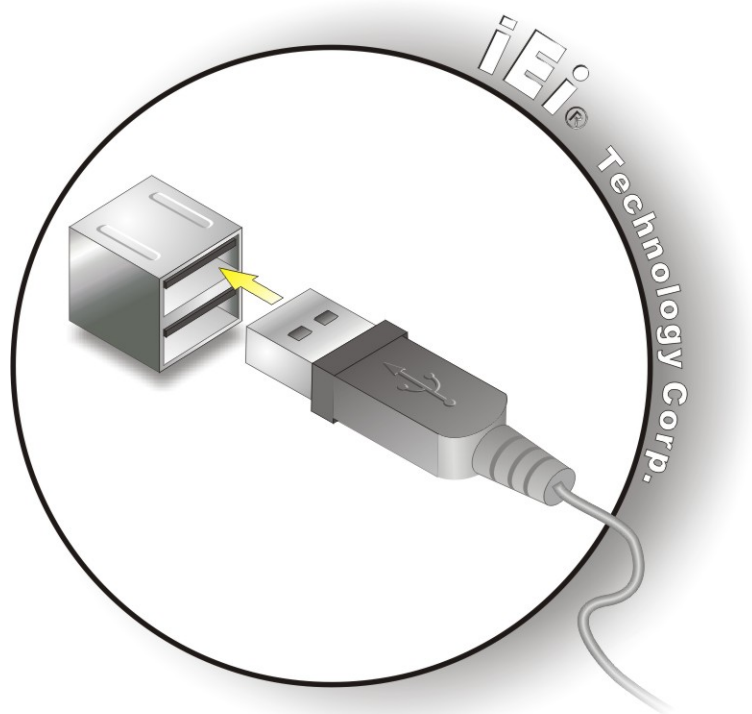


Figure 4-13: USB Device Connection

Step 3: Insert the device connector. Once aligned, gently insert the USB device connector into the onboard connector.

Chapter

5

System Maintenance



WARNING:

Do not modify this equipment without authorization of the manufacturer.

Only certified engineers should install and modify the hardware settings. Incorrect settings can cause irreparable damage to the system.

5.1 System Maintenance Introduction

If the components of the AFL-08AH-N270-CR fail, please contact the system reseller or vendor. Components that can be replaced include:

- CF Module
- Wireless LAN module
- SO-DIMM module

Back cover removal instructions for the AFL-08AH-N270-CR are described below.

5.2 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the maintenance of the AFL-08AH-N270-CR may result in permanent damage to the AFL-08AH-N270-CR and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the AFL-08AH-N270-CR. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the AFL-08AH-N270-CR is accessed internally, or any

other electrical component is handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** - Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- **Self-grounding:** - Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- **Use an anti-static pad:** - When configuring the AFL-08AH-N270-CR, place it on an anti-static pad. This reduces the possibility of ESD damaging the AFL-08AH-N270-CR.
- **Only handle the edges of the PCB:** - When handling the PCB, hold the PCB by the edges.

5.3 Turn off the Power



WARNING:

Failing to turn off the system before opening it can cause permanent damage to the system and serious or fatal injury to the user.

Before any maintenance procedures are carried out on the system, make sure the system is turned off.

5.4 Opening the System

5.4.1 Removing the Back Cover



WARNING:

Over-tightening back cover screws will crack the plastic frame. Maximum torque for cover screws is 5 kg-cm (0.36 lb-ft/0.49 Nm).

AFL-08AH-N270-CR Panel PC

To access the AFL-08AH-N270-CR internally the back cover must be removed. To remove the back cover, please follow the steps below.

Step 1: Follow all anti-static procedures. See **Section 5.2**.

Step 2: Turn off the power. See **Section 5.3**.

Step 3: Remove the retention screws on the back. Remove the retention screws (**Figure 5-1**) from the back cover.



Figure 5-1: Back Cover Retention Screws

Step 4: Lift the cover off the system.

5.4.2 Internal Aluminum Cover Removal

To remove the internal aluminum cover, follow the steps below.

Step 1: Remove the retention screws securing the internal aluminum cover (**Figure 5-2**).

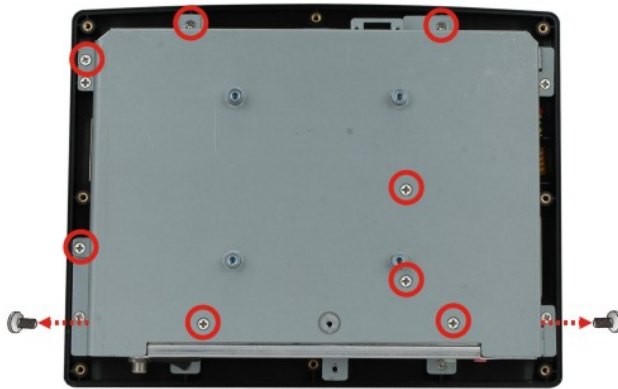


Figure 5-2: Aluminum Back Cover Retention Screws

Step 2: Lift the aluminum cover off the AFL-08AH-N270-CR.

5.5 Replacing Components

5.5.1 Memory Module Replacement

The flat panel PC is preinstalled with a 1 GB DDR2 memory module. If the memory module is fail, follow the instructions below to replace the memory module.

Step 1: Remove the back cover. See **Section 5.4.1** above.

Step 2: Remove the internal aluminum back cover. See **Section 5.4.2** above.

Step 3: Locate the DDR2 SO-DIMM on the motherboard (**Figure 5-3**).

Preinstalled 1.0 GB 533 MHz DDR2 SO-DIMM

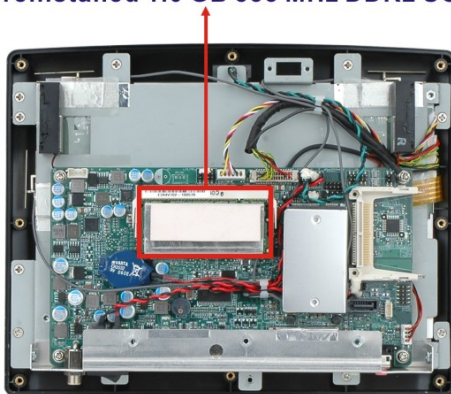


Figure 5-3: AFL-10A-N270 SO-DIMM Socket Location

AFL-08AH-N270-CR Panel PC

- Step 4:** Remove the DDR memory module by pulling both the spring retainer clips outward from the socket.
- Step 5:** Grasp the DDR memory module by the edges and carefully pull it out of the socket.
- Step 6:** Install the new DDR memory module by pushing it into the socket at an angle (Figure 5-4).
- Step 7:** Gently pull the spring retainer clips of the SO-DIMM socket out and push the rear of the DDR memory module down (Figure 5-4).
- Step 8:** Release the spring retainer clips on the SO-DIMM socket. They clip into place and secure the DDR memory module in the socket.

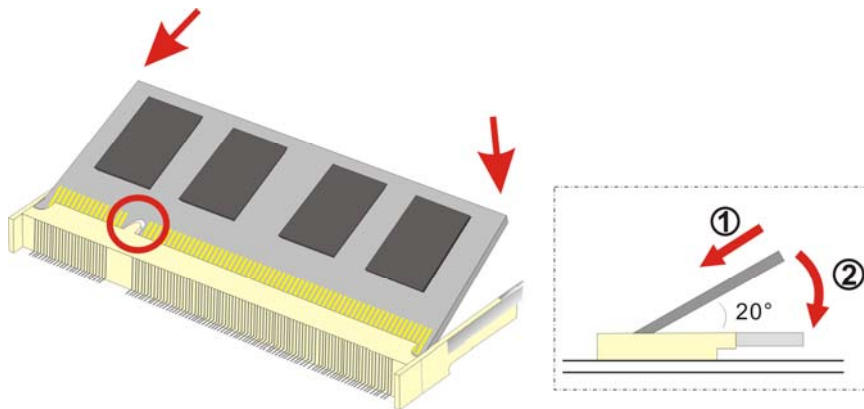


Figure 5-4: DDR SO-DIMM Module Installation

5.5.2 CF Card Replacement

The AFL-08AH-N270-CR is preinstalled one CF Type II card. To replace the CF card, follow the instructions below.

- Step 1:** Follow all anti-static procedures. See Section 5.2.
- Step 2:** Turn off the power. See Section 5.3.
- Step 3:** Remove the back cover. See Section 5.4.1.
- Step 4:** Locate the CF slot. Remove the old CF card (Figure 5-5).



Figure 5-5: CF Card Location

Step 5: Insert a new CF card into the slot.

Step 6: Replace the plastic back cover..

Step 7: Once replaced reinsert the nine previously removed retention screws.



WARNING:

Over-tightening back cover screws will crack the plastic frame.
Maximum torque for cover screws is 5 kg-cm (0.36 lb-ft/0.49 Nm).

5.6 Reinstalling the Covers



WARNING:

Failing to reinstall the covers may result in permanent damage to the system. Please make sure all coverings are properly installed.

When maintenance procedures are complete, please make sure all the covers are replaced, including the following:

AFL-08AH-N270-CR Panel PC

- Aluminum cover
- Plastic cover

Chapter

6

AMI BIOS Setup

6.1 Introduction

A licensed copy of AMI BIOS is preprogrammed into the ROM BIOS. The BIOS setup program allows users to modify the basic system configuration. This chapter describes how to access the BIOS setup program and the configuration options that may be changed.

6.1.1 Starting Setup

The AMI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. Press the **DELETE** key as soon as the system is turned on or
2. Press the **DELETE** key when the “**Press Del to enter SETUP**” message appears on the screen.

If the message disappears before the **DELETE** key is pressed, restart the computer and try again.

6.1.2 Using Setup

Use the arrow keys to highlight items, press **ENTER** to select, use the PageUp and PageDown keys to change entries, press **F1** for help and press **Esc** to quit. Navigation keys are shown in.

Key	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
Esc key	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
Page Up key	Increase the numeric value or make changes
Page Dn key	Decrease the numeric value or make changes

F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2 /F3 key	Change color from total 16 colors. F2 to select color forward.
F10 key	Save all the CMOS changes, only for Main Menu

Table 6-1: BIOS Navigation Keys

6.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window press **Esc** or the **F1** key again.

6.1.4 Unable to Reboot After Configuration Changes

If the computer cannot boot after the system configuration is made, clear the CMOS.

6.1.5 BIOS Menu Bar


The **menu bar** on top of the BIOS screen has the following main items:

- **Main** Changes the basic system configuration.
- **Advanced** Changes the advanced system settings.
- **PCIPnP** Changes the advanced PCI/PnP Settings
- **Boot** Changes the system boot configuration.
- **Security** Sets User and Supervisor Passwords.
- **Chipset** Changes the chipset settings.
- **Exit** Selects exit options and loads default settings

The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.

6.2 Main

The **Main** BIOS menu (**BIOS Menu 1**) appears when the **BIOS Setup** program is entered. The **Main** menu gives an overview of the basic system information.

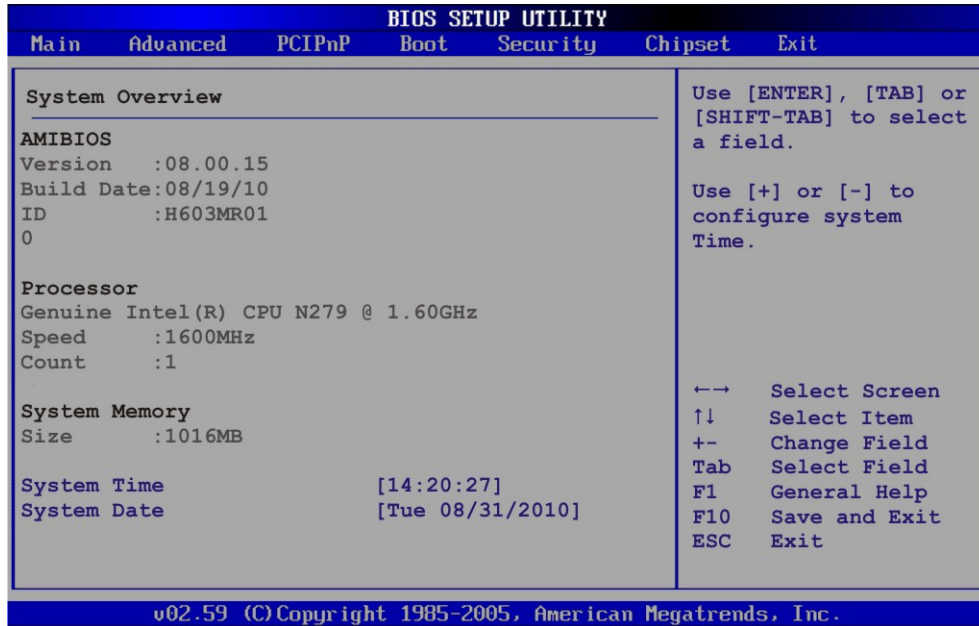

BIOS Menu 1: Main

→ System Overview

The **System Overview** lists a brief summary of different system components. The fields in **System Overview** cannot be changed. The items shown in the system overview include:

- **AMI BIOS:** Displays auto-detected BIOS information
 - Version: Current BIOS version
 - Build Date: Date the current BIOS version was made
 - ID: Installed BIOS ID
- **Processor:** Displays auto-detected CPU specifications
 - Type: Names the currently installed processor
 - Speed: Lists the processor speed
 - Count: The number of CPUs on the CPU card
- **System Memory:** Displays the auto-detected system memory.
 - Size: Lists memory size

The **System Overview** field also has two user configurable fields:

→ **System Time [xx:xx:xx]**

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.

→ **System Date [xx/xx/xx]**

Use the **System Date** option to set the system date. Manually enter the day, month and year.

6.3 Advanced

Use the **Advanced** menu (**BIOS Menu 2**) to configure the CPU and peripheral devices through the following sub-menus:




WARNING:

Setting the wrong values in the sections below may cause the system to malfunction. Make sure that the settings made are compatible with the hardware.

-
- CPU Configuration (see **Section 6.3.1**)
 - IDE Configuration (see **Section 6.3.2**)
 - SuperIO Configuration (see **Section 6.3.3**)
 - Hardware Health Configuration (see **Section 6.3.4**)
 - Power Configuration (see **Section 6.3.5**)
 - Remote Access Configuration (see **Section 6.3.6**)
 - USB Configuration (see **Section 6.3.8**)


AFL-08AH-N270-CR Panel PC

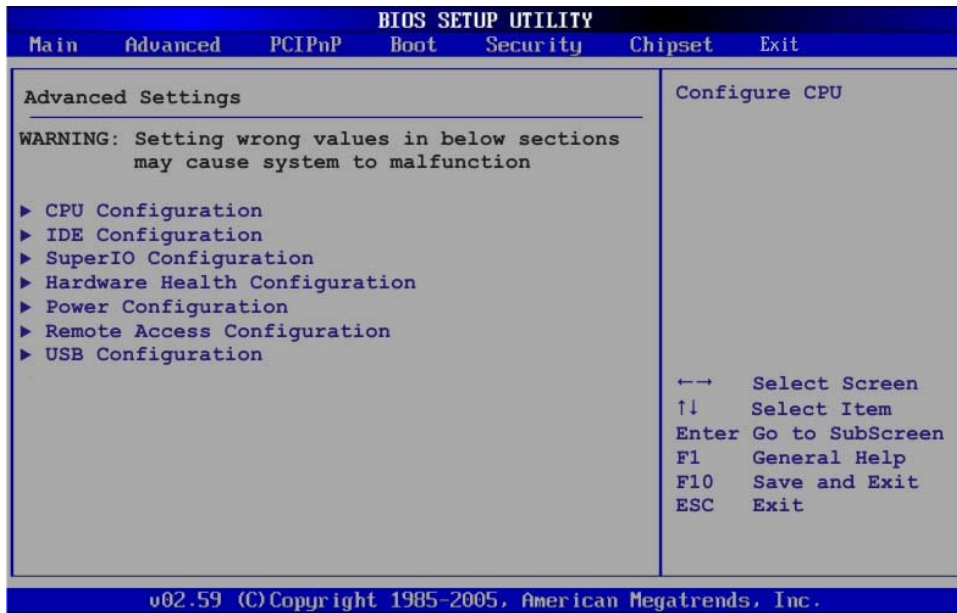

BIOS Menu 2: Advanced

6.3.1 CPU Configuration

Use the **CPU Configuration** menu (**BIOS Menu 3**) to view detailed CPU specifications and configure the CPU.

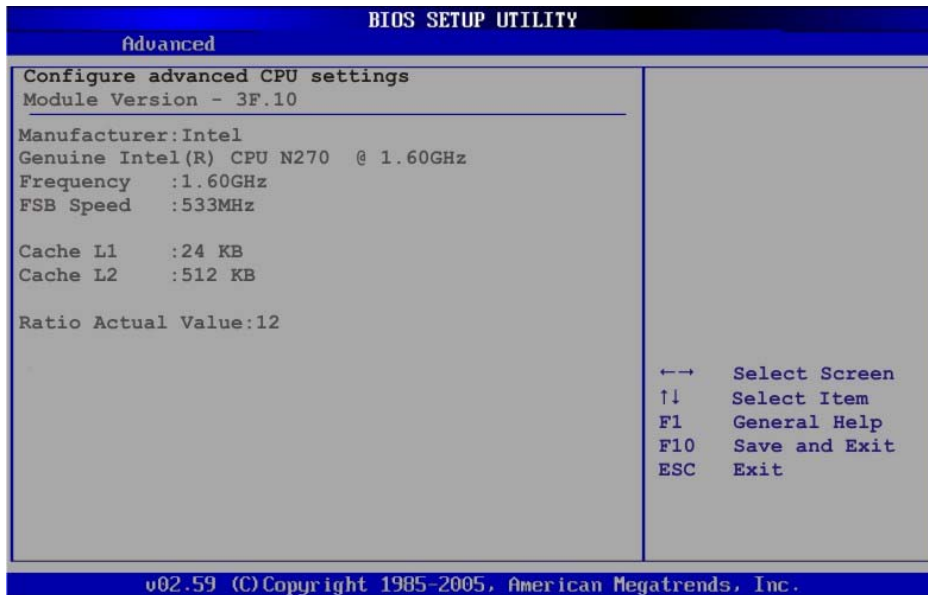


BIOS Menu 3: CPU Configuration

The CPU Configuration menu (**BIOS Menu 3**) lists the following CPU details:

- **Manufacturer:** Lists the name of the CPU manufacturer
- **Brand String:** Lists the brand name of the CPU being used
- **Frequency:** Lists the CPU processing speed
- **FSB Speed:** Lists the FSB speed
- **Cache L1:** Lists the CPU L1 cache size
- **Cache L2:** Lists the CPU L2 cache size

6.3.2 IDE Configuration

Use the **IDE Configuration** menu (**BIOS Menu 4**) to change and/or set the configuration of the IDE devices installed in the system.

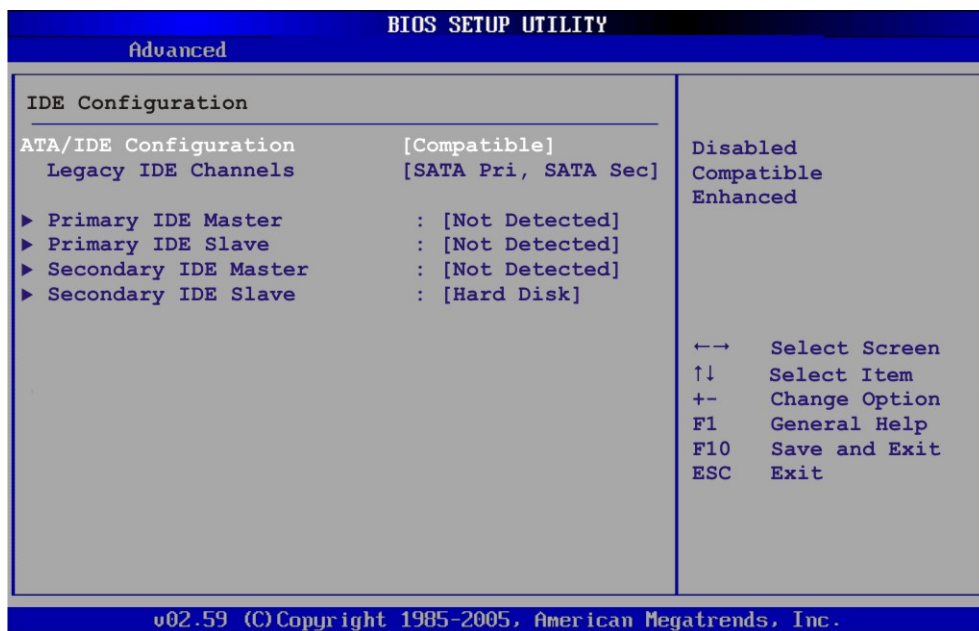

BIOS Menu 4: IDE Configuration

→ ATA/IDE Configurations [Compatible]

Use the **ATA/IDE Configurations** option to configure the ATA/IDE controller.

- **Disabled** Disables the on-board ATA/IDE controller.
- **Compatible** **DEFAULT** Configures the on-board ATA/IDE controller to be in

AFL-08AH-N270-CR Panel PC

compatible mode. In this mode, a SATA channel will replace one of the IDE channels. This mode supports up to 4 storage devices.

→ **Enhanced**

Configures the on-board ATA/IDE controller to be in Enhanced mode. In this mode, IDE channels and SATA channels are separated. This mode supports up to 6 storage devices. Some legacy OS do not support this mode.

→ **Legacy IDE Channels [PATA Pri, SATA Sec]**

→ **SATA Only**

Only the SATA drives are enabled.

→ **Reserved**

The IDE channel is reserved

→ **SATA Pri, PATA Sec** **DEFAULT**

The IDE drives are enabled on the Primary IDE channel. The SATA drives are enabled on the Secondary IDE channel.

→ **PATA Only**

The IDE drives are enabled on the primary and secondary IDE channels. SATA drives are disabled.

→ **IDE Master and IDE Slave**


When entering setup, BIOS auto detects the presence of IDE devices. BIOS displays the status of the auto detected IDE devices. The following IDE devices are detected and are shown in the **IDE Configuration** menu:

- Primary IDE Master
- Primary IDE Slave
- Secondary IDE Master
- Secondary IDE Slave

The **IDE Configuration** menu (**BIOS Menu 4**) allows changes to the configurations for the IDE devices installed in the system. If an IDE device is detected, and one of the above listed four BIOS configuration options are selected, the IDE configuration options shown in **Section 6.3.2.1** appear.

6.3.2.1 IDE Master, IDE Slave

Use the **IDE Master** and **IDE Slave** configuration menu to view both primary and secondary IDE device details and configure the IDE devices connected to the system.

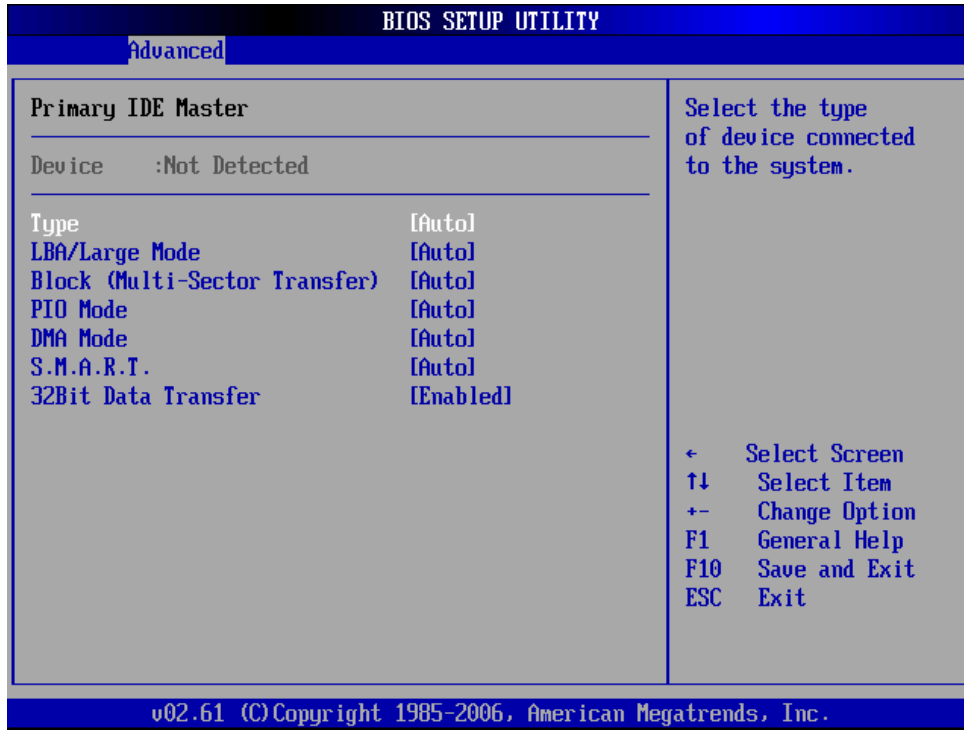

BIOS Menu 5: IDE Master and IDE Slave Configuration

→ Auto-Detected Drive Parameters

The “grayed-out” items in the left frame are IDE disk drive parameters automatically detected from the firmware of the selected IDE disk drive. The drive parameters are listed as follows:

- **Device:** Lists the device type (e.g. hard disk, CD-ROM etc.)
- **Type:** Indicates the type of devices a user can manually select
- **Vendor:** Lists the device manufacturer
- **Size:** List the storage capacity of the device.
- **LBA Mode:** Indicates whether the LBA (Logical Block Addressing) is a method of addressing data on a disk drive is supported or not.

AFL-08AH-N270-CR Panel PC

- **Block Mode:** Block mode boosts IDE drive performance by increasing the amount of data transferred. Only 512 bytes of data can be transferred per interrupt if block mode is not used. Block mode allows transfers of up to 64 KB per interrupt.
- **PIO Mode:** Indicates the PIO mode of the installed device.
- **Async DMA:** Indicates the highest Asynchronous DMA Mode that is supported.
- **Ultra DMA:** Indicates the highest Synchronous DMA Mode that is supported.
- **S.M.A.R.T.:** Indicates whether or not the Self-Monitoring Analysis and Reporting Technology protocol is supported.
- **32Bit Data Transfer:** Enables 32-bit data transfer.

→ Type [Auto]

Use the **Type** BIOS option select the type of device the AMIBIOS attempts to boot from after the Power-On Self-Test (POST) is complete.

- **Not Installed** BIOS is prevented from searching for an IDE disk drive on the specified channel.
- **Auto** **DEFAULT** The BIOS auto detects the IDE disk drive type attached to the specified channel. This setting should be used if an IDE hard disk drive is attached to the specified channel.
- **CD/DVD** The CD/DVD option specifies that an IDE CD-ROM drive is attached to the specified IDE channel. The BIOS does not attempt to search for other types of IDE disk drives on the specified channel.
- **ARMD** This option specifies an ATAPI Removable Media Device. These include, but are not limited to:
 - **ZIP**
 - **LS-120**

→ **LBA/Large Mode [Auto]**

Use the **LBA/Large Mode** option to disable or enable BIOS to auto detects LBA (Logical Block Addressing). LBA is a method of addressing data on a disk drive. In LBA mode, the maximum drive capacity is 137 GB.

- **Disabled** BIOS is prevented from using the LBA mode control on the specified channel.
- **Auto** **DEFAULT** BIOS auto detects the LBA mode control on the specified channel.

→ **Block (Multi Sector Transfer) [Auto]**

Use the **Block (Multi Sector Transfer)** to disable or enable BIOS to auto detect if the device supports multi-sector transfers.

- **Disabled** BIOS is prevented from using Multi-Sector Transfer on the specified channel. The data to and from the device occurs one sector at a time.
- **Auto** **DEFAULT** BIOS auto detects Multi-Sector Transfer support on the drive on the specified channel. If supported the data transfer to and from the device occurs multiple sectors at a time.

→ **PIO Mode [Auto]**

Use the **PIO Mode** option to select the IDE PIO (Programmable I/O) mode program timing cycles between the IDE drive and the programmable IDE controller. As the PIO mode increases, the cycle time decreases.

- **Auto** **DEFAULT** BIOS auto detects the PIO mode. Use this value if the IDE disk drive support cannot be determined.
- **0** PIO mode 0 selected with a maximum transfer rate of 3.3MBps
- **1** PIO mode 1 selected with a maximum transfer rate of 5.2MBps
- **2** PIO mode 2 selected with a maximum transfer rate of 8.3MBps

AFL-08AH-N270-CR Panel PC

- 3 PIO mode 3 selected with a maximum transfer rate of 11.1MBps
- 4 PIO mode 4 selected with a maximum transfer rate of 16.6MBps
(This setting generally works with all hard disk drives manufactured after 1999. For other disk drives, such as IDE CD-ROM drives, check the specifications of the drive.)

→ DMA Mode [Auto]

Use the **DMA Mode** BIOS selection to adjust the DMA mode options.

- **Auto** **DEFAULT** BIOS auto detects the DMA mode. Use this value if the IDE disk drive support cannot be determined.

→ S.M.A.R.T [Auto]

Use the **S.M.A.R.T** option to auto-detect, disable or enable Self-Monitoring Analysis and Reporting Technology (SMART) on the drive on the specified channel. **S.M.A.R.T** predicts impending drive failures. The **S.M.A.R.T** BIOS option enables or disables this function.

- **Auto** **DEFAULT** BIOS auto detects HDD SMART support.
- **Disabled** Prevents BIOS from using the HDD SMART feature.
- **Enabled** Allows BIOS to use the HDD SMART feature


→ 32Bit Data Transfer [Enabled]

Use the **32Bit Data Transfer** BIOS option to enables or disable 32-bit data transfers.

- **Disabled** Prevents the BIOS from using 32-bit data transfers.
- **Enabled** **DEFAULT** Allows BIOS to use 32-bit data transfers on supported hard disk drives.

6.3.3 Super IO Configuration

Use the **Super IO Configuration** menu (**BIOS Menu 6**) to set or change the configurations for the FDD controllers, parallel ports and serial ports.

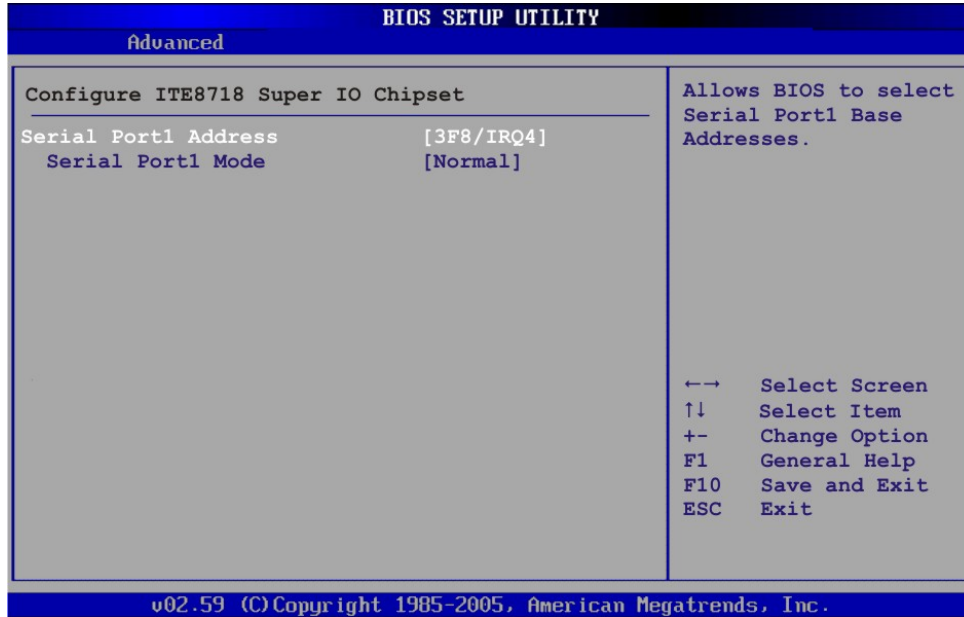

BIOS Menu 6: Super IO Configuration

➔ **Serial Port1 Address [3F8/IRQ4]**

Use the **Serial Port1 Address** option to select the Serial Port 1 base address.

- ➔ **Disabled** No base address is assigned to Serial Port 1
- ➔ **3F8/IRQ4** **DEFAULT** Serial Port 1 I/O port address is 3F8 and the interrupt address is IRQ4
- ➔ **3E8/IRQ4** Serial Port 1 I/O port address is 3E8 and the interrupt address is IRQ4
- ➔ **2E8/IRQ3** Serial Port 1 I/O port address is 2E8 and the interrupt address is IRQ3

AFL-08AH-N270-CR Panel PC


→ Serial Port1 Mode [Normal]

Use the **Serial Port1 Mode** option to select the transmitting and receiving mode for the first serial port.

- **Normal** **DEFAULT** Serial Port 1 mode is normal
- **IrDA** Serial Port 1 mode is IrDA
- **ASK IR** Serial Port 1 mode is ASK IR

6.3.4 Hardware Health Configuration

The **Hardware Health Configuration** menu (**BIOS Menu 7**) shows the operating temperature, fan speeds and system voltages.

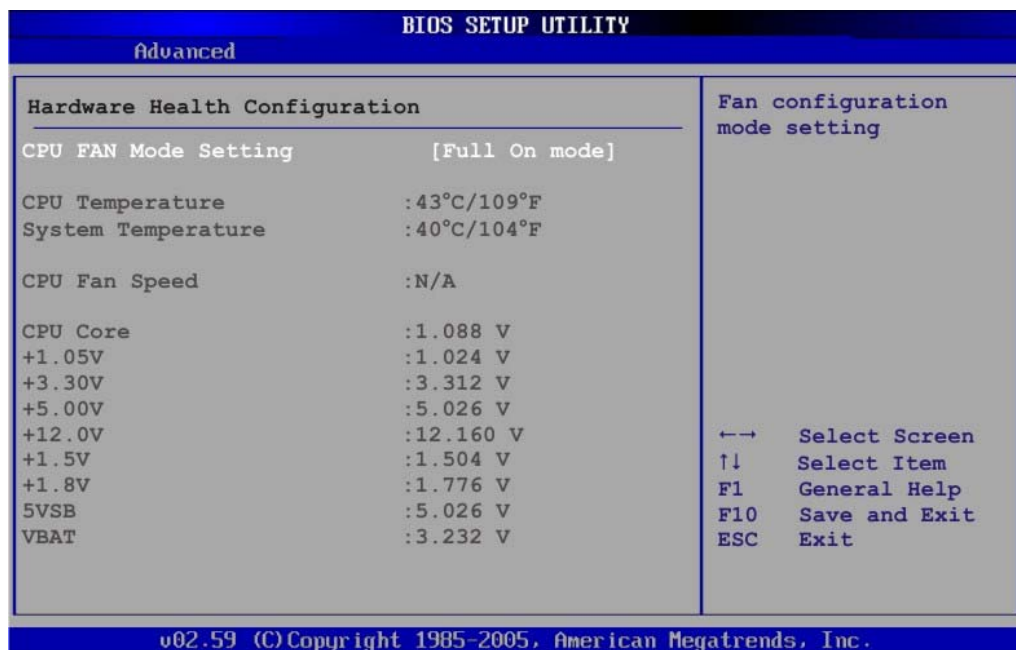

BIOS Menu 7: Hardware Health Configuration

→ CPU FAN Mode Setting [Full On Mode]

Use the **CPU FAN Mode Setting** option to configure the second fan.

- **Full On Mode** **DEFAULT** Fan is on all the time

- **Automatic mode** Fan is off when the temperature is low enough. Parameters must be set by the user.
- **PWM Manual mode** Pulse width modulation set manually

When the **CPU FAN Mode Setting** option is in the **Automatic Mode**, the following parameters can be set.

- CPU Temp. Limit of OFF
- CPU Temp. Limit of Start
- CPU Fan Start PWM
- Slope PWM

When the **CPU FAN Mode Setting** option is in the **PWM Manual Mode**, the following parameters can be set.

- CPU Fan PWM control

→ CPU Temp. Limit of OFF [000]



WARNING:

Setting this value too high may cause the fan to stop when the CPU is at a high temperature and therefore cause the system to be damaged.

The **CPU Temp. Limit of OFF** option can only be set if the **CPU FAN Mode Setting** option is set to **Automatic Mode**. Use the **CPU Temp. Limit of OFF** option to select the CPU temperature at which the cooling fan should automatically turn off. To select a value, select the **CPU Temp. Limit of OFF** option and enter a decimal number between 000 and 127. The temperature range is specified below.

- Minimum Value: 0°C
- Maximum Value: 127°C

AFL-08AH-N270-CR Panel PC

→ CPU Temp. Limit of Start [020]



WARNING:

Setting this value too high may cause the fan to start only when the CPU is at a high temperature and therefore cause the system to be damaged.

The **CPU Temp. Limit of Start** option can only be set if the **CPU FAN Mode Setting** option is set to **Automatic Mode**. Use the **CPU Temp. Limit of Start** option to select the CPU temperature at which the cooling fan should automatically turn on. When the fan starts, it rotates using the starting pulse width modulation (PWM) specified in the **Fan 3 Start PWM** option below. To select a value, select the **CPU Temp. Limit of Start** option and enter a decimal number between 000 and 127. The temperature range is specified below.

- Minimum Value: 0°C
- Maximum Value: 127°C

→ CPU Fan Start PWM [070]

The **Fan 3 Start PWM** option can only be set if the **CPU FAN Mode Setting** option is set to **Automatic Mode**. Use the **Fan 3 Start PWM** option to select the PWM mode the fan starts to rotate with after the temperature specified in the **Temperature 3 Limit of Start** is exceeded. The Super I/O chipset supports 128 PWM modes. To select a value, select the **Fan 3 Start PWM** option and enter a decimal number between 000 and 127. The temperature range is specified below.

- PWM Minimum Mode: 0
- PWM Maximum Mode: 127

→ Slope PWM [0.5 PWM]

The **Slope PWM 1** option can only be set if the **CPU FAN Mode Setting** option is set to **Automatic Mode**. Use the **Slope PWM 1** option to select the linear rate at which the PWM

mode increases with respect to an increase in temperature. A list of available options is shown below:

- 0.125 PWM
- 0.25 PWM
- 0.5 PWM
- 1 PWM
- 2 PWM
- 4 PWM
- 8 PWM
- 15 PWM


The following system parameters and values are shown. The system parameters that are monitored are:

- **System Temperatures:** The following system temperatures are monitored
 - CPU Temperature
 - System Temperature
- **Fan Speeds:** The CPU cooling fan speed is monitored.
 - CPU Fan Speed
- **Voltages:** The following system voltages are monitored
 - CPU Core
 - +1.05V
 - +3.30V
 - +5.00V
 - +12.0 V
 - +1.5V
 - +1.8V
 - 5VSB
 - VBAT

6.3.5 Power Configuration

The **Power Configuration** menu (**BIOS Menu 8**) configures the Advanced Configuration and Power Interface (ACPI) and Power Management (APM) options.


AFL-08AH-N270-CR Panel PC

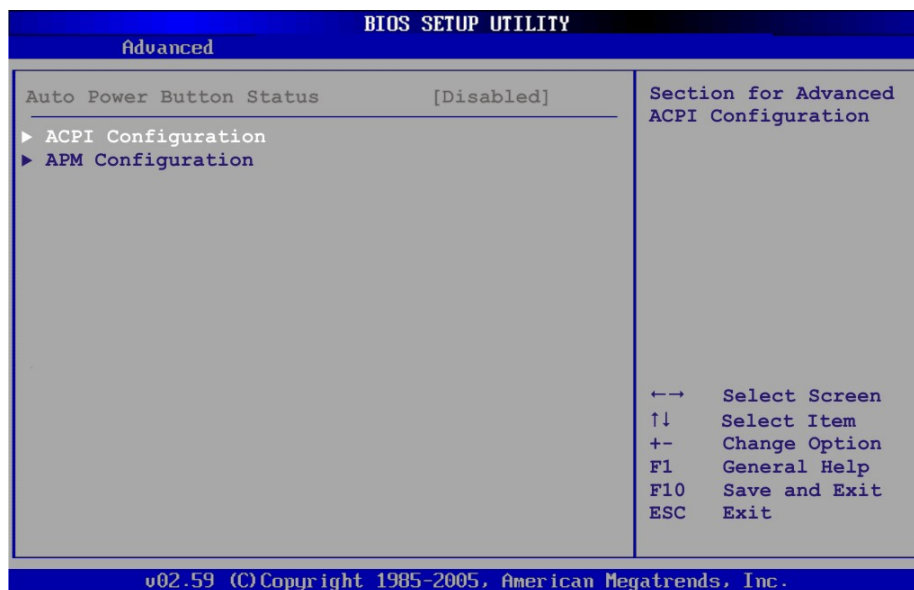

BIOS Menu 8: Power Configuration

6.3.5.1 ACPI configuration

The **ACPI Configuration** menu (**BIOS Menu 9**) configures the Advanced Configuration and Power Interface (ACPI).

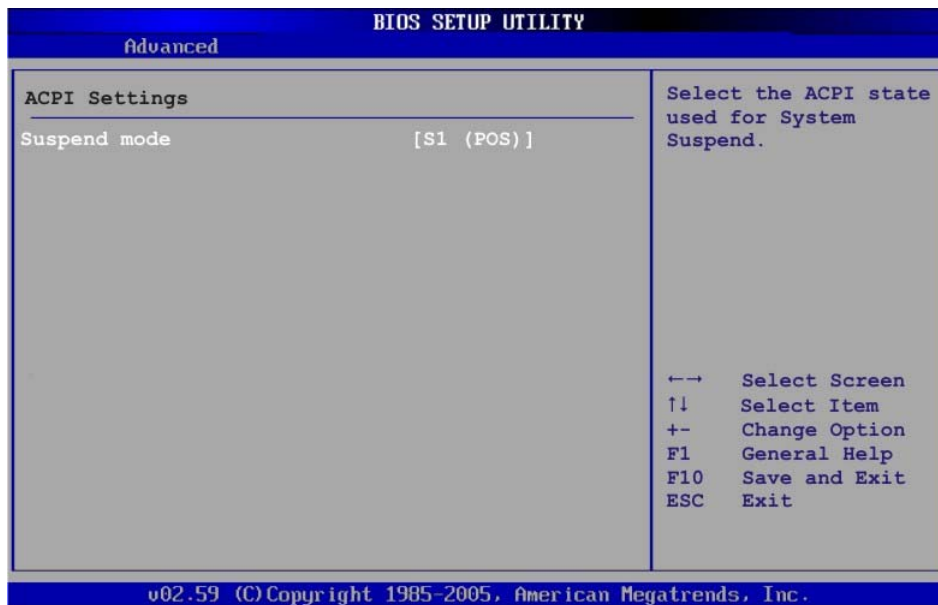

BIOS Menu 9: ACPI Configuration

→ **Suspend Mode [S1(POS)]**


Use the **Suspend Mode** BIOS option to specify the sleep state the system enters when it is not being used.

→ **S1 (POS) DEFAULT** System appears off. The CPU is stopped; RAM is refreshed; the system is running in a low power mode.

→ **S3 (STR)** System appears off. The CPU has no power; RAM is in slow refresh; the power supply is in a reduced power mode.

6.3.6 APM Configuration

The **APM Configuration** menu (**BIOS Menu 10**) allows the advanced power management options to be configured.

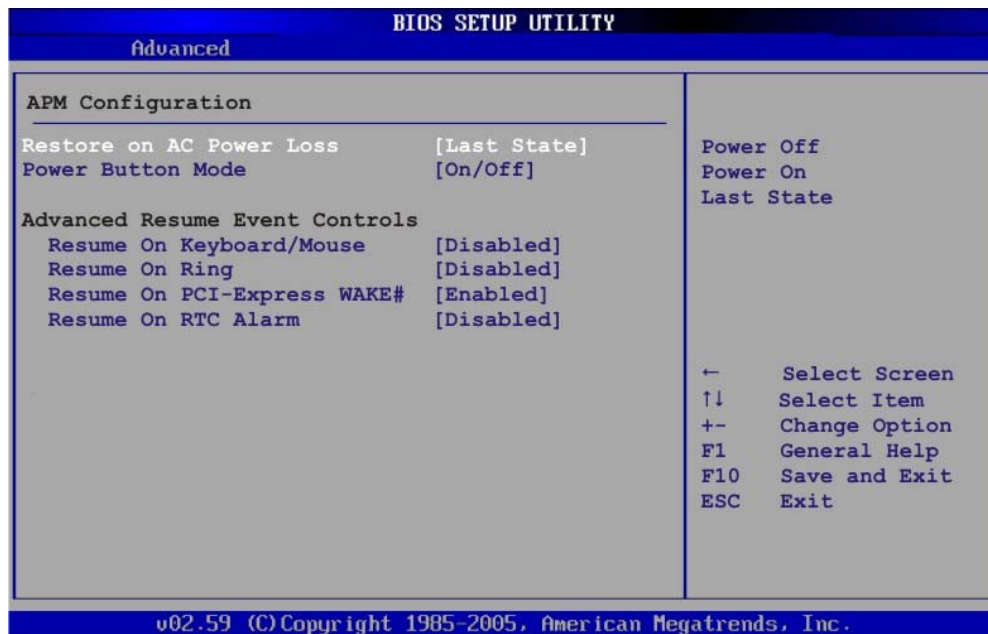

BIOS Menu 10: Advanced Power Management Configuration

→ **Restore on AC Power Loss [Last State]**

Use the **Restore on AC Power Loss** BIOS option to specify what state the system returns to if there is a sudden loss of power to the system.

AFL-08AH-N270-CR Panel PC

- **Power Off** The system remains turned off
- **Power On** The system turns on
- **Last State** **DEFAULT** The system returns to its previous state. If it was on, it turns itself on. If it was off, it remains off.

→ **Power Button Mode [On/Off]**

Use the **Power Button Mode** BIOS to specify how the power button functions.

- **On/Off** **DEFAULT** When the power button is pressed the system is either turned on or off
- **Suspend** When the power button is pressed the system goes into suspend mode

→ **Resume on Keyboard/Mouse [Disabled]**

Use the **Resume on Keyboard/Mouse** BIOS option to enable activity on either the keyboard or mouse to rouse the system from a suspend or standby state. That is, the system is roused when the mouse is moved or a button on the keyboard is pressed.

- **Disabled** **DEFAULT** Wake event not generated by activity on the keyboard or mouse
- **Resume On
KeyBoard** Wake event not generated by activity on the keyboard
- **Resume On
Mouse** Wake event not generated by activity on the mouse
- **Enabled** Wake event generated by activity on the keyboard or mouse

→ **Resume on Ring [Disabled]**

Use the **Resume on Ring** BIOS option to enable activity on the RI (ring in) modem line to rouse the system from a suspend or standby state. That is, the system will be roused by an incoming call on a modem.

- **Disabled** **DEFAULT** Wake event not generated by an incoming call
- **Enabled** Wake event generated by an incoming call

→ **Resume on PCI-Express WAKE# [Enabled]**

Use the **Resume PCI-Express WAKE#** BIOS option to enable activity on the PCI-Express WAKE# signal to rouse the system from a suspend or standby state.

- **Disabled** Wake event not generated by PCI-Express WAKE# signal activity
- **Enabled** **DEFAULT** Wake event generated by PCI-Express WAKE# signal activity

→ **Resume On RTC Alarm [Disabled]**

Use the **Resume On RTC Alarm** option to specify the time the system should be roused from a suspended state.

- **Disabled** **DEFAULT** The real time clock (RTC) cannot generate a wake event
- **Enabled** If selected, the following appears with values that can be selected:

- **RTC Alarm Date (Days)**


- **System Time**

After setting the alarm, the computer turns itself on from a suspend state when the alarm goes off.

6.3.7 Remote Configuration

Use the **Remote Access Configuration** menu (**BIOS Menu 11**) to configure remote access parameters. The **Remote Access Configuration** is an AMIBIOS feature and allows a remote host running a terminal program to display and configure the BIOS settings.

AFL-08AH-N270-CR Panel PC

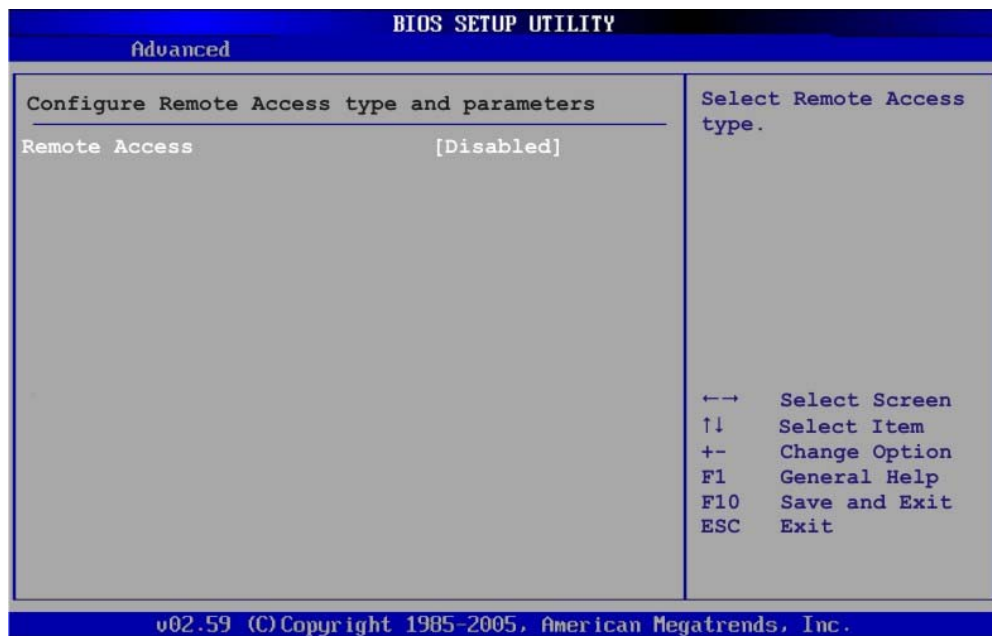

BIOS Menu 11: Remote Access Configuration [Advanced]

→ Remote Access [Disabled]

Use the **Remote Access** option to enable or disable access to the remote functionalities of the system.

→ **Disabled** **DEFAULT** Remote access is disabled.

→ **Enabled** Remote access configuration options shown below appear:

→ **Serial Port Number**

→ **Serial Port Mode**

→ **Redirection after BIOS POST**

→ **Terminal Type**

These configuration options are discussed below.

→ Serial Port Number [COM1]

Use the **Serial Port Number** option allows to select the serial port used for remote access.

→ **COM1** **DEFAULT** System is remotely accessed through COM1

NOTE: Make sure the selected COM port is enabled through the Super I/O configuration menu.

→ Base Address, IRQ [3F8h,4]

The **Base Address, IRQ** option cannot be configured and only shows the interrupt address of the serial port listed above.

→ Serial Port Mode [115200 8,n,1]

Use the **Serial Port Mode** option to select baud rate through which the console redirection is made. The following configuration options are available

- 115200 8,n,1 **DEFAULT**
- 57600 8,n,1
- 38400 8,n,1
- 19200 8,n,1
- 09600 8,n,1



NOTE:

Identical baud rate setting must be set on the host (a management computer running a terminal software) and the slave

→ Redirection After BIOS POST [Always]

Use the **Redirection After BIOS POST** option to specify when console redirection should occur.

- **Disabled** The console is not redirected after POST
- **Boot Loader** Redirection is active during POST and during Boot

AFL-08AH-N270-CR Panel PC

Loader

- **Always** **DEFAULT** Redirection is always active (Some Oses may not work if set to Always)


→ Terminal Type [ANSI]

Use the **Terminal Type** BIOS option to specify the remote terminal type.

- **ANSI** **DEFAULT** The target terminal type is ANSI
- **VT100** The target terminal type is VT100
- **VT-UTF8** The target terminal type is VT-UTF8

6.3.8 USB Configuration

Use the **USB Configuration** menu (**BIOS Menu 12**) to read USB configuration information and configure the USB settings.

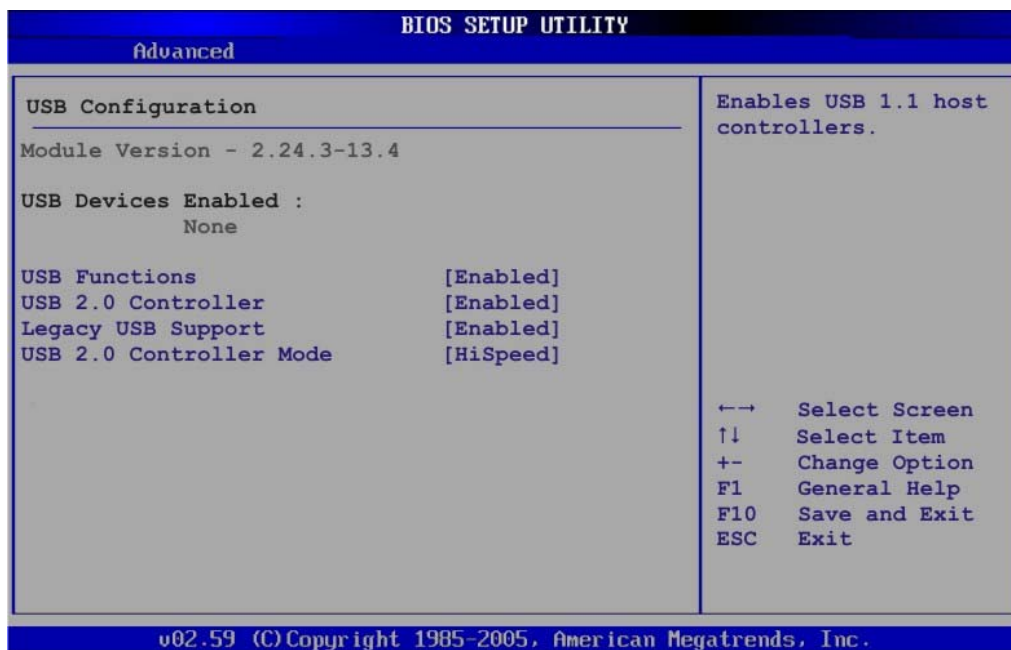

BIOS Menu 12: USB Configuration

→ **USB Functions [Enabled]**

Use the **USB Function** option to enable or disable the USB controllers.

- **Disabled** USB controllers are enabled
- **Enabled** **DEFAULT** USB controllers are disabled

→ **USB 2.0 Controller [Enabled]**

The **USB 2.0 Controller** BIOS option enables or disables the USB 2.0 controller

- **Enabled** **DEFAULT** USB function enabled
- **Disabled** USB function disabled

→ **Legacy USB Support [Enabled]**

Use the **Legacy USB Support** BIOS option to enable USB mouse and USB keyboard support.

Normally if this option is not enabled, any attached USB mouse or USB keyboard does not become available until a USB compatible operating system is fully booted with all USB drivers loaded. When this option is enabled, any attached USB mouse or USB keyboard can control the system even when there is no USB driver loaded onto the system.

- **Disabled** Legacy USB support disabled
- **Enabled** **DEFAULT** Legacy USB support enabled
- **Auto** Legacy USB support disabled if no USB devices are connected

→ **USB2.0 Controller Mode [HiSpeed]**

The **USB2.0 Controller Mode** BIOS option sets the speed of the USB2.0 controller.

- **FullSpeed** The controller is capable of operating at full speed 12 Mb/s

AFL-08AH-N270-CR Panel PC

- **HiSpeed** **DEFAULT** The controller is capable of operating at high speed 480 Mb/s

6.4 PCI/PnP

Use the PCI/PnP menu (**BIOS Menu 13**) to configure advanced PCI and PnP settings.



WARNING:

Setting wrong values for the BIOS selections in the PCIPnP BIOS menu may cause the system to malfunction.

BIOS SETUP UTILITY						
Main	Advanced	PCIPnP	Boot	Security	Chipset	Exit
Advanced PCI/PnP Settings						
WARNING: Setting wrong values in below sections may cause system to malfunction						
IRQ3		[Reserved]	Available: Specified IRQ is available to be use by PCI/PnP devices.			
IRQ4		[Reserved]	Reserved: Specified IRQ is reserved for use by legacy ISA devices.			
IRQ5		[Available]				
IRQ7		[Available]				
IRQ9		[Available]				
IRQ10		[Reserved]				
IRQ11		[Reserved]				
IRQ14		[Available]				
IRQ15		[Available]				
DMA Channel 0		[Available]				
DMA Channel 1		[Available]				
DMA Channel 3		[Available]				
DMA Channel 5		[Available]				
DMA Channel 6		[Available]				
DMA Channel 7		[Available]				
			←→	Select Screen		
			↑↓	Select Item		
			+ -	Change Option		
			F1	General Help		
			F10	Save and Exit		
			ESC	Exit		
v02.59 (C) Copyright 1985-2005, American Megatrends, Inc.						

BIOS Menu 13: PCI/PnP Configuration

- **IRQ#** **[Available]**

Use the **IRQ#** address to specify what IRQs can be assigned to a particular peripheral device.

- **Available** **DEFAULT** The specified IRQ is available to be used by PCI/PnP devices

- ➔ **Reserved** The specified IRQ is reserved for use by Legacy ISA devices

Available IRQ addresses are:

- IRQ3
- IRQ4
- IRQ5
- IRQ7
- IRQ9
- IRQ10
- IRQ 11
- IRQ 14
- IRQ 15

➔ **DMA Channel# [Available]**

Use the **DMA Channel#** option to assign a specific DMA channel to a particular PCI/PnP device.

- ➔ **Available** **DEFAULT** The specified DMA is available to be used by PCI/PnP devices
- ➔ **Reserved** The specified DMA is reserved for use by Legacy ISA devices

Available DMA Channels are:

- DM Channel 0
- DM Channel 1
- DM Channel 3
- DM Channel 5
- DM Channel 6
- DM Channel 7

AFL-08AH-N270-CR Panel PC


→ Reserved Memory Size [Disabled]

Use the **Reserved Memory Size** BIOS option to specify the amount of memory that should be reserved for legacy ISA devices.

→	Disabled	DEFAULT	No memory block reserved for legacy ISA devices
→	16K		16KB reserved for legacy ISA devices
→	32K		32KB reserved for legacy ISA devices
→	64K		54KB reserved for legacy ISA devices

6.5 Boot


Use the Boot menu (**BIOS Menu 14**) to configure system boot options.

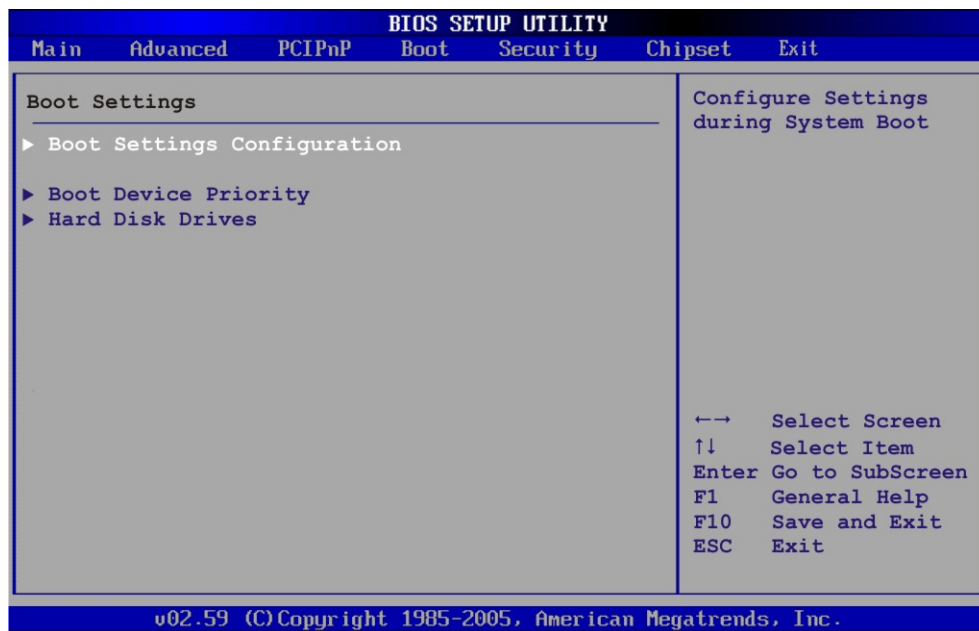

BIOS Menu 14: Boot

6.5.1 Boot Settings Configuration

Use the Boot Settings Configuration menu (**BIOS Menu 15**) to configure advanced system boot options.

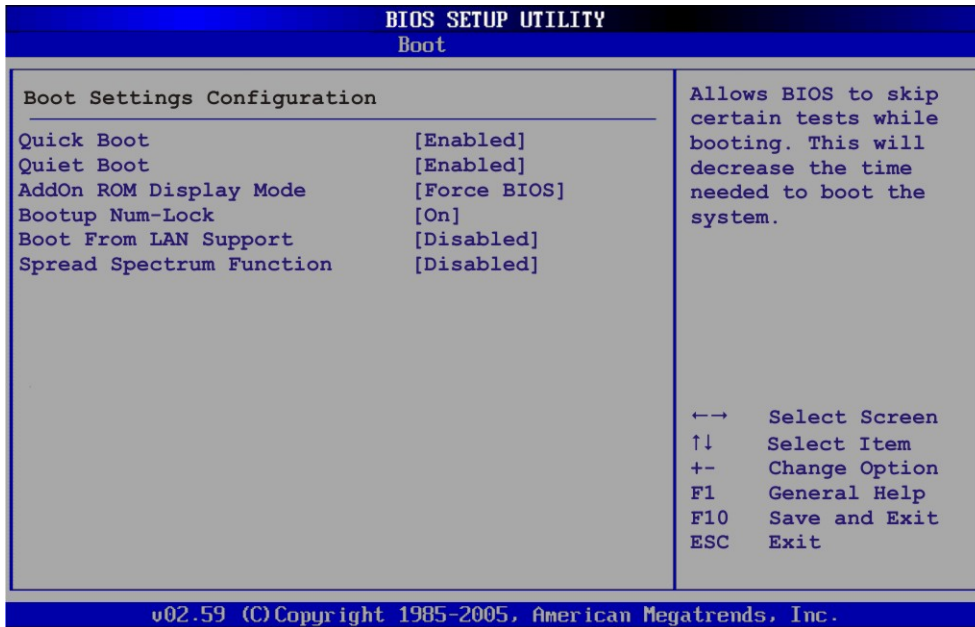

BIOS Menu 15: Boot Settings Configuration

➔ **Quick Boot [Enabled]**

Use the **Quick Boot** BIOS option to make the computer speed up the boot process.

- ➔ **Disabled** No POST procedures are skipped
- ➔ **Enabled DEFAULT** Some POST procedures are skipped to decrease the system boot time

➔ **Quiet Boot [Disabled]**

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

- ➔ **Disabled DEFAULT** Normal POST messages displayed
- ➔ **Enabled** OEM Logo displayed instead of POST messages

AFL-08AH-N270-CR Panel PC

→ AddOn ROM Display Mode [Force BIOS]

The **AddOn ROM Display Mode** option allows add-on ROM (read-only memory) messages to be displayed.

- **Force BIOS** **DEFAULT** Allows the computer system to force a third party BIOS to display during system boot.
- **Keep Current** Allows the computer system to display the information during system boot.

→ Bootup Num-Lock [On]

The **Bootup Num-Lock** BIOS option allows the Number Lock setting to be modified during boot up.

- **Off** Does not enable the keyboard Number Lock automatically. To use the 10-keys on the keyboard, press the Number Lock key located on the upper left-hand corner of the 10-key pad. The Number Lock LED on the keyboard lights up when the Number Lock is engaged.
- **On** **DEFAULT** Allows the Number Lock on the keyboard to be enabled automatically when the computer system boots up. This allows the immediate use of the 10-key numeric keypad located on the right side of the keyboard. To confirm this, the Number Lock LED light on the keyboard is lit.

→ Boot From LAN Support [Disabled]

The **BOOT From LAN Support** option enables the system to be booted from a remote system.

- **Enabled** Can be booted from a remote system through the LAN
- **Disabled** **DEFAULT** Cannot be booted from a remote system through the LAN


➔ Spread Spectrum Function [Disabled]

The **Spread Spectrum Function** option can help to improve CPU EMI issues.

- ➔ **Disabled** **DEFAULT** The spread spectrum mode is disabled
- ➔ **Enabled** The spread spectrum mode is enabled

6.6 Security

Use the Security menu (**BIOS Menu 16**) to set system and user passwords.

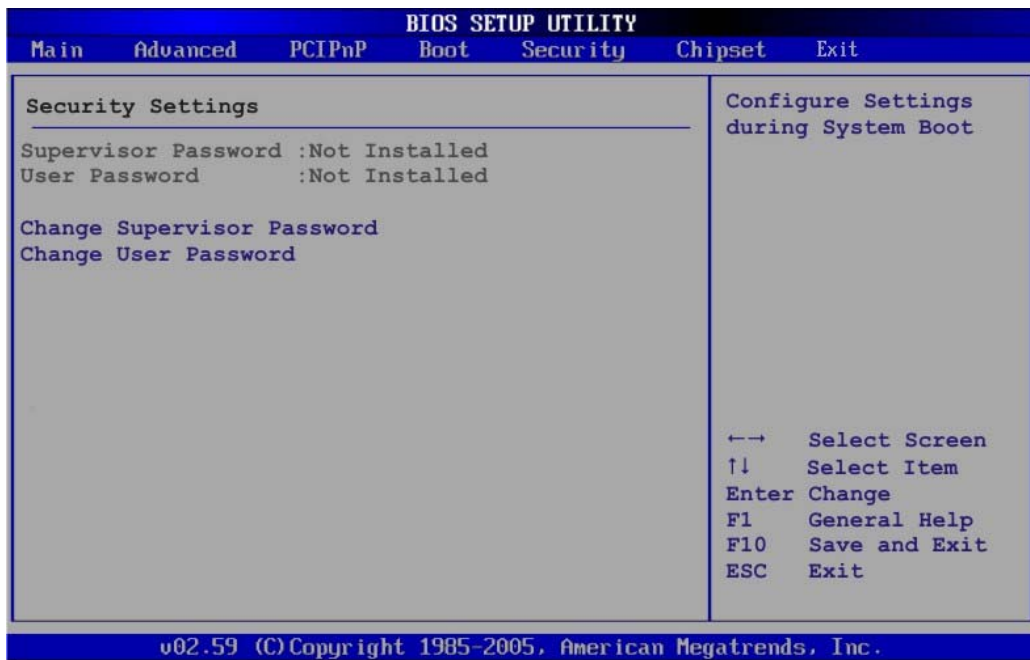

BIOS Menu 16: Security

➔ Change Supervisor Password

Use the **Change Supervisor Password** to set or change a supervisor password. The default for this option is **Not Installed**. If a supervisor password must be installed, select this field and enter the password. After the password has been added, **Install** appears next to **Change Supervisor Password**.

AFL-08AH-N270-CR Panel PC

→ Change User Password

Use the **Change User Password** to set or change a user password. The default for this option is **Not Installed**. If a user password must be installed, select this field and enter the password. After the password has been added, **Install** appears next to **Change User Password**.


6.7 Chipset

Use the **Chipset** menu (**BIOS Menu 17**) to access the NorthBridge and SouthBridge configuration menus



WARNING!


Setting the wrong values for the Chipset BIOS selections in the Chipset BIOS menu may cause the system to malfunction.

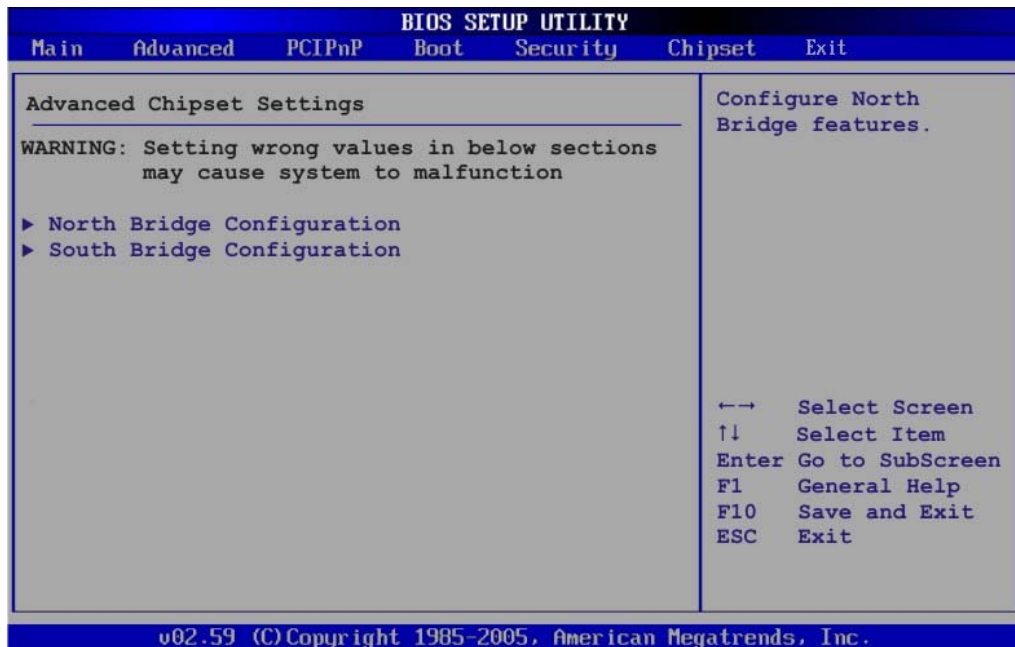

BIOS Menu 17: Chipset

6.7.1 North Bridge Chipset Configuration

Use the **North Bridge Chipset Configuration** menu (**BIOS Menu 18**) to configure the Northbridge chipset settings.

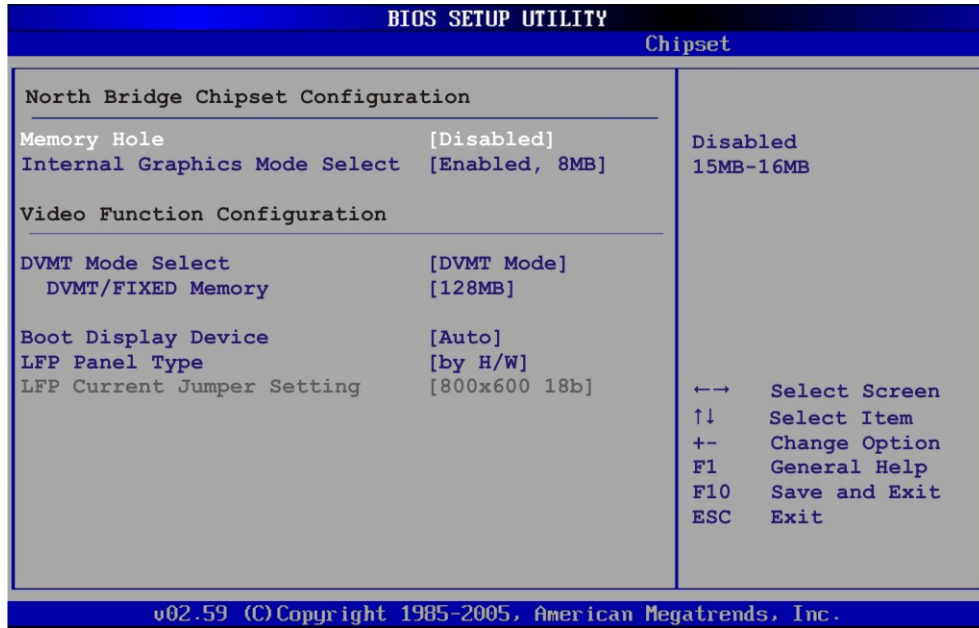

BIOS Menu 18:North Bridge Chipset Configuration

→ Memory Hole [Disabled]

The **Memory Hole** reserves the memory space between 15MB and 16MB for ISA expansion cards that require a specified area of memory to work properly. If an older ISA expansion card is used, please refer to the documentation that came with the card to see if it is necessary to reserve the space.

- **Disabled** **DEFAULT** Memory is not reserved for ISA expansion cards
- **15 MB-16 MB** Between 15 MB and 16 MB of memory is reserved for ISA expansion cards

→ Internal Graphics Mode Select [Enable, 8MB]

The **Internal Graphic Mode Select** option determines the amount of system memory that can be used by the Internal graphics device.

AFL-08AH-N270-CR Panel PC

- **Disable**
- **Enable, 1MB** 1MB of memory used by internal graphics device
- **Enable, 8MB** **DEFAULT** 8MB of memory used by internal graphics device

→ **DVMT Mode Select [DVMT Mode]**

Use the **DVMT Mode Select** option to select the Intel Dynamic Video Memory Technology (DVMT) operating mode.

- **Fixed Mode** A fixed portion of graphics memory is reserved as graphics memory.
- **DVMT Mode** **DEFAULT** Graphics memory is dynamically allocated according to the system and graphics needs.
- **Combo Mode** A fixed portion of graphics memory is reserved as graphics memory. If more memory is needed, graphics memory is dynamically allocated according to the system and graphics needs.

→ **DVMT/FIXED Memory**

Use the **DVMT/FIXED Memory** option to specify the maximum amount of memory that can be allocated as graphics memory. This option can only be configured for if **DVMT Mode** or **Fixed Mode** is selected in the **DVMT Mode Select** option. If **Combo Mode** is selected, the maximum amount of graphics memory is 128MB. Configuration options are listed below.

- 64MB
- 128MB **DEFAULT**
- Maximum DVMT

→ **Boot Display Device [Auto]**

Use the **Boot Display Device** option to select the display device used by the system when it boots. Configuration options are listed below.

- Auto **DEFAULT**

- CRT
- LFP


→ **LFP Panel Type [by H/W]**

Use the **LFP Panel Type** option to select the type of flat panel connected to the system. Configuration options are listed below.

- 640x480 18b
- 800x480 18b
- 800x600 18b
- 1024x768 18b
- 1280x1024 36b
- 1400x1050 36b
- 1440x900 36b
- 1600x1200 36b
- by H/W **DEFAULT**

6.7.2 SouthBridge Configuration

The **SouthBridge Configuration** menu (**BIOS Menu 19**) the southbridge chipset to be configured.

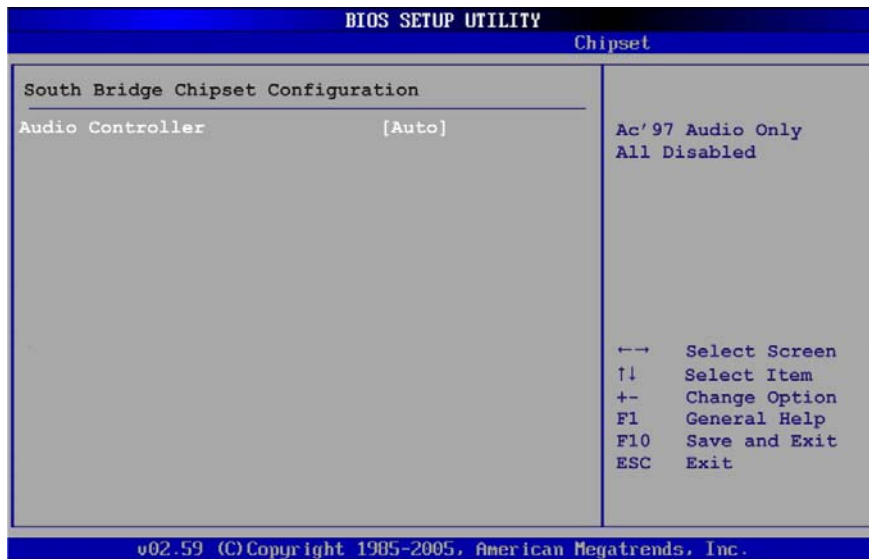

BIOS Menu 19: SouthBridge Chipset Configuration

AFL-08AH-N270-CR Panel PC


→ Audio Controller [Auto]

The **Audio Controller** option enables or disables the audio controller.

- **Auto** **DEFAULT** The on-board audio controller automatically detected and enabled.
- **Azalia** The on-board HD Audio controller is enabled.
- **AC'97 Audio Only** The on-board AC'97 audio controller is enabled.
- **All Disabled** The on-board audio controller is disabled.

6.8 Exit

Use the **Exit** menu (**BIOS Menu 20**) to load default BIOS values, optimal failsafe values and to save configuration changes.

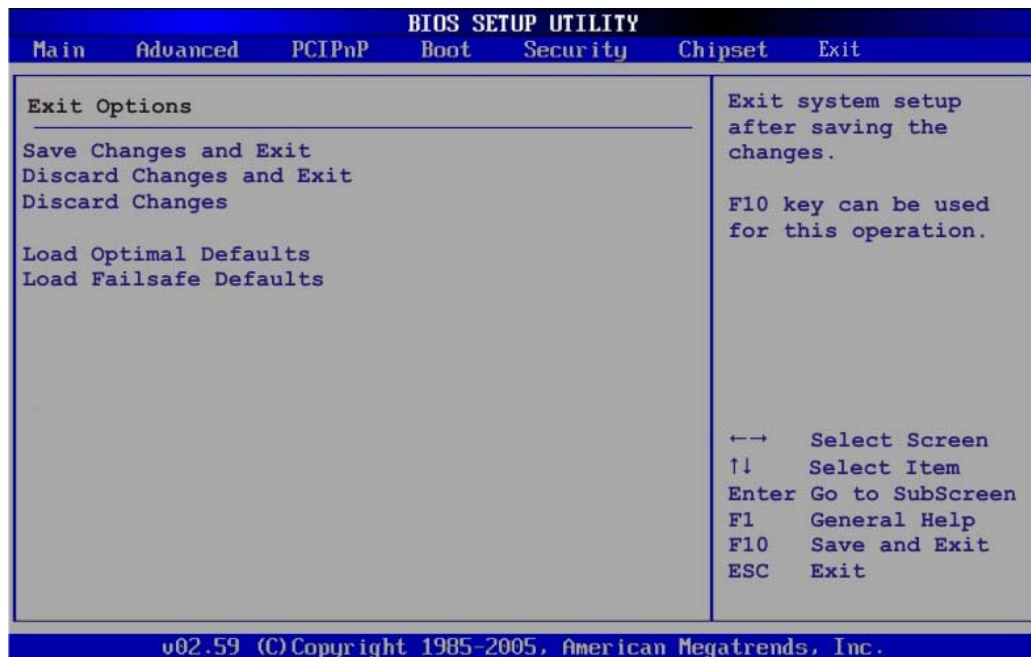

BIOS Menu 20:Exit

→ Save Changes and Exit

Use the **Save Changes and Exit** option to save the changes made to the BIOS options and to exit the BIOS configuration setup program.

→ **Discard Changes and Exit**

Use the **Discard Changes and Exit** option to exit the BIOS configuration setup program without saving the changes made to the system.

→ **Discard Changes**

Use the **Discard Changes** option to discard the changes and remain in the BIOS configuration setup program.

→ **Load Optimal Defaults**

Use the **Load Optimal Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F9 key can be used for this operation.**

→ **Load Failsafe Defaults**

Use the **Load Failsafe Defaults** option to load failsafe default values for each of the parameters on the Setup menus. **F8 key can be used for this operation.**

Appendix

A

System Specifications

A.1 Motherboard Specifications

The system comes with an AFLMB-945GSE-N270-AV-R10 motherboard. The detailed specifications for the motherboard are listed below.

Specification	AFLMB-945GSE-N270-AV-R10
Northbridge	Intel® 945GSE
Southbridge	Intel® ICH7
Processor	1.6 GHz Intel® Atom™ N270 processor
FSB Speed	533 MHz
Supported Memory	One 200-pin 2.0 GB (max.) 533 MHz or 400 MHz DDR2 SDRAM SO-DIMM (system max. 2.0 GB)
System BIOS	AMI BIOS
Hard disk drives	Two SATA drives
VGA	Integrated in the Intel® 945GSE
LAN	Realtek RTL8111CP PCIe GbE Controllers
Expansion Options	One PCIe Mini
Super I/O	ITE IT8718F
Audio Codec	RealTek ALC888
Audio Amplifier	NXP TDA1517P
USB	Six external USB 2.0 ports
RS-232	Fintek
FAN connector	One 4-pin CPU fan connector

A.2 Processor Specifications

The N270 Intel® Atom™ processor specifications are given below.

Parameter	Specifications
CPU Speed	1.6 GHz
Bus Speed	533 MHz
L2 Cache Size	512 KB
L2 Cache Speed	1.6 GHz
Manufacturing Technology	45 nm

AFL-08AH-N270-CR Panel PC

L1 Cache	32 KB instruction cache 24 KB write-back data cache
Thermal Design Power	2.5 W
Tjunction	0 to 90°C

A.3 Screen Specifications

The AFL-08AH-N270-CR comes with a TFT LCD monitor at the front of the flat panel PC. Specifications for the screens are shown below.

SPECIFICATION	AFL-08AH-N270-CR
Model	AUO-G084SN05_V8
Size	8.4"
Resolution	800 x 600 (SVGA)
Active Area (mm)	170.4 x 127.8
Pixel Pitch (mm)	0.213 x 0.213
LCD Color	Native 262K colors
View Angel (H/V)	140/160
Brightness (cd/m²)	450
Contrast Ratio	600:1
Response Time (ms)	10(Tr) / 25(Tf)
Supply Voltage (V)	3.3
Backlight	LED
Dimensions (mm)	203.0 x 142.5 x 8.0

A.4 Touch Screen Specifications

The AFL-08AH-N270-CR comes with an analog resistive type touch panel. The touch panel specifications are listed below.

SPECIFICATION	AFL-08AH-N270-CR
Model	PANJIT 1084403B
Type	Analog Resistive Type Touch Panel
Wire Type	4-wire
Viewing Area (mm)	130.75 x 173.38
Active Area (mm)	127.78 x 170.38
Total Transmission	78%
Maximum Voltage	DC7V
Connector Type	FPC.
Operating Temperature	-10°C ~ 50°C
Operating Humidity	20% ~ 90% RH
Storage Temperature	-20°C ~ 70°C
Storage Humidity	20% ~ 90% RH
Dimensions	145.5 x 188 x 2.1

Appendix

B

Safety Precautions



WARNING:

The precautions outlined in this chapter should be strictly followed. Failure to follow these precautions may result in permanent damage to the AFL-08AH-N270-CR.

B.1 Safety Precautions

Please follow the safety precautions outlined in the sections that follow:

B.1.1 General Safety Precautions

Please ensure the following safety precautions are adhered to at all times.

- **Follow the electrostatic precautions** outlined below whenever the AFL-08AH-N270-CR is opened.
- **Make sure the power is turned off and the power cord is disconnected** whenever the AFL-08AH-N270-CR is being installed, moved or modified.
- **Do not apply voltage levels that exceed the specified voltage range.** Doing so may cause fire and/or an electrical shock.
- **Electric shocks can occur** if the AFL-08AH-N270-CR chassis is opened when the AFL-08AH-N270-CR is running.
- **Do not drop or insert any objects** into the ventilation openings of the AFL-08AH-N270-CR.
- **If considerable amounts of dust, water, or fluids enter the AFL-08AH-N270-CR**, turn off the power supply immediately, unplug the power cord, and contact the AFL-08AH-N270-CR vendor.
- **DO NOT:**
 - Drop the AFL-08AH-N270-CR against a hard surface.
 - Strike or exert excessive force onto the LCD panel.
 - Touch any of the LCD panels with a sharp object
 - In a site where the ambient temperature exceeds the rated temperature

AFL-08AH-N270-CR Panel PC

B.1.2 Explanation of Graphical Symbols



This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any part inside this unit.



This symbol alerts the user that important information concerning the operation and maintenance of this unit has been included. Therefore, the information should be read carefully in order to avoid any problems.



ISO 7000-1641: Follow operating instructions or consult instructions for use.

B.1.3 Classification

- Power by Class I power adapter.
- No Applied Part.
- No protection against the ingress of water: IPX0
- Mode of operation: Continuous Operation
- The equipment not suitable for use in the presence of a flammable anesthetic mixture with air or with oxygen or nitrous oxide: Not AP or APG Category.

B.1.4 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the installation of the AFL-08AH-N270-CR may result in permanent damage to the AFL-08AH-N270-CR and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the AFL-08AH-N270-CR. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the AFL-08AH-N270-CR is opened and any of the electrical components are handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** Wearing a simple anti-static wristband can help to prevent ESD from damaging any electrical component.
- **Self-grounding:** Before handling any electrical component, touch any grounded conducting material. During the time the electrical component is handled, frequently touch any conducting materials that are connected to the ground.
- **Use an anti-static pad:** When configuring or working with an electrical component, place it on an anti-static pad. This reduces the possibility of ESD damage.
- **Only handle the edges of the electrical component:** When handling the electrical component, hold the electrical component by its edges.

B.1.5 Product Disposal

- Outside the European Union - If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority so as to comply with the correct disposal method.
- Within the European Union:



EU-wide legislation, as implemented in each Member State, requires that waste electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes monitors and electrical accessories, such as signal cables or power cords. When you need to dispose of your display products, please follow the guidance of your local authority, or ask the shop where you purchased the product. The mark on electrical and electronic products only applies to the current European Union Member States.

- Please follow the national guidelines for electrical and electronic product disposal.



CAUTION:

Risk of explosion if battery is replaced by and incorrect type. Only certified engineers should replace the on-board battery.

Dispose of used batteries according to instructions and local regulations.

B.2 Maintenance and Cleaning Precautions

When maintaining or cleaning the AFL-08AH-N270-CR, please follow the guidelines below.

B.2.1 Maintenance and Cleaning


Prior to cleaning any part or component of the AFL-08AH-N270-CR, please read the details below.

- Except for the LCD panel, never spray or squirt liquids directly onto any other components. To clean the LCD panel, gently wipe it with a piece of soft dry cloth or a slightly moistened cloth.
- The interior of the AFL-08AH-N270-CR does not require cleaning. Keep fluids away from the AFL-08AH-N270-CR interior.
- Be cautious of all small removable components when vacuuming the AFL-08AH-N270-CR.
- Turn the AFL-08AH-N270-CR off before cleaning the AFL-08AH-N270-CR.
- Never drop any objects or liquids through the openings of the AFL-08AH-N270-CR.
- Be cautious of any possible allergic reactions to solvents or chemicals used when cleaning the AFL-08AH-N270-CR.
- Avoid eating, drinking and smoking within vicinity of the AFL-08AH-N270-CR.

B.2.2 Cleaning Tools

Some components in the AFL-08AH-N270-CR may only be cleaned using a product specifically designed for the purpose. In such case, the product will be explicitly mentioned in the cleaning tips. Below is a list of items to use when cleaning the AFL-08AH-N270-CR.

- **Cloth** – Although paper towels or tissues can be used, a soft, clean piece of cloth is recommended when cleaning the AFL-08AH-N270-CR.
- **Water or rubbing alcohol** – A cloth moistened with water or rubbing alcohol can be used to clean the AFL-08AH-N270-CR.
- **Using solvents** – The use of solvents is not recommended when cleaning the AFL-08AH-N270-CR as they may damage the plastic parts.
- **Vacuum cleaner** – Using a vacuum specifically designed for computers is one of the best methods of cleaning the AFL-08AH-N270-CR. Dust and dirt can restrict the airflow in the AFL-08AH-N270-CR and cause its circuitry to corrode.
- **Cotton swabs** - Cotton swabs moistened with rubbing alcohol or water are excellent tools for wiping hard to reach areas.
- **Foam swabs** - Whenever possible, it is best to use lint free swabs such as foam swabs for cleaning.

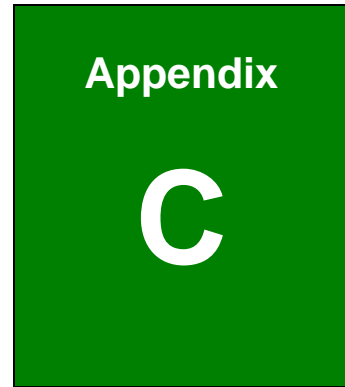

BIOS Configuration Options

C.1 BIOS Configuration Options

Below is a list of BIOS configuration options described in **Chapter 6**.

System Overview	49
System Time [xx:xx:xx]	50
System Date [xx/xx/xx]	50
ATA/IDE Configurations [Compatible]	52
Legacy IDE Channels [PATA Pri, SATA Sec]	53
IDE Master and IDE Slave	53
Auto-Detected Drive Parameters	54
Type [Auto]	55
ZIP	55
LS-120	55
LBA/Large Mode [Auto]	56
Block (Multi Sector Transfer) [Auto]	56
PIO Mode [Auto]	56
DMA Mode [Auto]	57
S.M.A.R.T [Auto]	57
32Bit Data Transfer [Enabled]	57
Serial Port1 Address [3F8/IRQ4]	58
Serial Port1 Mode [Normal]	59
CPU FAN Mode Setting [Full On Mode]	59
CPU Temp. Limit of OFF [000]	60
CPU Temp. Limit of Start [020]	61
CPU Fan Start PWM [070]	61
Slope PWM [0.5 PWM]	61
Suspend Mode [S1(POS)]	64
Restore on AC Power Loss [Last State]	64
Power Button Mode [On/Off]	65
Resume on Keyboard/Mouse [Disabled]	65
Resume on Ring [Disabled]	65
Resume on PCI-Express WAKE# [Enabled]	66
Resume On RTC Alarm [Disabled]	66
RTC Alarm Date (Days)	66

AFL-08AH-N270-CR Panel PC

System Time	66
Remote Access [Disabled].....	67
Serial Port Number	67
Serial Port Mode.....	67
Redirection after BIOS POST.....	67
Terminal Type.....	67
Serial Port Number [COM1].....	68
Base Address, IRQ [3F8h,4].....	68
Serial Port Mode [115200 8,n,1].....	68
Redirection After BIOS POST [Always]	68
Terminal Type [ANSI].....	69
USB Functions [Enabled].....	70
USB 2.0 Controller [Enabled].....	70
Legacy USB Support [Enabled].....	70
USB2.0 Controller Mode [HiSpeed].....	70
IRQ# [Available].....	71
DMA Channel# [Available]	72
Reserved Memory Size [Disabled]	73
Quick Boot [Enabled]	74
Quiet Boot [Disabled]	74
AddOn ROM Display Mode [Force BIOS]	75
Bootup Num-Lock [On]	75
Boot From LAN Support [Disabled]	75
Spread Spectrum Function [Disabled]	76
Change Supervisor Password.....	76
Change User Password.....	77
Memory Hole [Disabled].....	78
Internal Graphics Mode Select [Enable, 8MB]	78
DVMT Mode Select [DVMT Mode].....	79
DVMT/FIXED Memory	79
Boot Display Device [Auto].....	79
LFP Panel Type [by H/W].....	80
Audio Controller [Auto].....	81
Save Changes and Exit	81
Discard Changes and Exit.....	82

AFL-08AH-N270-CR Panel PC

Discard Changes.....	82
Load Optimal Defaults.....	82
Load Failsafe Defaults.....	82

Appendix

D

Watchdog Timer



NOTE:

The following discussion applies to DOS environment.

The Watchdog Timer is provided to ensure that standalone systems can always recover from catastrophic conditions that cause the CPU to crash. This condition may have occurred by external EMI or a software bug. When the CPU stops working correctly, Watchdog Timer either performs a hardware reset (cold boot) or a Non-Maskable Interrupt (NMI) to bring the system back to a known state.

A BIOS function call (INT 15H) is used to control the Watchdog Timer:

INT 15H:

AH – 6FH Sub-function:	
AL – 2:	Sets the Watchdog Timer's period.
BL:	Time-out value (Its unit-second is dependent on the item "Watchdog Timer unit select" in CMOS setup).

Table D-1: AH-6FH Sub-function

Call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer starts counting down. While the timer value reaches zero, the system resets. To ensure that this reset condition does not occur, calling sub-function 2 must periodically refresh the Watchdog Timer. However, the Watchdog timer is disabled if the time-out value is set to zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.



NOTE:

When exiting a program it is necessary to disable the Watchdog Timer, otherwise the system resets.

Example program:

```
; INITIAL TIMER PERIOD COUNTER
;
W_LOOP:

    MOV     AX, 6F02H      ;setting the time-out value
    MOV     BX, 05        ;time-out value is 5 seconds
    INT     15H

;
; ADD THE APPLICATION PROGRAM HERE
;

    CMP     EXIT_AP, 1    ;is the application over?
    JNE     W_LOOP       ;No, restart the application

    MOV     AX, 6F02H    ;disable Watchdog Timer
    MOV     BX, 0        ;
    INT     15H

;
; EXIT ;
```

Appendix

E

International Standards Compliance

AFL-08AH-N270-CR Panel PC

E.1 UL 60601-1 AND CAN/CSA C22.2 NO. 601.1



MEDICAL EQUIPMENT
WITH RESPECT TO ELECTRIC SHOCK,
FIRE AND MECHANICAL HAZARDS ONLY
IN ACCORDANCE WITH UL 60601-1,
IEC/EN 60601-1, CAN/CSA C22.2 No. 601.1

Authentication sign of Standard Inspection Bureau for U.S.A. Complies with UL 60601-1
AND CAN/CSA C22.2 NO. 601.1.

E.2 EN 60601-1



TUV Rheinland Product Safety safety mark for compliance with EN 60601-1.

E.3 EN 60601-1, EN 60601-2



The LCD monitor complies with the EN 60601-1 and EN 60601-2 of related European standards.

E.4 FCC



We hereby declare that the equipment specified above conforms to the technical standards as specified in the FCC Rules.