IEI Integration Corp.

MODEL:

HTB-150-N6210

Medical Embedded System with Intel® Celeron® N6210 CPU, LPDDR4x, 32 GB eMMC, RS-232, Dual GbE LAN, USB 3.2 Gen 2, M.2, HDMI and RoHS

User Manual

Rev. 1.00 – September 25, 2023

RoHS Lead Free

Revision

Date	Version	Changes
September 25, 2023	1.00	Initial release

Copyright

COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

CONTACT INFORMATION

IEI Integration Corp.

Address:	No. 29, Zongxing Rd., Xizhi Dist., New Taipei City 221, Taiwan
Phone:	+886-2-8691-6798
Fax:	+886-2-6616-0028
Web Site:	www.ieiworld.com
Sales Email:	sales@ieiworld.com.tw

Manual Conventions

WARNING

Warnings appear where overlooked details may cause damage to the equipment or result in personal injury. Warnings should be taken seriously.

CAUTION

Cautionary messages should be heeded to help reduce the chance of losing data or damaging the product.

NOTE

These messages inform the reader of essential but non-critical information. These messages should be read carefully as any directions or instructions contained therein can help avoid making mistakes.

Table of Contents

List of Figures

List of Tables

List of BIOS Menus

Chapter

1

Introduction

1.1 Overview

Figure 1-1: HTB-150-N6210 Medical Embedded System

The HTB-150-N6210 fanless medical embedded system is powered by Intel® Celeron® N6210 processor and onboard 8GB LPDDR4x. It is designed for space-constrained applications that require reliable operating at low power consumption.

The compact-size HTB-150-N6210 offers multiple I/O interfaces, giving you flexibility and functionality in a small package. Interfaces include four USB 3.2 Gen 2 (10Gb/s) ports, one RS-232 port, and one HDMI output port. In additional to two GbE ports, an M.2 A-key slot is also available for installing the optional Wi-Fi 6E module to provide wireless communication.

The HTB-150-N6210 is built-in with 32GB eMMC for storage, and it is capable of supporting one M.2 PCIe SSD module via 2280 M-key slot.

1.2 Features

The HTB-150-N6210 has the following features

- Compact fanless medical device with great computing at low power
- Supports Intel® Celeron® N6210 processor, burst up to 2.6 GHz
- Onboard 8 GB power-efficiency LPDDR4x memory
- Reliable onboard 32 GB eMMC for storage
- Four USB 3.2 Gen2 (10Gb/s) ports provide fast peripheral connections

1.3 Front Panel

An overview of the front panel is shown in **Figure 1-2** below.
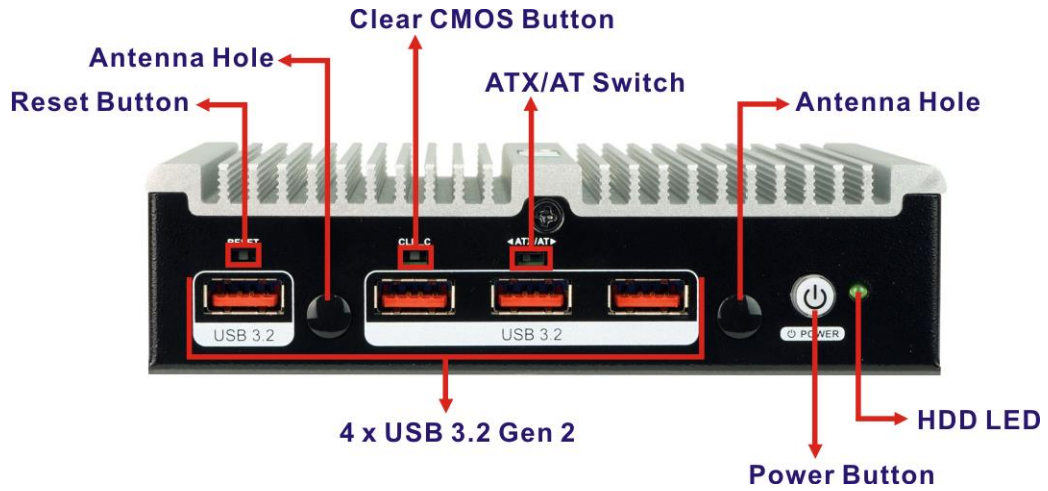
Figure 1-2: Front Panel

1.4 Rear Panel

The rear panel of the HTB-150-N6210 provides access to the following external I/O connectors, button and switches as shown in **Figure 1-3**.
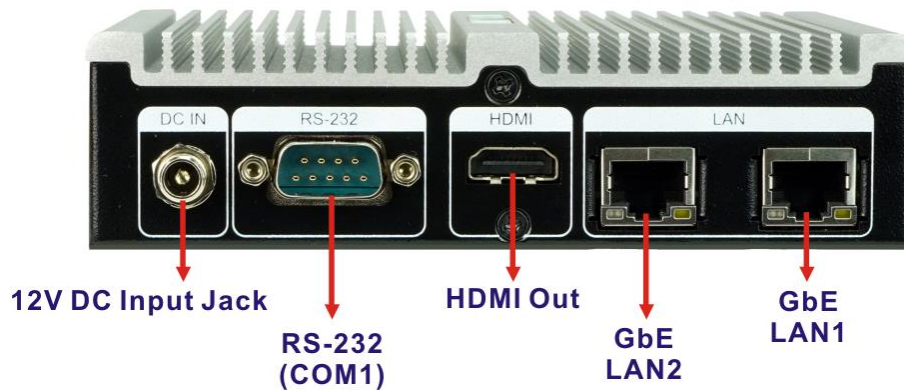
Figure 1-3: Rear Panel

1.5 Bottom Panel

The bottom panel has four screw holes for VESA 75 mounting.
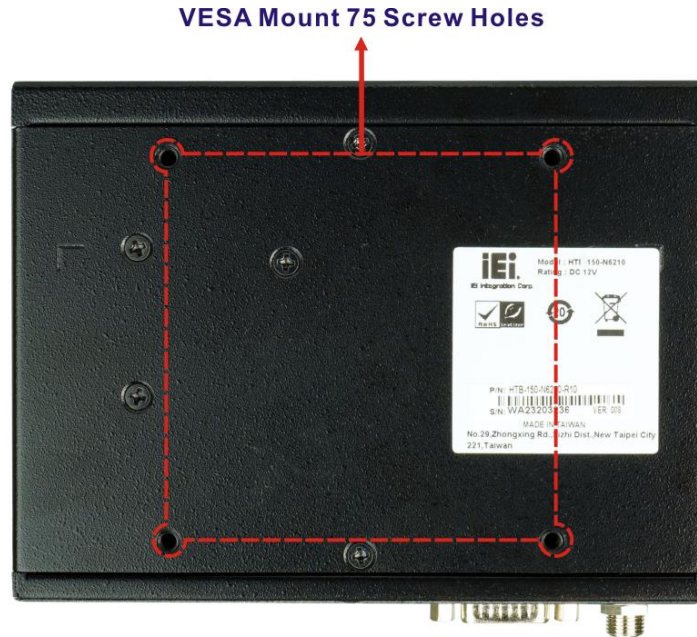
Figure 1-4: Bottom Panel

1.6 Technical Specifications

The specifications for the Intel based medical embedded systems are listed below.

	HTB-150-N6210
CPU	Intel® Celeron® Processor N6210
LAN	2 x Intel® I225-V Ethernet controllers
System Memory	On-board 8GB LPDDR4x
Storage	On-board 32GB eMMC
Expansion	1 x M.2 2230 A key slot (PCIe + USB) 1 x M.2 2280 M key slot (PCIe)
Wireless	Wi-Fi IEEE 802.11a/b/g/n/ax, Intel® Wi-Fi 6E AX210 (optional) Bluetooth v5.2
Rear I/O	1 x 12V DC jack 1 x RS-232 1 x HDMI out 2 x GbE LAN
Front I/O	1 x Power on/off switch (with power LED) 1 x Reset button 1 x Clear CMOS 1 x ATX/AT switch 4 x USB 3.2 Gen 2 (Type A) (5V / 0.9A)
LED Indicator	Power LED HDD LED
Thermal	Fanless
Construction Material	Extruded aluminum alloys
Mounting	VESA 75 x 75 mm
Power Requirement	12 V DC

Power Adapter	65 W FSP FSP065M-DHA medical-grade power adapter (P/N: 63040-010065-500-RS)	
	Input: 100 V AC - 240 V AC, 50 Hz - 60 Hz, 2.0 A – 1.0 A	
	Output: 12 V ⎓ 5.42 A	
Operating Shock	5G peak acceleration (11ms duration)	
Non-operating Shock	15G peak acceleration (11ms duration)	
Vibration	1G	
Storage/Transportation	Temperature	-20ºC - 60ºC
	Humidity	10% - 95% (non-condensing)
	Pressure	700 hPa - 1060 hPa
Operating	Temperature	0ºC - 40ºC
	Humidity	20% - 80% (non-condensing)
	Pressure	700 hPa - 1060 hPa
Weight (Net/Gross)	0.69 kg / 1.84 kg	
Dimensions (W x D x H)	137 mm x 102.8 mm x 36 mm	
Supported OS	Windows 10; Windows 11; Linux Ubuntu	
Safety/ECM	CE, FCC Class B Part18, FCC Class B Part15, UL 60601-1, IEC/EN 60601-1, IEC/EN 60601-1-2	

Table 1-1: Technical Specifications

1.7 Dimensions

The dimensions of the HTB-150-N6210 are shown in **Figure 1-5**.
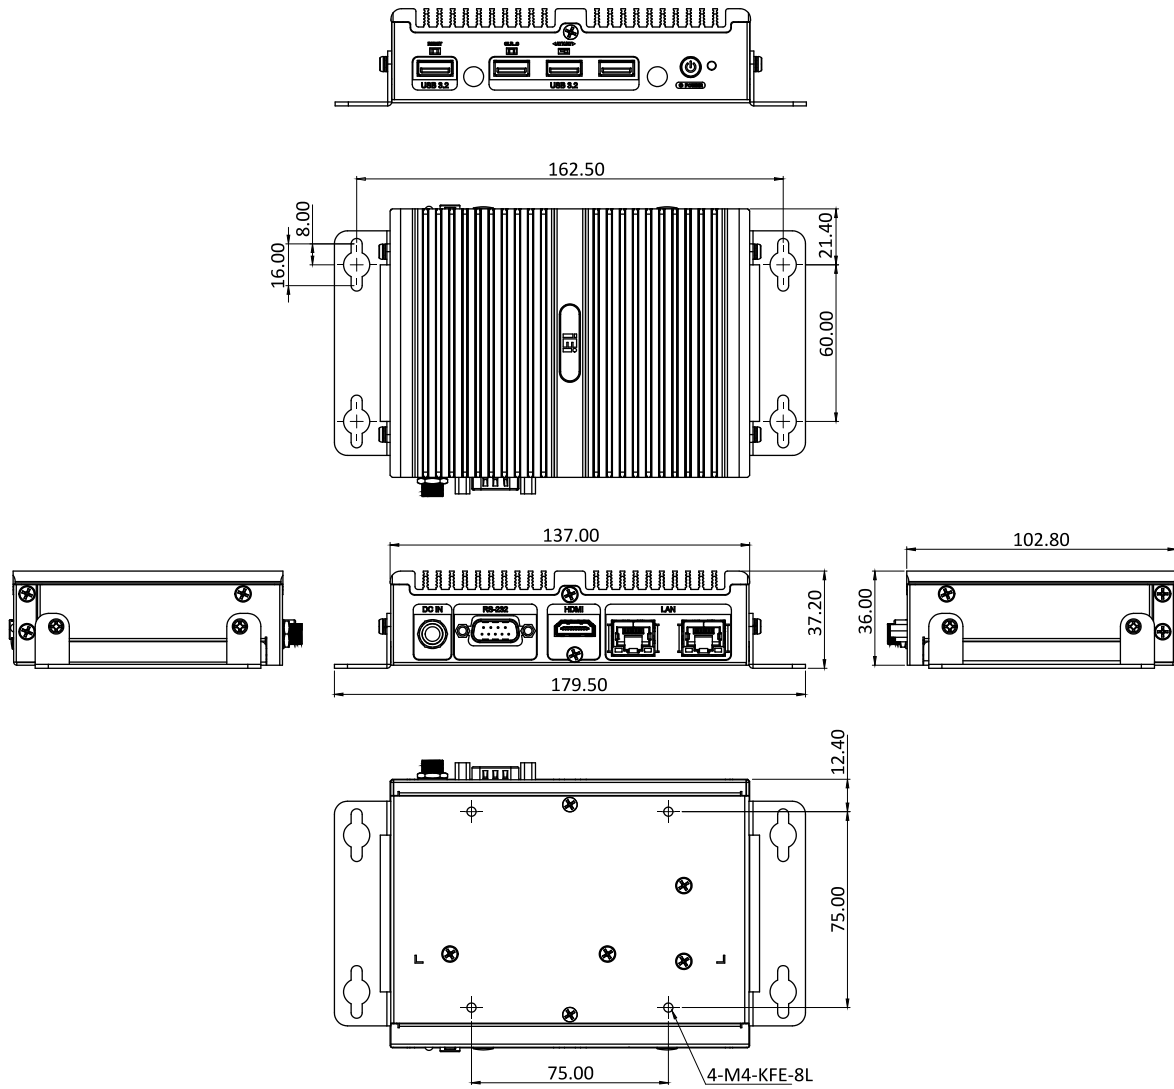
Figure 1-5: Dimensions (mm)

Chapter

2

Unpacking

2.1 Unpacking

To unpack the medical embedded system, follow the steps below:

Step 1: Use box cutters, a knife or a sharp pair of scissors that seals the top side of the external (second) box.

Step 2: Open the external (second) box.

Step 3: Use box cutters, a knife or a sharp pair of scissors that seals the top side of the internal (first) box.

Step 4: Lift the system out of the boxes.

Step 5: Remove both polystyrene ends, one from each side.

Step 6: Make sure all the components listed in the packing list are present.

2.2 Packing List

NOTE:

If any of the components listed in the checklist below are missing, do not proceed with the installation. Contact the IEI reseller or vendor the HTB-150-N6210 was purchased from or contact an IEI sales representative directly by sending an email to sales@ieiworld.com.

The HTB-150-N6210 medical embedded system is shipped with the following components:

Quantity	Item	Image
1	HTB-150-N6210 medical embedded system	
1	Power cord	
1	Medical grade power adapter 63040-010065-500-RS (FSP FSP065M-DHA, 65W)	
2	Mounting brackets	
4	Mounting bracket retention screws (M3*6)	
4	VESA mount screws (M4*8)	

Table 2-1: Package List

Chapter

3

Installation

3.1 Safety Precautions

Please ensure the following safety precautions are adhered to at all times.

- *External equipment intended for connection to signal input /output or other connectors, shall comply with relevant UL /IEC standard* (e.g. IEC60950 -1/IEC62368 -1 for IT equipment and ANSI/AAMI ES60601-1: 2012 AND CAN/CSA- C22.2 No. 60601-1:08/IEC 60601 series for systems–shall comply with the standard IEC 60601-1, Safety requirements for medical electrical systems. Equipment not complying with UL 60601-1 shall be kept outside the patient environment, as defined in the standard.

- *Remove the Power cord form A.C. MAINS if it will not to be used for a long time.*

- *To prevent the risk of electric shock, make sure power cord is unplugged from wall socket.* To fully disengage the power to the unit, please disconnect the power cord from the ac outlet. Refer servicing to qualified service personnel. The AC outlet shall be readily available and accessible.

- *Users must not allow SIP/SOPs and the patient to come into contact at the same time.*

- *Grounding reliability* can only be achieved when the equipment is connected to an equivalent receptacle marked "Hospital Only" or "Hospital Grade".

- *Follow the electrostatic precautions* outlined below whenever the HTB-150-N6210 is opened.

- *Make sure the power is turned off and the power cord is disconnected* whenever the HTB-150-N6210 is being installed, moved or modified.

- *Do not apply voltage levels that exceed the specified voltage range*. Doing so may cause fire and/or an electrical shock. Use a power cord that matches the voltage of the power outlet, which has been approved and complies with the safety standard of your particular country.

- *Electric shocks can occur* if the HTB-150-N6210 chassis is opened when the HTB-150-N6210 is running. To avoid risk of electric shock, this equipment must only be connected to a supply mains with protective earth.

- **DO NOT LEAVE THIS EQUIPMENT IN AN UNCONTROLLED ENVIRONMENT WHERE THE STORAGE TEMPERATURE IS BELOW -20° C (-4°F) OR ABOVE 60° C (140° F). IT MAY DAMAGE THE EQUIPMENT.**
- *If considerable amounts of dust, water, or fluids enter the HTB-150-N6210*, turn off the power supply immediately, unplug the power cord, and contact the HTB-150-N6210 vendor.
- *Never replace or repair any components on your own.* If the components of the HTB-150-N6210 fails or malfunctions it must be shipped back to IEI to be repaired. Please contact the system vendor, reseller or an IEI sales person directly.
- **DO NOT**:
  - Drop the HTB-150-N6210 against a hard surface.
  - Strike or exert excessive force onto the LCD panel.
  - Touch any of the LCD panels with a sharp object
  - In a site where the ambient temperature exceeds the rated temperature

3.2 Anti-static Precautions

WARNING:

Failure to take ESD precautions during the maintenance of the HTB-150-N6210 may result in permanent damage to the HTB-150-N6210 and severe injury to the user.

Le fait de ne pas prendre des précautions contre les décharges électrostatiques pendant la maintenance du HTB-150-N6210 peut entraîner des dommages permanents au HTB-150-N6210 et des blessures graves pour l'utilisateur.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the HTB-150-N6210. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the HTB-150-N6210 is accessed internally, or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- ▪ ***Wear an anti-static wristband***: Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.

- ▪ ***Self-grounding***: Before handling the board, touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.

- ▪ ***Use an anti-static pad***: When configuring the HTB-150-N6210, place it on an anti-static pad. This reduces the possibility of ESD damaging the HTB-150-N6210.

3.3 Installation Precautions

When installing the medical embedded system, please follow the precautions listed below:

- **Certified Engineers**: Only certified engineers should install and modify the hardware settings.
- **Power turned off**: When installing the medical embedded system, make sure the power is off. Failing to turn off the power may cause severe injury to the body and/or damage to the system.
- **Anti-static Discharge**: If a user open the medical to plug in added peripheral devices, ground themselves first and wear an anti-static wristband.
- **AC power plug**: AC plug is used as a means and device to be separated from the mains, and must be installed in a location where it can be easily unplugged

---

 WARNING / AVERTISSEMENT

DO NOT modify this equipment without authorization of manufacturer.
Ne modifiez pas cet équipement sans l'autorisation du fabricant.

3.4 GbE Connection

Each RJ-45 connector on the rear panel allows 1GbE connection to be made to a Local Area Network.

Pin	Description	Pin	Description
1	MDIA3-	5	MDIA1+
2	MDIA3+	6	MDIA2+
3	MDIA2-	7	MDIA0-
4	MDIA1-	8	MDIA0+

Table 3-1: Ethernet Connector Pinouts
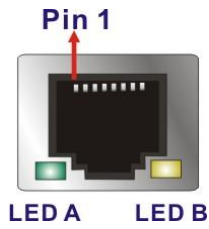
Figure 3-1: Ethernet Connector

LED	Description	LED	Description
A	on: linked blinking: data is being sent/received	B	off: 10 Mb/s green: 100 Mb/s orange: 1000 Mb/s

Table 3-2: Connector LEDs

3.5 RS-232 Serial Device Connection

The HTB-150-N6210 series has one RS-232 port (COM1) on the rear panel. The pinouts of the serial port are listed below.

Pin	Description	Pin	Description	
1	DCD	6	DSR	
2	RXD	7	RTS	
3	TXD	8	CTS	
4	DTR	9	RI	
5	GND			

Table 3-3: RS-232 Serial Port Pinouts

3.6 AT/ATX Mode Selection

AT or ATX power mode can be used on the HTB-150-N6210. The selection is made through an AT/ATX switch located on the bottom panel (**Figure 3-2**).
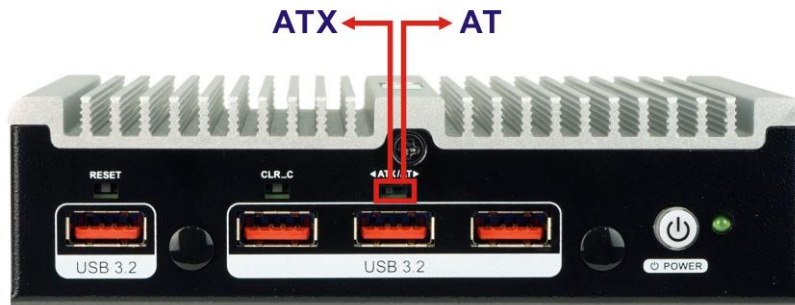
Figure 3-2: AT/ATX Switch Location

3.7 Mounting the System

3.7.1 Using Mounting Brackets

To mount the medical embedded system onto a wall or some other surface using the two mounting brackets, please follow the steps below.

Step 1: Align the two retention screw holes in each bracket with the corresponding retention screw holes on each side panel.

Step 2: Secure the brackets to the system by inserting two retention screws (M3*6) into each bracket.

Figure 3-3: Mounting Bracket Retention Screws

Step 3: Refer **Figure 3-4** to drill holes in the intended installation surface.

Step 4: Align the mounting holes in the sides of the mounting brackets with the predrilled holes in the mounting surface.
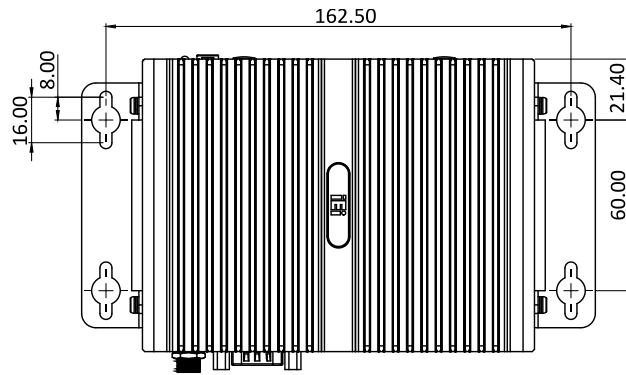
Figure 3-4: Mounting Dimensions

Step 5: Insert four retention screws, two in each bracket, to secure the system to the

wall.

3.7.2 VESA Mounting

The HTB-150-N6210 is VESA (4 screws: M4 type, 8 mm length) compliant and can be mounted on a mounting device with a 75 mm interface pad. The HTB-150-N6210 VESA mount retention screw holes are shown below. Refer to the installation guide that came with the mounting device to mount the HTB-150-N6210.
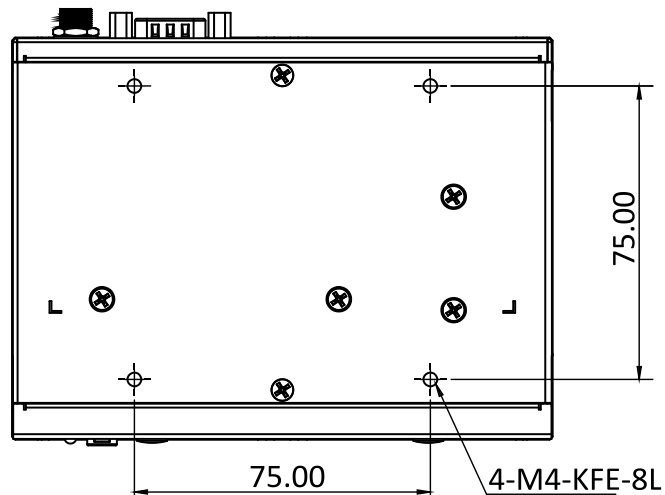
Figure 3-5: VESA Mounting Retention Screw Holes

![warning] **WARNING / AVERTISSEMENT**

Use suitable mounting apparatus and be sure to secure the screws of the mounting apparatus tightly to avoid risk of injury.

Utilisez un appareil de montage approprié et assurez-vous de bien fixer les vis de l'appareil de montage pour éviter tout risque de blessure.

3.8 Power-On Procedure

3.8.1 Installation Precautions

⚠️ **WARNING / AVERTISSEMENT**

To avoid risk of electric shock, this equipment must only be connected to supply mains with protective earth.

Pour éviter tout risque d'électrocution, cet équipement ne doit être connecté qu'au secteur avec mise à la terre de protection.

To power-on the HTB-150-N6210 please follow the steps below:

Step 1: Connect the power cord to the power adapter. Connect the other end of the power cord to a power source. Ensure to connect the power cord to a socket-outlet with earthing connection. **NOTE:** The FSP FSP065M-DHA power adapter came with the HTB-150-N6210 is a forming part of the medical device.

Step 2: Connect the power adapter to the power connector of the HTB-150-N6210. The power LED lights on in amber, indicating the system is ready to power on.

Step 3: Short-press the power button. The power LED lights on in blue and the HDD LED lights on in green (**Figure 3-6**).

Figure 3-6: Power Button and Power LED

3.9 Clear CMOS

If the HTB-150-N6210 fails to boot due to improper BIOS settings, use the clear CMOS button clears the CMOS data and resets the system BIOS information. To do this, push the button for three seconds and restart the system. The clear CMOS button location is shown in **Figure 3-7**.

Figure 3-7: Clear CMOS Button

3.10 Reset the System

The reset button enables user to reboot the system when the system is on. The reset button location is shown in **Figure 3-8**. Press the reset button t**o** reboot the system.

Figure 3-8: Reset Button Location

3.11 Available Drivers

All the drivers for the HTB-150-N6210 are available on IEI Resource Download Center (https://download.ieiworld.com). Type HTB-150-N6210 and press Enter to find all the relevant software, utilities, and documentation.
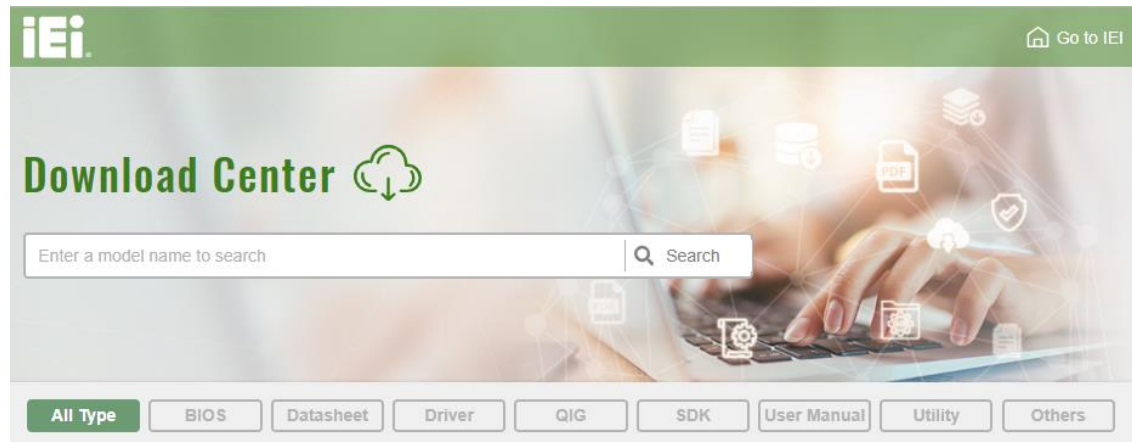
Figure 3-9: IEI Resource Download Center

3.11.1 Driver Download

To download drivers from IEI Resource Download Center, follow the steps below.

Step 1:   Go to https://download.ieiworld.com. Type HTB-150-N6210 and press Enter.
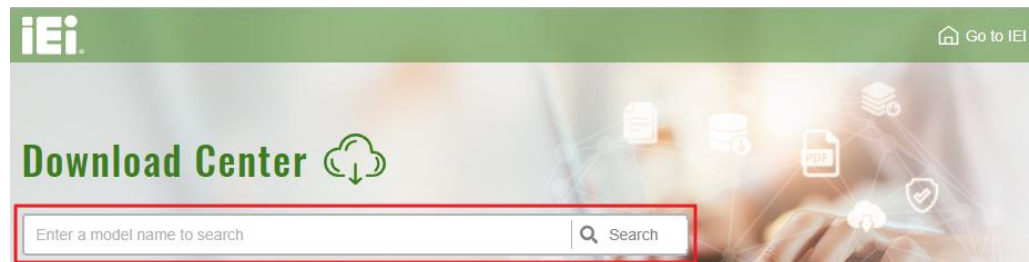
Step 2:   All product-related software, utilities, and documentation will be listed. You can

choose **Driver** to filter the result.

Step 3: Click the driver file name on the page and you will be prompted with the following window. You can download the entire ISO file (❶), or click the small arrow to find an individual driver and click the file name to download (❷).

NOTE:

To install software from the downloaded ISO image file in Windows 8, 8.1 or 10, double-click the ISO file to mount it as a virtual drive to view its content.

3.12 System Maintenance

If the components of the HTB-150-N6210 fail, they must be replaced. Please contact the system reseller or vendor to purchase the replacement parts.

NOTE:

A user cannot replace a motherboard. If the motherboard fails it must be shipped back to IEI to be replaced. Please contact the system vendor, reseller or an IEI sales person directly.

Chapter

4

BIOS

4.1 Introduction

A licensed copy of the BIOS is preprogrammed into the ROM BIOS. The BIOS setup program allows users to modify the basic system configuration.　This chapter describes how to access the BIOS setup program and the configuration options that may be changed.

![NOTE icon] **NOTE:**

Some of the BIOS options may vary throughout the life cycle of the product and are subject to change without prior notice.

4.1.1 Starting Setup

The UEFI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. **Using keyboard**: Press the **DEL** or **F2** as soon as the system is turned on.
2. **Using touchscreen**: Press the **Setup** button on the upper right corner of the BIOS Starting Menu.

If the message disappears before the **DEL or F2** key is pressed, restart the computer and try again, then the BIOS Starting Menu will appear. Select "Setup" and press Enter to get into the BIOS Setup.

4.1.2 Using Setup

The BIOS Setup menu can be navigated by using a keyboard or a touchscreen.

4.1.2.1 Keyboard Navigation

For keyboard navigation, use the navigation keys shown in **Table 4-1**.

Key	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
+	Increase the numeric value or make changes
-	Decrease the numeric value or make changes
Page Up	Move to the previous page
Page Dn	Move to the next page
Esc	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
F1	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2	Load previous values
F3	Load optimized defaults
F4	Save changes and Exit BIOS
<K>	Scroll help area upwards
<M>	Scroll help area downwards

Table 4-1: BIOS Navigation Keys

4.1.2.2 Touch Navigation

For touchscreen navigation, use the on-screen navigation keys shown below.
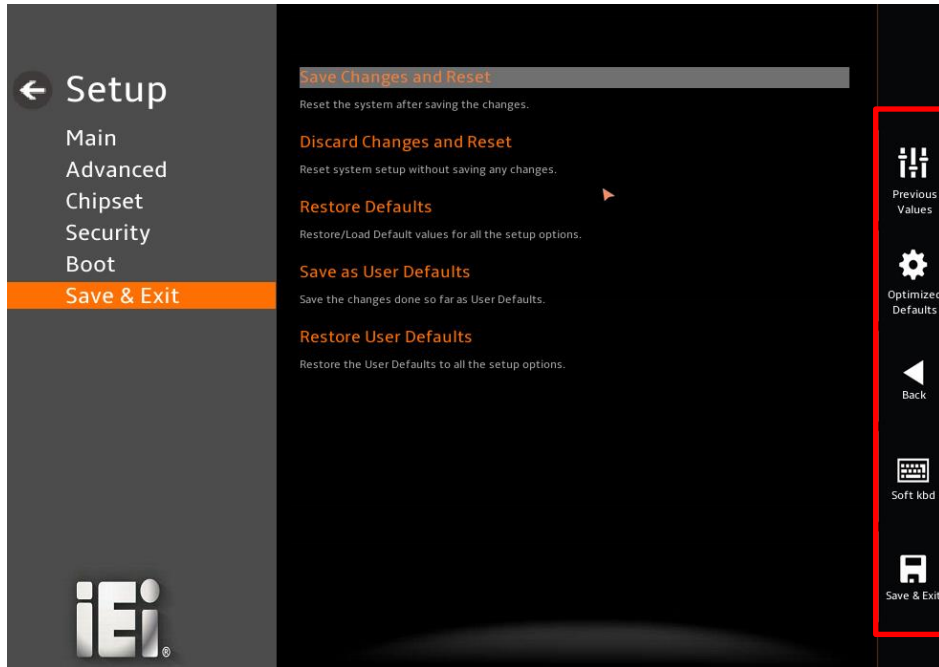
On-screen Button	Function
Previous Values	Load the last value you set.
Optimized Defaults	Load the factory default values in order to achieve the best performance.
Back	Return to the previous menu.
Soft kbd	Display the on-screen keyboard.
Save & Exit	Save the changes made to the BIOS options and reset the system.

Table 4-2: BIOS On-screen Navigation Keys

4.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window press **ESC** or the **F1** key again.

4.1.4 Unable to Reboot after Configuration Changes

If the computer cannot boot after changes to the system configuration are made, CMOS defaults.

4.1.5 BIOS Menu Bar

The **menu bar** on top of the BIOS screen has the following main items:

- Main – Changes the basic system configuration.
- Advanced – Changes the advanced system settings.
- Chipset – Changes the chipset settings.
- Boot – Changes the system boot configuration.
- Security – Sets User and Supervisor Passwords.
- Save & Exit – Selects exit options and loads default settings

The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.

4.2 Main

The **Main** BIOS menu (**BIOS Menu 1**) appears when the **BIOS Setup** program is entered. The **Main** menu gives an overview of the basic system information.
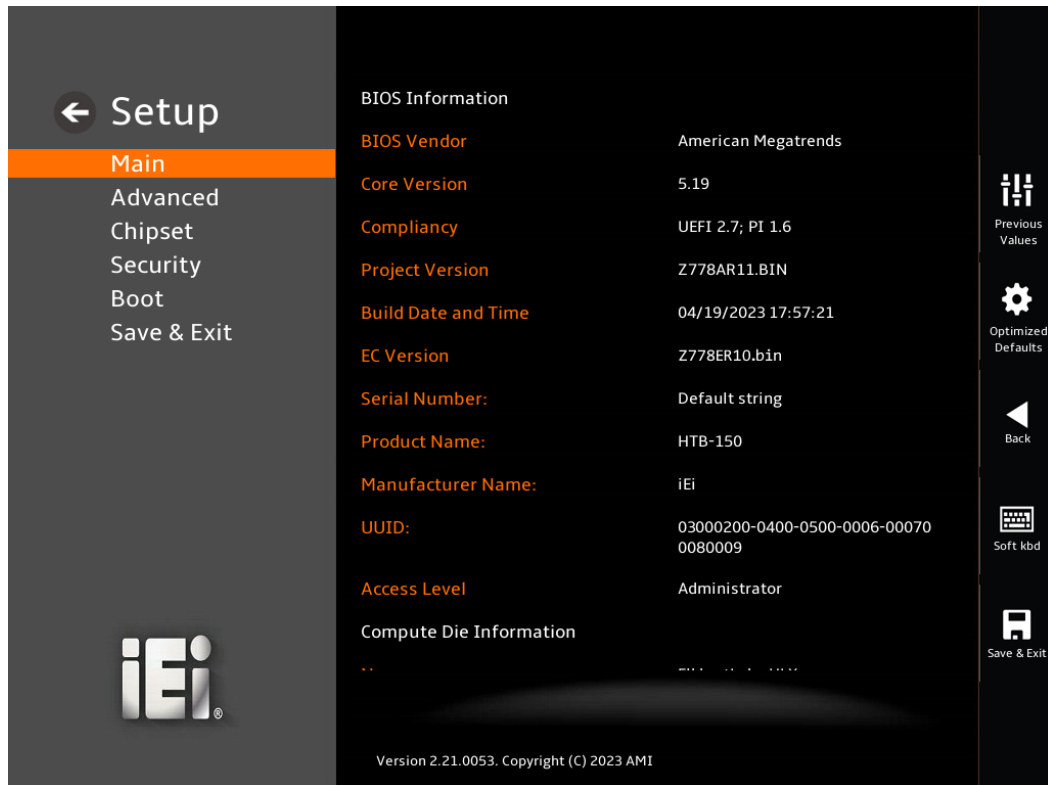
BIOS Menu 1: Main

➔ **System Date [xx/xx/xx]**

Use the **System Date** option to set the system date. Manually enter the day, month and year.

➔ **System Time [xx:xx:xx]**

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.

4.3 Advanced

Use the **Advanced** menu (**BIOS Menu 2**) to configure the CPU and peripheral devices through the following sub-menus:

BIOS Menu 2: Advanced

4.3.1 CPU Configuration

Use the **CPU Configuration** (**BIOS Menu 3**) to view detailed CPU specifications and configure the CPU.

BIOS Menu 3: CPU Configuration

➔ **Intel(R) SpeedStep(tm) [Enabled]**

Use the **Intel(R) SpeedStep(tm)** option to enable or disable the Intel® SpeedStep™ technology.

➔ **Disabled** Disable Intel® SpeedStep™ technology

➔ **Enabled** DEFAULT Enable Intel® SpeedStep™ technology

➔ **C states [Disabled]**

Use the **C states** option to enable or disable CPU power management which allows CPU to go to C states when it is not 100% utilized.

➔   **Disabled**   **DEFAULT**   Disables CPU power management

➔   **Enabled**   Enables CPU power management

➔   **Intel Virtualization Technology [Enabled]**

Use the **Intel Virtualization Technology** option to enable or disable virtualization on the system. When combined with third party software, Intel® Virtualization technology allows several OSs to run on the same system at the same time.

➔   **Disabled**   Disables Intel Virtualization Technology.

➔   **Enabled**   **DEFAULT**   Enables Intel Virtualization Technology.

➔   **Active Processor Cores [All]**

Use the **Active Processor Cores** BIOS option to enable numbers of cores in the processor package.

➔   **All**   **DEFAULT**   Enable all cores in the processor package.

➔   **1**   Enable one core in the processor package.

➔   **Power Limit 1**

Use the **Power Limit 1** to set Power Limit in Milli Watts. BIOS will round to the nearest 1/8W when programming. 0 = no custom override. For 12.50W, enter 12500. Overclocking SKU: Value must be between Max and Min Power Limits. Other SKUs: This value must be between Min Power limit and TDP Limit. If value is 0, BIOS will program TDP value.

➔   **Power Limit 1 Time Window**

Power Limit 1 Time Window value in second. The value may vary from 0 to 128.0, 0 = default value (28 sec for mobile and 8 sec for desktop). Defines time window which TDP value should be maintained.

➔   **Power Limit 2**

Use the Power Limit 2 to set Power Limit in Milli Watts. BIOS will round to the nearest 1/8W when programming. If the value is 0, BIOS will program this value as 1.25*TDP. For

12.50W, enter 12500. Processor applies control policies such that the package power does not exceed this limit.

4.3.2 Trusted Computing

Use the **Trusted Computing** menu (**BIOS Menu 4**) to configure settings related to the Trusted Computing Group (TCG) Trusted Platform Module (TPM).

BIOS Menu 4: Trusted Computing

➔ **Security Device Support [Enable]**

Use the **Security Device Support** option to configure support for the security device.

➔ **Disable**   Security device support is disabled.

➔ **Enable** DEFAULT   Security device support is enabled.

➔ **Pending Operation [None]**

Use the **Pending Operation** option to schedule an operation for the security device.

➔ **None**   DEFAULT   TPM information is previous

➔ **TPM Clear**   TPM information is cleared

4.3.3 IT5571 Super IO Configuration

Use the **IT5571 Super IO Configuration** menu (**BIOS Menu 5**) to set or change the configurations for the serial ports and parallel port.
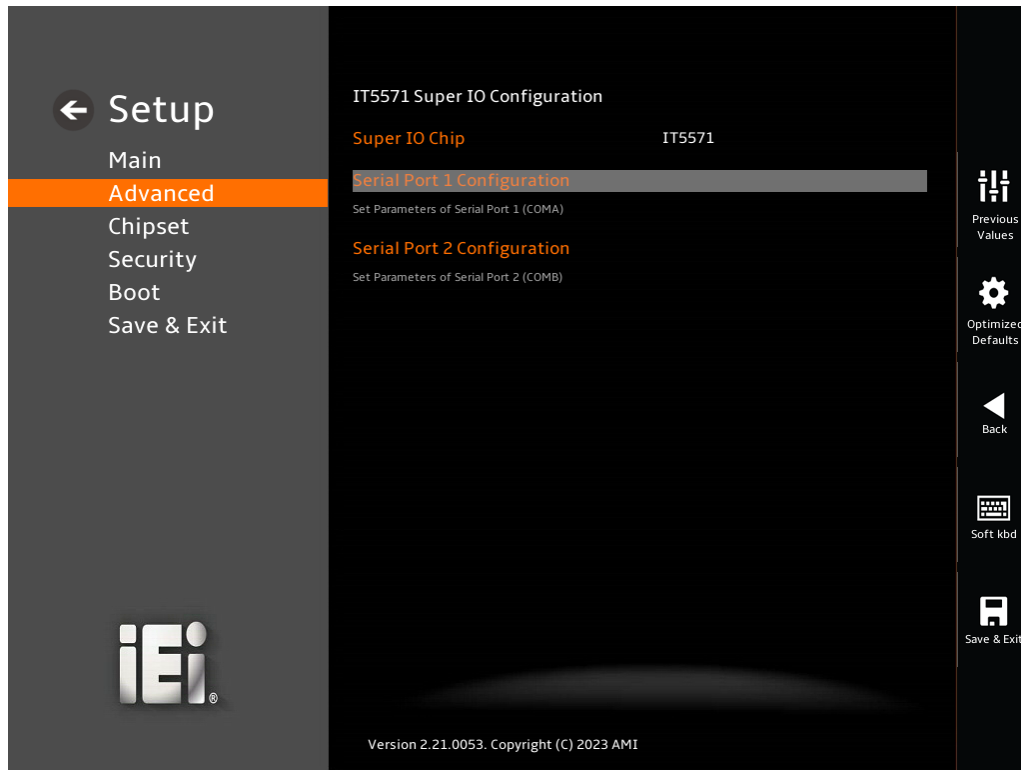
BIOS Menu 5: IT5571 Super IO Configuration

4.3.3.1 Serial Port 1 Configuration

Use the **Serial Port 1 Configuration** menu (**BIOS Menu 6**) to configure the serial port 1.
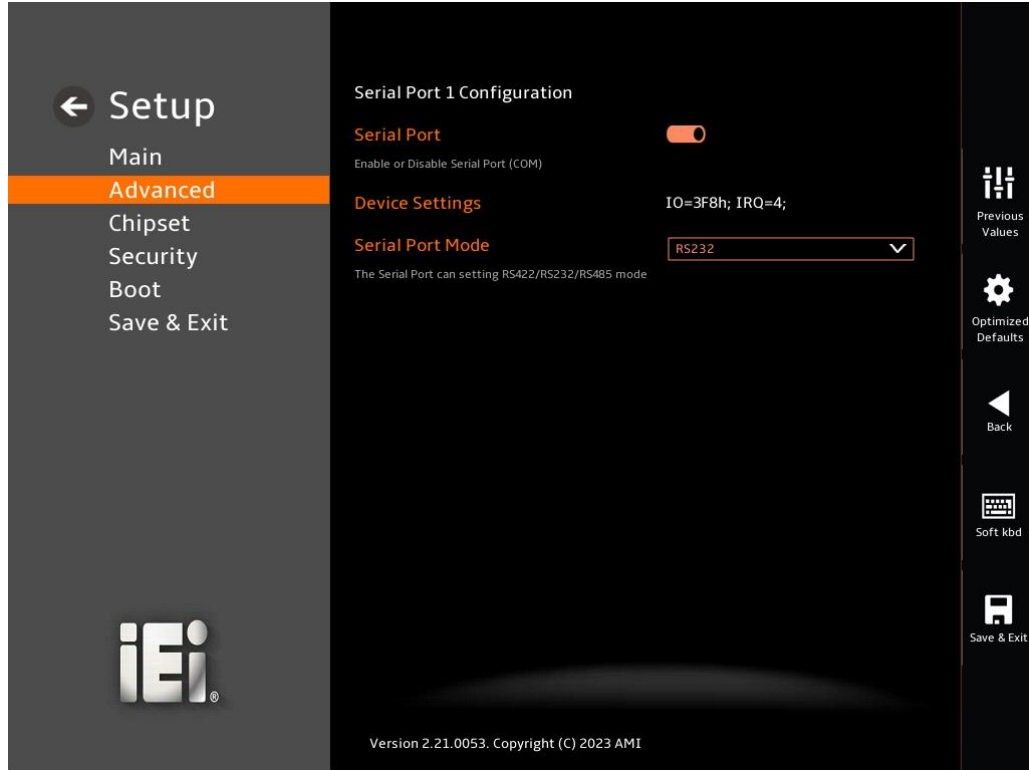
BIOS Menu 6: Serial Port 1 Configuration Menu

➔ **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the serial port.

➔ **Disabled**   Disable the serial port

➔ **Enabled**   DEFAULT   Enable the serial port

➔ **Device Mode [RS232]**

The serial port allows setting the data transfer mode to RS-232, RS-422 or RS-485.

4.3.3.2 Serial Port 2 Configuration

Use the **Serial Port 2 Configuration** menu (**BIOS Menu 7**) to configure the serial port 2.
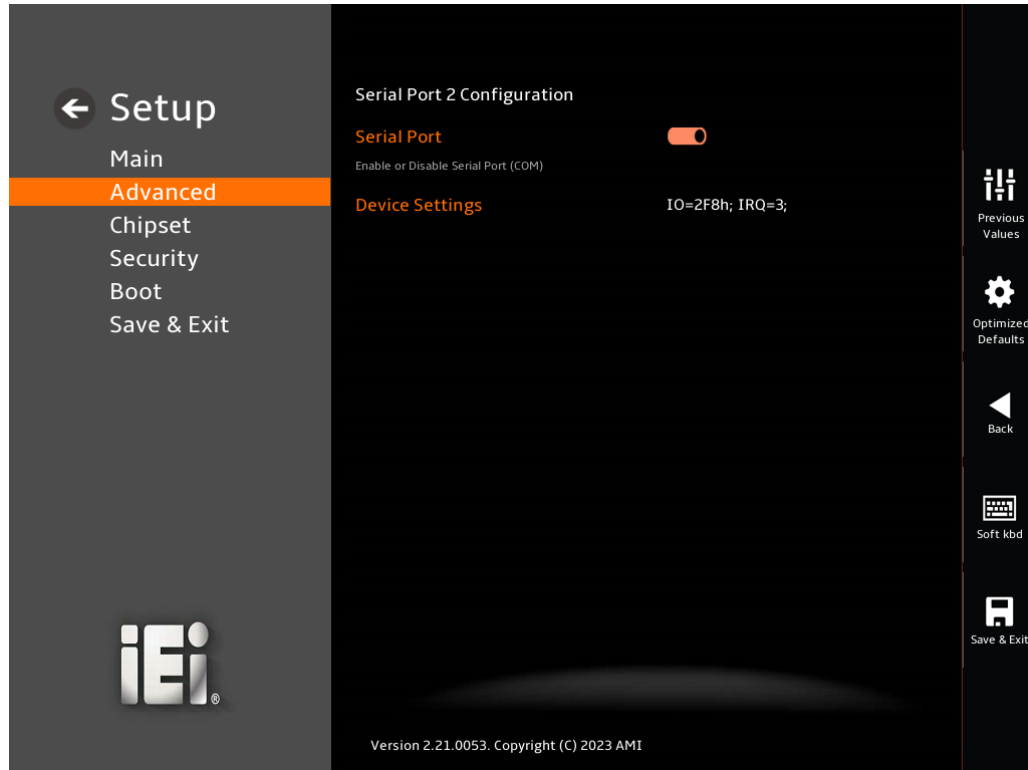
BIOS Menu 7: Serial Port 2 Configuration Menu

➔ **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the serial port.

➔ **Disabled**   Disable the serial port

➔ **Enabled**   DEFAULT   Enable the serial port

4.3.4 IT5571 H/W Monitor

The IT5571 H/W Monitor menu (**BIOS Menu 8**) shows the state of H/W real-time operating temperature, fan speeds and system voltages.

Pc Health Status

CPU temperature	: +32 °C
System temperature	: +35 °C
CPU_CORE	: +1.589 V
+5V	: +4.868 V
+12V	: +11.838 V
DDR	: +1.055 V
+3.3V	: +3.205 V
+3.3VSB	: +3.236 V

Version 2.21.0053. Copyright (C) 2023 AMI

BIOS Menu 8: IT5571 H/W Monitor

➔ **Hardware Health Status**

The following system parameters and values are shown. The system parameters that are monitored are:

- CPU Temperature
- System Temperature
- Voltages:
  - CPU_CORE
  - +5V
  - +12V
  - +DDR

o +3.3V

o +3.3VSB

4.3.5 RTC Wake Settings

The **RTC Wake Settings** menu (**BIOS Menu 9**) configures RTC wake event.

BIOS Menu 9: RTC Wake Settings

➔ **Wake System with Fixed Time [Disabled]**

Use the **Wake System with Fixed Time** option to specify the time the system should be roused from a suspended state.

➔ **Disabled**   **DEFAULT**   The real time clock (RTC) cannot generate a wake event

➔ **Enabled**   If selected, the following appears with values that can be selected:

*Wake up every day

*Wake up date

*Wake up hour

*Wake up minute

*Wake up second

After setting the alarm, the computer turns itself on from a suspend state when the alarm goes off.

4.3.6 Serial Port Console Redirection

The **Serial Port Console Redirection** menu (**BIOS Menu 10**) allows the console redirection options to be configured. Console redirection allows users to maintain a system remotely by re-directing keyboard input and text output through the serial port.
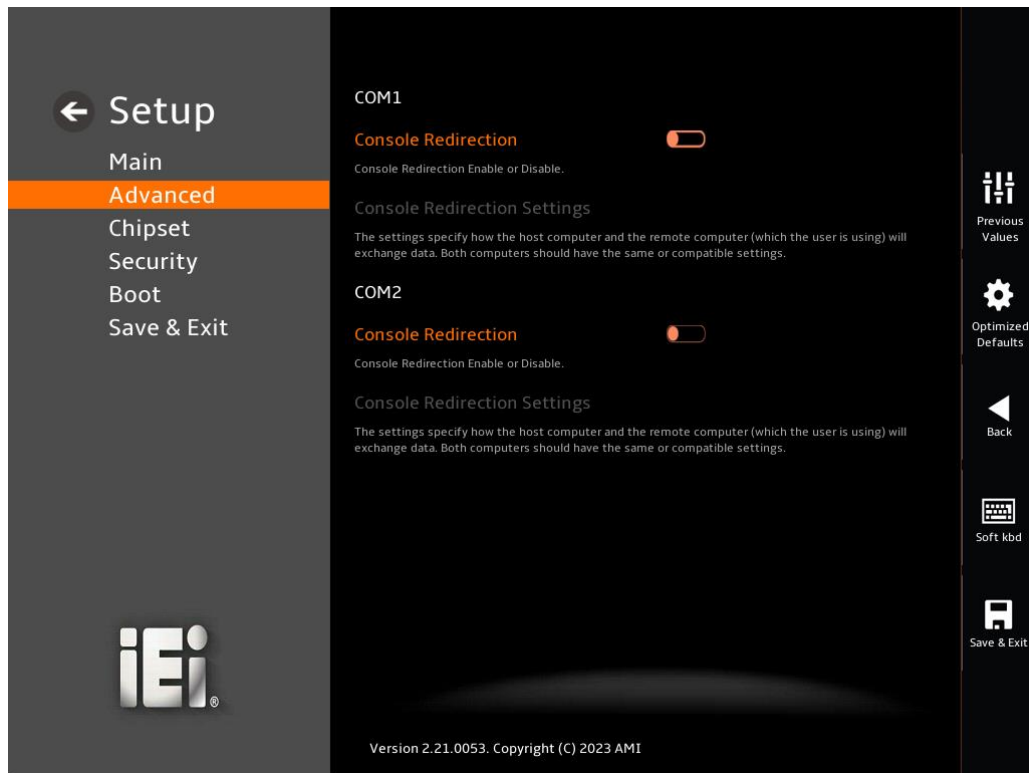
BIOS Menu 10: Serial Port Console Redirection

➔ **Console Redirection [Disabled]**

Use **Console Redirection** option to enable or disable the console redirection function.

➔ **Disabled**   DEFAULT   Disabled the console redirection function

➔ **Enabled**   Enabled the console redirection function

4.3.7 Network Stack Configuration

The **Network Stack Configuration** menu (**BIOS Menu 11**) configures network stack settings.
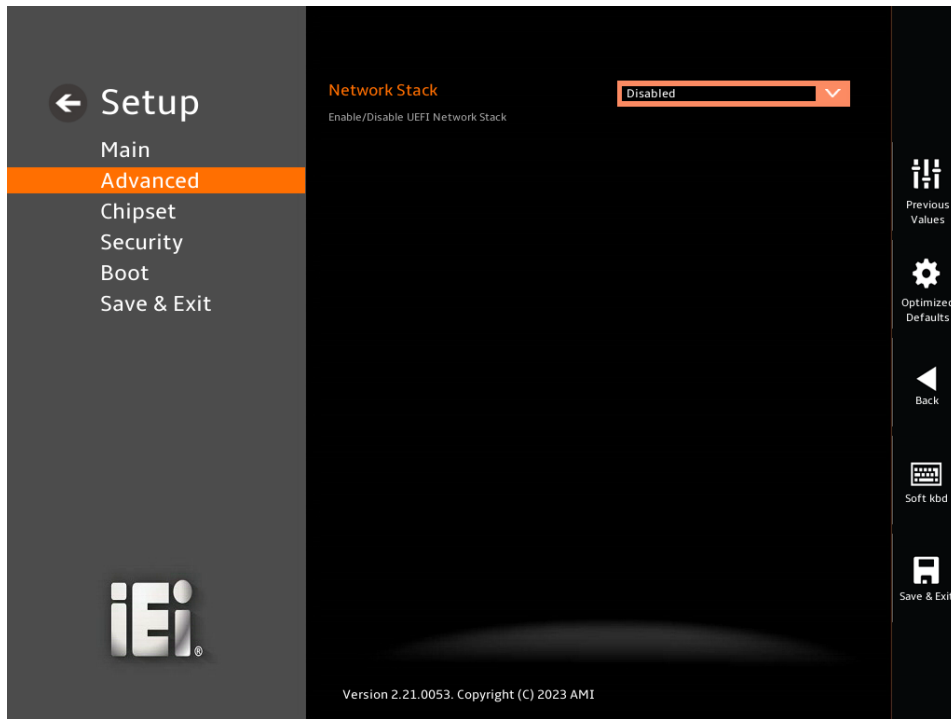
BIOS Menu 11: Network Stack Configuration

➔ **Network Stack [Disabled]**

Use the **Network Stack** option to enable or disable UEFI network stack.

➔ **Disabled**   DEFAULT   Disable UEFI network stack

➔ **Enabled**   Enable UEFI network stack

4.3.8 NVMe Configuration

Use the **NVMe Configuration** (**BIOS Menu 12**) menu to display the NVMe controller and device information.

BIOS Menu 12: NVMe Configuration

4.4 Chipset

Use the **Chipset** menu (**BIOS Menu 13**) to configure the system chipset.

BIOS Menu 13: Chipset

4.4.1 System Agent (SA) Configuration

Use the **System Agent (SA) Configuration** menu (**BIOS Menu 14**) to configure the System Agent (SA) parameters.
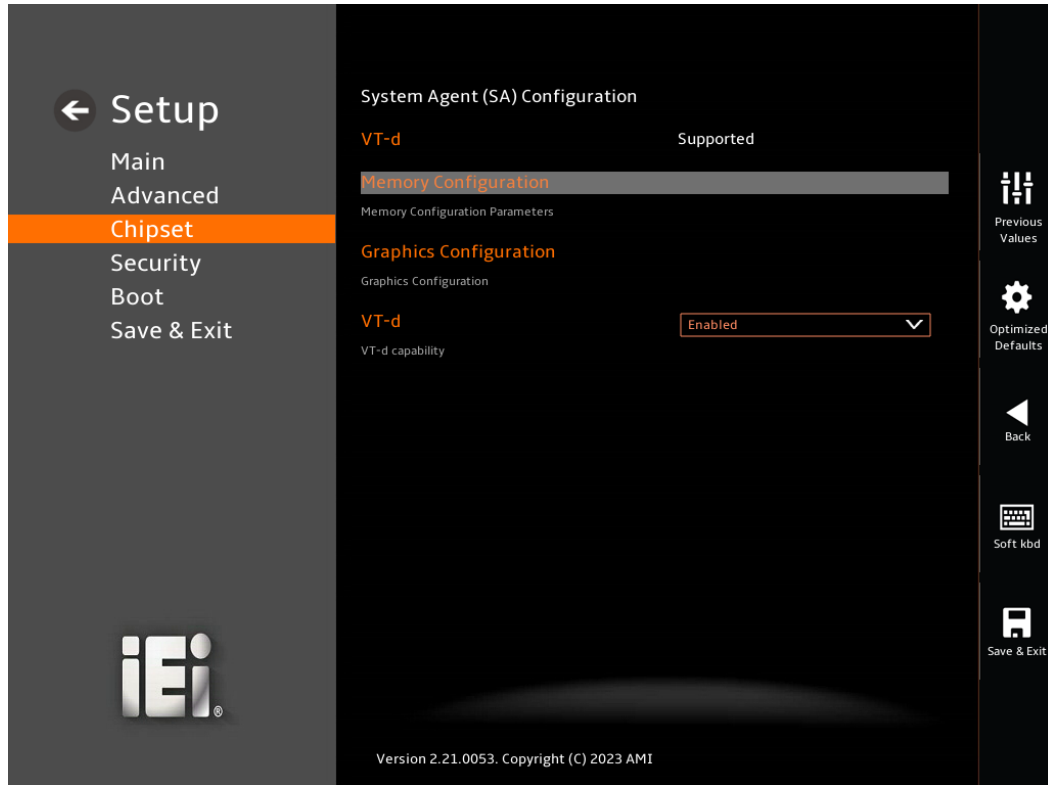
BIOS Menu 14: System Agent (SA) Configuration

➔ **VT-d [Enabled]**

Use the **VT-d** option to enable or disable VT-d support.

➔ **Disabled**   Disable VT-d support.
➔ **Enabled** DEFAULT Enable VT-d support.

4.4.1.1 Memory Configuration

Use the **Memory Configuration** submenu (**BIOS Menu 15**) to display the memory information.
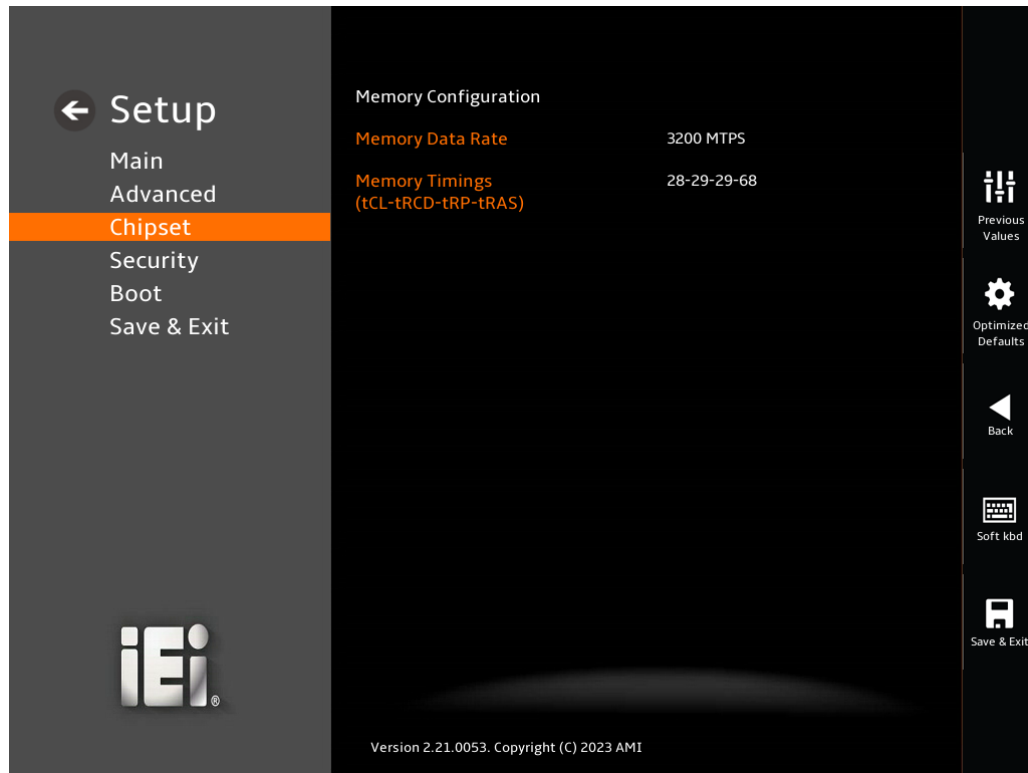
BIOS Menu 15: Memory Configuration

4.4.1.2 Graphics Configuration

Use the **Graphics Configuration** menu (**BIOS Menu 16**) to view the graphics settings.
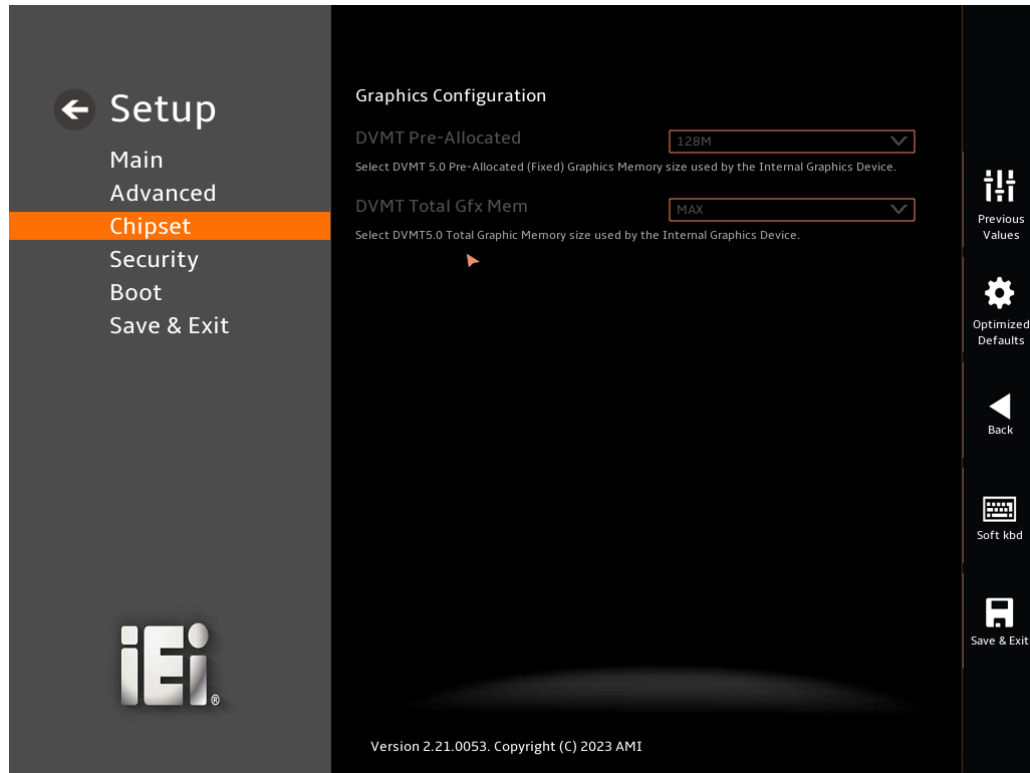
BIOS Menu 16: Graphics Configuration

4.4.2 PCH-IO Configuration

Use the **PCH-IO Configuration** menu (**BIOS Menu 17**) to configure the PCH-IO chipset.
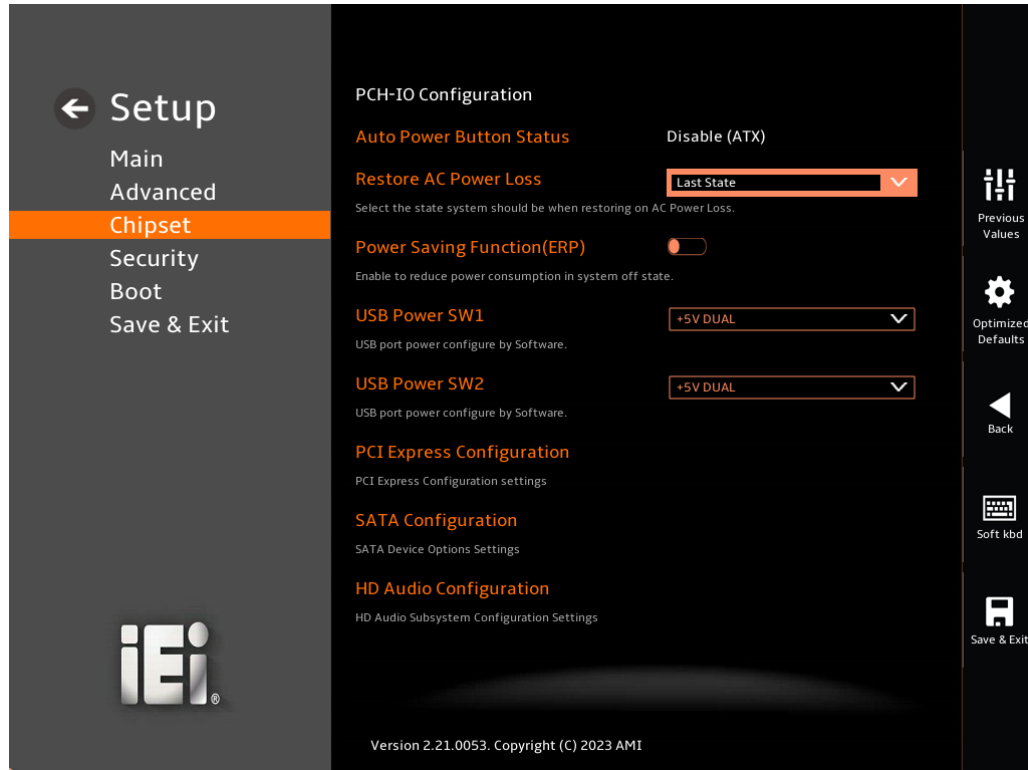
BIOS Menu 17: PCH-IO Configuration

➔ **Restore AC Power Loss [Last State]**

Use the **Restore AC Power** BIOS option to specify what state the system returns to if there is a sudden loss of power to the system.

➔	**Power Off**		The system remains turned off
➔	**Power On**		The system turns on
➔	**Last State**	DEFAULT	The system returns to its previous state. If it was on, it turns itself on. If it was off, it remains off.

➔ **Power Saving Function(ERP) [Disabled]**

Use the **Power Saving Function(ERP)** BIOS option to enable or disable the power saving function.

➔ **Disabled** DEFAULT Power saving function is disabled.

➔ **Enabled** Power saving function is enabled. It will reduce power consumption when the system is off.

➔ **USB Power SW [+5V DUAL]**

Use the **USB Power SW** BIOS option to configure whether to provide power to the USB connectors when the system is in S3/S4 sleep state. This option is valid only when the above **Power Saving Function (ERP)** BIOS option is disabled.

➔ **+5V DUAL** DEFAULT Power is provided to the USB connectors when the system is in S3/S4 sleep state

➔ **+5V** Power is not provided to the USB connectors when the system is in S3/S4 sleep state

4.4.2.1 PCI Express Configuration

Use the **PCI Express Configuration** submenu (**BIOS Menu 18**) to configure the PCI Express slots.

BIOS Menu 18: PCI Express Configuration

➔ **M2_A1 / M2_M1 [Enabled]**

Use the **M2_A1 / M2_M1** option to enable or disable the M.2 expansion slot.

➔ **Disabled**   Disables the expansion slot.

➔ **Enabled**   DEFAULT   Enables the expansion slot.

➔ **PCIe Speed [Auto]**

Use the **PCIe Speed** option to configure the PCIe interface speed.

▪ Auto   DEFAULT
▪ Gen 1

- Gen 2
- Gen 3

➔ **Detect Non-Compliance Device [Disabled]**

Use the **Detect Non-Compliance Device** option to enable or disable detecting if a non-compliance PCI Express device is connected to the PCI Express slot.

➔ **Disabled**   DEFAULT   Disables to detect if a non-compliance PCI Express device is connected to the PCI Express slot.

➔ **Enabled**   Enables to detect if a non-compliance PCI Express device is connected to the PCI Express slot.

4.4.2.2 SATA Configuration

Use the **SATA Configuration** menu (**BIOS Menu 19**) to change and/or set the configuration of the SATA devices installed in the system.
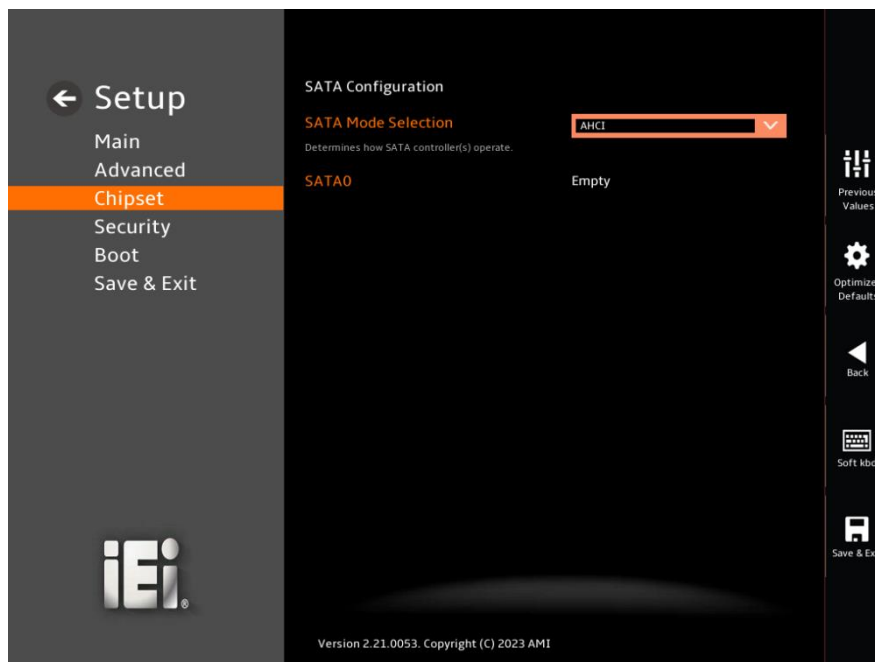
BIOS Menu 19: SATA Configuration

➔ **SATA Mode Selection [AHCI]**

Use the **SATA Mode Selection** option to configure how the SATA controller(s) operate.

➔ **AHCI**   **DEFAULT**   Configures SATA devices as AHCI device.

4.4.2.3 HD Audio Configuration

Use the **HD Audio Configuration** menu (**BIOS Menu 20**) to configure the PCH Azalia settings.

HD Audio Subsystem Configuration Settings
HD Audio   Enabled
Control Detection of the HD-Audio device.
Disabled = HDA will be unconditionally disabled
Enabled = HDA will be unconditionally enabled.
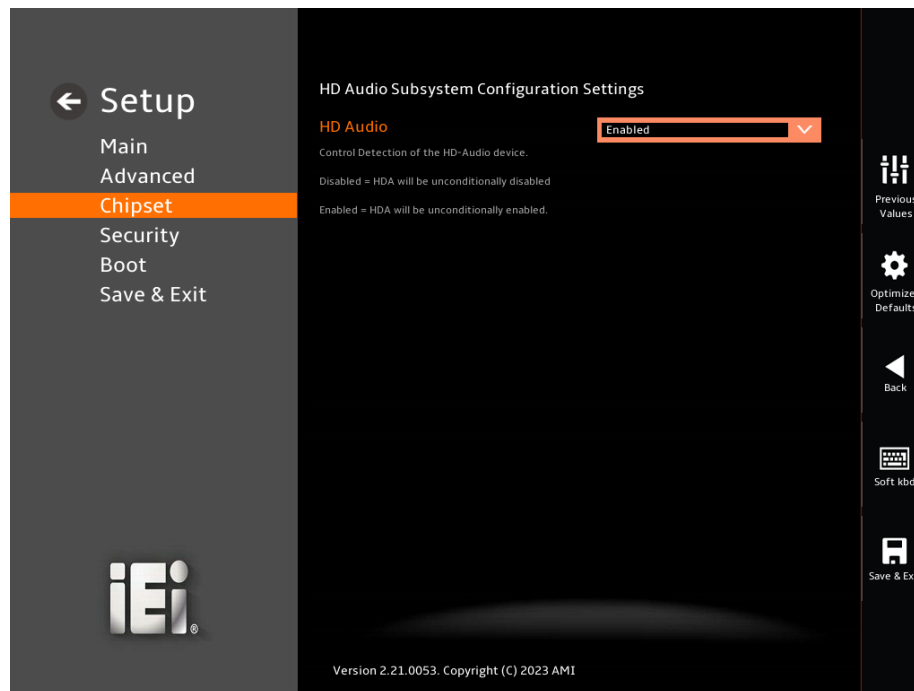
BIOS Menu 20: HD Audio Configuration

➔ **HD Audio [Enabled]**

Use the **HD Audio** option to enable or disable the High Definition Audio controller.

➔ **Disabled**   The onboard High Definition Audio controller is disabled.

➔ **Enabled**   **DEFAULT**   The onboard High Definition Audio controller is enabled.

4.5 Security

Use the **Security** menu (**BIOS Menu 21**) to set system and user passwords.

BIOS Menu 21: Security

➔ **Administrator Password**

Use the **Administrator Password** field to set or change an administrator password.

➔ **User Password**

Use the **User Password** field to set or change a user password.

4.6 Boot

Use the **Boot** menu (**BIOS Menu 22**) to configure system boot options.
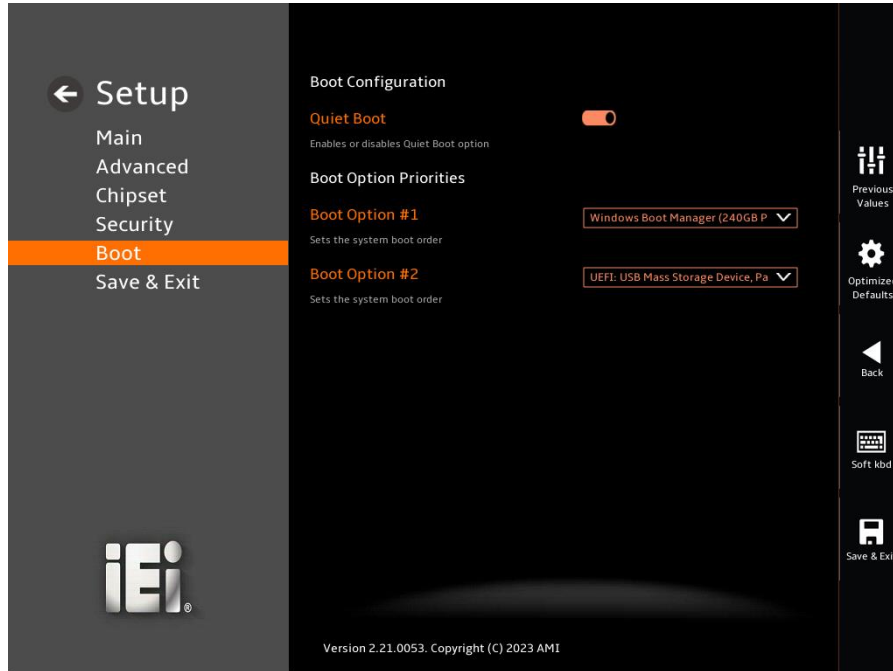
BIOS Menu 22: Boot

➔ **Quiet Boot [Enabled]**

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

➔ **Disabled**   Normal POST messages displayed

➔ **Enabled**   DEFAULT   OEM Logo displayed instead of POST messages

4.7 Save & Exit

Use the **Save & Exit** menu (**BIOS Menu 23**) to load default BIOS values, optimal failsafe values and to save configuration changes.
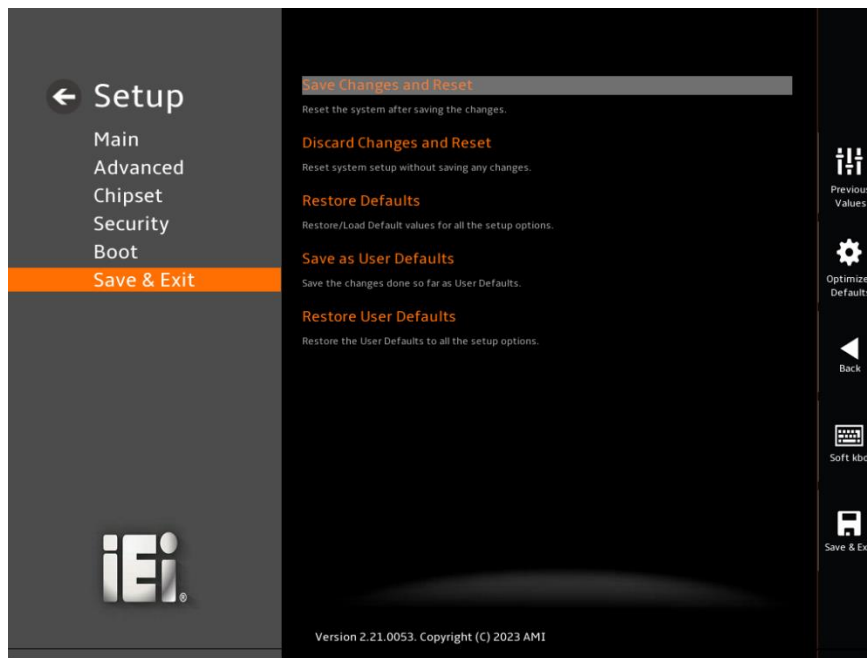
BIOS Menu 23: Save & Exit

➔ **Save Changes and Reset**

Use the **Save Changes and Reset** option to save the changes made to the BIOS options and reset the system.

➔ **Discard Changes and Reset**

Use the **Discard Changes and Reset** option to exit the system without saving the changes made to the BIOS configuration setup program.

➔ **Restore Defaults**

Use the **Restore Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F3 key can be used for this operation.**

➔ **Save as User Defaults**

Use the **Save as User Defaults** option to save the changes done so far as user defaults.

➔ **Restore User Defaults**

Use the **Restore User Defaults** option to restore the user defaults to all the setup options.

Appendix

A

Regulatory Compliance

DECLARATION OF CONFORMITY　　　　　　　　　　　　　　　CE

This equipment is in conformity with the following EU directives:

- EMC Directive (2004/108/EC, 2014/30/EU)
- Low-Voltage Directive (2006/95/EC, 2014/35/EU)
- RoHS II Directive (2011/65/EU, 2015/863/EU)
- Medical Device Directive 93/42/EEC: EN 60601-1

If the user modifies and/or install other devices in the equipment, the CE conformity declaration may no longer apply.

If this equipment has telecommunications functionality, it also complies with the requirements of the Radio Equipment Directive 2014/53/EU.

English
IEI Integration Corp. declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Български [Bulgarian]
IEI Integration Corp. декларира, че този оборудване е в съответствие със съществените изисквания и другите приложими правила на Директива 2014/53/EU.

Česky [Czech]
IEI Integration Corp. tímto prohlašuje, že tento zařízení je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 2014/53/EU.

Dansk [Danish]
IEI Integration Corp. erklærer herved, at følgende udstyr overholder de væsentlige krav og øvrige relevante krav i direktiv 2014/53/EU.

Deutsch [German]
IEI Integration Corp. erklärt dieses Gerät entspricht den grundlegenden Anforderungen und den weiteren entsprechenden Vorgaben der Richtlinie 2014/53/EU.

Eesti [Estonian]
IEI Integration Corp. deklareerib seadme seadme vastavust direktiivi 2014/53/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

Español [Spanish]
IEI Integration Corp. declara que el equipo cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 2014/53/EU.

Ελληνική [Greek]
IEI Integration Corp. ΔΗΛΩΝΕΙ ΟΤΙ ΕΞΟΠΛΙΣΜΟΣ ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 2014/53/EU.

Français [French]
IEI Integration Corp. déclare que l'appareil est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 2014/53/EU.

Italiano [Italian]

IEI Integration Corp. dichiara che questo apparecchio è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 2014/53/EU.

Latviski [Latvian]

IEI Integration Corp. deklarē, ka iekārta atbilst būtiskajām prasībām un citiem ar to saistītajiem noteikumiem Direktīvas 2014/53/EU.

Lietuvių [Lithuanian]

IEI Integration Corp. deklaruoja, kad šis įranga atitinka esminius reikalavimus ir kitas 2014/53/EU Direktyvos nuostatas.

Nederlands [Dutch]

IEI Integration Corp. dat het toestel toestel in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 2014/53/EU.

Malti [Maltese]

IEI Integration Corp. jiddikjara li dan prodott jikkonforma mal-ħtiġijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Dirrettiva 2014/53/EU.

Magyar [Hungarian]

IEI Integration Corp. nyilatkozom, hogy a berendezés megfelel a vonatkozó alapvetõ követelményeknek és az 2014/53/EU irányelv egyéb elõírásainak.

Polski [Polish]

IEI Integration Corp. oświadcza, że wyrobu jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 2014/53/EU.

Português [Portuguese]

IEI Integration Corp. declara que este equipamento está conforme com os requisitos essenciais e outras disposições da Directiva 2014/53/EU.

Româna [Romanian]

IEI Integration Corp. declară că acest echipament este in conformitate cu cerinţele esenţiale şi cu celelalte prevederi relevante ale Directivei 2014/53/EU.

Slovensko [Slovenian]

IEI Integration Corp. izjavlja, da je ta opreme v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 2014/53/EU.

Slovensky [Slovak]

IEI Integration Corp. týmto vyhlasuje, že zariadenia spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 2014/53/EU.

Suomi [Finnish]

IEI Integration Corp. vakuuttaa täten että laitteet on direktiivin 2014/53/EU oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

Svenska [Swedish]

IEI Integration Corp. förklarar att denna utrustningstyp står I överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 2014/53/EU.

FCC WARNING

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

■   This device may not cause harmful interference, and

■   This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body.

This equipment complies with part 18 of the FCC Rules.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

■   Reorient or relocate the receiving antenna.

■   Increase the separation between the equipment and receiver.

■   Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

UL CLASSIFIED

The label on the product indicates this product complies with the requirements of ANSI/AAMI ES60601-1:2005/(R)2012 and A1:2012/(R)2012 and A2:2021; CAN/CSA-C22.2 No. 60601-1 (Amendment 2:2022 (MOD) to CAN/CSA-C22.2 No. 60601-1:14).

ROHS STATEMENT

The label on the product indicates this product conforms to European (EU) Restriction of Hazardous Substances (RoHS) that set maximum concentration limits on hazardous materials used in electrical and electronic equipment.

CHINA ROHS

The label on the product indicates the estimated "Environmentally Friendly Use Period" (EFUP). This is an estimate of the number of years that these substances would "not leak out or undergo abrupt change." This product may contain replaceable sub-assemblies/components which have a shorter EFUP such as batteries and lamps. These components will be separately marked.

Appendix

B

Product Disposal

⚠️ **CAUTION / ATTENTION**

Risk of explosion if battery is replaced by an incorrect type. Only certified engineers should replace the on-board battery.

Risque d'explosion si la batterie est remplacée par un type incorrect. Seuls les ingénieurs certifiés doivent remplacer la batterie embarquée.

Dispose of used batteries according to instructions and local regulations.

Jetez les piles usagées conformément aux instructions et aux réglementations locales.

▪ Outside the European Union - If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority so as to comply with the correct disposal method.

▪ Within the European Union–The device that produces less waste and is easier to recycle is classified as electronic device in terms of the European Directive 2012/19/EU (WEEE), and must not be disposed of as domestic garbage.
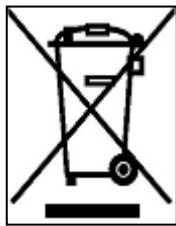
EU-wide legislation, as implemented in each Member State, requires that waste electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes monitors and electrical accessories, such as signal cables or power cords. When you need to dispose of your display products, please follow the guidance of your local authority, or ask the shop where you purchased the product. The mark on electrical and electronic products only applies to the current European Union Member States.

Please follow the national guidelines for electrical and electronic product disposal.

Appendix

C

Maintenance and Cleaning Precautions

When maintaining or cleaning the HTB-150-N6210, please follow the guidelines below.

![warning icon] **WARNING / AVERTISSEMENT**

If you dropped any material or liquid such as water onto the embedded system when cleaning, unplug the power cable immediately and contact your dealer or the nearest service center. Always make sure your hands are dry when unplugging the power cable.

Si vous laissez tomber un matériau ou un liquide tel que de l'eau sur le système intégré lors du nettoyage, débranchez immédiatement le câble d'alimentation et contactez votre revendeur ou le centre de service le plus proche. Assurez-vous toujours que vos mains sont sèches lorsque vous débranchez le câble d'alimentation.

![caution icon] **CAUTION / ATTENTION**

- For safety reasons, turn-off the power switch and unplug the embedded system before cleaning.
  Pour des raisons de sécurité, éteignez l'interrupteur d'alimentation et débranchez le système intégré avant de le nettoyer.
- Never use any of the following solvents on the medical embedded system. Harsh chemicals may cause damage to the cabinet.
  N'utilisez jamais l'un des solvants suivants sur le système médical intégré. Les produits chimiques agressifs peuvent endommager le boîtier.
  Thinner Spray-type cleaner, Benzene, Wax, Abrasive cleaner, Acid or Alkaline solvent.
  Diluant nettoyant de type spray, benzène, cire, nettoyant abrasif, solvant acide ou alcalin.

C.1.1 Maintenance and Cleaning

Prior to cleaning any part or component of the HTB-150-N6210, please read the details below.

- To clean the HTB-150-N6210,
  - remove dirt with a lightly moistened cloth. Then wipe the external chassis with a soft dry cloth.
  - use 75% ethanol alcohol to clean the external chassis.
- Cleaning frequency: follow the cleaning method guidelines of the hospital.
- Never spray or squirt liquids directly onto any other components.
- The interior of the HTB-150-N6210 does not require cleaning. Keep fluids away from the HTB-150-N6210 interior.

C.1.2 Cleaning Tools

Some components in the HTB-150-N6210 may only be cleaned using a product specifically designed for the purpose. In such case, the product will be explicitly mentioned in the cleaning tips. Below is a list of items to use when cleaning the HTB-150-N6210.

- ***Cloth*** – Although paper towels or tissues can be used, a soft, clean piece of cloth is recommended when cleaning the HTB-150-N6210.
- ***Water/Ethanol alcohol*** – A cloth moistened with water or 75% ethanol alcohol can be used to clean the HTB-150-N6210.
- ***Using solvents*** – The use of solvents is not recommended when cleaning the HTB-150-N6210 as they may damage the plastic parts.
- ***Cotton swabs*** - Cotton swaps moistened with water are excellent tools for wiping hard to reach areas.
- ***Foam swabs*** - Whenever possible, it is best to use lint free swabs such as foam swabs for cleaning.

Appendix

D

Symbol Definitions

The following symbols appear on the product, its labeling, or the product packing. Each symbol carries a special definition, as defined below:

![symbol]	Direct current	![symbol]	Fragile, handle with care
![symbol]	AC current	![symbol]	Keep dry
![symbol]	Protective earth (ground)	![symbol]	This side up
![symbol]	Date of manufacture	![symbol]	Indicates the manufacturer
![symbol]	Stand-by	![symbol]	Refer to instruction manual
![symbol]	Indicates proof of conformity to applicable European Economic Community Council directives and to harmonized standards published in the official journal of the European Communities.		
![symbol]	Tested to comply with FCC Class B standard.		
![symbol]	This symbol indicates that the waste of electronic equipment must not be disposed as unsorted municipal waste and must be collected separately. Please contact the manufacturer or other authorized disposal company to decommission your equipment.		
![symbol]	This product is recyclable.		

Appendix

E

Watchdog Timer

 NOTE:

> The following discussion applies to DOS. Contact IEI support or visit the IEI website for drivers for other operating systems.

The Watchdog Timer is a hardware-based timer that attempts to restart the system when it stops working. The system may stop working because of external EMI or software bugs. The Watchdog Timer ensures that standalone systems like ATMs will automatically attempt to restart in the case of system problems.

A BIOS function call (INT 15H) is used to control the Watchdog Timer.

INT 15H:

AH – 6FH Sub-function:	
AL – 2:	Sets the Watchdog Timer's period.
BL:	Time-out value (Its unit-second is dependent on the item "Watchdog Timer unit select" in CMOS setup).

   Table E-1: AH-6FH Sub-function

Call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer starts counting down. When the timer value reaches zero, the system resets. To ensure that this reset condition does not occur, calling sub-function 2 must periodically refresh the Watchdog Timer. However, the watchdog timer is disabled if the time-out value is set to zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.

 NOTE:

The Watchdog Timer is activated through software. The software application that activates the Watchdog Timer must also deactivate it when closed. If the Watchdog Timer is not deactivated, the system will automatically restart after the Timer has finished its countdown.

EXAMPLE PROGRAM:

; INITIAL TIMER PERIOD COUNTER

;
W_LOOP:
;

```
        MOV         AX, 6F02H          ;setting the time-out value
        MOV         BL, 30             ;time-out value is 48 seconds
        INT    15H
```

;
; ADD THE APPLICATION PROGRAM HERE
;

```
        CMP         EXIT_AP, 1         ;is the application over?
        JNE    W_LOOP              ;No, restart the application

        MOV         AX, 6F02H          ;disable Watchdog Timer
        MOV         BL, 0        ;
        INT    15H
```

;
; EXIT ;

Appendix

F

Error Beep Code

F.1 PEI Beep Codes

Number of Beeps	Description
1	Memory not Installed
1	Memory was installed twice (InstallPeiMemory routine in PEI Core called twice)
2	Recovery started
3	DXEIPL was not found
3	DXE Core Firmware Volume was not found
4	Recovery failed
4	S3 Resume failed
7	Reset PPI is not available

F.2 DXE Beep Codes

Number of Beeps	Description
1	Invalid password
4	Some of the Architectural Protocols are not available
5	No Console Output Devices are found
5	No Console Input Devices are found
6	Flash update is failed
7	Reset protocol is not available
8	Platform PCI resource requirements cannot be met

NOTE:

If you have any question, please contact IEI for further assistance.

Appendix

G

Hazardous Materials Disclosure

G.1 RoHS II Directive (2015/863/EU)

The details provided in this appendix are to ensure that the product is compliant with the RoHS II Directive (2015/863/EU). The table below acknowledges the presences of small quantities of certain substances in the product, and is applicable to RoHS II Directive (2015/863/EU).

Please refer to the following table.

Part Name	Toxic or Hazardous Substances and Elements									
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)	Bis(2-ethylhexyl) phthalate (DEHP)	Butyl benzyl phthalate (BBP)	Dibutyl phthalate (DBP)	Diisobutyl phthalate (DIBP)
Housing	O	O	O	O	O	O	O	O	O	O
Display	O	O	O	O	O	O	O	O	O	O
Printed Circuit Board	O	O	O	O	O	O	O	O	O	O
Metal Fasteners	O	O	O	O	O	O	O	O	O	O
Cable Assembly	O	O	O	O	O	O	O	O	O	O
Fan Assembly	O	O	O	O	O	O	O	O	O	O
Power Supply Assemblies	O	O	O	O	O	O	O	O	O	O
Battery	O	O	O	O	O	O	O	O	O	O
O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in Directive (EU) 2015/863. X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in Directive (EU) 2015/863.										

G.2 China RoHS

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有"环境友好使用期限"的标签，此期限是估算这些物质"不会有泄漏或突变"的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(CR(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
壳体	O	O	O	O	O	O
显示	O	O	O	O	O	O
印刷电路板	O	O	O	O	O	O
金属螺帽	O	O	O	O	O	O
电缆组装	O	O	O	O	O	O
风扇组装	O	O	O	O	O	O
电力供应组装	O	O	O	O	O	O
电池	O	O	O	O	O	O

O: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T11364-2014 與 GB/T26572-2011 标准规定的限量要求以下。

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11364-2014 與 GB/T26572-2011 标准规定的限量要求。