



MODEL:

# DRPC-W-EHL Series

Fanless System with Intel® Celeron® J6412 up to 2.6GHz TDP 10W,  
dual 2.5GbE LAN, HDMI, DP, 2.5" SATA HDD bay,  
8GB Memory Pre-installed, 12V DC and RoHS

## User Manual

# Revision

---

Date	Version	Changes
February 2, 2023	1.00	Initial release

# Copyright

---

## **COPYRIGHT NOTICE**

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

## **TRADEMARKS**

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

# Manual Conventions

---



## **WARNING**

Warnings appear where overlooked details may cause damage to the equipment or result in personal injury. Warnings should be taken seriously.



## **CAUTION**

Cautionary messages should be heeded to help reduce the chance of losing data or damaging the product.



## **NOTE**

These messages inform the reader of essential but non-critical information. These messages should be read carefully as any directions or instructions contained therein can help avoid making mistakes.



## **HOT SURFACE**

This symbol indicates a hot surface that should not be touched without taking care.

# Table of Content

<b>1 INTRODUCTION.....</b>	<b>1</b>
1.1 OVERVIEW.....	2
1.2 FEATURES.....	2
1.3 TECHNICAL SPECIFICATIONS .....	3
1.4 FRONT PANEL.....	4
1.5 TOP PANEL .....	4
1.6 PHYSICAL DIMENSIONS .....	5
<b>2 UNPACKING .....</b>	<b>6</b>
2.1 ANTI-STATIC PRECAUTIONS .....	7
2.2 UNPACKING PRECAUTIONS.....	7
2.3 UNPACKING CHECKLIST .....	7
<b>3 INSTALLATION .....</b>	<b>10</b>
3.1 INSTALLATION PRECAUTIONS .....	11
3.2 COVER REMOVAL.....	12
3.3 HARD DISK BRACKET REMOVAL.....	12
3.4 STORAGE INSTALLATION .....	13
3.4.1 2.5-inch SSD Installation.....	13
3.4.2 M.2 SSD Installation.....	13
3.5 WI-FI MODULE INSTALLATION (OPTIONAL).....	14
3.6 EXPANSION I/O INSTALLATION (OPTIONAL).....	16
3.6.1 Serial Port Installation .....	16
3.6.2 GPIO Port Installation .....	18
3.6.3 iDPM Module Installation.....	19
3.7 COVER INSTALLATION .....	21
3.8 SYSTEM FAN INSTALLATION (OPTIONAL).....	21
3.9 MOUNTING BRACKETS INSTALLATION .....	22
3.10 EXTERNAL PERIPHERAL INTERFACE CONNECTORS.....	24
3.10.1 HDMI/DP Connector.....	24

3.10.2 LAN Connectors.....	24
3.10.3 Power Connector .....	26
3.10.4 USB 3.2 Gen 2 (10Gb/s) Connectors.....	26
3.11 POWERING ON/OFF THE SYSTEM.....	27
3.12 AVAILABLE DRIVERS .....	28
3.12.1 Driver Download .....	29
<b>4 SYSTEM MOTHERBOARD .....</b>	<b>31</b>
4.1 OVERVIEW.....	32
4.2 LAYOUT.....	32
4.3 PERIPHERAL INTERFACE CONNECTORS.....	33
4.4 CLEAR CMOS BUTTON.....	34
4.5 AT/ATX POWER MODE SETTING.....	35
4.6 DNX MODE SETTING JUMPER.....	36
4.7 FLASH DESCRIPTOR OVERRIDE SETTING JUMPER .....	37
4.8 INTERNAL AUDIO CONNECTOR.....	38
4.9 ATX 12V POWER CONNECTOR.....	39
4.10 RTC BATTERY CONNECTOR .....	40
4.11 BUZZER CONNECTOR .....	42
4.12 DIGITAL INPUT/ OUTPUT CONNECTOR.....	43
4.13 FAN CONNECTOR.....	44
4.14 POWER LED & HDD LED CONNECTOR .....	45
4.15 POWER BUTTON CONNECTOR .....	46
4.16 RESET BUTTON CONNECTOR .....	47
4.17 RS-232 SERIAL PORT CONNECTOR.....	48
4.18 SATA 6Gb/s DRIVE CONNECTOR.....	49
4.19 SATA POWER CONNECTOR .....	50
4.20 I <sup>2</sup> C CONNECTOR.....	51
4.21 SMBUS CONNECTOR.....	52
4.22 FLASH SPI ROM CONNECTOR .....	53
4.23 FLASH EC ROM CONNECTOR .....	54
4.24 EC DEBUG CONNECTOR.....	55
4.25 INTERNAL USB 2.0 CONNECTORS .....	56
4.26 M.2 A-KEY SLOT .....	57
4.27 M.2 B-KEY SLOT .....	59

## DRPC-W-EHL

4.28 SIM CARD SLOT .....	61
<b>5 BIOS .....</b>	<b>62</b>
5.1 INTRODUCTION.....	63
5.1.1 Starting Setup.....	63
5.1.2 Using Setup .....	64
5.1.2.1 Keyboard Navigation .....	64
5.1.2.2 Touch Navigation .....	65
5.1.3 Getting Help.....	66
5.1.4 Unable to Reboot after Configuration Changes .....	66
5.1.5 BIOS Menu Bar.....	66
5.2 MAIN.....	67
5.3 ADVANCED.....	70
5.3.1 CPU Configuration .....	71
5.3.2 Trusted Computing.....	76
5.3.3 F81804 Super IO Configuration .....	77
5.3.3.1 Serial Port 1 Configuration .....	78
5.3.3.2 Serial Port 2 Configuration .....	80
5.3.4 ENE KB9068 Monitor.....	81
5.3.4.1 Smart Fan Mode Configuration .....	83
5.3.5 Serial Port Console Redirection .....	84
5.3.5.1 Console Redirection Settings .....	85
5.3.6 NVMe Configuration.....	87
5.4 CHIPSET .....	88
5.4.1 System Agent (SA) Configuration .....	89
5.4.1.1 Memory Configuration .....	90
5.4.1.2 Graphics Configuration.....	91
5.4.2 PCH-IO Configuration .....	94
5.4.2.1 PCI Express Configuration .....	96
5.4.2.1.1 PCIe Root Port Setting.....	97
5.4.2.1.2 M2_A_KEY Slot.....	错误!未定义书签。
5.4.2.1.3 M2_B_KEY Slot.....	错误!未定义书签。
5.4.2.2 SATA Configuration.....	99
5.4.2.3 HD Audio Configuration.....	101
5.5 SECURITY.....	102

5.6 BOOT.....	103
5.6.1 Boot Configuration .....	103
5.6.2 Boot Option Priorities.....	104
5.7 SAVE & EXIT .....	105
<b>A REGULATORY COMPLIANCE .....</b>	<b>107</b>
<b>B PRODUCT DISPOSAL .....</b>	<b>109</b>
<b>C BIOS OPTIONS .....</b>	<b>111</b>
<b>D WATCHDOG TIMER .....</b>	<b>114</b>
<b>E ERROR BEEP CODE.....</b>	<b>117</b>
E.1 PEI BEEP CODES.....	118
E.2 DXE BEEP CODES .....	118
<b>F HAZARDOUS MATERIALS DISCLOSURE.....</b>	<b>119</b>
F.1 RoHS II DIRECTIVE (2015/863/EU) .....	120
F.2 CHINA RoHS.....	121



# List of Figures

Figure 1-1: DRPC-W-EHL Series .....	2
Figure 1-2: Front Panel .....	4
Figure 1-3: Top Panel .....	4
Figure 1-4: Physical Dimensions .....	5
Figure 3-1: Remove the Cover .....	12
Figure 3-2: Take out the Disk Bracket .....	12
Figure 3-3: HDD Installation .....	13
Figure 3-4: Inserting the M.2 Module into the Slot at an Angle.....	14
Figure 3-5: Securing the M.2 Module.....	14
Figure 3-6: Inserting the WLAN Module .....	15
Figure 3-7: Securing the WLAN Module.....	15
Figure 3-8: Connecting RF Cables.....	15
Figure 3-9: Securing SMA Connector and External Antenna Installation .....	16
Figure 3-10: Connect the serial cable to the serial connector .....	17
Figure 3-11: Knock out the reserved holes.....	17
Figure 3-12: Connect the GPIO cable to the GPIO connector.....	18
Figure 3-13: Knock out the reserved holes.....	18
Figure 3-14: Inserting the M.2 Module into the Slot at an Angle .....	19
Figure 3-15: Securing the M.2 Module.....	19
Figure 3-16: Connect the VGA cable to the VGA connector .....	20
Figure 3-17: Knock out the reserved holes.....	20
Figure 3-18: Install the cover.....	21
Figure 3-19: External Fan Module Installation .....	22
Figure 3-20: Align the retention screw holes.....	22
Figure 3-21: Secure the brackets .....	23
Figure 3-22: Mounting the system .....	23
Figure 3-23: HDMI/DP Connection .....	24
Figure 3-24: LAN Connection .....	25
Figure 3-25: RJ-45 Ethernet Connector.....	25
Figure 3-26: Power Connector .....	26

Figure 3-27: USB Connection .....	27
Figure 3-28: Power Input & Button & LED .....	27
Figure 3-29: Power Button .....	28
Figure 3-30: IEI Resource Download Center .....	28
Figure 4-1: Connector and Jumper Locations .....	32
Figure 4-2: Clear CMOS Location .....	34
Figure 4-3: AT/ATX Power Mode Switch Locations .....	35
Figure 4-4: DNX Mode Setting Jumper Location .....	36
Figure 4-5: Flash Descriptor Override Setting Jumper Locations .....	37
Figure 4-6: Audio Connector Location .....	38
Figure 4-7: ATX 12V Power Connector Location .....	39
Figure 4-8: Battery Connector Location .....	41
Figure 4-9: Buzzer Connector Location .....	42
Figure 4-10: Digital I/O Connector Location .....	43
Figure 4-11: Fan Connector Location .....	44
Figure 4-12: Power LED & HDD LED Connector Location .....	45
Figure 4-13: Power Button Connector Location .....	46
Figure 4-14: Reset Button Connector Location .....	47
Figure 4-15: RS-232 Serial Port Connector Location .....	48
Figure 4-16: SATA 6Gb/s Drive Connectors Location .....	49
Figure 4-17: SATA Power Connector Location .....	50
Figure 4-18: I <sup>2</sup> C Connector Location .....	51
Figure 4-19: SMBus Connector Location .....	52
Figure 4-20: Flash SPI ROM Connector Location .....	53
Figure 4-21: Flash EC ROM Connector Location .....	54
Figure 4-22: EC Debug Connector Location .....	55
Figure 4-23: Internal USB 2.0 Connectors Locations .....	56
Figure 4-24: M.2 A-key Slot Location .....	57
Figure 4-25: M.2 B-key Slot Location .....	59
Figure 4-26: SIM Card Slot Location .....	61
Figure 5-1: BIOS Starting Menu .....	63
Figure 5-2: BIOS Options and Configured USB Ports .....	96

# List of Tables

Table 1-1: Technical Specifications .....	3
Table 3-1: RJ-45 Ethernet Connector LEDs .....	25
Table 3-2: Power Connector Pinouts .....	26
Table 4-1: Peripheral Interface Connectors .....	34
Table 4-2: Clear CMOS Pinouts .....	34
Table 4-3: AT/ATX Power Mode Switch Pinouts .....	35
Table 4-4: DNX Mode setting Jumper Pinouts .....	36
Table 4-5: Flash Descriptor Override Setting Jumper Pinouts .....	37
Table 4-6: Audio Connector Pinouts .....	38
Table 4-7: ATX 12V Power Connector Pinouts .....	39
Table 4-8: Battery Connector Pinouts .....	41
Table 4-9: Buzzer Connector Pinouts .....	42
Table 4-10: Digital I/O Connector Pinouts .....	43
Table 4-11: Fan Connector Pinouts .....	44
Table 4-12: Power LED & HDD LED Connector Pinouts .....	45
Table 4-13: Power Button Connector Pinouts .....	46
Table 4-14: Reset Button Connector Pinouts .....	47
Table 4-15: RS-232 Serial Port Connector Pinouts .....	48
Table 4-16: SATA 6Gb/s Drive Connectors Pinouts .....	49
Table 4-17: SATA Power Connector Pinouts .....	50
Table 4-18: I <sup>2</sup> C Connector Pinouts .....	51
Table 4-19: SMBus Connector Pinouts .....	52
Table 4-20: Flash SPI ROM Connector Pinouts .....	53
Table 4-21: Flash EC ROM Connector Pinouts .....	54
Table 4-22: EC Debug Connector Pinouts .....	55
Table 4-23: Internal USB 2.0 Connectors Pinouts .....	56
Table 4-24: M.2 A-Key Slot Pinouts .....	58
Table 4-25: M.2 B-key Slot Pinouts .....	60
Table 4-26: SIM Card Slot Pinouts DDR4 SO-DIMM Socket .....	61
Table 5-1: BIOS Navigation Keys .....	64

**Table 5-2: BIOS On-screen Navigation Keys .....65**

# BIOS Menus

BIOS Menu 1: Main (1/2).....	67
BIOS Menu 2: Main (2/2).....	68
BIOS Menu 3: Advanced .....	70
BIOS Menu 4: CPU Configuration (1/3).....	71
BIOS Menu 5: CPU Configuration (2/3).....	72
BIOS Menu 6: CPU Configuration (3/3).....	73
BIOS Menu 7: Trusted Computing .....	76
BIOS Menu 8: F81804 Super IO Configuration .....	77
BIOS Menu 9: Serial Port 1 Configuration Menu .....	78
BIOS Menu 10: Serial Port 2 Configuration Menu .....	80
BIOS Menu 11: ENE KB9068 Monitor .....	81
BIOS Menu 12: Smart Fan Mode Configuration .....	83
BIOS Menu 13: Serial Port Console Redirection .....	84
BIOS Menu 14: COM Console Redirection Settings .....	85
BIOS Menu 15: NVMe Configuration.....	87
BIOS Menu 16: Chipset .....	88
BIOS Menu 17: System Agent (SA) Configuration .....	89
BIOS Menu 18: Memory Configuration.....	90
BIOS Menu 19: Graphics Configuration .....	91
BIOS Menu 20: PCH-IO Configuration .....	94
BIOS Menu 21: PCI Express Configuration .....	96
BIOS Menu 22: PCIe Slot Configuration Submenu .....	97
BIOS Menu 23: M2_A_KEY .....	错误!未定义书签。
BIOS Menu 24: M2_B_KEY .....	错误!未定义书签。
BIOS Menu 25: SATA Configuration .....	99
BIOS Menu 26: HD Audio Configuration .....	101
BIOS Menu 27: Security .....	102
BIOS Menu 28: Boot .....	103
BIOS Menu 29: Save & Exit.....	105

Chapter

1

# Introduction

---

## 1.1 Overview



**Figure 1-1: DRPC-W-EHL Series**

The DRPC-W-EHL Series is an embedded system for wide range temperature environments. It is powered by Intel® Elkhart Lake processor and onboard 8GB LPDDR4 memory (up to 16GB). The DRPC-W-EHL Series includes one HDMI, one DP, two 2.5GbE LAN ports, two USB 3.2 Gen2 ports, and one external fan connector.

## 1.2 Features

The DRPC-W-EHL Series features are listed below:

- Intel® Celeron® J6412 2.0GHz (up to 2.6GHz, quad-core, TDP 10W)
- Support dual independent display
- 2 x 2.5GbE ports
- 1 x M.2 A Key
- 1 x M.2 B Key (with SIM card slot)

## DRPC-W-EHL

### 1.3 Technical Specifications

The DRPC-W-EHL Series technical specifications are listed in Table 1-1.

Model Name		DRPC-W-EHL
Chassis	Color	Black
	Dimensions (WxDxH) (mm)	176x116x60.8
	System Fan	Fanless
	Chassis Construction	Extruded aluminum alloys
Motherboard	CPU	Intel® Celeron® J6412 2.0GHz (up to 2.6GHz, quad-core, TDP 10W)
	Chipset	SOC
	Memory	Onboard LPDDR4x 3200MHz 8GB (up to 16GB)
Storage	HDD Bay	1 x 2.5" SATA 6Gb/s HDD bay
IO Interfaces	USB	2 x USB3.2 Gen2 (10Gb/s)
	LAN	2 x 2.5GbE
	Display	1 x DP 1 x HDMI
	Others	1 x Power button, 1 x Reset button, 1 x Power LED, 1 x HDD LED, 1 x System fan connector
Internal Expansions	M.2	1 x M.2 A Key 2230 for WIFI & BT (optional) 1 x M.2 B Key (PCIe x2) 3042 w/ SIM slot for 5G (optional)
Power	Power Input	12V DC
	Power Consumption	12V@3.14A (Intel® Celeron® J6412 with 8GB LPDDR4x Memory)
Reliability	Mounting	DIN-Rail
	Operating Temperature	-20°C ~ 60°C with airflow, 10% ~ 95% non-condensing
	Storage Temperature	-30°C ~ 85°C, 10% ~ 95% non-condensing
	Operating Shock	Half-sine wave shock 5G, 11ms, 3 shocks per axis
	Operating Vibration	MIL-STD-810F 514.5C-2
	Weight (Net/Gross)	0.92 / 1.16 KG
	Safety/EMC	CE / FCC
	Watchdog Timer	Programmable 1 ~ 255 sec/min

**Table 1-1: Technical Specifications**



### 1.4 Front Panel

The front panel of the DRPC-W-EHL Series has the following features.

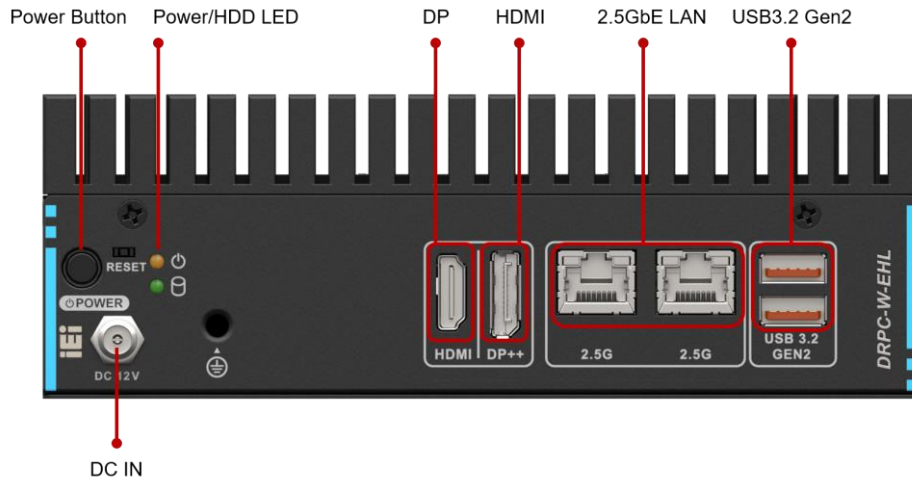


Figure 1-2: Front Panel

### 1.5 Top Panel

The top panel of the DRPC-W-EHL Series is shown below.


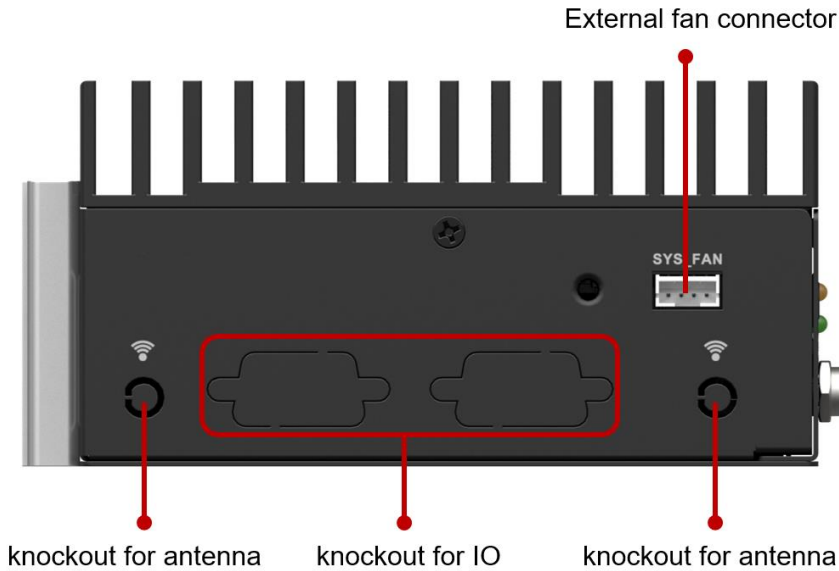


Figure 1-3: Top Panel

DRPC-W-EHL

### 1.6 Physical Dimensions

The physical dimensions are shown in **Figure 1-4**.

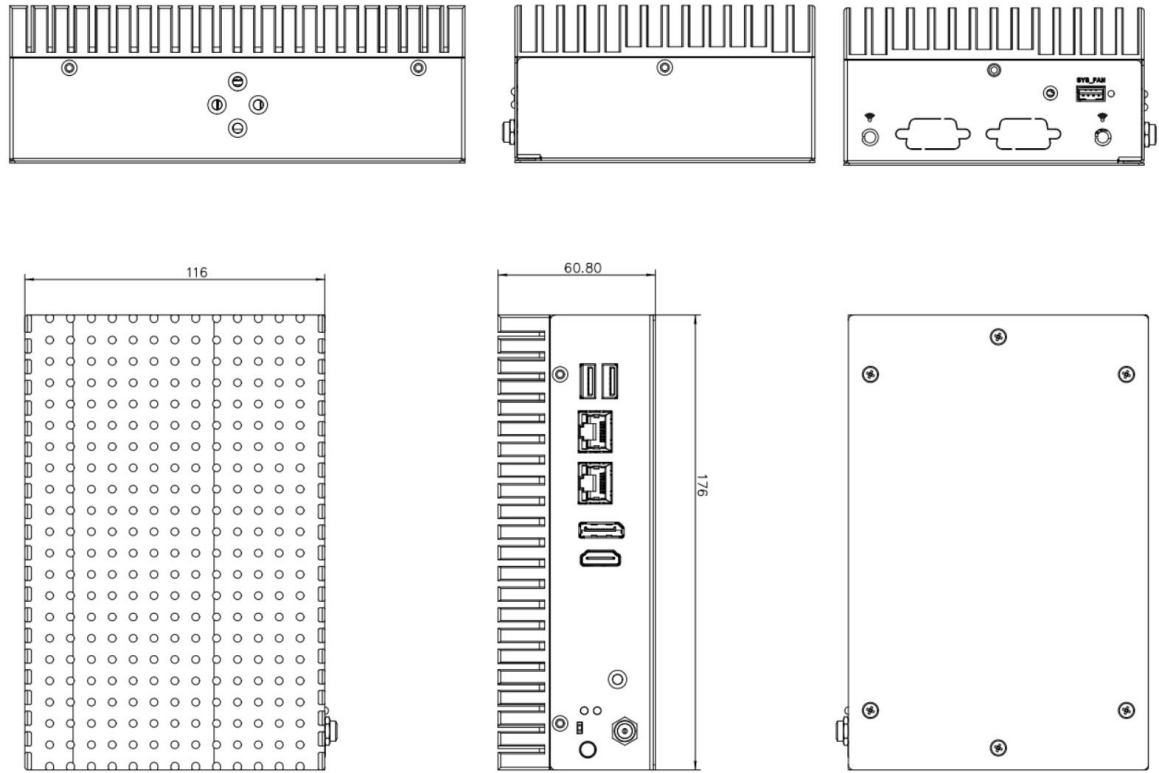

**Figure 1-4: Physical Dimensions**

Chapter

**2**

# Unpacking

---

## DRPC-W-EHL

### 2.1 Anti-static Precautions

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the DRPC-W-EHL Series. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the DRPC-W-EHL Series or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- **Self-grounding:** Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- **Use an anti-static pad:** When configuring the DRPC-W-EHL Series, place it on an anti-static pad. This reduces the possibility of ESD damaging the DRPC-W-EHL Series.

### 2.2 Unpacking Precautions

When the DRPC-W-EHL Series is unpacked, please do the following:

- Follow the anti-static precautions outlined in **Section 2.1**.
- Make sure the packing box is facing upwards so the DRPC-W-EHL Series does not fall out of the box.
- Make sure all the components shown in **Section 2.2** are present.

### 2.3 Unpacking Checklist






#### NOTE:


If some of the components listed in the checklist below are missing, please do not proceed with the installation. Contact the IEI reseller or vendor you purchased the DRPC-W-EHL Series from or contact an IEI sales representative directly. To contact an IEI sales representative, please send an email to [sales@ieiworld.com](mailto:sales@ieiworld.com).

---






The DRPC-W-EHL Series is shipped with the following components:

Quantity	Item and Part Number	Image
<b>Standard</b>		
1	DRPC-W-EHL Series	
2	DIN rail mounting kit	
1	Chassis screws	

The following table lists the optional items that can be purchased separately.

<b>Optional</b>	
Wi-Fi module (P/N: EMB-WIFI-KIT02I3-R10)	

**DRPC-W-EHL**

Optional	
VGA module (P/N: iDPM-VGA-R10)	
Serial cable (P/N: 32005-003500-200-RS)	
GPIO cable (P/N: 32031-000600-100-RS)	
Power adapter (P/N: 63040-010060-211-RS)	
Power cord (P/N: 32000-000002-RS)	

\* Each Wi-Fi module needs two antennas and two RF cables to fully support Wi-Fi function.

Chapter

**3**

# Installation

---

## DRPC-W-EHL

### 3.1 Installation Precautions

During installation, be aware of the precautions below:

- **Read the user manual:** The user manual provides a complete description of the DRPC-W-EHL Series, installation instructions and configuration options.
- **DANGER! Disconnect Power:** Power to the DRPC-W-EHL Series must be disconnected during the installation process, or before any attempt is made to access the rear panel. Electric shock and personal injury might occur if the rear panel of the DRPC-W-EHL Series is opened while the power cord is still connected to an electrical outlet.
- **Qualified Personnel:** The DRPC-W-EHL Series must be installed and operated only by trained and qualified personnel. Maintenance, upgrades, or repairs may only be carried out by qualified personnel who are familiar with the associated dangers.
- **Air Circulation:** Make sure there is sufficient air circulation when installing the DRPC-W-EHL Series. The DRPC-W-EHL Series cooling vents must not be obstructed by any objects. Blocking the vents can cause overheating of the DRPC-W-EHL Series. Leave at least 5 cm of clearance around the DRPC-W-EHL Series to prevent overheating.
- **Grounding:** The DRPC-W-EHL Series should be properly grounded. The voltage feeds must not be overloaded. Adjust the cabling and provide external overcharge protection per the electrical values indicated on the label attached to the back of the DRPC-W-EHL Series.



### 3.2 Cover Removal

Before installing or maintaining the internal components, the cover must be removed from the DRPC-W-EHL Series. Follow the steps below to complete the task.

**Step 1:** Loosen the 6 screws on the cover.

**Step 2:** Take off the cover (Figure 3-1).



Figure 3-1: Remove the Cover

### 3.3 Hard Disk Bracket Removal

Loosen the four screws and remove the hard disk bracket (Figure 3-2).



Figure 3-2: Take out the Disk Bracket

## DRPC-W-EHL

### 3.4 Storage Installation

The DRPC-W-EHL supports two types of storage, one M.2 B Key & one 2.5" SSD

#### 3.4.1 2.5-inch SSD Installation

Put the hard disk bracket on the hard disk, secure the bracket with 4 screws, and connect the SATA cable

Install the hard disk and bracket back to the host (Figure 3-3).

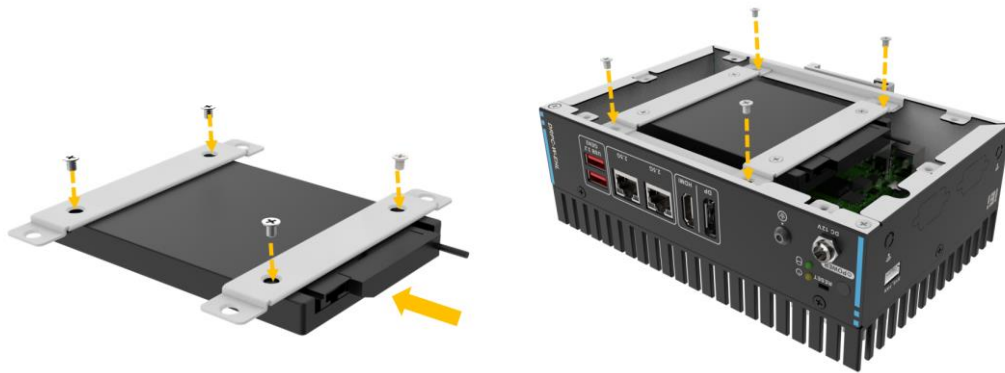


Figure 3-3: HDD Installation


#### 3.4.2 M.2 SSD Installation

To install an M.2 module, please follow the steps below.

**Step 1:** Locate the M.2 module slot.


**Step 2:** Remove the retention screw secured on the motherboard.

**Step 3:** Line up the notch on the module with the notch on the slot. Slide the M.2 module into the socket at an angle of about 20° (Figure 3-4).

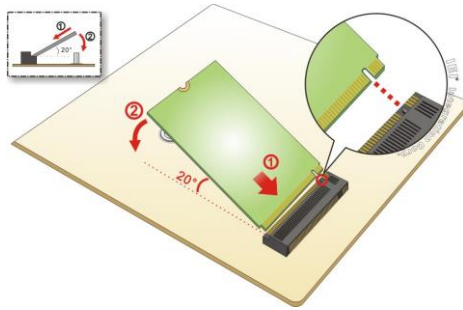

**Figure 3-4: Inserting the M.2 Module into the Slot at an Angle**

**Step 4:** Secure the M.2 module with the previously removed retention screw (Figure 3-5).

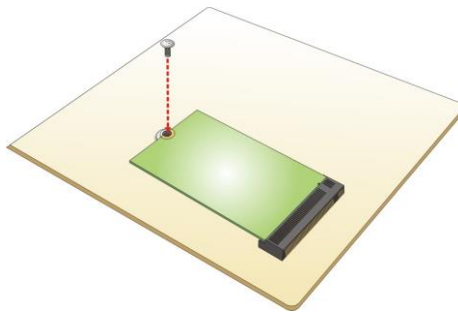

**Figure 3-5: Securing the M.2 Module**

### 3.5 Wi-Fi Module Installation (Optional)

The Wi-Fi module is an optional accessory. You can purchase it from IEI or other providers. Note that you have to purchase Wi-Fi module, internal antenna and external antenna. It is suggested to purchase an internal antenna longer than 200mm.


To install the Wi-Fi module, follow the steps below.

**Step 1:** Locate the M.2 A Key module slot.

**Step 2:** Remove the retention screw secured on the motherboard.


**Step 3:** Line up the notch on the WLAN module with the notch on the slot. Slide the WLAN module into the slot at an angle of about 20° (Figure 3-6).

## DRPC-W-EHL

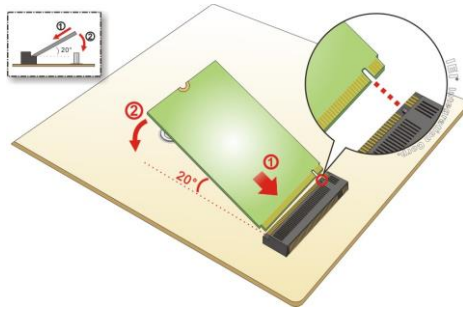


**Figure 3-6: Inserting the WLAN Module**

**Step 4:** Secure the WLAN module with the retention screw previously removed (Figure 3-7).

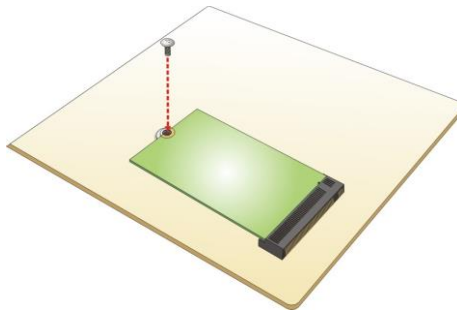

**Figure 3-7: Securing the WLAN Module**

**Step 5:** Connect the two RF cables to the antenna connectors on the WLAN module (Figure 3-8).

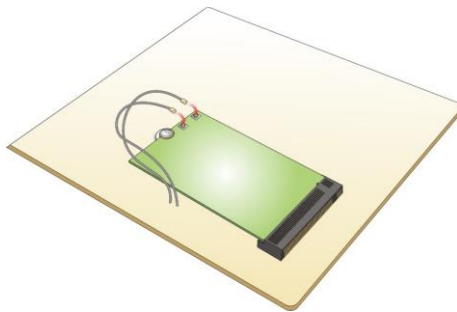


**Figure 3-8: Connecting RF Cables**

**Step 6:** Remove the nut and washer from the SMA connector at the other end of the RF cable.

**Step 7:** Knock out the reserved antenna holes on the chassis. Insert the SMA connector to the antenna connector holes on the rear panel.

**Step 8:** Secure the SMA connector by inserting the washer and tightening it with nut.

**Step 9:** Install the external antenna (**Figure 3-9**).

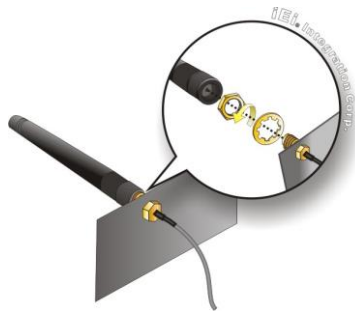

**Figure 3-9: Securing SMA Connector and External Antenna Installation**

## **3.6 Expansion I/O Installation (Optional)**

The DRPC-W-EHL series has reserved GPIO port, serial port, and iDPM slot for function expansions. Optional cable or module are ready for purchase. To install these expansion components, follow the steps below.

### **3.6.1 Serial Port Installation**

**Step 1:** Locate the Serial port connector.

**Step 2:** Connect the serial cable to the serial connector on the mainboard.

DRPC-W-EHL



Figure 3-10: Connect the serial cable to the serial connector

**Step 3:** Knock out the reserved holes on the chassis and Secure the DB9 end of the serial cable to the panel.


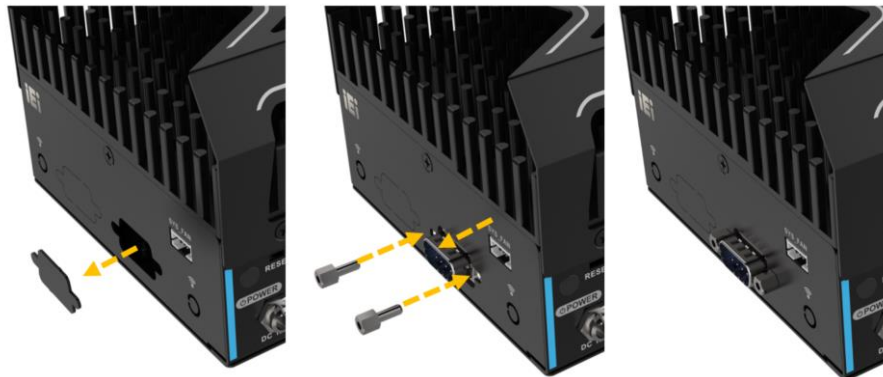


Figure 3-11: Knock out the reserved holes

### 3.6.2 GPIO Port Installation


**Step 1:** Locate the GPIO port connector.

**Step 2:** Connect the GPIO cable to the GPIO connector on the mainboard.

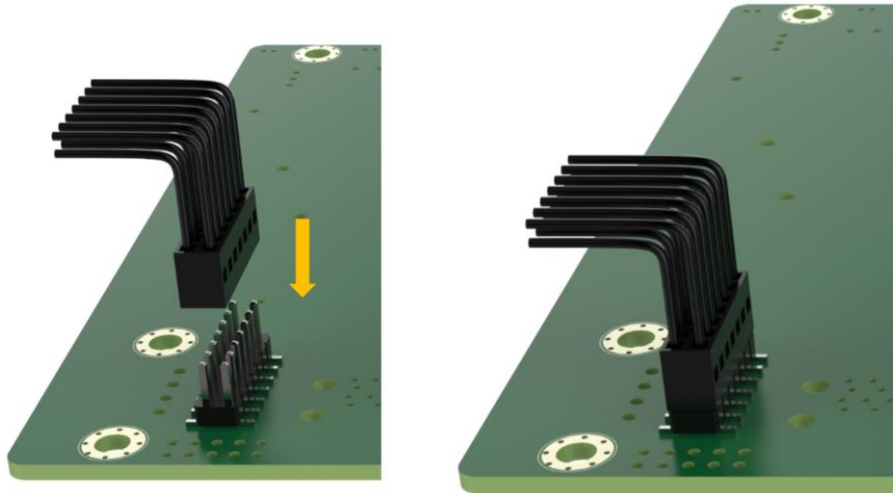

**Figure 3-12: Connect the GPIO cable to the GPIO connector**

**Step 3:** Knock out the reserved holes on the chassis and Secure the DB15 end of the GPIO cable to the panel.

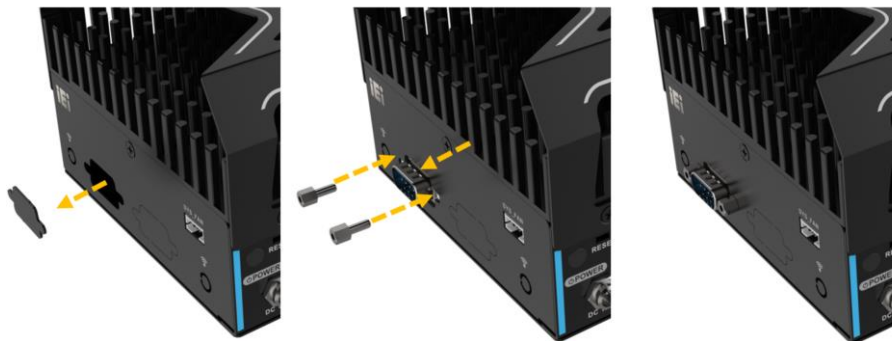

**Figure 3-13: Knock out the reserved holes**


## DRPC-W-EHL

### 3.6.3 iDPM Module Installation

**Step 1:** Locate the iDPM module slot.


**Step 2:** Remove the retention screw secured on the motherboard.

**Step 3:** Line up the notch on the module with the notch on the slot. Slide the iDPM module into the socket at an angle of about 20°

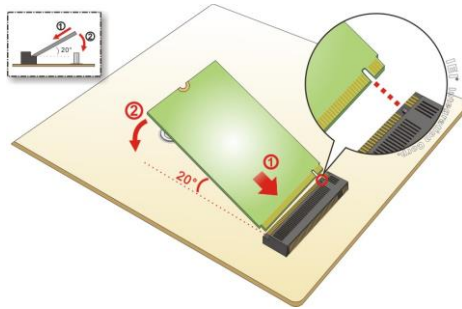

**Figure 3-14: Inserting the M.2 Module into the Slot at an Angle**


**Step 4:** Secure the iDPM module with the retention screw previously removed.

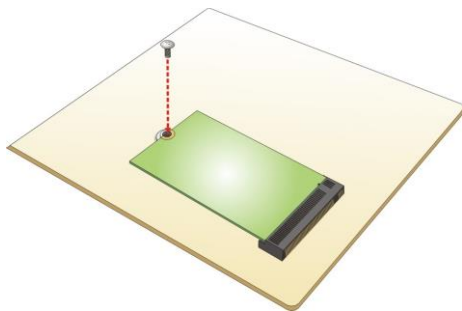

**Figure 3-15: Securing the M.2 Module**

**Step 5:** Connect the VGA cable to the VGA connector on the iDPM module.



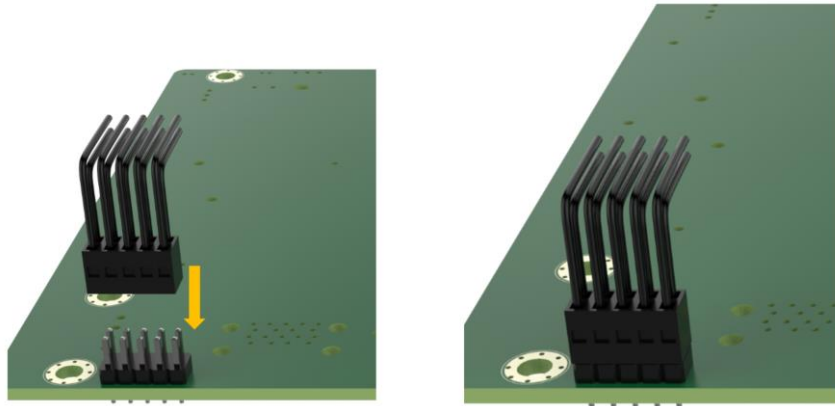

**Figure 3-16: Connect the VGA cable to the VGA connector**

**Step 6:** Knock out the reserved holes on the chassis and Secure the DB15 end of the VGA cable to the panel.



**Figure 3-17: Knock out the reserved holes**

## DRPC-W-EHL

### 3.7 Cover Installation

Install the cover, and fasten the 6 screws.



Figure 3-18: Install the cover

### 3.8 System Fan Installation (Optional)

When encountering high performance and high heat that need additional cooling, the optional external fan can help the DRPC-W-EHL solve the thermal problem. To install the optional external fan, follow the steps below.

**Step 1:** Remove the 4 screws (2 on the front panel, 2 on the rear panel) on the DRPC-W-EHL Series as shown in the figure below.

**Step 2:** Install the external fan module to the DRPC-W-EHL Series, and secure it using the 4 screws removed previously.

**Step 3:** Connect the fan cable to the fan connector on the side panel.




**Figure 3-19: External Fan Module Installation**

### **3.9 Mounting Brackets Installation**

DRPC-W-EHL comes with DIN-RAIL mounting bracket, follow the steps below to install.

**Step 1:** Turn the embedded system over.


**Step 2:** Align the retention screw holes in each bracket with the corresponding retention screw holes on the bottom surface.

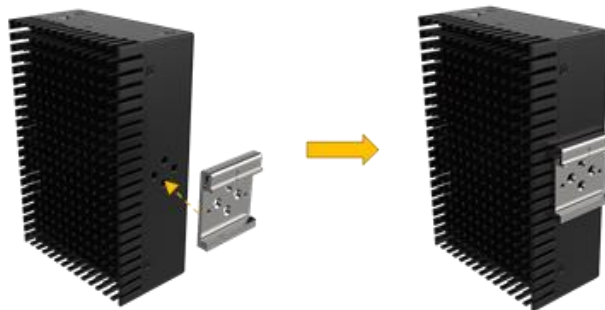

**Figure 3-20: Align the retention screw holes**


## DRPC-W-EHL

**Step 3:** Secure the brackets to the system by inserting retention screws into each bracket.

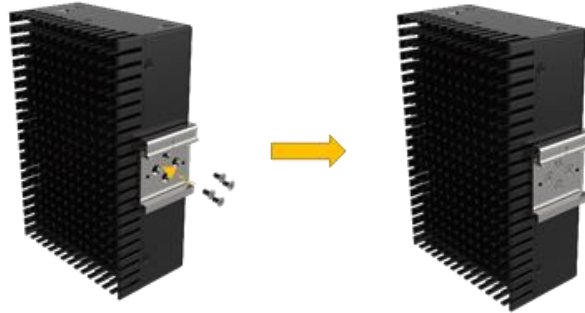

**Figure 3-21: Secure the brackets**

**Step 4:** Attach the upper edge of the mounting bracket at an angle. Push the system towards the DIN rail until mounting bracket hangs securely.

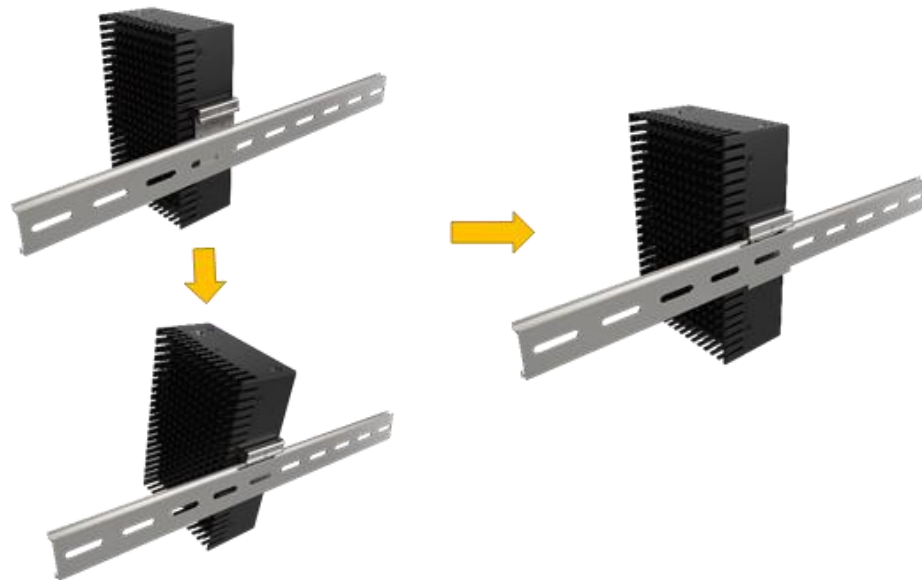

**Figure 3-22: Mounting the system**

## 3.10 External Peripheral Interface Connectors

The DRPC-W-EHL Series has the following connectors. Detailed descriptions of the connectors can be found in the subsections below.

- Ethernet
- Power button
- Power DC jack
- HDMI
- DP
- USB

### 3.10.1 HDMI/DP Connector

To connect the HDMI/DP devices, please plug in HDMI/DP connector in the right direction as shown below:



Figure 3-23: HDMI/DP Connection

### 3.10.2 LAN Connectors

The LAN connectors allow connection to an external network

**Step 1: Locate the RJ-45 connectors.** The locations of the RJ-45 connectors are shown in **Chapter 1**

**Step 2: Align the connectors.** Align the RJ-45 connector on the LAN cable with one of the RJ-45 connectors on the DRPC-W-EHL Series. See

DRPC-W-EHL

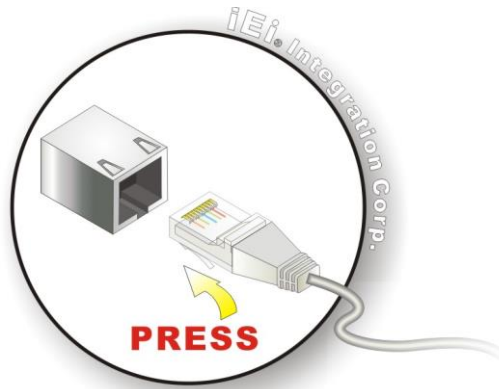


Figure 3-24: LAN Connection

**Step 3:** Insert the LAN cable RJ-45 connector. Once aligned, gently insert the LAN cable RJ-45 connector into the on-board RJ-45 connector

The RJ-45 Ethernet connector has two status LEDs, one green and one yellow. The green LED indicates activity on the port and the yellow LED indicates the port is linked. See



Figure 3-25: RJ-45 Ethernet Connector

Activity/Link LED		Speed LED	
STATUS	DESCRIPTION	STATUS	DESCRIPTION
Off	No link	Off	10 Mbps connection
Yellow	Linked	Green	1000 Mbps connection
Blinking	TX/RX activity	Orange	2.5 Gbps connection

Table 3-1: RJ-45 Ethernet Connector LEDs

### 3.10.3 Power Connector

The power connector is a 2-pin DC jack connector on the front panel that can directly connect to a power adapter. The supported power input voltage is 12 VDC.

Pin	Description
1	12V
2	GND

Table 3-2: Power Connector Pinouts



Figure 3-26: Power Connector

### 3.10.4 USB 3.2 Gen 2 (10Gb/s) Connectors

The DRPC-W-EHL has two USB 3.2 ports. To connect a USB device, please follow the instructions below

**Step 1: Located the USB connectors.** The locations of the USB connectors are shown in **Chapter 1**

**Step 2: Align the connectors.** Align the USB device connector with one of the connectors on the I/O panel.

**Step 3: Insert the device connector.** Once aligned, gently insert the USB device connector into the onboard connector.

DRPC-W-EHL

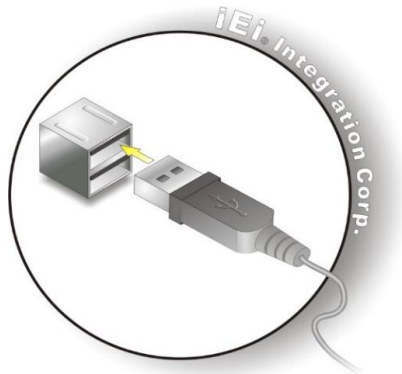


Figure 3-27: USB Connection

### 3.11 Powering On/Off the System



**WARNING:**

Make sure a power supply with the correct input voltage is being fed into the system. Incorrect voltages applied to the system may cause damage to the internal electronic components and may also cause injury to the user.

The power of the system needs more than 12V5A

**Step 1:** Connect the power source to the power input jack.

**Step 2:** Push the power button, the power LED indicator should turn on.


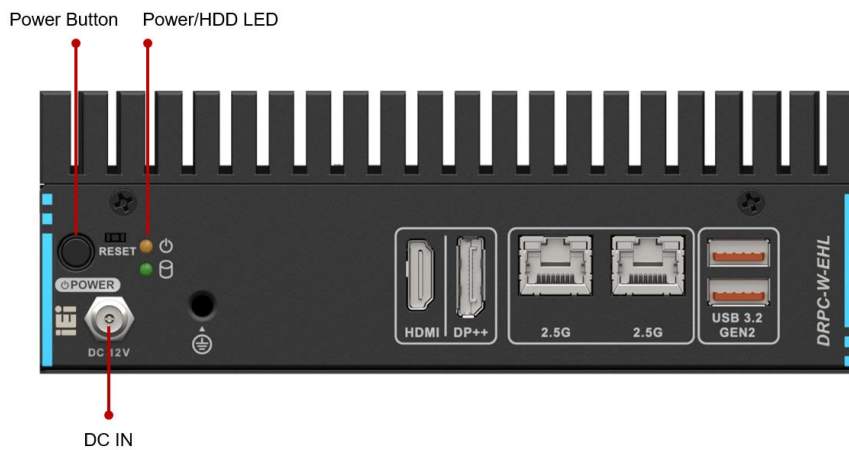


Figure 3-28: Power Input & Button & LED




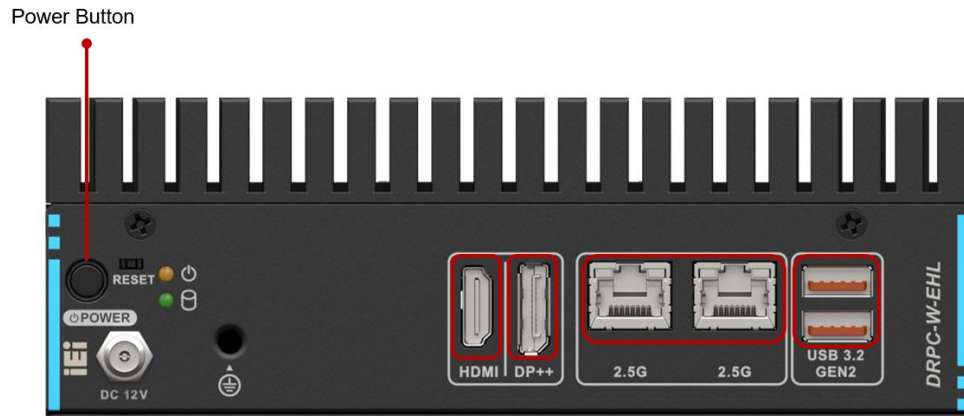

**Figure 3-29: Power Button**

### 3.12 Available Drivers

All the drivers for the DRPC-W-EHL Series are available on IEI Resource Download Center (<https://download.ieiworld.com>). Type DRPC-W-EHL Series and press Enter to find all the relevant software, utilities, and documentation.

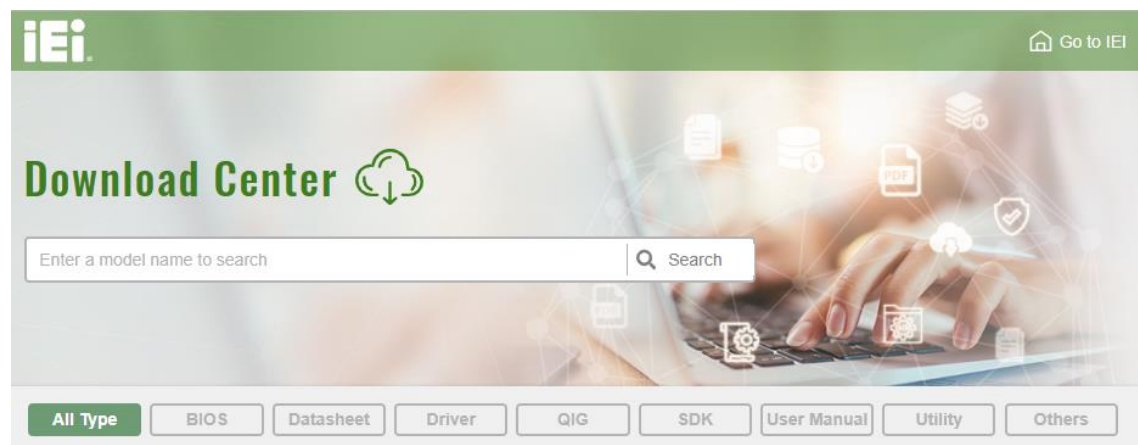


**Figure 3-30: IEI Resource Download Center**

## DRPC-W-EHL


### 3.12.1 Driver Download

To download drivers from IEI Resource Download Center, follow the steps below.


**Step 1:** Go to <https://download.ieiworld.com>. Type DRPC-W-EHL Series and press Enter.

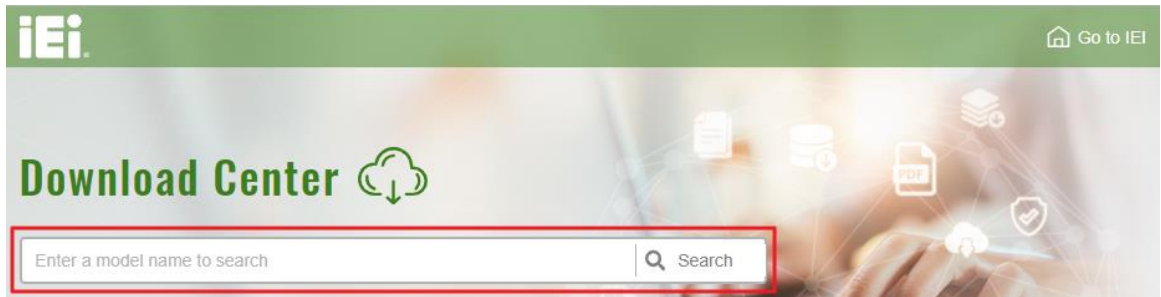

**Step 2:** All product-related software, utilities, and documentation will be listed. You can choose **Driver** to filter the result.

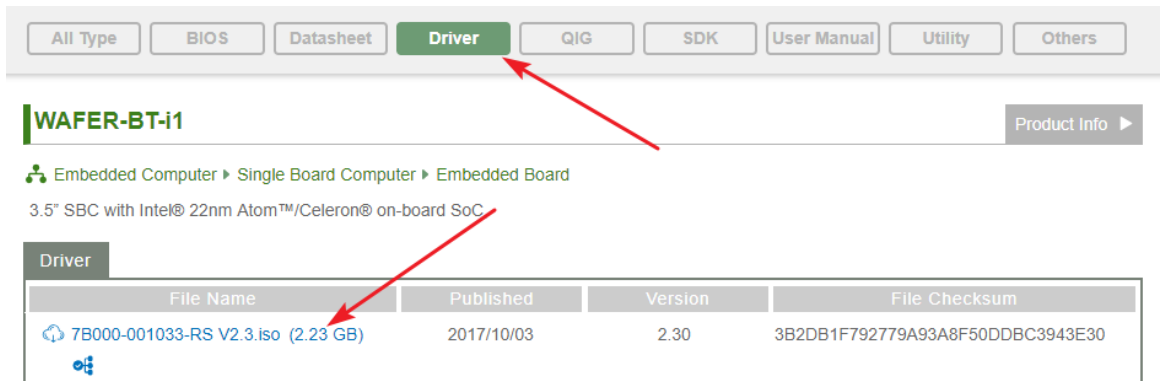

**Step 3:** Click the driver file name on the page and you will be prompted with the following window. You can download the entire ISO file (❶), or click the small arrow to find an individual driver and click the file name to download (❷).

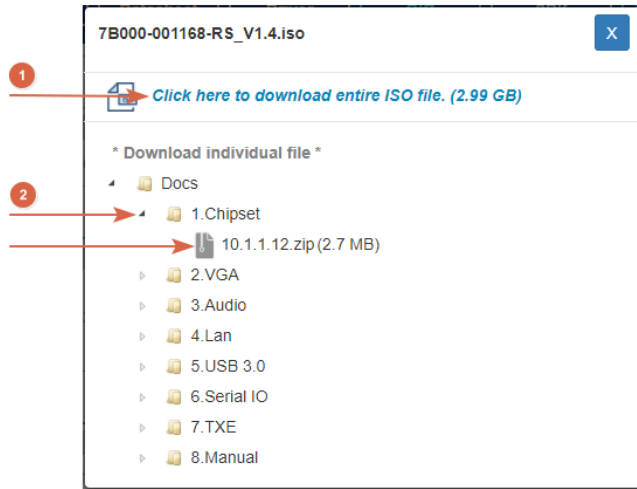

**NOTE:**

To install software from the downloaded ISO image file in Windows 10 (or later), double-click the ISO file to mount it as a virtual drive to view its content.

Chapter

4

# System Motherboard


---

## 4.1 Overview

The connectors and jumpers of the system motherboard are listed in the following sections.

## 4.2 Layout

The following diagram shows the locations of the internal/external connectors and jumpers on the motherboard.

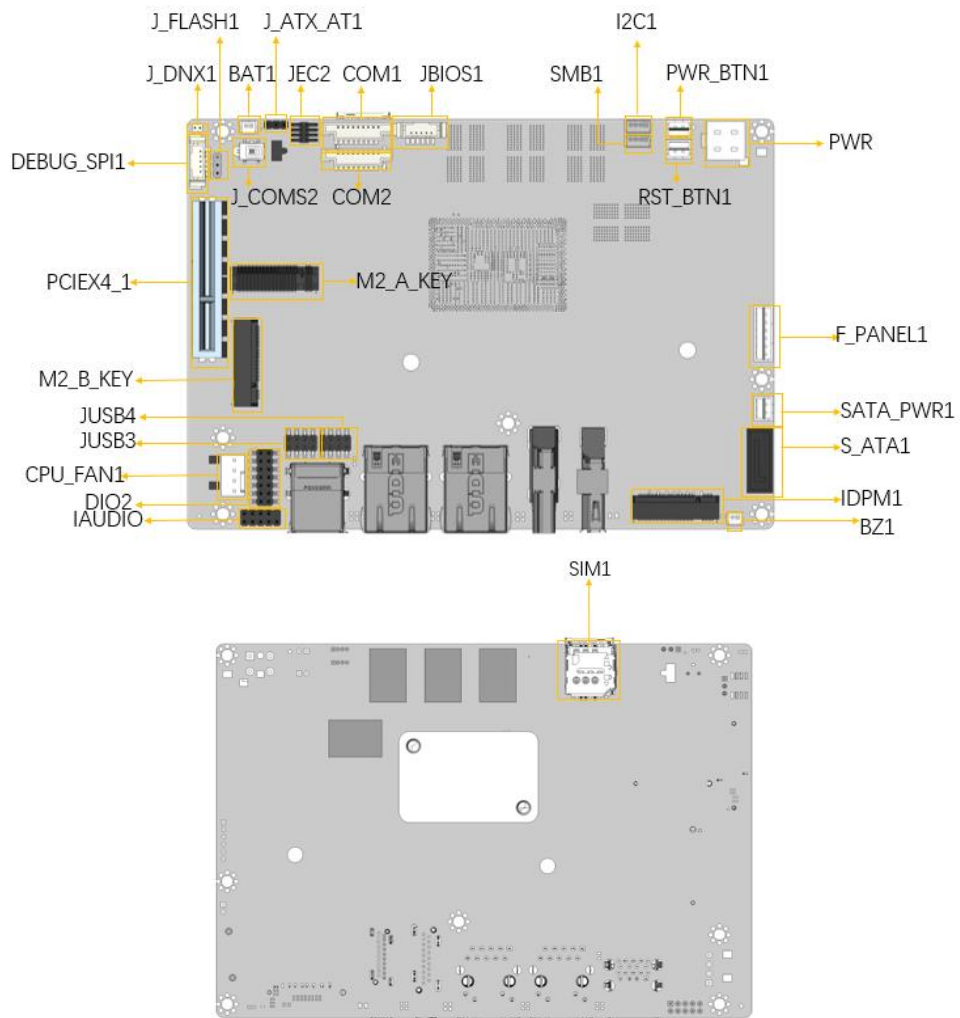

**Figure 4-1: Connector and Jumper Locations**

### 4.3 Peripheral Interface Connectors

The table below lists all the connectors on the board.

Connector	Type	Label
Clear CMOS button	Button	J_CMOS1
AT/ATX power mode setting	3-pin header	J_ATX_AT1
DNX mode setting jumper	2-pin header	J_DNX1
Flash descriptor override setting jumper	3-pin header	J_FLASH1
Audio connector for IEI AC-KIT-888S kit	10-pin header	IAUDIO
ATX 12V power connector	4-pin Molex	PWR1
Battery connector	2-pin wafer	BAT1
Buzzer connector	2-pin wafer	BZ1
Digital I/O connector	14-pin header	DIO2
Fan connector	4-pin header	CPU_FAN1
Power LED & HDD LED connector	6-pin wafer	F_PANEL1
Power button connector	2-pin wafer	PWR_BTN1
Reset button connector	2-pin wafer	RST_BTN1
RS-232/422/485 serial port connectors	9-pin wafer	COM1, COM2
SATA 6Gb/s connectors	7-pin SATA connector	SATA1
SATA power connector	2-pin wafer	SATA_PWR1
I2C connector	4-pin wafer	I2C1
SMBus connector	4-pin wafer	SMB1
Flash SPI ROM connector	6-pin wafer	JBIOS1
Flash EC ROM connector	6-pin header	JEC2
EC debug connector	6-pin wafer	DEBUG_SPI1
Internal USB 2.0 connector	8-pin header	JUSB3, JUSB4
M.2 A-key slot	M.2 A-key slot	M2_A_KEY

M.2 B-key slot	M.2 B-key slot	M2_B_KEY
PCIe x4 slot (x2 signal)	PCIe slot for riser card	PCIEX4_1
SIM slot (solder side)	7-pin SIM holder	SIM1
iEi iDPM slot	M.2 B-key slot	IDPM1

**Table 4-1: Peripheral Interface Connectors**

### 4.4 Clear CMOS Button


**CN Label:** J\_CMOS2

**CN Type:** Button

**CN Location:** See **Figure 4-2**

**CN Pinouts:** See **Table 4-2**

To clear the CMOS Setup (for example if you have forgotten the password, you should clear the CMOS and then reset the password), you should disconnect the RTC battery and press the button for about 3 seconds. This will set back to normal operation mode.

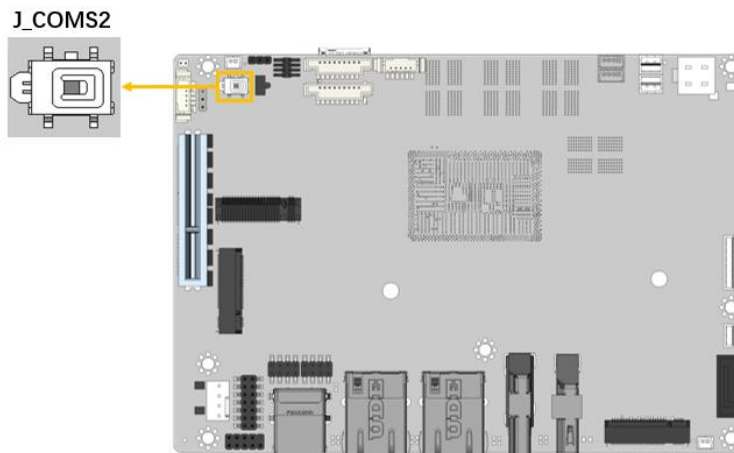

**Figure 4-2: Clear CMOS Location**

<b>PIN NO.</b>	<b>DESCRIPTION</b>
NC (default)	Keep CMOS Setup (Normal Operation)
Press button	Clear CMOS Setup


**Table 4-2: Clear CMOS Pinouts**

DRPC-W-EHL

### 4.5 AT/ATX Power Mode Setting

- CN Label:** J\_ATX\_AT1
- CN Type:** 3-pin switch
- CN Location:** See **Figure 4-3**
- CN Pinouts:** See **Table 4-3**

The AT/ATX power mode selection is made through the AT/ATX power mode switch which is shown in **Figure 4-3**.

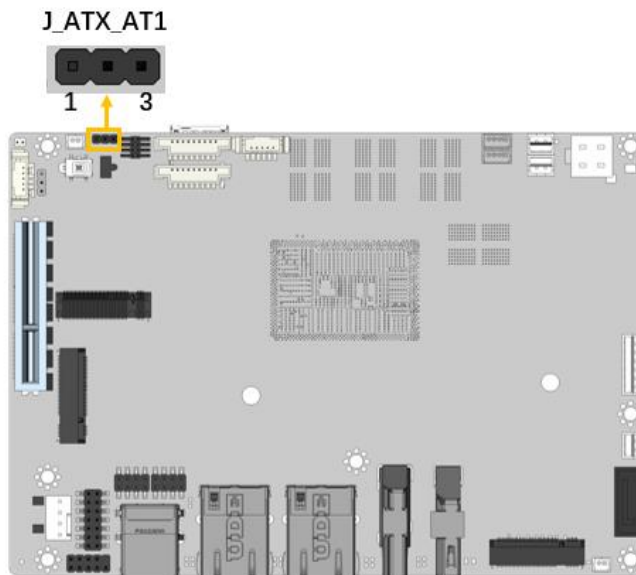

**Figure 4-3: AT/ATX Power Mode Switch Locations**

PIN NO.	DESCRIPTION
Short 1 - 2	ATX Power Mode (default)
Short 2 - 3	AT Power Mode


**Table 4-3: AT/ATX Power Mode Switch Pinouts**



### 4.6 DNX Mode Setting Jumper

- CN Label:** J\_DNX1
- CN Type:** 2-pin header, P=1.27mm
- CN Location:** See **Figure 4-4**
- CN Pinouts:** See **Table 4-4**

The J\_DNX1 connector is used for set DNX mode.

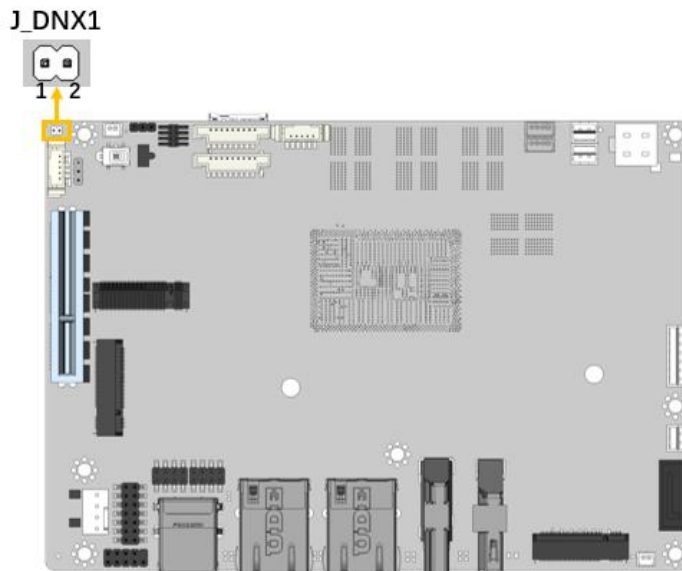

**Figure 4-4: DNX Mode Setting Jumper Location**

PIN NO.	DESCRIPTION
Open	Normal (default)
Short	Enable DNX Boot


**Table 4-4: DNX Mode setting Jumper Pinouts**

DRPC-W-EHL

### 4.7 Flash Descriptor Override Setting Jumper

- CN Label:** J\_FLASH1
- CN Type:** 3-pin header, P=2.00mm
- CN Location:** See **Figure 4-5**
- CN Pinouts:** See **Table 4-5**

The J\_FLASH1 connector is used for Flash Descriptor Security Override.

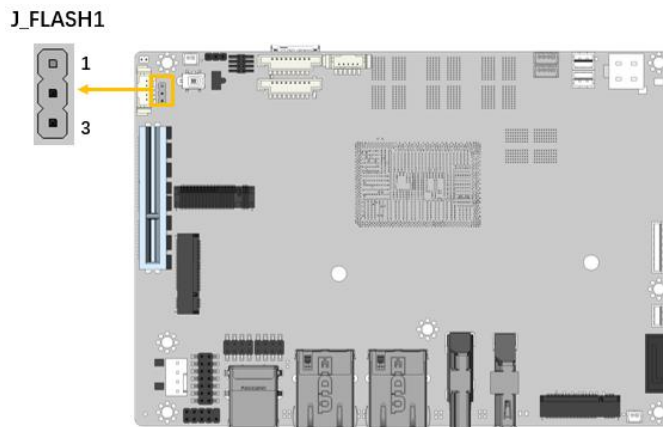

**Figure 4-5: Flash Descriptor Override Setting Jumper Locations**

PIN NO.	DESCRIPTION
Short 1 - 2	Disable (default)
Short 2 - 3	Enable

**Table 4-5: Flash Descriptor Override Setting Jumper Pinouts**

To update the ME firmware, please follow the steps below.


- Step 1:** Before turning on the system power, short the Flash Descriptor Security Override jumper.
- Step 2:** Update the BIOS and ME firmware, and then turn off the system power.
- Step 3:** Remove the metal clip on the Flash Descriptor Security Override jumper to its default setting.

**Step 4:** Restart the system. The system will reboot 2 ~ 3 times to complete the ME firmware update.

### 4.8 Internal Audio Connector

- CN Label:** IAUDIO
- CN Type:** 10-pin header, p=2.00 mm
- CN Location:** See **Figure 4-6**
- CN Pinouts:** See **Table 4-6**

The audio connector is connected to external audio devices (AC-KIT-888S-R10) including speakers and microphones for the input and output of audio signals to and from the system.

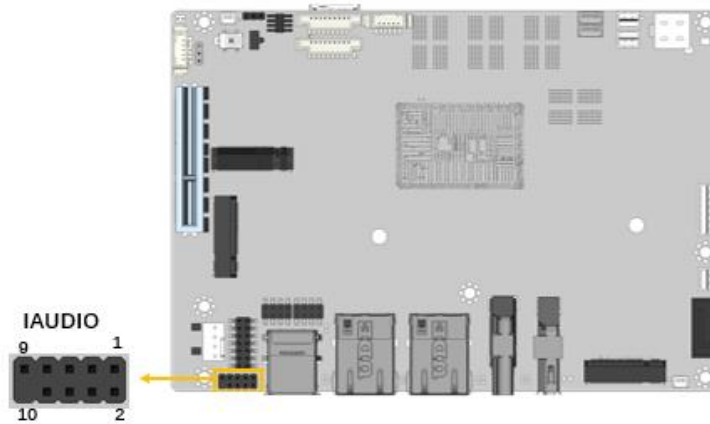

**Figure 4-6: Audio Connector Location**

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	HDA_SYNC	2	HDA_CLK
3	HDA_SDOUT	4	HDA_SPKR
5	HDA_SDIN	6	HDA_RST#
7	+5V	8	GND
9	+12V	10	GND


**Table 4-6: Audio Connector Pinouts**

**DRPC-W-EHL**

**4.9 ATX 12V Power Connector**

- CN Label:** PWR1
- CN Type:** 4-pin Molex, p=4.2 mm
- CN Location:** See Table 4-7
- CN Pinouts:** See Figure 4-7

The connector supports the +12V power supply.

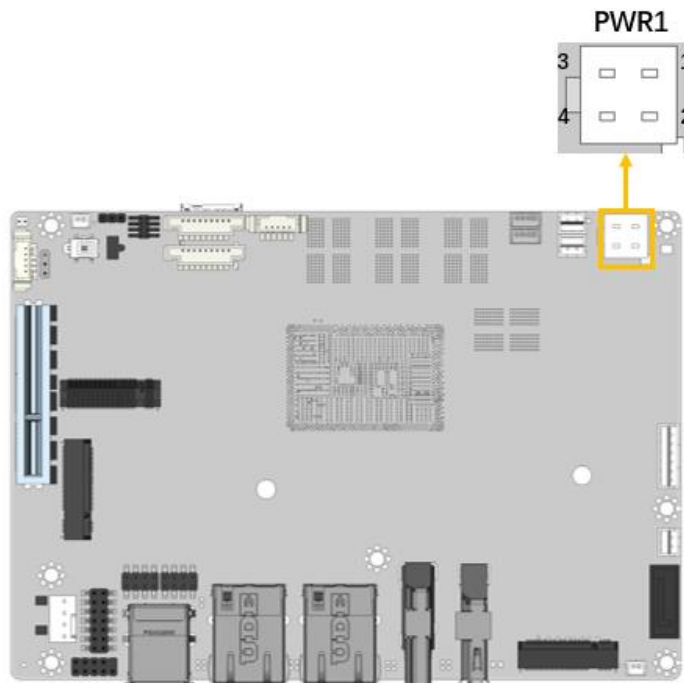

**Figure 4-7: ATX 12V Power Connector Location**

<b>PIN NO.</b>	<b>DESCRIPTION</b>	<b>PIN NO.</b>	<b>DESCRIPTION</b>
1	GND	2	GND
3	+12V	4	+12V

**Table 4-7: ATX 12V Power Connector Pinouts**

## 4.10 RTC Battery Connector

---



### CAUTION:

Risk of fire or explosion or defeat the safeguard of equipment if the battery is replaced by an incorrect type. Replace only with the same or equivalent type.

Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.

High or low extreme temperatures or low air pressure at high altitude that the battery can be subjected to during use, storage or transportation.

Leaving the battery in an extremely high temperature and/or low air pressure surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.

---

---



### NOTE:


It is recommended to attach the RTC battery onto the system chassis in which the DRPC-W-EHL Series is installed.

---

**DRPC-W-EHL**

- CN Label:**           **BAT1**
- CN Type:**           2-pin wafer, p=1.25 mm
- CN Location:**      See **Figure 4-8**
- CN Pinouts:**        See **Table 4-8**

The battery connector is connected to the system battery. The battery provides power to the system clock to retain the time when power is turned off.

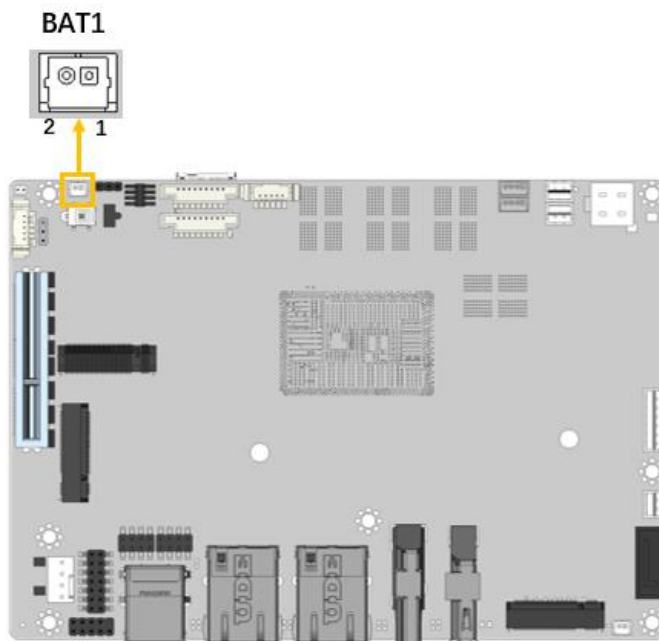

**Figure 4-8: Battery Connector Location**


Pin	Description
1	VBATT
2	GND

**Table 4-8: Battery Connector Pinouts**

### 4.11 Buzzer Connector

- CN Label:** BZ1
- CN Type:** 2-pin wafer, p=1.25 mm
- CN Location:** See **Figure 4-9**
- CN Pinouts:** See **Table 4-9**

The buzzer connector is connected with the buzzer to give a beep warning when the motherboard goes wrong.

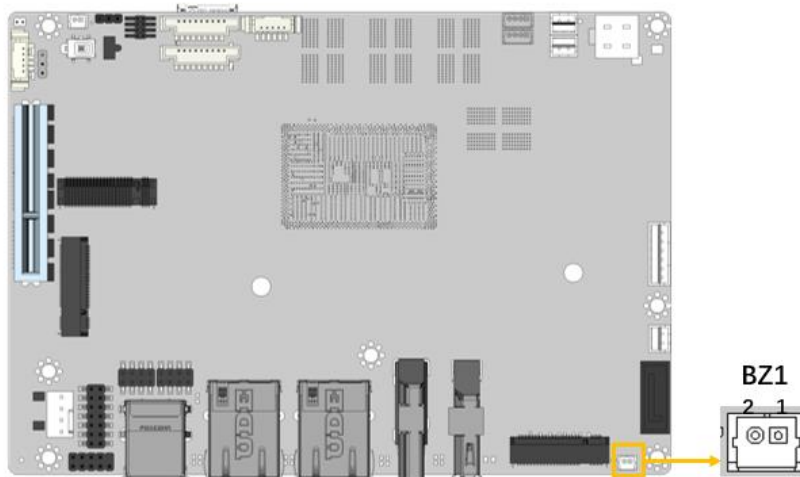

**Figure 4-9: Buzzer Connector Location**

Pin	Description
1	+5V
2	PC_BEEP


**Table 4-9: Buzzer Connector Pinouts**

**DRPC-W-EHL**

**4.12 Digital Input/ Output Connector**

- CN Label:** DIO2
- CN Type:** 14-pin wafer, p=2.0 mm
- CN Location:** See **Figure 4-10**
- CN Pinouts:** See **Table 4-10**

The 12-bit digital I/O connector provides programmable input and output for external devices.

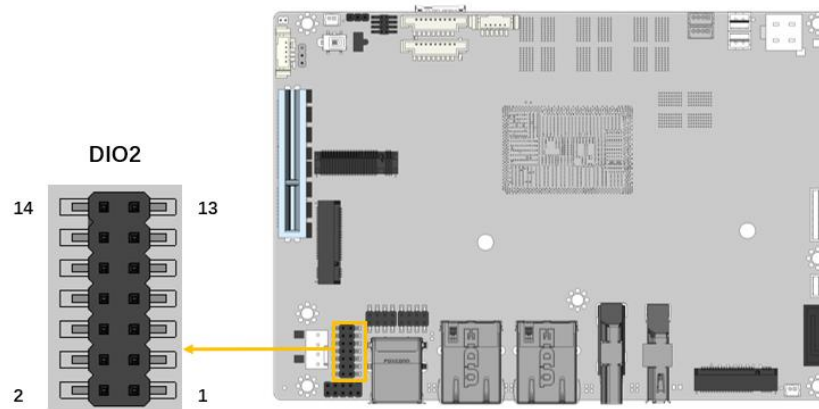

**Figure 4-10: Digital I/O Connector Location**

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	VCC
3	DOUT5	4	DOUT4
5	DOUT3	6	DOUT2
7	DOUT1	8	DOUT0
9	DIN5	10	DIN4
11	DIN3	12	DIN2
13	DIN1	14	DIN0


**Table 4-10: Digital I/O Connector Pinouts**



### 4.13 Fan Connector

- CN Label:** CPU\_FAN1
- CN Type:** 4-pin wafer, p=2.54 mm
- CN Location:** See **Figure 4-11**
- CN Pinouts:** See **Table 4-11**

The fan connector attaches to a smart cooling fan.

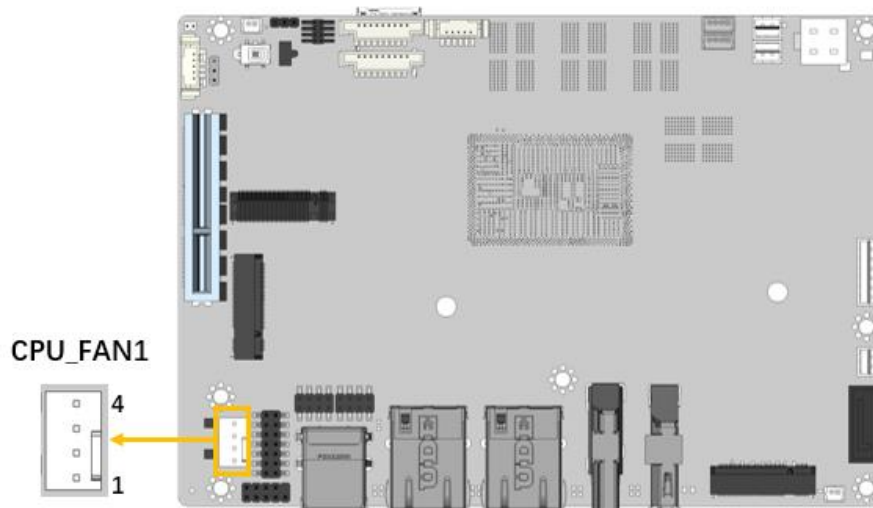

**Figure 4-11: Fan Connector Location**

Pin	Description	Pin	Description
1	GND	2	+12V
3	FANIO	4	PWM


**Table 4-11: Fan Connector Pinouts**

**DRPC-W-EHL**

**4.14 Power LED & HDD LED Connector**

- CN Label:** F\_PANEL1
- CN Type:** 6-pin wafer, p=2.00 mm
- CN Location:** See **Figure 4-12**
- CN Pinouts:** See **Table 4-12**

The front panel connector connects to the power LED indicator and HDD LED indicator on the system front panel.

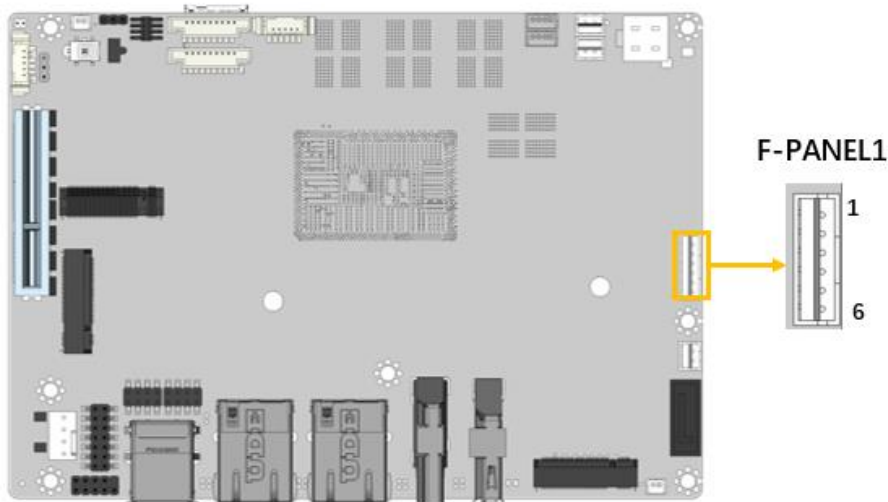

**Figure 4-12: Power LED & HDD LED Connector Location**


Pin	Description	Pin	Description
1	+5V	2	GND
3	PWR_LED+	4	PWR_LED-
5	HDD_LED+	6	HDD_LED-

**Table 4-12: Power LED & HDD LED Connector Pinouts**

### 4.15 Power Button Connector

- CN Label:** PWR\_BTN1
- CN Type:** 2-pin wafer, p=2.00 mm
- CN Location:** See **Figure 4-13**
- CN Pinouts:** See **Table 4-13**

The power button allows users to turn the system on and off.

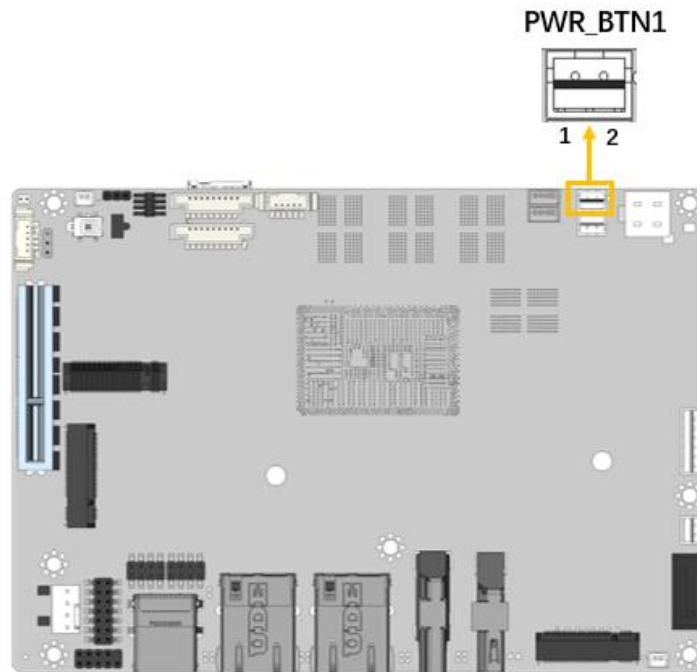

**Figure 4-13: Power Button Connector Location**

Pin	Description
1	PWR_BTN+
2	PWR_BTN-


**Table 4-13: Power Button Connector Pinouts**

**DRPC-W-EHL**

**4.16 Reset Button Connector**

- CN Label:** RST\_BTN1
- CN Type:** 2-pin wafer, p=2.00 mm
- CN Location:** See **Figure 4-14**
- CN Pinouts:** See **Table 4-14**

The reset button connector is connected to a reset switch on the system chassis to enable users to reboot the system when the system is turned on.

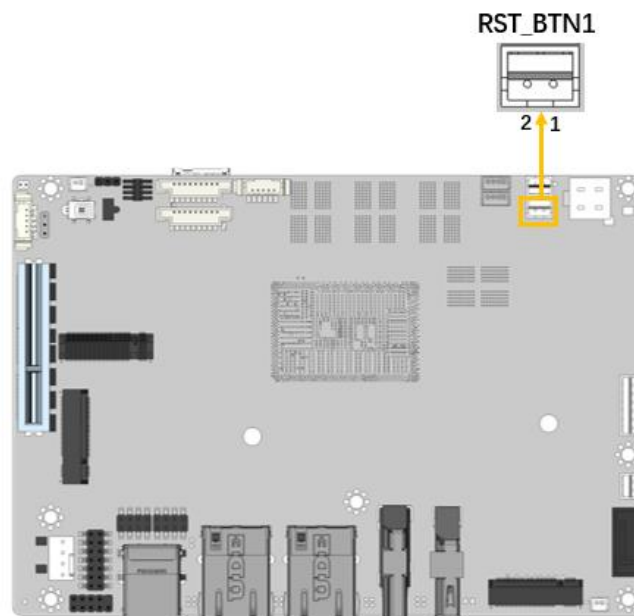

**Figure 4-14: Reset Button Connector Location**


<b>Pin</b>	<b>Description</b>
1	RESET+
2	RESET-

**Table 4-14: Reset Button Connector Pinouts**

### 4.17 RS-232 Serial Port Connector

- CN Label:** COM1, COM2
- CN Type:** 9-pin wafer, p=1.25 mm
- CN Location:** See **Figure 4-15**
- CN Pinouts:** See **Table 4-15**

The serial connector provides RS-232 connection.

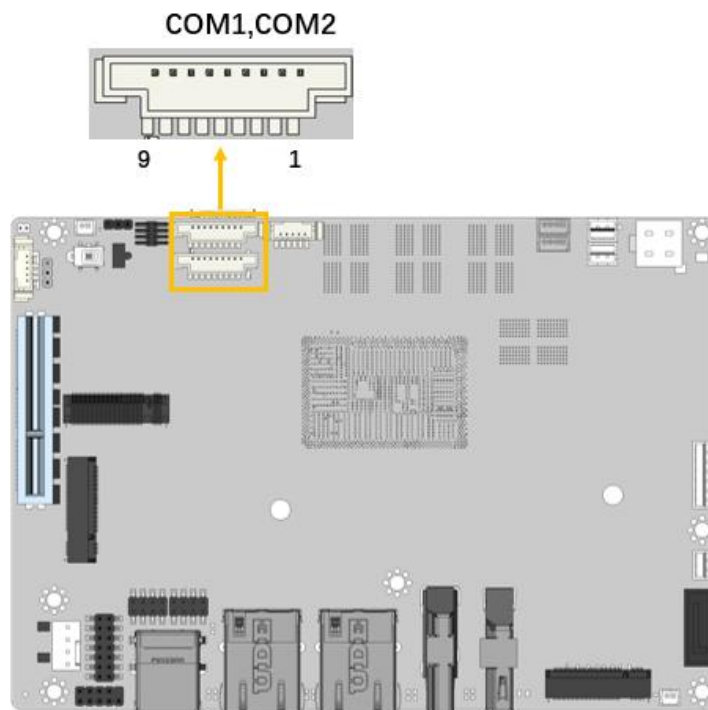

**Figure 4-15: RS-232 Serial Port Connector Location**

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	DCD	2	DSR
3	RXD	4	RTS
5	TXD	6	CTS
7	DTR	8	RI
9	GND		


**Table 4-15: RS-232 Serial Port Connector Pinouts**

**DRPC-W-EHL**

**4.18 SATA 6Gb/s Drive Connector**

- CN Label:** SATA1
- CN Type:** 7-pin SATA connector
- CN Location:** See **Figure 4-16**
- CN Pinouts:** See **Table 4-16**

The SATA 6Gb/s drive connector is connected to a SATA 6Gb/s drive. The SATA 6Gb/s drive transfers data at speeds as high as 6Gb/s.

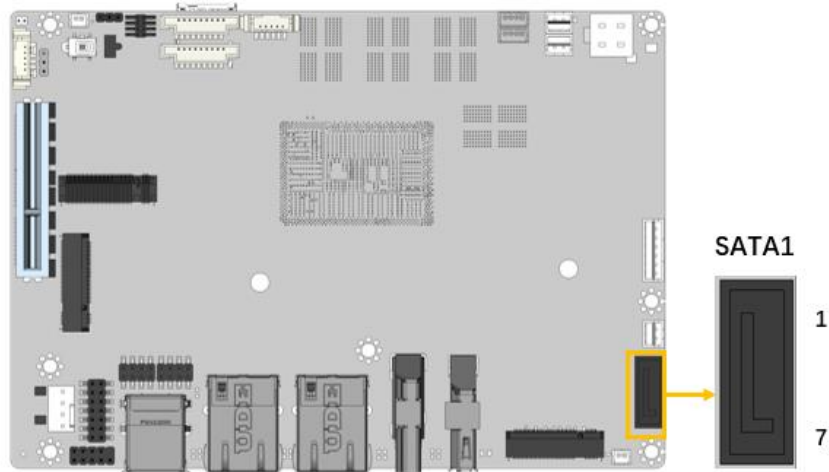

**Figure 4-16: SATA 6Gb/s Drive Connectors Location**


<b>PIN NO.</b>	<b>DESCRIPTION</b>	<b>PIN NO.</b>	<b>DESCRIPTION</b>
1	GND	5	SATA_RX-
2	SATA_TX+	6	SATA RX+
3	SATA_TX-	7	GND
4	GND	8	N/C

**Table 4-16: SATA 6Gb/s Drive Connectors Pinouts**

### 4.19 SATA Power Connector

- CN Label:** SATA\_PWR1
- CN Type:** 2-pin wafer, p=2.00 mm
- CN Location:** See **Figure 4-17**
- CN Pinouts:** See **Table 4-17**

The SATA power connector provides +5 V power output to the SATA connector.

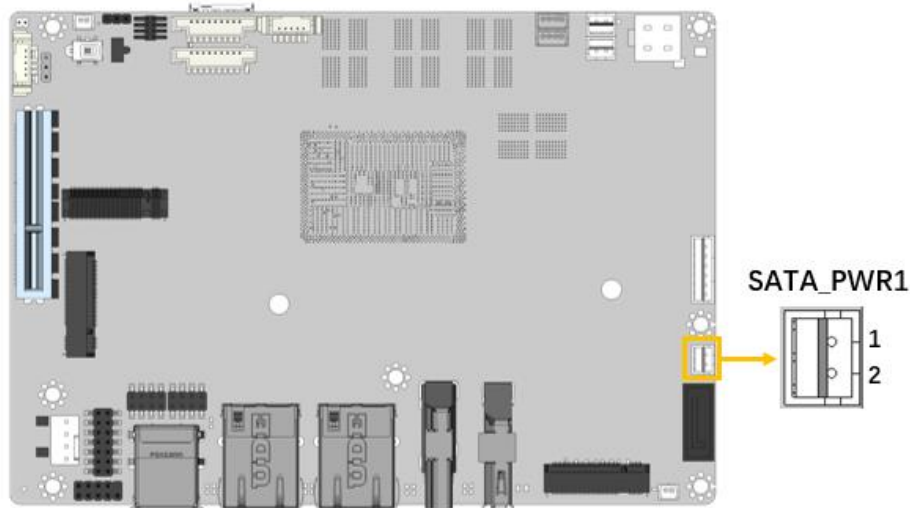

**Figure 4-17: SATA Power Connector Location**

Pin	Description
1	+5V
2	GND


**Table 4-17: SATA Power Connector Pinouts**

**DRPC-W-EHL**

**4.20 I<sup>2</sup>C Connector**

- CN Label:** I2C1
- CN Type:** 4-pin wafer, p=1.25 mm
- CN Location:** See **Figure 4-18**
- CN Pinouts:** See **Table 4-18**

The SMBus (System Management Bus) connector provides low-speed system management communications.

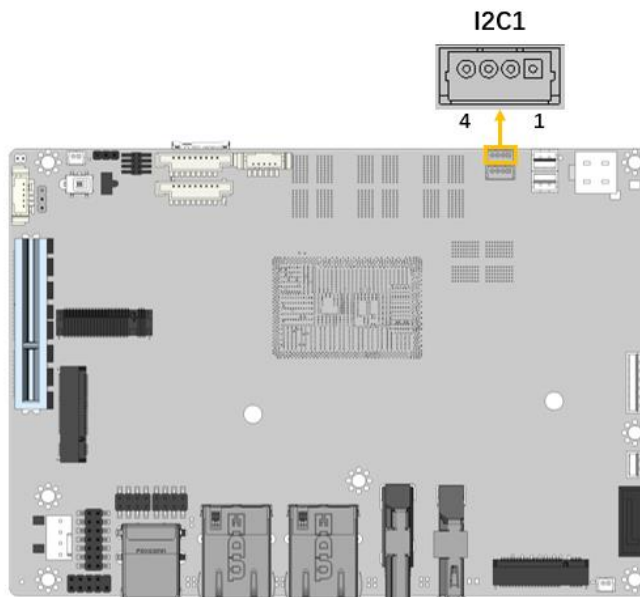

**Figure 4-18: I<sup>2</sup>C Connector Location**

<b>Pin</b>	<b>Description</b>
1	GND
2	I2C_DATA
3	I2C_CLK
4	+5V


**Table 4-18: I<sup>2</sup>C Connector Pinouts**



### 4.21 SMBus Connector

- CN Label:** SMB1
- CN Type:** 4-pin wafer, p=1.25 mm
- CN Location:** See **Figure 4-19**
- CN Pinouts:** See **Table 4-19**

The SMBus is a two-wire bus used for communication with low bandwidth devices on a motherboard such as power related chips and temperature sensors.

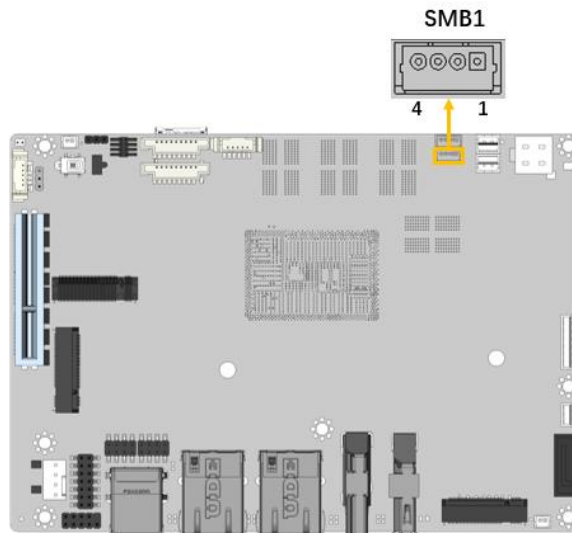

**Figure 4-19: SMBus Connector Location**

Pin	Description
1	GND
2	SMB_DATA
3	SMB_CLK
4	+5V


**Table 4-19: SMBus Connector Pinouts**

**DRPC-W-EHL**

**4.22 Flash SPI ROM Connector**

- CN Label:** JBIOS1
- CN Type:** 6-pin wafer, p=1.25 mm
- CN Location:** See **Figure 4-20**
- CN Pinouts:** See **Table 4-20**

The 6-pin Flash SPI ROM connector is used to flash the BIOS.

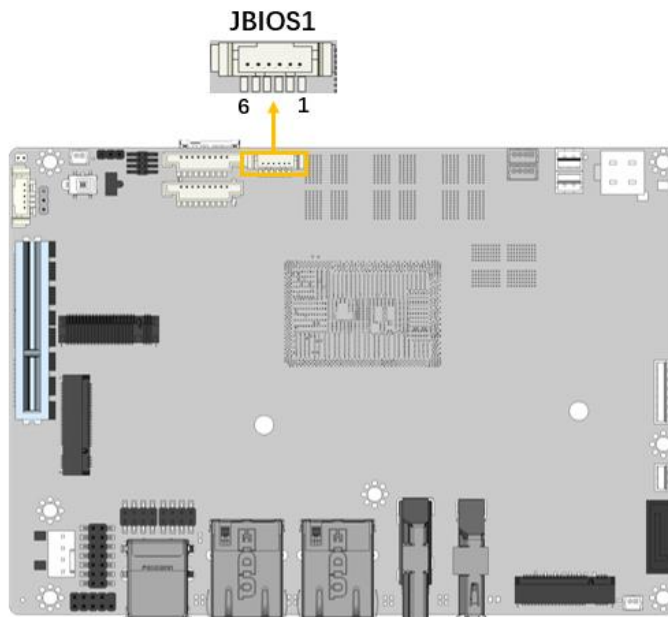

**Figure 4-20: Flash SPI ROM Connector Location**


<b>Pin</b>	<b>Description</b>
1	+3.3V
2	SPI_CS#
3	SPI SO
4	SPI CLK
5	SPI SI
6	GND

**Table 4-20: Flash SPI ROM Connector Pinouts**

### 4.23 Flash EC ROM Connector

- CN Label:** JEC2
- CN Type:** 8-pin header, p=1.27 mm
- CN Location:** See **Figure 4-21**
- CN Pinouts:** See **Table 4-21**

The 6-pin Flash EC ROM connector is used to flash the EC internal ROM.

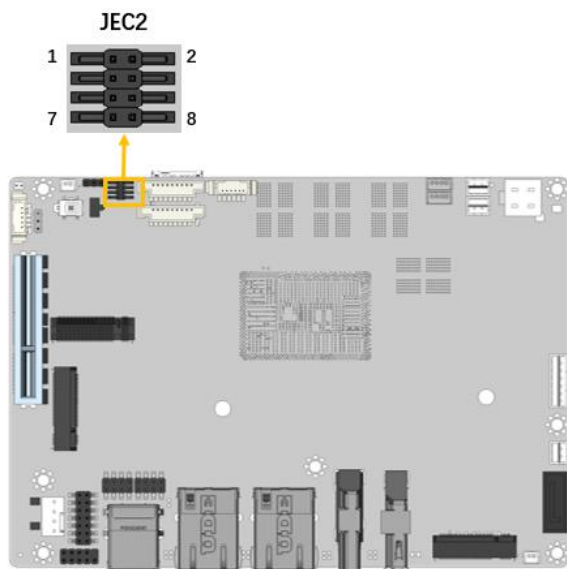

**Figure 4-21: Flash EC ROM Connector Location**


Pin	Description	Pin	Description
1	SPI_CS#	2	+3.3V
3	SPI_SO	4	NC
5	EC_DET_FLASH	6	SPI_CLK
7	GND	8	SPI_SI

**Table 4-21: Flash EC ROM Connector Pinouts**

**DRPC-W-EHL**

**4.24 EC Debug Connector**

- CN Label:**            **DEBUG\_SPI1**
- CN Type:**            6-pin header, p=1.25 mm
- CN Location:**      See **Figure 4-22**
- CN Pinouts:**        See **Table 4-22**

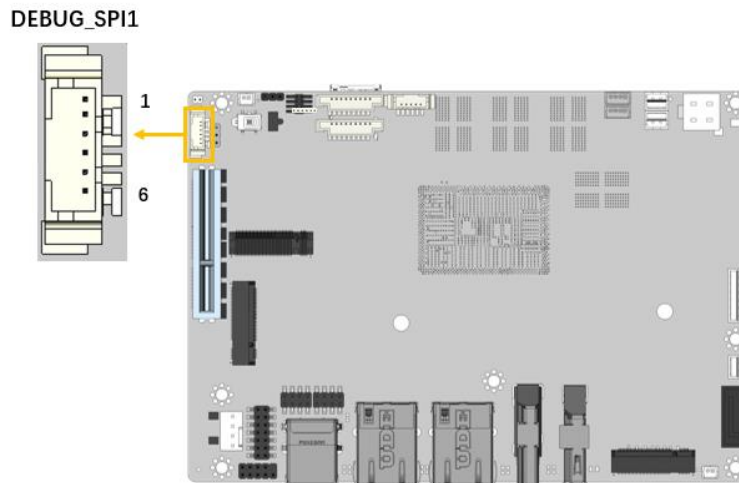

**Figure 4-22: EC Debug Connector Location**


<b>Pin</b>	<b>Description</b>	<b>Pin</b>	<b>Description</b>
1	NC	2	EDICK
3	EDICS	4	EDIDI
5	EDIDO	6	GND

**Table 4-22: EC Debug Connector Pinouts**

### 4.25 Internal USB 2.0 Connectors

- CN Label:** JUSB3, JUSB4
- CN Type:** 8-pin header, p=2.00 mm
- CN Location:** See **Figure 4-23**
- CN Pinouts:** See **Table 4-23**

Each USB connector provides two USB 2.0 ports by dual-port USB cable.

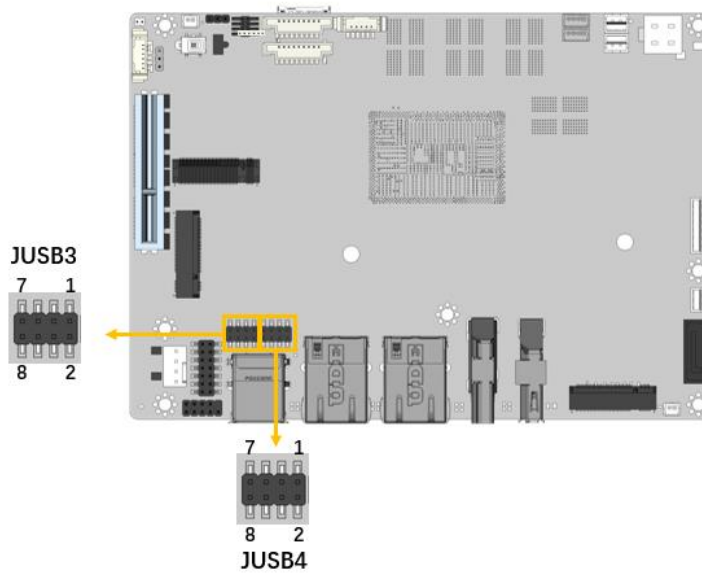

**Figure 4-23: Internal USB 2.0 Connectors Locations**

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	VCC	2	GND
3	USB DATA-	4	USB DATA+
5	USB DATA+	6	USB DATA-
7	GND	8	VCC


**Table 4-23: Internal USB 2.0 Connectors Pinouts**

DRPC-W-EHL

### 4.26 M.2 A-key Slot

- CN Label:** M2\_A\_LEY
- CN Type:** M.2 A-key slot
- CN Location:** See **Figure 4-24**
- CN Pinouts:** See **Table 4-24**

The M.2 slot is keyed in the A position and accepts 2230 size of M.2 modules.

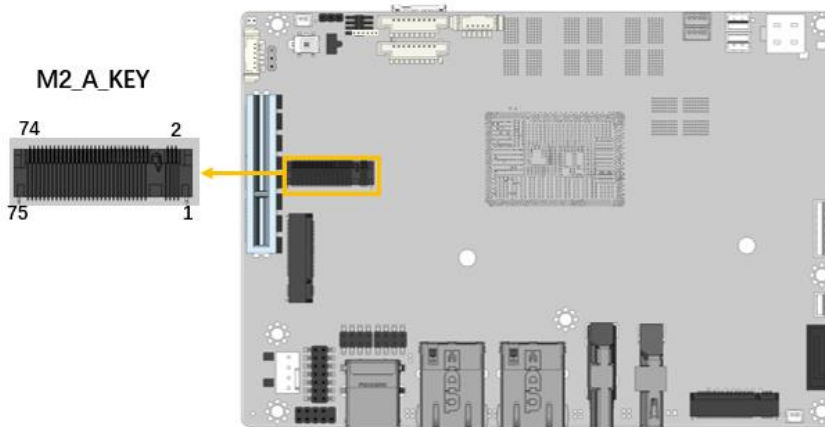

**Figure 4-24: M.2 A-key Slot Location**

Pin	Description	Pin	Description
1	GND	2	+V3.3A
3	USB+	4	+V3.3A
5	USB-	6	NC
7	GND	8	Module Key
9	Module Key	10	Module Key
11	Module Key	12	Module Key
13	Module Key	14	Module Key
15	Module Key	16	NC
17	NC	18	GND
19	NC	20	NC
21	NC	22	NC
23	GND	24	GND
25	NC	26	NC

Pin	Description	Pin	Description
27	NC	28	NC
29	GND	30	GND
31	NC	32	NC
33	GND	34	NC
35	PCIE_TX6+	36	GND
37	PCIE_TX6-	38	NC
39	GND	40	NC
41	PCIE_RX6+	42	NC
43	PCIE_RX6-	44	NC
45	GND	46	NC
47	CLK_M2_A+	48	NC
49	CLK_M2_A-	50	BTWIFI_SUS_CLK
51	GND	52	WLAN_PERST#
53	NC	54	+V3.3A_WLAN
55	+V3.3A_WLAN	56	+V3.3A_WLAN
57	GND	58	NC
59	NC	60	NC
61	NC	62	NC
63	GND	64	NC
65	NC	66	NC
67	NC	68	NC
69	GND	70	PEWAKE#
71	NC	72	+V3.3A
73	NC	74	+V3.3A
75	GND		

**Table 4-24: M.2 A-Key Slot Pinouts**

DRPC-W-EHL

### 4.27 M.2 B-key Slot

- CN Label:** M2\_B\_KEY
- CN Type:** M.2 B-key slot
- CN Location:** See Figure 4-25
- CN Pinouts:** See Table 4-25

The M.2 B key 3042 slot with PCIe Gen3 x2 signal supports NVMe storage or 5G module with SIM holder

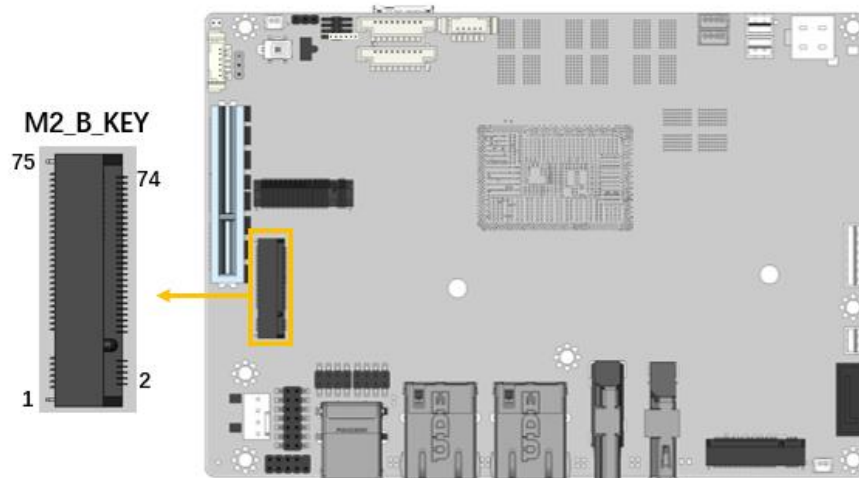


Figure 4-25: M.2 B-key Slot Location

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	WWAN_CONFIG3	2	+3.3V_WWAN
3	GND	4	+3.3V_WWAN
5	GND	6	WWAN_FCP_OFF
7	USB_D+	8	WWAN_DISABLE
9	USB_D-	10	NC
11	GND	12	Module Key
13	Module Key	14	Module Key
15	Module Key	16	Module Key
17	Module Key	18	Module Key
19	Module Key	20	PSE_I2S1_SCLK




21	WWAN_CONFIG0	22	PSE_I2S1_TXD
23	PCIE_WAKE#	24	PSE_I2S1_RXD
25	SAR_DPR_WWAN	26	GNSS_DISABLE_N
27	GND	28	NC
29	PCIE_RXN5	30	WWAN_UIM_RST
31	PCIE_RXP5	32	WWAN_UIM_CLK
33	GND	34	WWAN_UIM_DATA
35	PCIE_TXN5	36	UIM_PWR
37	PCIE_TXP5	38	SSD_DEVSLP
39	GND	40	NC
41	PCIE_RXN4	42	NC
43	PCIE_RXP4	44	NC
45	GND	46	NC
47	PCIE_TXN4	48	NC
49	PCIE_TXP4	50	WWAN_PERST#
51	GND	52	N/C
53	CLK_M2_B_N	54	WWAN_WAKE#
55	CLK_M2_B_P	56	NC
57	GND	58	NC
59	NC	60	NC
61	NC	62	NC
63	NC	64	NC
65	NC	66	WWAN_SIM1_DET
67	WWAN_RST	68	WWAN_SUSCLK
69	DET_OS-PCIE/ GND-SATA	70	+3.3V
71	GND	72	+3.3V
73	GND	74	+3.3V
75	WWAN_CONFIG2		

**Table 4-25: M.2 B-key Slot Pinouts**

**DRPC-W-EHL**

**4.28 SIM Card Slot**

- CN Label:** SIM1
- CN Type:** 7-pin SIM holder
- CN Location:** See **Figure 4-26**
- CN Pinouts:** See **Table 4-26**

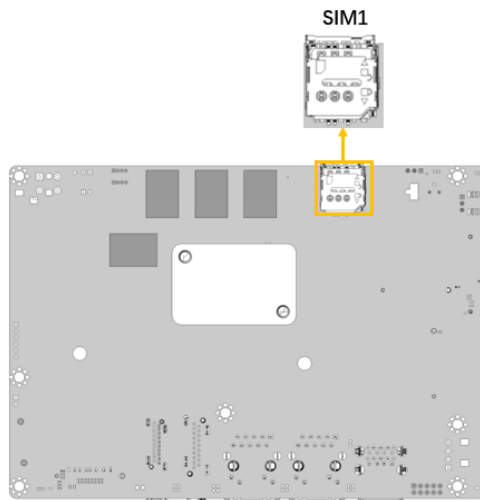

**Figure 4-26: SIM Card Slot Location**

<b>PIN NO.</b>	<b>DESCRIPTION</b>
C1	SIM_VCC
C2	SIM_RST
C3	SIM_Clock
C5	GND
C6	NC
C7	SIM_DATA

**Table 4-26: SIM Card Slot Pinouts**



**CAUTION:**

A WWAN module must be installed in the M.2 B-key slot to provide WWAN communication.

Chapter

**5**

# **BIOS**

---

## 5.1 Introduction

The BIOS is programmed onto the BIOS chip. The BIOS setup program allows changes to certain system settings. This chapter outlines the options that can be changed.



### NOTE:

Some of the BIOS options may vary throughout the life cycle of the product and are subject to change without prior notice.

---

### 5.1.1 Starting Setup

The UEFI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. **Using keyboard:** Press the **DEL** or **F2** as soon as the system is turned on.
2. **Using touchscreen:** Press the **Setup** button on the upper right corner of the BIOS Starting Menu.

If the message disappears before the **DEL** or **F2** key is pressed, restart the computer and try again, then the BIOS Starting Menu will appear. Select "Setup" and press Enter to get into the BIOS Setup.

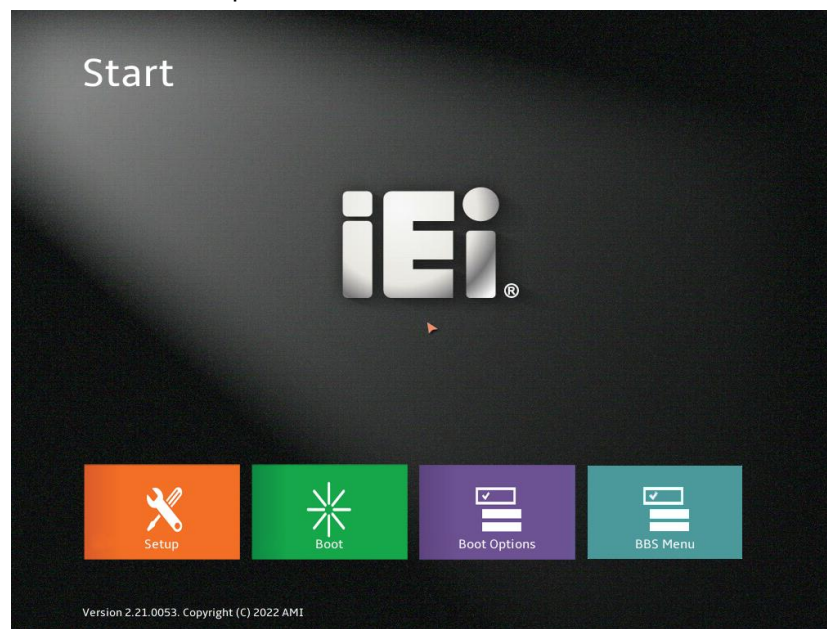


Figure 5-1: BIOS Starting Menu

## 5.1.2 Using Setup

The BIOS Setup menu can be navigated by using a keyboard or a touchscreen.

### 5.1.2.1 Keyboard Navigation


For keyboard navigation, use the navigation keys shown in **Table 5-1**.

Key	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
+	Increase the numeric value or make changes
-	Decrease the numeric value or make changes
Page Up	Move to the previous page
Page Dn	Move to the next page
Esc	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
F1	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2	Load previous values
F3	Load optimized defaults
F4	Save changes and Exit BIOS
<K>	Scroll help area upwards
<M>	Scroll help area downwards

**Table 5-1: BIOS Navigation Keys**

### 5.1.2.2 Touch Navigation

For touchscreen navigation, use the on-screen navigation keys shown below.

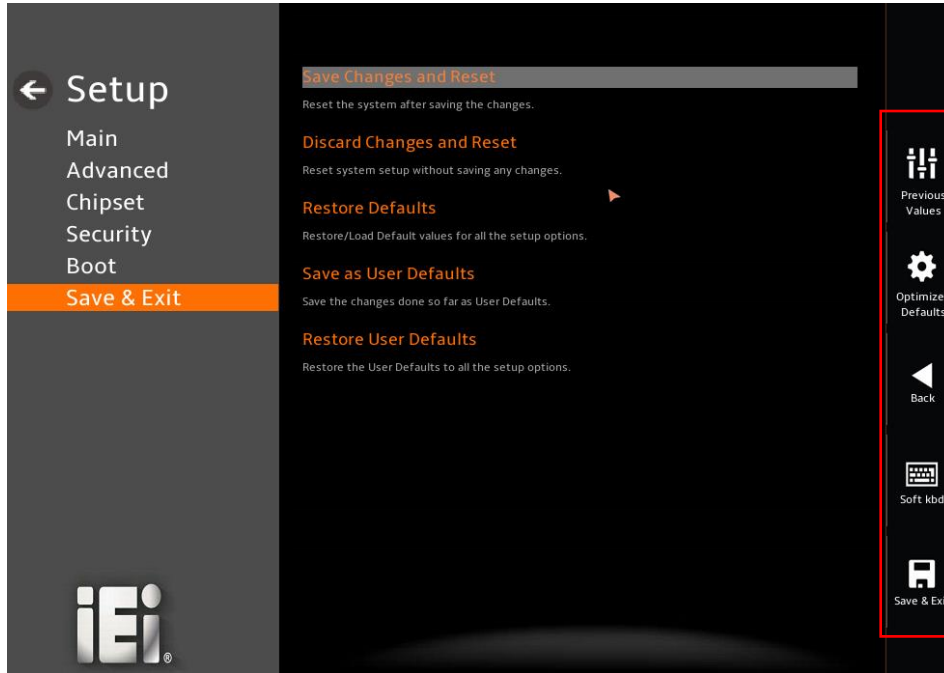

On-screen Button	Function
Previous Values	Load the last value you set.
Optimized Defaults	Load the factory default values in order to achieve the best performance.
Back	Return to the previous menu.
Soft kbd	Display the on-screen keyboard.
Save & Exit	Save the changes made to the BIOS options and reset the system.

Table 5-2: BIOS On-screen Navigation Keys

### 5.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window, press the **Esc** key.

### 5.1.4 Unable to Reboot after Configuration Changes

If the computer cannot boot after changes to the system configuration is made, CMOS defaults. Use the clear CMOS button described in **Chapter 4**.

### 5.1.5 BIOS Menu Bar


The **menu bar** on top of the BIOS screen has the following main items:

- Main – Changes the basic system configuration.
- Advanced – Changes the advanced system settings.
- Chipset – Changes the chipset settings.
- Security – Sets User and Supervisor Passwords.
- Boot – Changes the system boot configuration.
- Save & Exit – Selects exit options and loads default settings

The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.


## 5.2 Main

The **Main** BIOS menu (**BIOS Menu 1 & BIOS Menu 2**) appears when the **BIOS Setup** program is entered. The **Main** menu gives an overview of the basic system information.

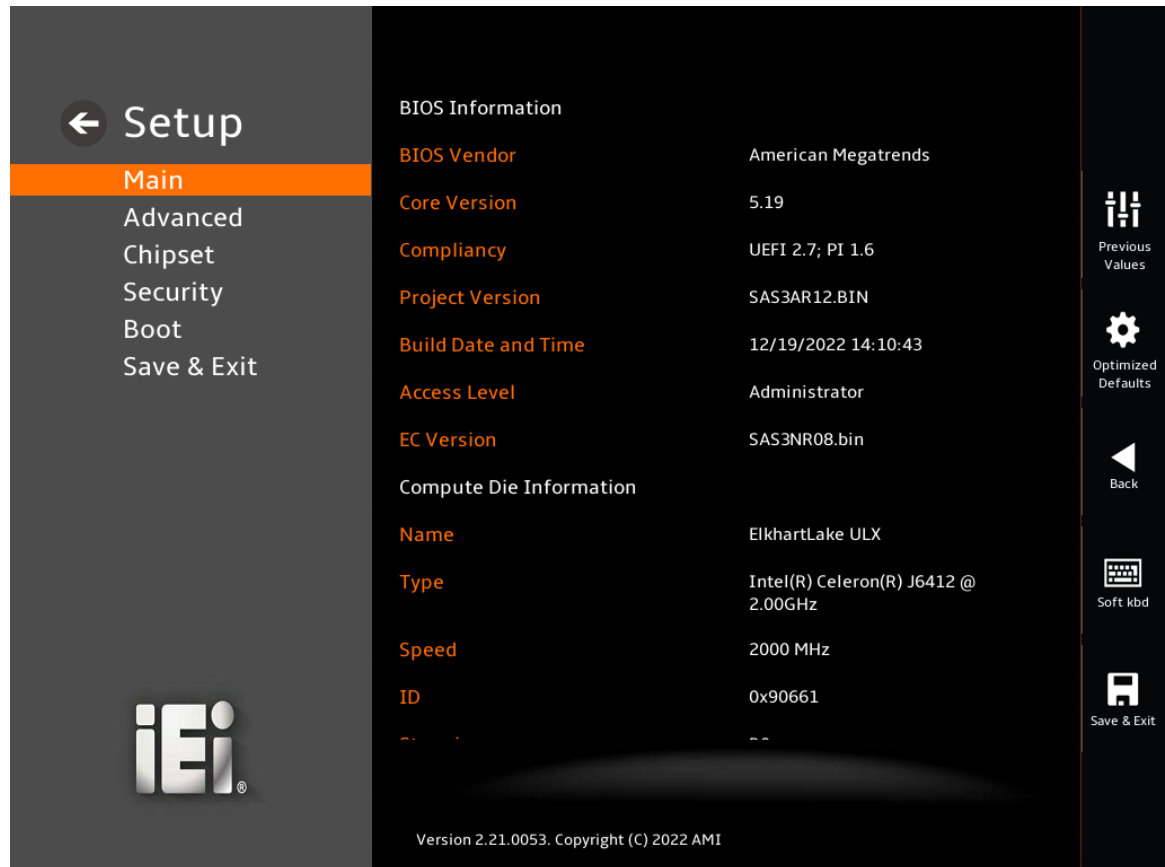

**BIOS Menu 1: Main (1/2)**



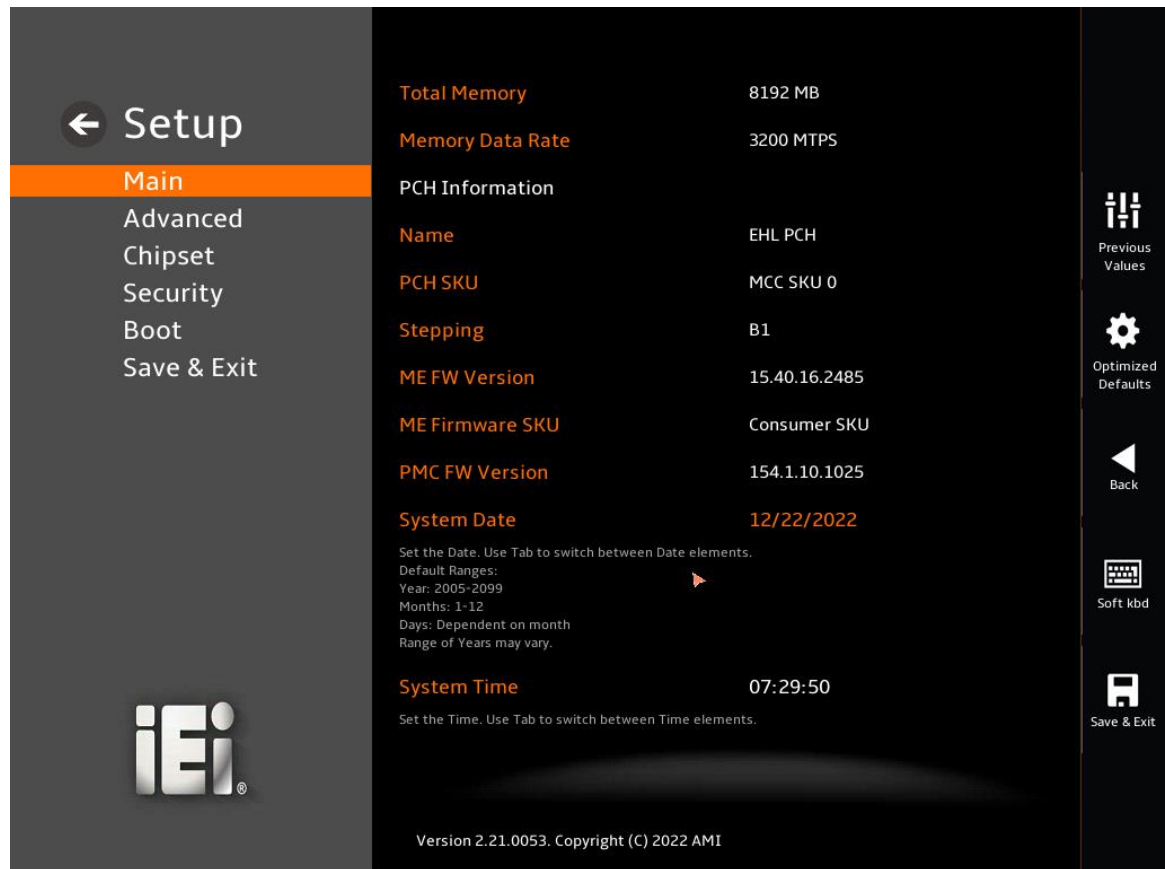

**BIOS Menu 2: Main (2/2)**

➔ **BIOS Information**

The **BIOS Information** lists a brief summary of the BIOS. The fields in **BIOS Information** cannot be changed. The items shown in the system overview include:

- **BIOS Vendor:** Installed BIOS vendor
- **Core Version:** Current BIOS version
- **Compliance:** Current UEFI & PI version
- **Project Version:** the board version
- **Build Date and Time:** Date the current BIOS version was made
- **EC Version:** Current EC version
- BIOS Information

## DRPC-W-EHL

### → Compute Die Information

The **Compute Die Information** lists a brief summary of the Processor. The fields in **Compute Die Information** cannot be changed. The items shown in the system overview include:

- **Name:** Displays the Processor Details
- **Type:** Displays the Processor Type
- **Speed:** Displays the Processor Speed
- **ID:** Displays the Processor ID
- **Stepping:** Displays the Processor Stepping
- **Number of Processors:** Displays number of CPU cores
- **Microcode Revision:** CPU Microcode Revision
- **Total Memory:** Total Memory in the System
- **Memory Data Rate:** Displays the Data Rate of Memory

### → PCH Information

The **PCH Information** lists a brief summary of the PCH. The fields in **PCH Information** cannot be changed. The items shown in the system overview include:

- **Name:** Displays the PCH Name
- **Stepping:** Displays the PCH Stepping
- **ME FW Version:** Displays the ME Firmware Version
- **ME Firmware SKU:** Displays the ME Firmware SKU

The System Overview field also has two user configurable fields:

### → System Date [xx/xx/xx]

Use the **System Date** option to set the system date. Manually enter the day, month and year.

### → System Time [xx:xx:xx]

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.


### 5.3 Advanced

Use the **Advanced** menu (**BIOS Menu 3**) to configure the CPU and peripheral devices through the following sub-menus:



#### WARNING!

Setting the wrong values in the sections below may cause the system to malfunction. Make sure that the settings made are compatible with the hardware.

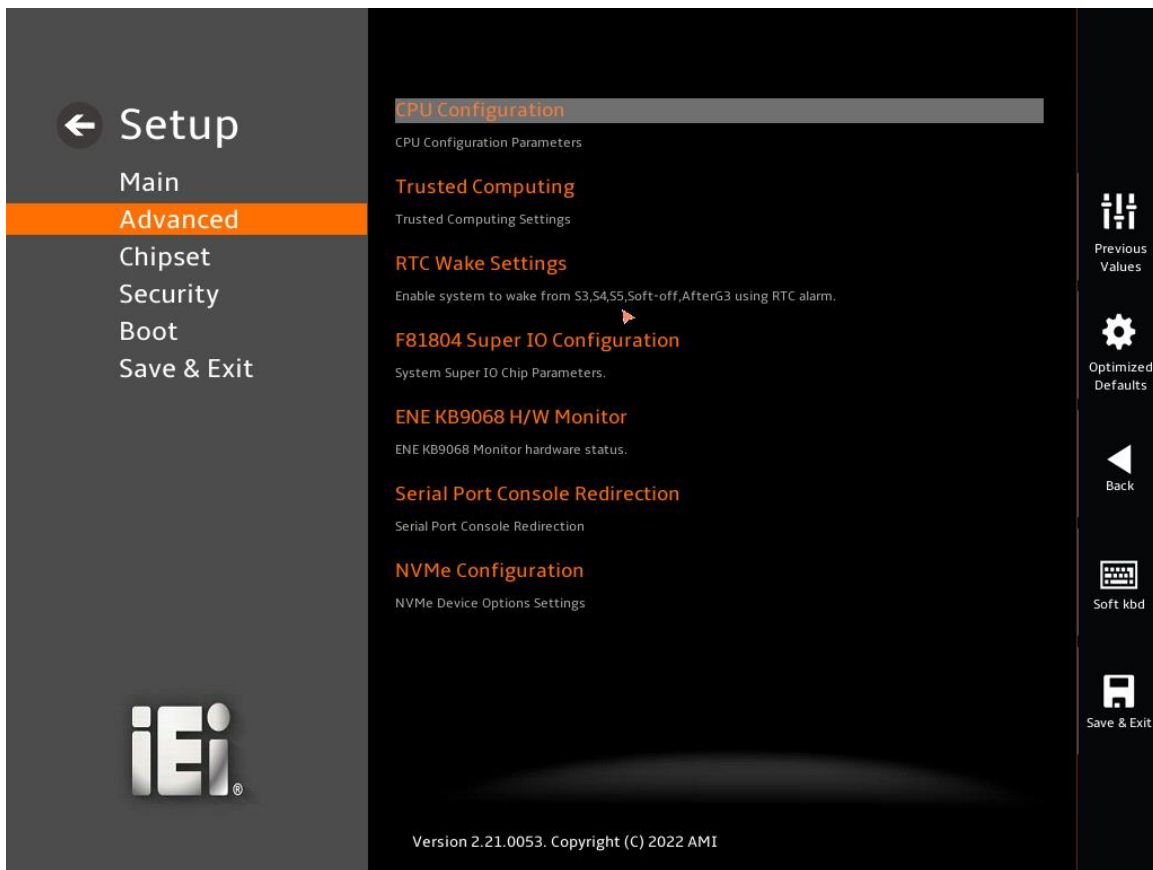


BIOS Menu 3: Advanced

DRPC-W-EHL

5.3.1 CPU Configuration

Use the **CPU Configuration** menu (**BIOS Menu 4 & BIOS Menu 5 & BIOS Menu 6**) to view detailed CPU specifications or enable the Intel Virtualization Technology.

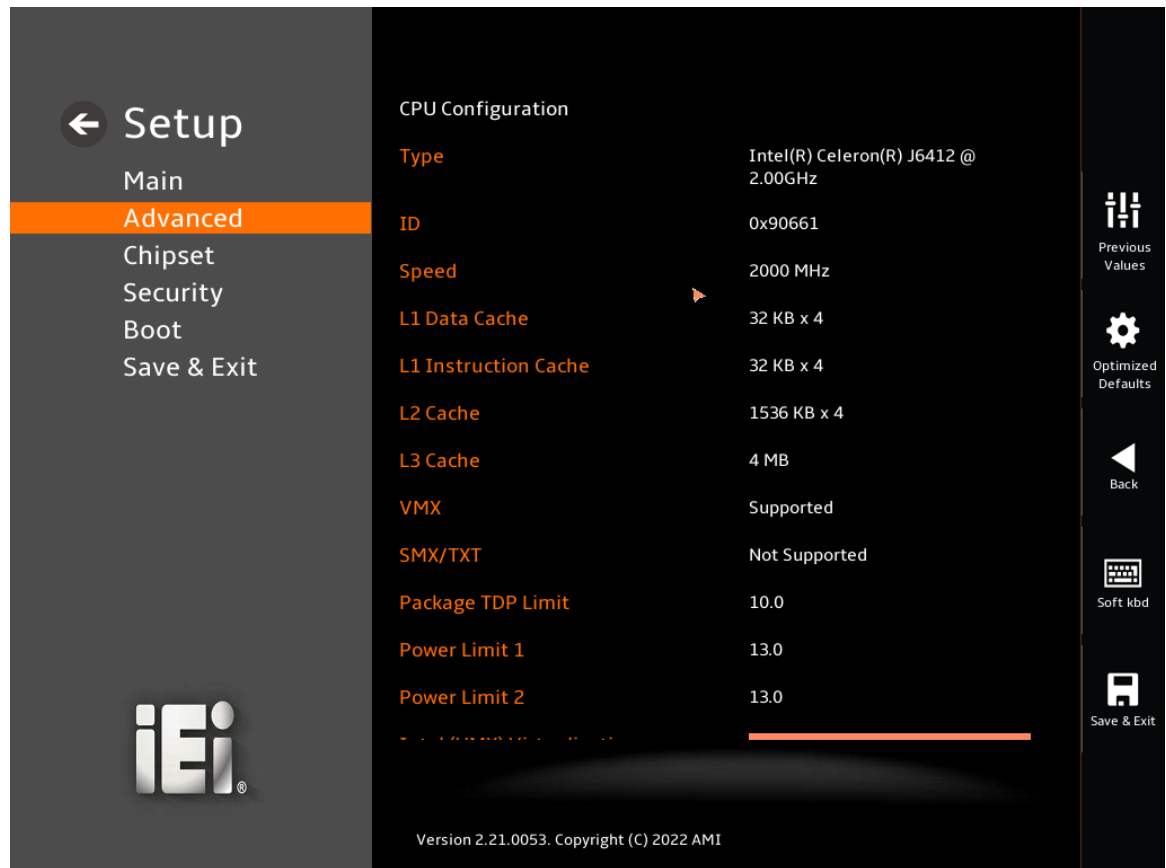

BIOS Menu 4: CPU Configuration (1/3)

**Setup**  
Main  
**Advanced**  
Chipset  
Security  
Boot  
Save & Exit

**Intel (VMX) Virtualization Technology** Enabled  
When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

**Active Processor Cores** All  
Number of cores to enable in each processor package.

**EIST** Enabled  
Allows more than two frequency ranges to be supported.

**C states** Disabled  
Enable/Disable CPU Power Management. Allows CPU to go to C states when it's not 100% utilized.

**Tcc Activation Offset** 0  
Offset from factory set Tcc activation temperature at which the Thermal Control Circuit must be activated. Tcc will be activated at: Tcc Activation Temp - Tcc Activation Offset. Tcc Activation Offset range is 0 to 63.

**Turbo Mode** Enabled  
Enable/Disable processor Turbo Mode (requires EMTTM enabled too). AUTO means enabled.

**Power Limit 1** 13000  
Power Limit 1 in Milli Watts. BIOS will round to the nearest 1/8W when programming. 0 = no custom override. For 12.50W, enter 12500. Overclocking SKU: Value must be between Max and Min Power Limits (specified by PACKAGE\_POWER\_SKU\_MSR). Other SKUs: This value must be between Min Power Limit and TDP Limit. If value is 0, BIOS will program TDP value.

Previous Values  
Optimized Defaults  
Back  
Soft kbd  
Save & Exit

iEi

Version 2.21.0053. Copyright (C) 2022 AMI

BIOS Menu 5: CPU Configuration (2/3)



### BIOS Menu 6: CPU Configuration (3/3)

#### → Intel (VMX) Virtualization Technology [Enabled]

Use the **Intel (VMX) Virtualization Technology** option to enable or disable virtualization on the system. When combined with third party software, Intel® Virtualization technology allows several OSs to run on the same system at the same time.

- **Disabled** Disables Intel Virtualization Technology.
- **Enabled** **DEFAULT** Enables Intel Virtualization Technology.

#### → Active Processor Cores [All]

Use the **Active Processor Cores** BIOS option to enable numbers of cores in the processor package.

- **All** **DEFAULT** Enable all cores in the processor package.

- 1 Enable one core in the processor package.
- 2 Enable two cores in the processor package.
- 3 Enable three cores in the processor package.

→ **EIST [Enable]**

Use the **EIST** option to enable more than two frequency ranges to be supported.

- **Disabled** Disables more than two frequency ranges
- **Enabled** **DEFAULT** Enables more than two frequency ranges

→ **C states [Disabled]**

Use the **C states** option to enable or disable the CPU Power Management.

- **Disabled** **DEFAULT** Disables CPU to go to C states when it's not 100% utilized.
- **Enabled** Enables CPU to go to C states when it's not 100% utilized.

→ **Tcc Activation Offset [0]**

Use the **Tcc Activation Offset** option to set Tcc activation temperature at which the Thermal Control Circuit must be activated. Tcc will be activated at: Tcc Activation Temp-Tcc Activation Offset. Tcc Activation Offset range is 0 to 63.

→ **Turbo Mode [Enabled]**

Use the **Turbo Mode** option to enable or disable Turbo Mode which requires Intel Speed Step or Intel Speed Shift to be available and enabled.

- **Disabled** Disables Turbo Mode Technology
- **Enabled** **DEFAULT** Enables Turbo Mode Technology

## DRPC-W-EHL

### → Power Limit 1

Use the **Power Limit 1** to set Power Limit in Milli Watts. BIOS will round to the nearest 1/8W when programming. 0 = no custom override. For 12.50W, enter 12500. Overclocking SKU: Value must be between Max and Min Power Limits. Other SKUs: This value must be between Min Power limit and TDP Limit. If value is 0, BIOS will program TDP value.

### → Power Limit 1 Time Window

Power Limit 1 Time Window value in second. The value may vary from 0 to 128.0, 0 = default value (28 sec for mobile and 8 sec for desktop). Defines time window which TDP value should be maintained.

### → Power Limit 2

Use the **Power Limit 2** to set Power Limit in Milli Watts. BIOS will round to the nearest 1/8W when programming. If the value is 0, BIOS will program this value as  $1.25 * TDP$ . For 12.50W, enter 12500. Processor applies control policies such that the package power does not exceed this limit.



### 5.3.2 Trusted Computing

Use the **Trusted Computing** menu (**BIOS Menu 7**) to configure settings related to the Trusted Computing Group (TCG) Trusted Platform Module (TPM).



#### BIOS Menu 7: Trusted Computing

##### → TPM Support [Enable]

Use the **TPM Support** option to configure support for the TPM.

- **Disable**    TPM support is disabled.
- **Enable**    DEFAULT          TPM support is enabled.

##### → Pending Operation [None]


Use the **Pending Operation** option to schedule an operation for the security device.

## DRPC-W-EHL

- ➔ None                    **DEFAULT**            TPM information is previous.S
- ➔ TPM Clear                                    TPM information is cleared

### 5.3.3 F81804 Super IO Configuration


Use the **F81804 Super IO Configuration** menu (**BIOS Menu 8**) to set or change the configurations for the serial ports.

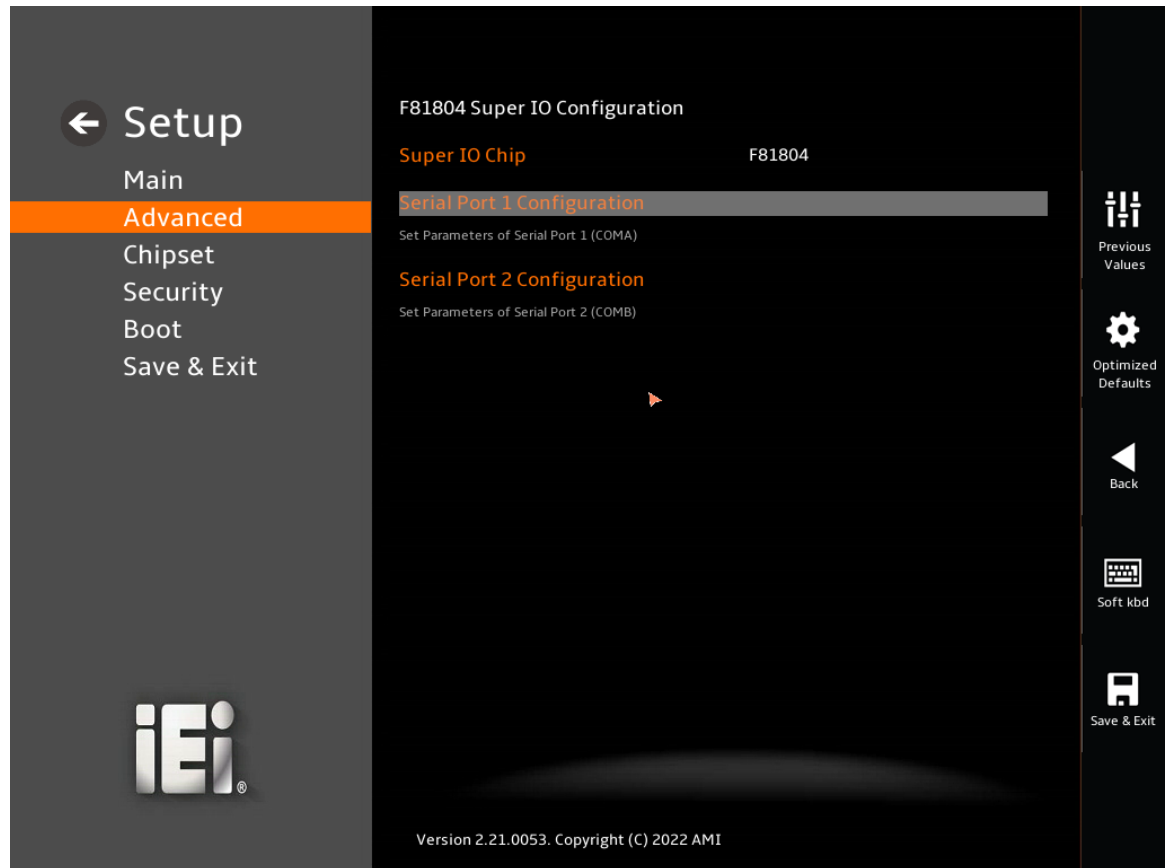

**BIOS Menu 8: F81804 Super IO Configuration**

### 5.3.3.1 Serial Port 1 Configuration

Use the **Serial Port 1 Configuration** menu (**BIOS Menu 9**) to configure the serial port.

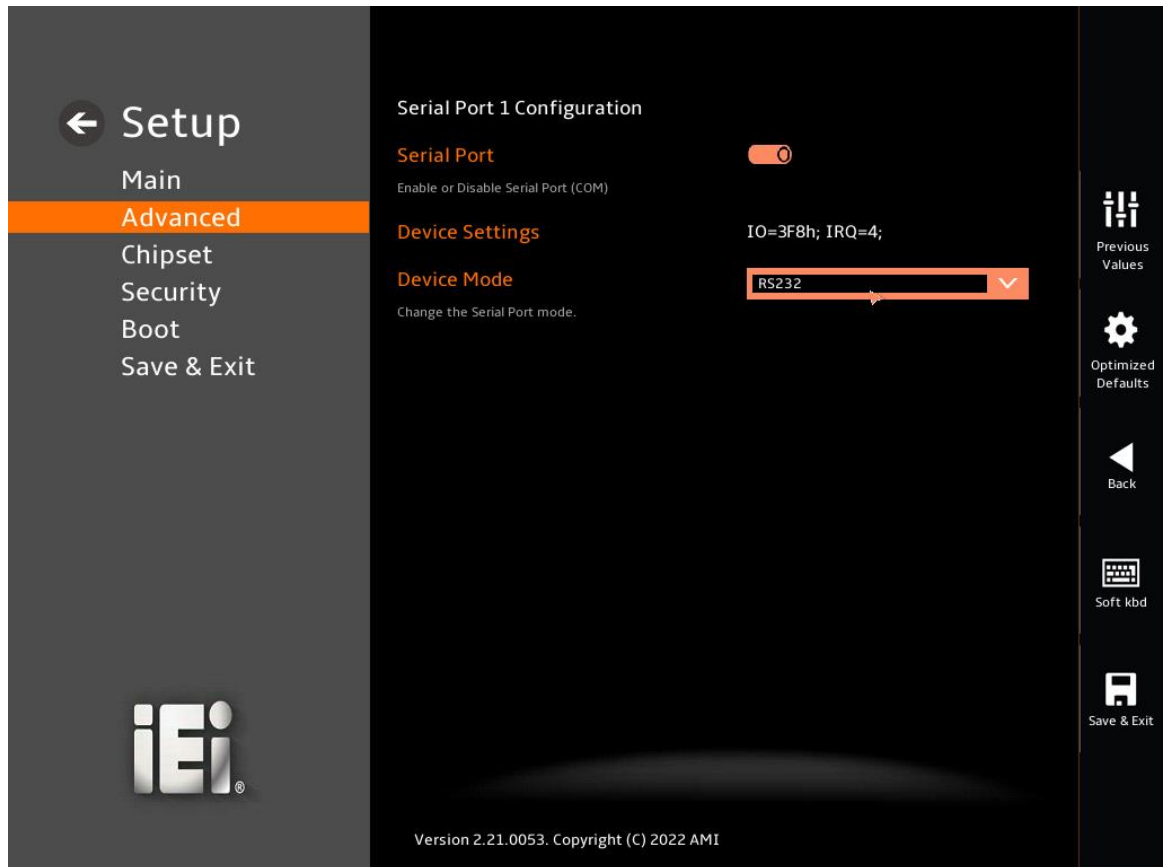

#### BIOS Menu 9: Serial Port 1 Configuration Menu

##### ➔ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- ➔ **Disabled**                      Disable the serial port
- ➔ **Enabled**      **DEFAULT**      Enable the serial port

##### ➔ Device Settings

The **Device Settings** option shows the serial port IO port address and interrupt address.

**DRPC-W-EHL**

→ **IO=3F8h;**                      Serial Port I/O port address is 3F8h and the interrupt  
**IRQ=4**                              address is IRQ4


→ **Device Mode [RS232]**

Use the **Device Mode** option to change the serial port mode.

→ <b>RS232</b>	<b>DEFAULT</b>	The serial port mode is RS-232
<b>RS422 with Register</b>		The serial port mode is RS-422
<b>RS485 with Register</b>		The serial port mode is RS-485

### 5.3.3.2 Serial Port 2 Configuration

Use the **Serial Port 2 Configuration** menu (**BIOS Menu 10**) to configure the serial port.

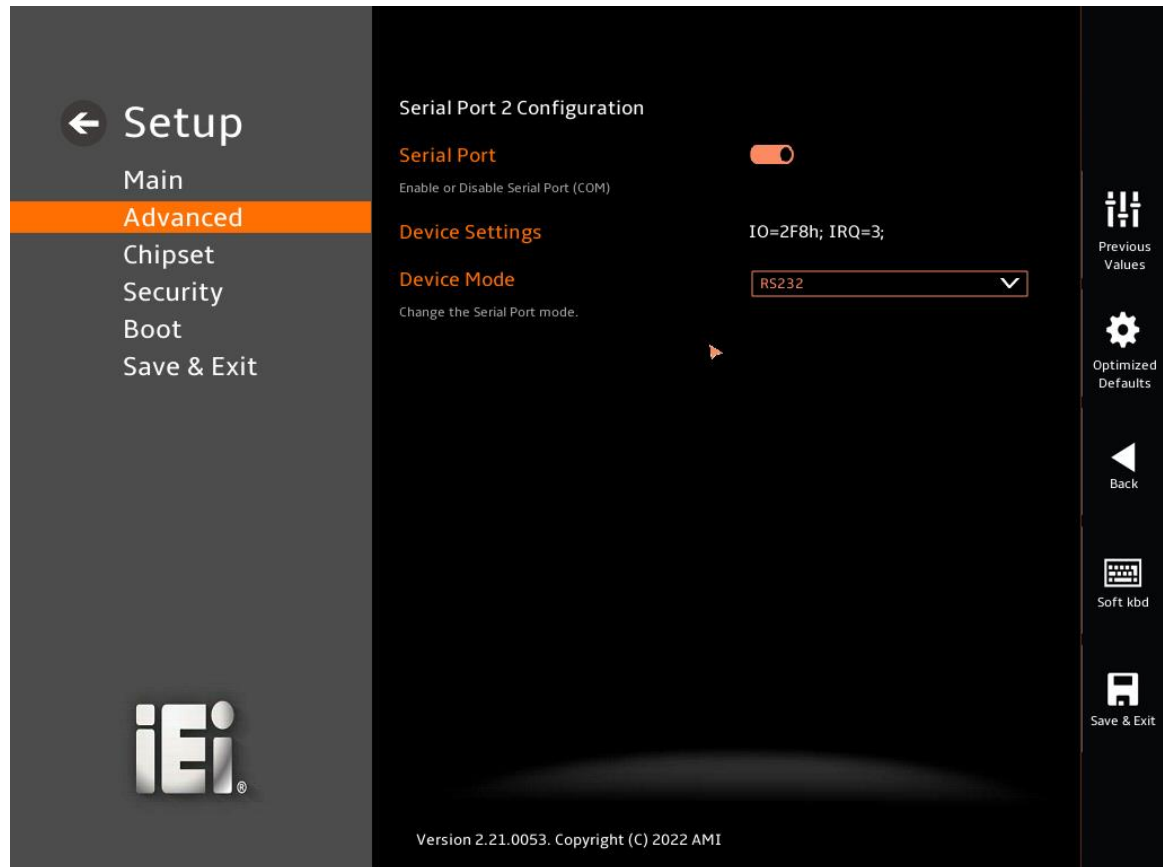

#### BIOS Menu 10: Serial Port 2 Configuration Menu

##### → Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled**                      Disable the serial port
- **Enabled**      **DEFAULT**      Enable the serial port

##### → Device Settings

The **Device Settings** option shows the serial port IO port address and interrupt address.

## DRPC-W-EHL

→ **IO=2F8h;**                      Serial Port I/O port address is 2F8h and the interrupt  
**IRQ=3**                              address is IRQ3


### → Device Mode [RS232]

Use the **Device Mode** option to change the serial port mode.

→ <b>RS232</b>	<b>DEFAULT</b>	The serial port mode is RS-232
<b>RS422 with Register</b>		The serial port mode is RS-422
<b>RS485 with Register</b>		The serial port mode is RS-485

## 5.3.4 ENE KB9068 Monitor

The ENE KB9068 Monitor menu (**BIOS Menu 11**) contains the smart fan mode configuration submenu and shows the state of H/W real-time operating temperature, fan speeds and system voltages.

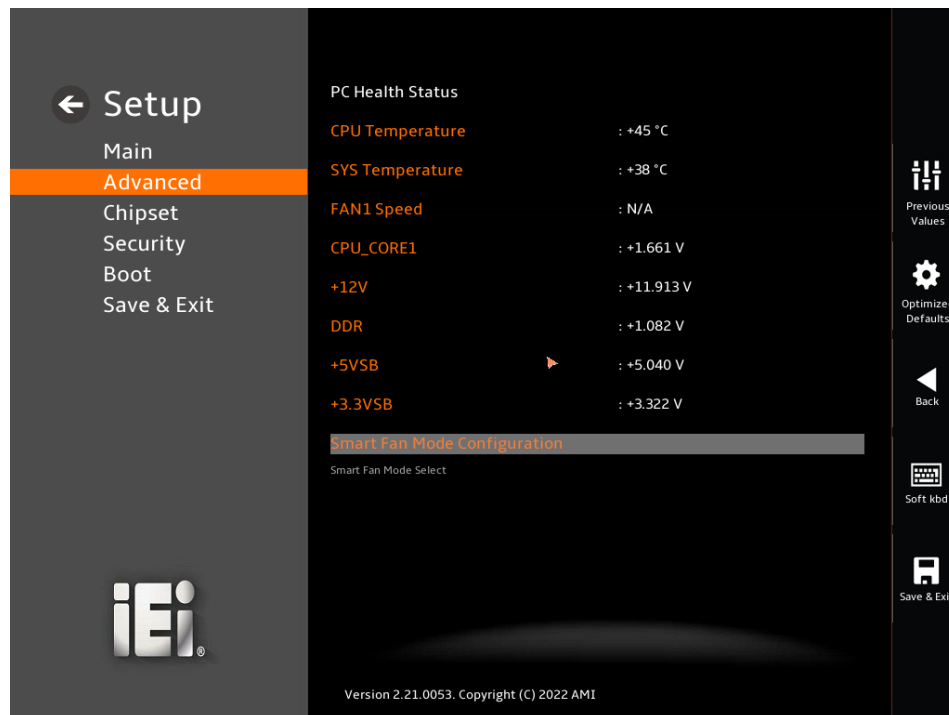

**BIOS Menu 11: ENE KB9068 Monitor**


**→ PC Health Status**

The following system parameters and values are shown. The system parameters that are monitored are:

- System Temperatures:
  - CPU Temperature
  - System Temperature
- Fan Speeds:
  - Fan1 Speed
- Voltages:
  - CPU\_CORE
  - +12V
  - DDR
  - +5VSB
  - +3.3VSB

### 5.3.4.1 Smart Fan Mode Configuration

Use the **Smart Fan Mode Configuration** submenu (**BIOS Menu 12**) to configure the CPU/system fan start/off temperature and control mode.

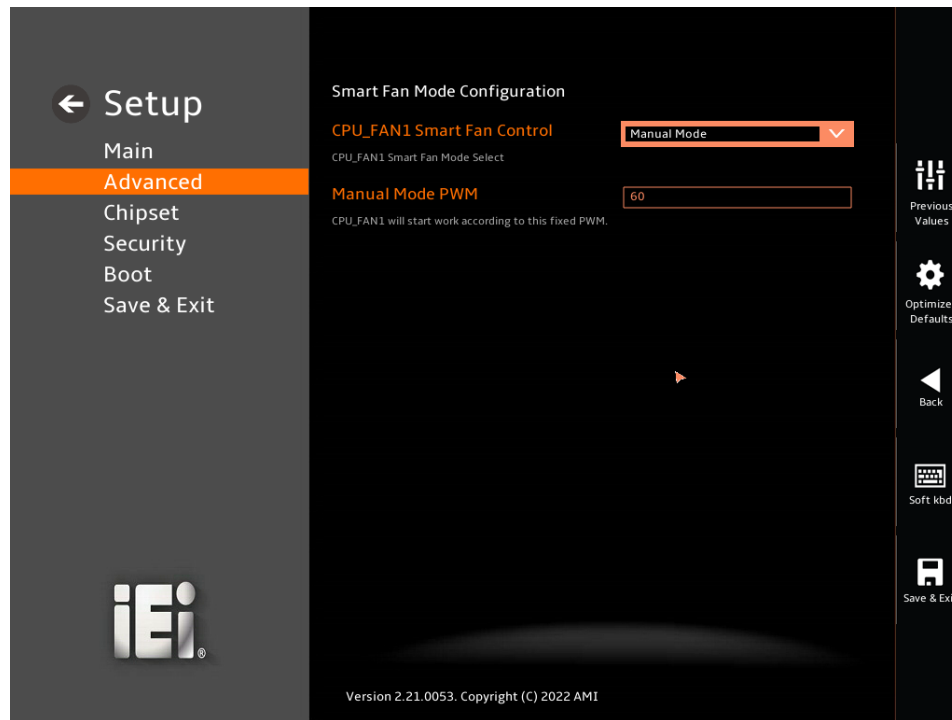

#### BIOS Menu 12: Smart Fan Mode Configuration

##### → Smart Fan Control [Manual Mode]

Use the **Smart Fan Control** option to configure the CPU Smart Fan.

- **Manual Mode**    **DEFAULT**    The fan spins at the speed set in Manual Mode settings.
- **Auto Mode**                      The fan adjusts its speed using Auto Mode settings.


##### → Manual Mode PWM

Use the **Manual Mode PWM** option to set the PWM start value. Use the + or – key to change the value or enter a decimal number between 1 and 100.



### 5.3.5 Serial Port Console Redirection

The **Serial Port Console Redirection** menu (**BIOS Menu 13**) allows the console redirection options to be configured. Console Redirection allows users to maintain a system remotely by re-directing keyboard input and text output through the serial port.

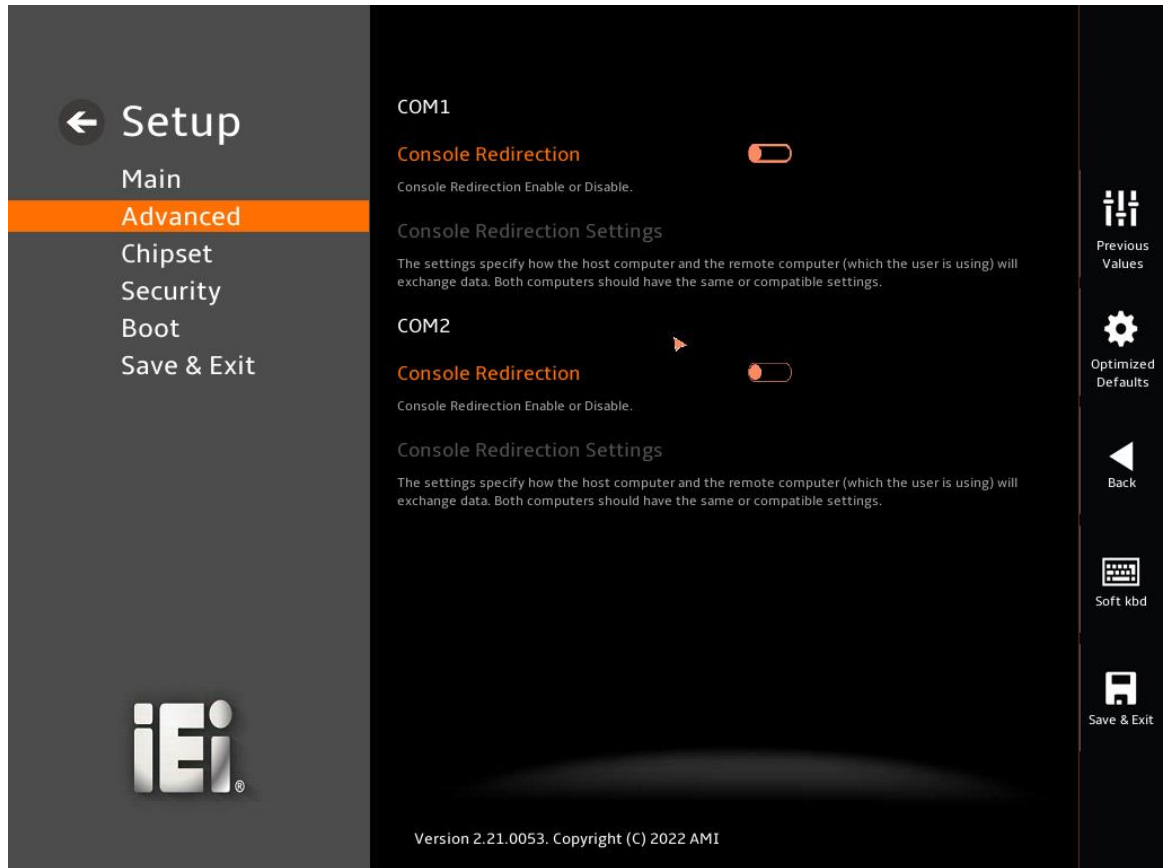

#### BIOS Menu 13: Serial Port Console Redirection

##### ➔ Console Redirection [Disabled]


Use **Console Redirection** option to enable or disable the console redirection function.

- ➔ **Disabled**      **DEFAULT**      Disabled the console redirection function
- ➔ **Enabled**                      Enabled the console redirection function

The **Console Redirection Settings** submenu will be available when the **Console Redirection** option is enabled.

### 5.3.5.1 Console Redirection Settings

The following options are available in the **Console Redirection Settings** submenu (**BIOS Menu 14**) when the **COM Console Redirection** (for COM1 to COM6) option is enabled.

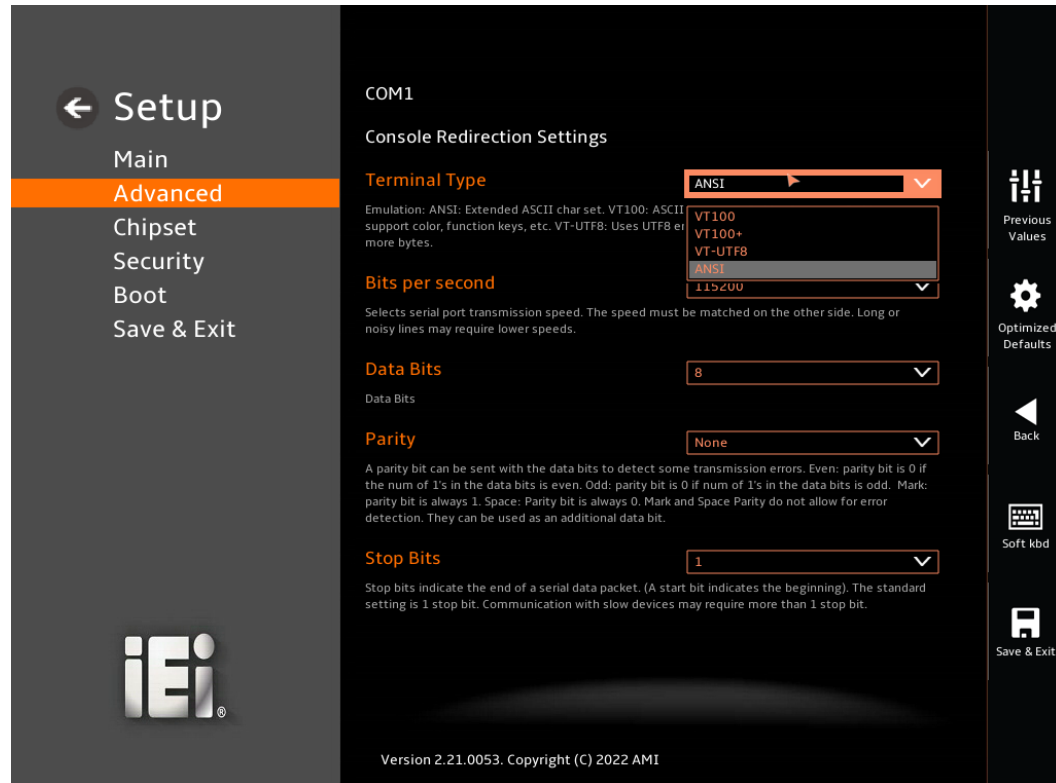

#### BIOS Menu 14: COM Console Redirection Settings

##### → Terminal Type [ANSI]

Use the **Terminal Type** option to specify the remote terminal type.

- |   |         |         |                                     |
|---|---------|---------|-------------------------------------|
| → | VT100   |         | The target terminal type is VT100   |
| → | VT100+  |         | The target terminal type is VT100+  |
| → | VT-UTF8 |         | The target terminal type is VT-UTF8 |
| → | ANSI    | DEFAULT | The target terminal type is ANSI    |

**→ Bits per second [115200]**

Use the **Bits per second** option to specify the serial port transmission speed. The speed must match on the other side. Long or noisy lines may require lower speeds.

- 9600** Sets the serial port transmission speed at 9600.
- 19200** Sets the serial port transmission speed at 19200.
- 38400** Sets the serial port transmission speed at 38400.
- 57600** Sets the serial port transmission speed at 57600.
- 115200** **DEFAULT** Sets the serial port transmission speed at 115200.

**→ Data Bits [8]**

Use the **Data Bits** option to specify the number of data bits.

- 7** Sets the data bits at 7.
- 8** **DEFAULT** Sets the data bits at 8.

**→ Parity [None]**

Use the **Parity** option to specify the parity bit that can be sent with the data bits for detecting the transmission errors.

- None** **DEFAULT** No parity bit is sent with the data bits.
- Even** The parity bit is 0 if the number of ones in the data bits is even.
- Odd** The parity bit is 0 if the number of ones in the data bits is odd.
- Mark** The parity bit is always 1. This option does not allow for error detection.
- Space** The parity bit is always 0. This option does not allow for error detection.

## DRPC-W-EHL


### → Stop Bits [1]

Use the **Stop Bits** option to specify the number of stop bits used to indicate the end of a serial data packet. Communication with slow devices may require more than 1 stop bit.

- 1                    **DEFAULT**        Sets the number of stop bits at 1.
- 2    Sets the number of stop bits at 2.

### 5.3.6 NVMe Configuration

Use the **NVMe Configuration (BIOS Menu 15)** menu to display the NVMe controller and device information.

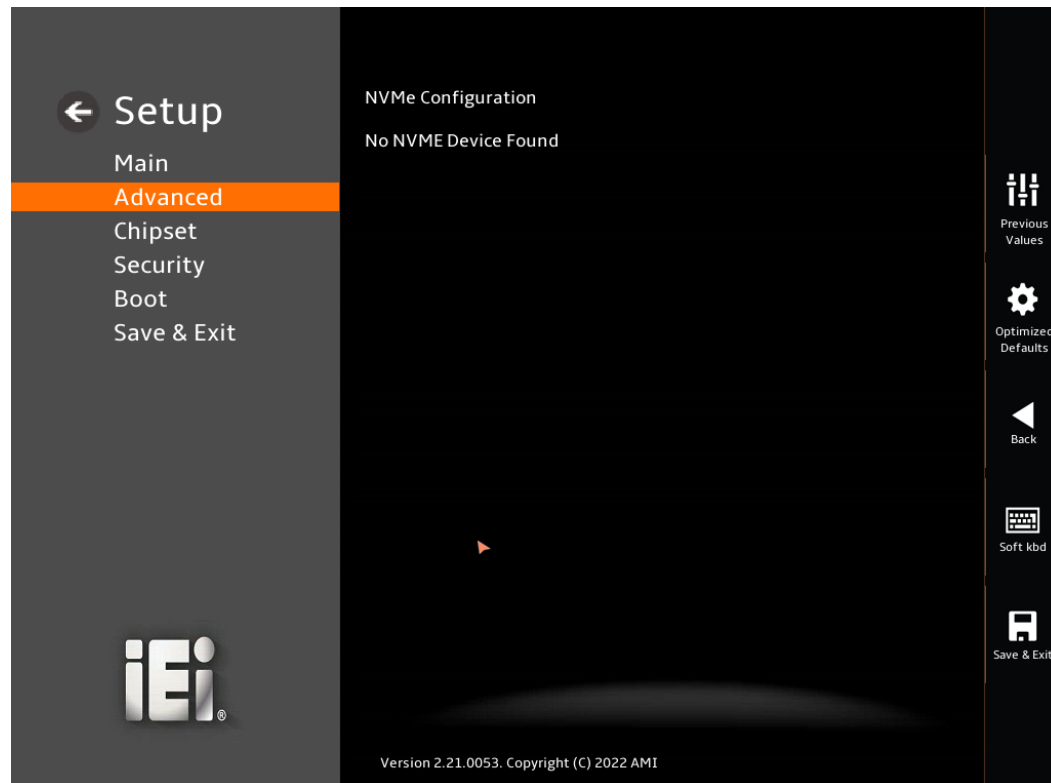

**BIOS Menu 15: NVMe Configuration**


## 5.4 Chipset

Use the **Chipset** menu (**BIOS Menu 16**) to access the PCH IO and System Agent (SA) configuration menus.



### **WARNING!**


Setting the wrong values for the Chipset BIOS selections in the Chipset BIOS menu may cause the system to malfunction.

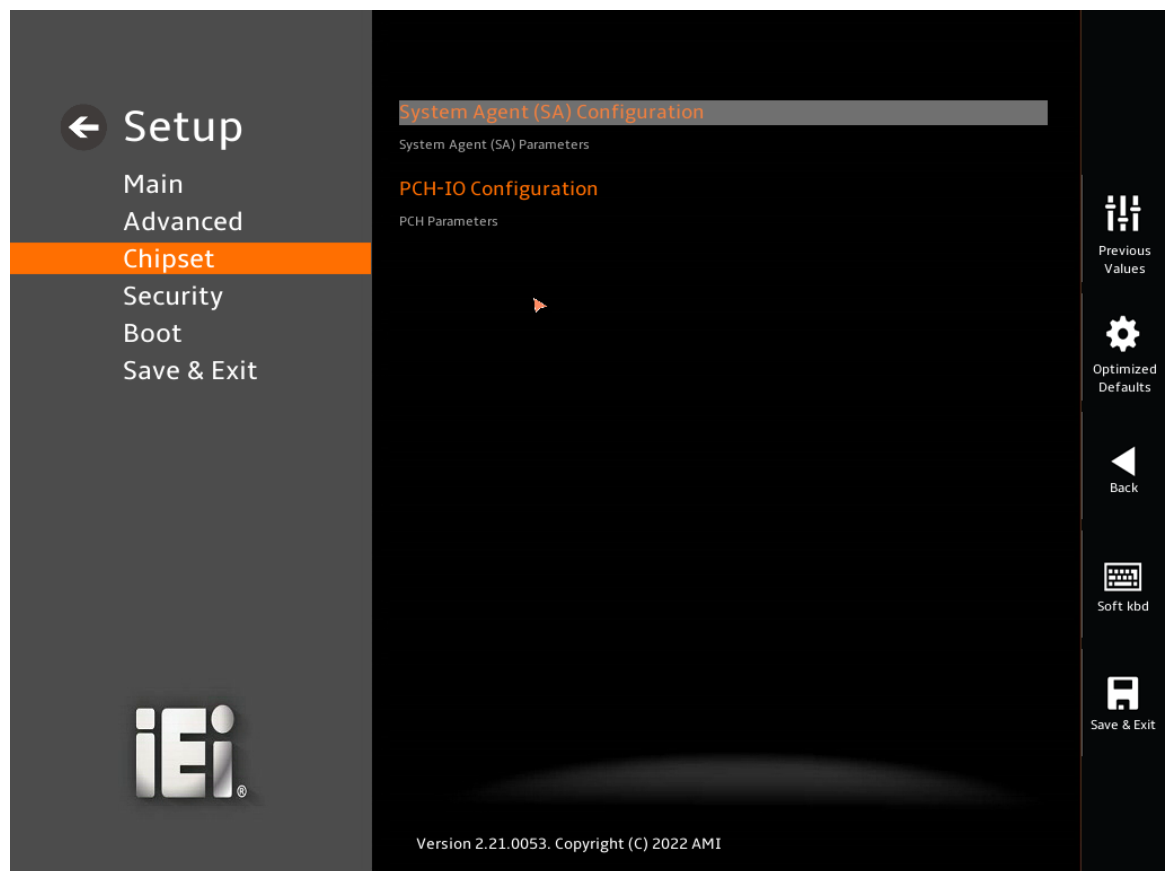

**BIOS Menu 16: Chipset**

### 5.4.1 System Agent (SA) Configuration

Use the **System Agent (SA) Configuration** menu (**BIOS Menu 17**) to configure the System Agent (SA) parameters.

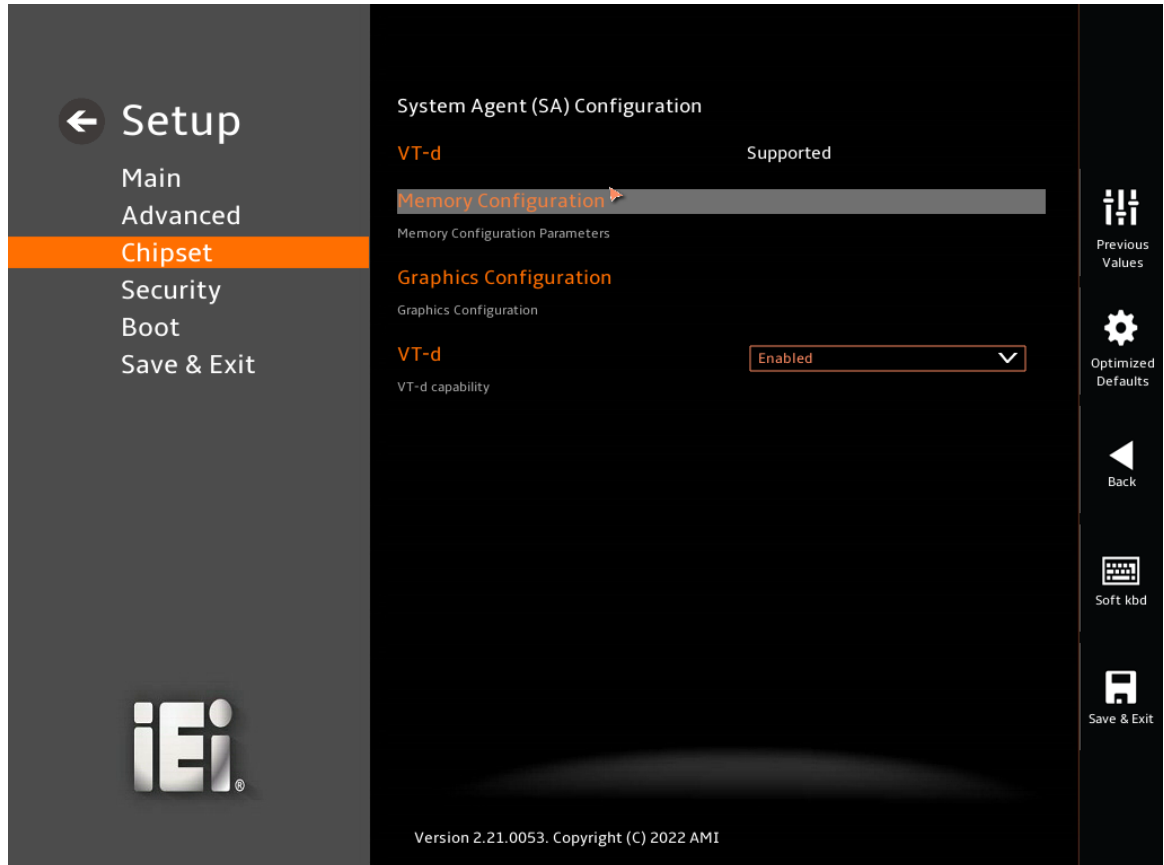

#### BIOS Menu 17: System Agent (SA) Configuration


➔ **VT-d [Enabled]**

Use the **VT-d** option to enable or disable the VT-d capability.

- ➔ **Disabled**                      Disable the VT-d capability
- ➔ **Enabled**            **DEFAULT**      Enable the VT-d capability

### 5.4.1.1 Memory Configuration


Use the **Memory Configuration** submenu (**BIOS Menu 18**) to view memory information.

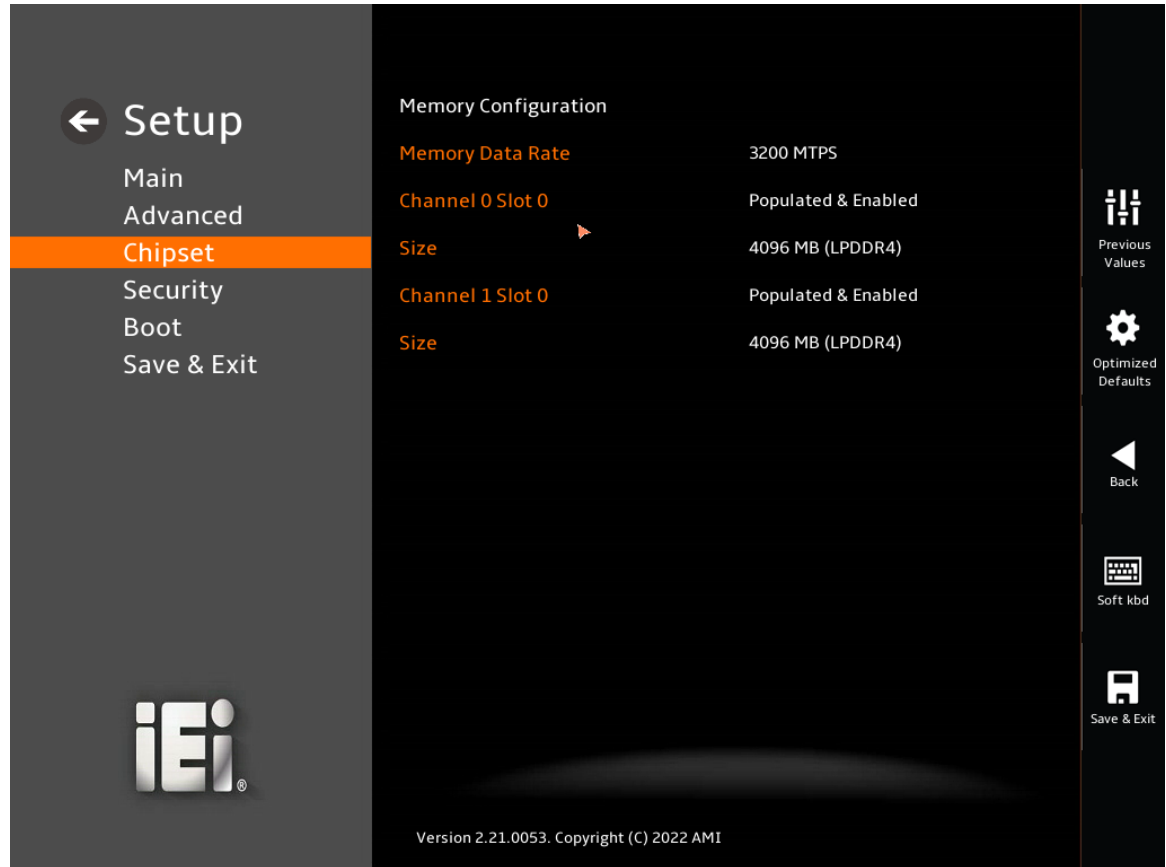

**BIOS Menu 18: Memory Configuration**

### 5.4.1.2 Graphics Configuration

Use the **Graphics Configuration (BIOS Menu 19)** menu to configure the video device connected to the system.

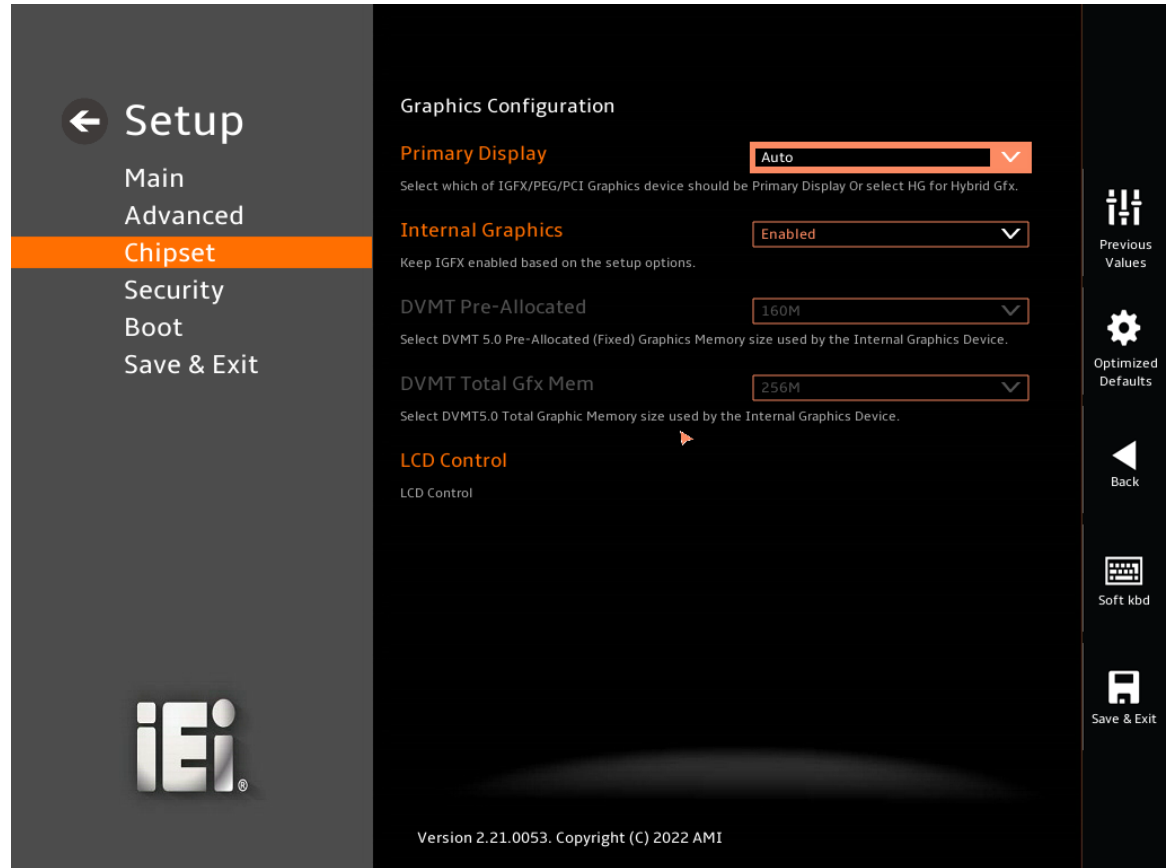

#### BIOS Menu 19: Graphics Configuration

##### → Primary Display [Auto]

Use the **Primary Display** option to select the primary graphics controller the system uses.

The following options are available:

- Auto                      **Default**
- IGFX
- PEG
- PCI



**→ Internal Graphics [Enabled]**

Use the **Internal Graphics** option to configure whether to keep IGFX enabled. If user wants to support dual display by internal graphics and external graphics, this Internal Graphics option should be set to Enabled and the above Primary Display option should be set to IGFX.

- |   |                 |                |                |
|---|-----------------|----------------|----------------|
| → | <b>Auto</b>     |                | Auto mode      |
| → | <b>Disabled</b> |                | Disables IGFX. |
| → | <b>Enabled</b>  | <b>Default</b> | Enables IGFX.  |

**→ DVMT Pre-Allocated [160M]**

Use the **DVMT Pre-Allocated** option to set the amount of system memory allocated to the integrated graphics processor when the system boots. The system memory allocated can then only be used as graphics memory, and is no longer available to applications or the operating system. Configuration options are listed below:

- |   |      |                |
|---|------|----------------|
| ▪ | 80M  |                |
| ▪ | 160M | <b>Default</b> |


**→ DVMT Total Gfx Mem [256M]**

Use the **DVMT Total Gfx Mem** option to select DVMT5.0 total graphic memory size used by the internal graphic device. The following options are available:

- |   |      |                |
|---|------|----------------|
| ▪ | 128M |                |
| ▪ | 256M |                |
| ▪ | MAX  | <b>Default</b> |

DRPC-W-EHL

→ LCD Control

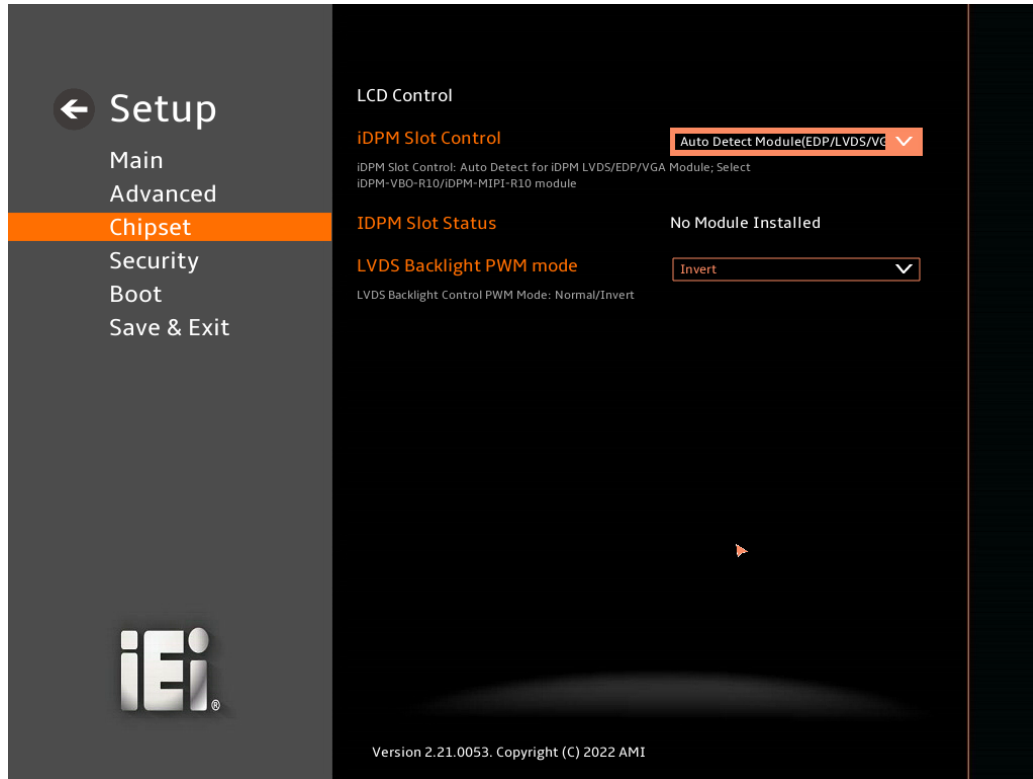

→ iDPM Slot Control [Auto Detect Module (EDP/LVDS/VGA)]

Use the iDPM Slot Control option to select iDPM module or auto detect for iDPM LVDS/EDP/VGA Module.

- **Auto Detect Module (EDP/LVDS/VGA)**    DEFAULT    Auto detect for iDPM LVDS/EDP/VGA Module.
- **iDPM-VBO Module**    Select iDPM-VBO Module
- **iDPM-MIPI Module**    Select iDPM-MIPI Module


→ LVDS Backlight PWM mode [Invert]

Use the LVDS Backlight PWM Mode option to specify a PWM mode for LVDS backlight control.

- ➔ **Invert**                      **DEFAULT**      Set to invert LVDS Backlight.
- ➔ **Normal**    Set to normal LVDS Backlight.

### 5.4.2 PCH-IO Configuration

Use the **PCH-IO Configuration** menu to configure the PCH parameters.

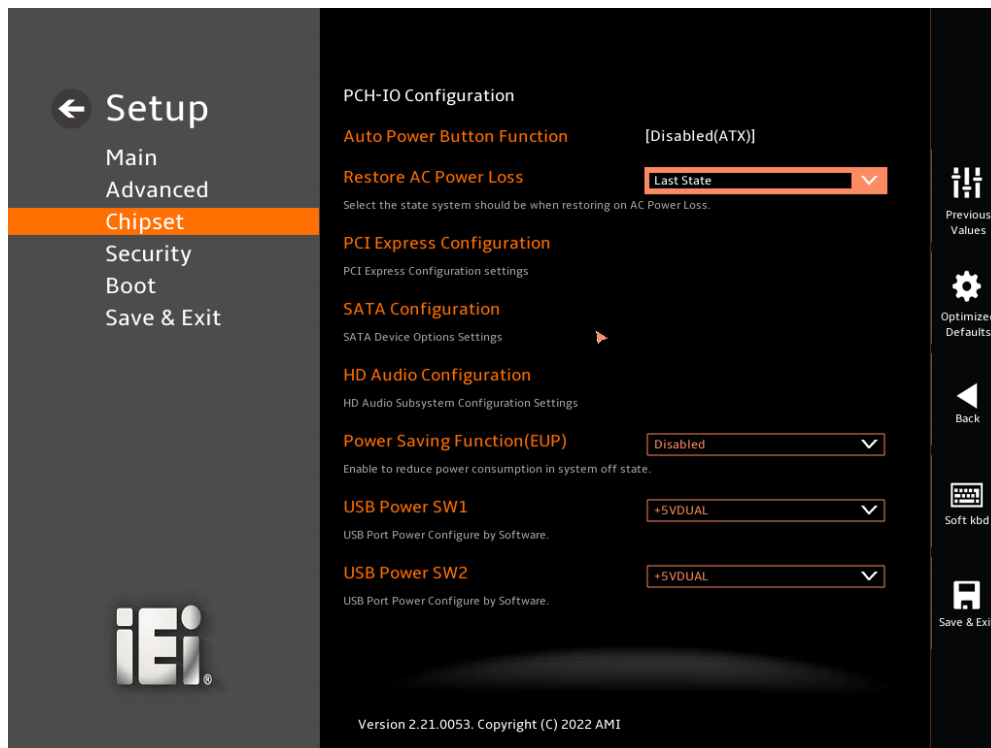

#### BIOS Menu 20: PCH-IO Configuration

##### ➔ **Auto Power Button Function [Disabled (ATX)]**

Use the **Auto Power Button Function** BIOS option to show the power mode state. Use the **J\_ATX\_AT1** to switch the AT/ATX power mode.

- ➔ **Enabled (AT)**                      The system power mode is AT.
- ➔ **Disabled (ATX)**                      The system power mode is ATX.

## DRPC-W-EHL

### → Restore AC Power Loss [Last State]

Use the **Restore AC Power Loss** BIOS option to specify what state the system returns to if there is a sudden loss of power to the system when the power mode is ATX.

- **Power Off**                      The system remains turned off
- **Power On**                      The system turns on
- **Last State**    **DEFAULT**    The system returns to its previous state. If it was on, it turns itself on. If it was off, it remains off.

### → Power Saving Function (EUP) [Disabled]

Use the **Power Saving Function (EUP)** BIOS option to enable or disable the power saving function.

- **Disabled**    **DEFAULT**    Power saving function is disabled.
- **Enabled**                      Power saving function is enabled. It will reduce power consumption when the system is off.

### → USB Power SW1 [+5V DUAL]

Use the **USB Power SW1** BIOS option to configure the USB power source for the corresponding USB connectors (Figure 5-2).

- **+5V DUAL**    **DEFAULT**    Sets the USB power source to +5V dual
- **+5V**                      Sets the USB power source to +5V

### → USB Power SW2 [+5V DUAL]

Use the **USB Power SW2** BIOS option to configure the USB power source for the corresponding USB connectors (Figure 5-2).


- **+5V DUAL**    **DEFAULT**    Sets the USB power source to +5V dual
- **+5V**                      Sets the USB power source to +5V

BIOS Options	Configured USB Ports
USB Power SW1	J_USB1 (external USB 3.2 Gen 2 ports)
USB Power SW2	JUSB3 (internal USB 2.0 ports) JUSB4 (internal USB 2.0 ports)

**Figure 5-2: BIOS Options and Configured USB Ports**

### 5.4.2.1 PCI Express Configuration

Use the **PCI Express Configuration** submenu (**BIOS Menu 21**) to configure the PCI Express slots.

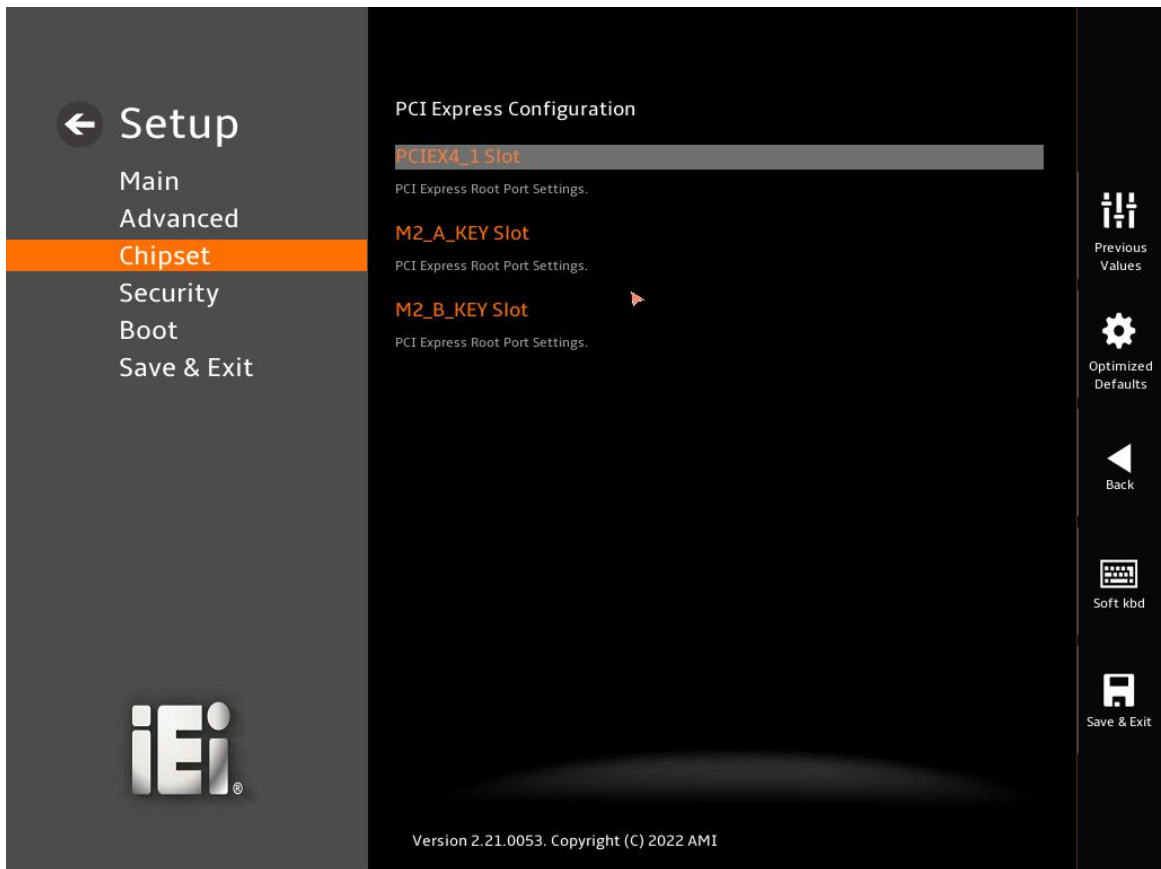


**BIOS Menu 21: PCI Express Configuration**

## DRPC-W-EHL

### 5.4.2.1.1 PCIe Root Port Setting

Use the **PCIEX4\_1**, **M2\_B\_KEY Slot**, **M2\_A\_KEY Slot** submenu (**BIOS Menu 22**) to configure the PCI Root Port Setting.

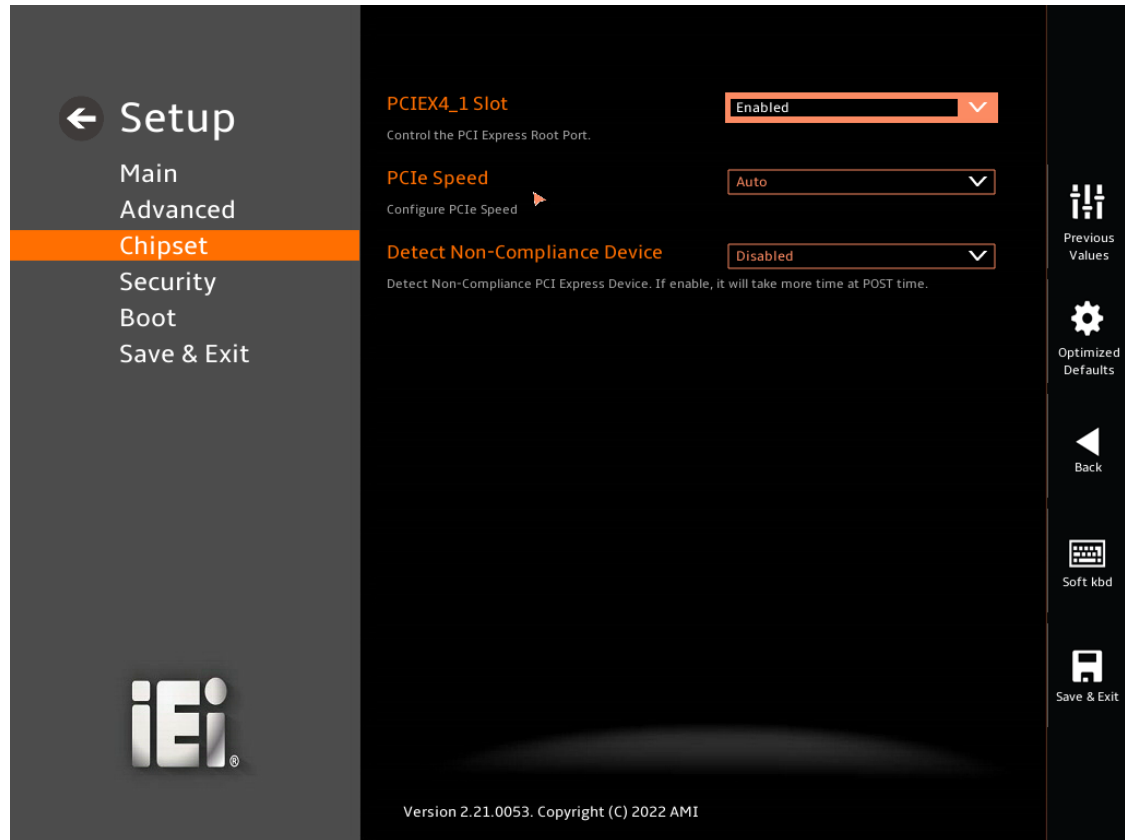

#### BIOS Menu 22: PCIe Slot Configuration Submenu

##### → PCIe Speed [Auto]

Use the **PCIe Speed** option to specify the PCI Express port speed. Configuration options are listed below.

- |   |             |                |                               |
|---|-------------|----------------|-------------------------------|
| → | <b>Auto</b> | <b>DEFAULT</b> | Auto mode.                    |
| → | <b>Gen1</b> |                | Configure PCIe Speed to Gen1. |
| → | <b>Gen2</b> |                | Configure PCIe Speed to Gen2. |
| → | <b>Gen3</b> |                | Configure PCIe Speed to Gen3. |


→ **Detect Non-Compliance Device [Disabled]**

Use the **Detect Non-Compliance Device** option to configure whether to detect if a non-compliance PCI Express device is connected to the PCI Express port.

- |                   |                |  |
|-------------------|----------------|--|
| → <b>Disabled</b> | <b>DEFAULT</b> | Do not detect if a non-compliance PCI Express device is connected to the PCI Express port. |
| → <b>Enabled</b>  |                | Detect if a non-compliance PCI Express device is connected to the PCI Express port.        |

### 5.4.2.2 SATA Configuration

Use the **SATA Configuration** menu (**BIOS Menu 23**) to change and/or set the configuration of the SATA devices installed in the system.

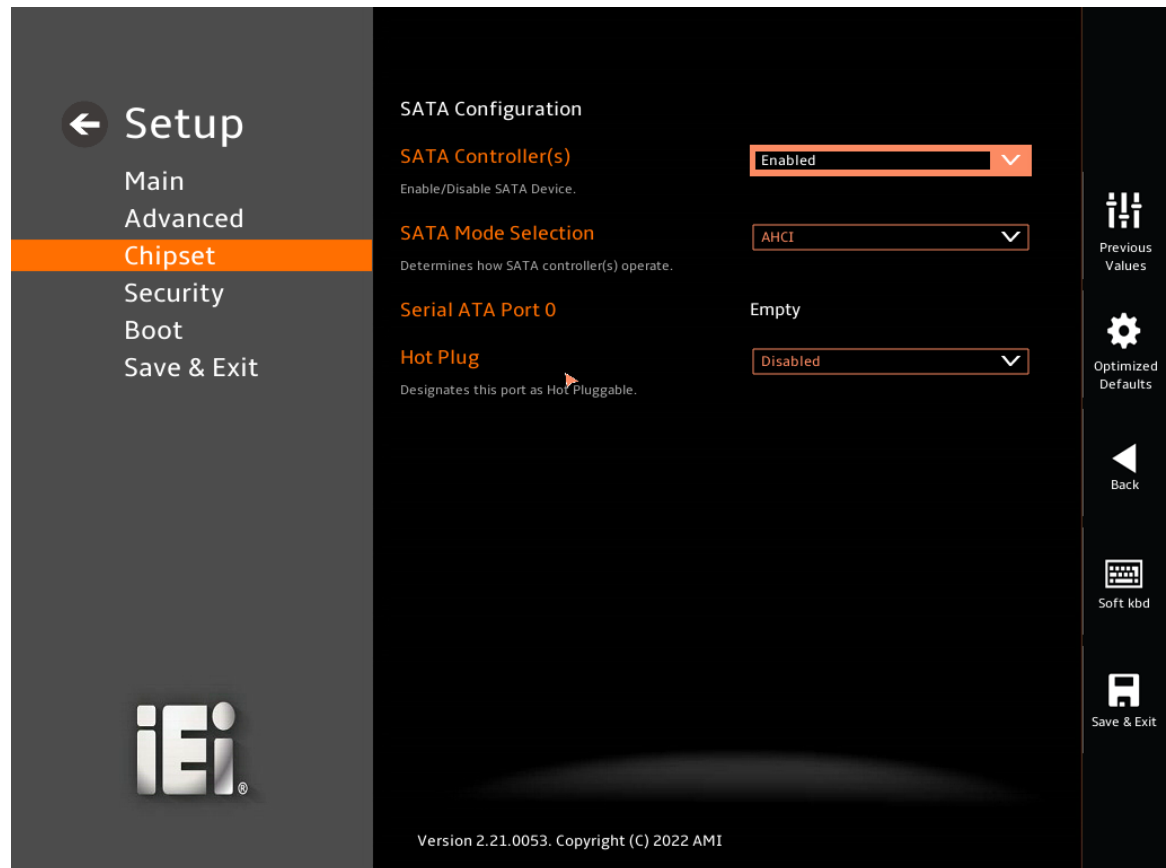

#### BIOS Menu 23: SATA Configuration

##### → SATA Controller(s) [Enabled]

Use the **SATA Controller(s)** option to configure the SATA controller(s).

- **Enabled**      **DEFAULT**      Enables the on-board SATA controller(s).
- **Disabled**                      Disables the on-board SATA controller(s).

##### → SATA Mode Selection [AHCI]

Use the **SATA Mode Selection** option to determine how the SATA devices operate.



- ➔ **AHCI**                                      **DEFAULT**            Configures SATA devices as AHCI device.
- ➔ **Intel RST Premium  
With Intel Optane  
System Acceleration**                                      Configures SATA devices to the Intel RST Premium With Intel Optane System Acceleration mode.


➔ **Hot Plug [Disabled]**

Use the **Hot Plug** option to designate the correspondent port as hot-pluggable.

- ➔ **Disabled**            **DEFAULT**            Disables the hot-pluggable function of the SATA port.
- ➔ **Enabled**                                      Designates the SATA port as hot-pluggable.

### 5.4.2.3 HD Audio Configuration

Use the **HD Audio Configuration** menu (**BIOS Menu 24**) to configure the PCH Azalia settings.

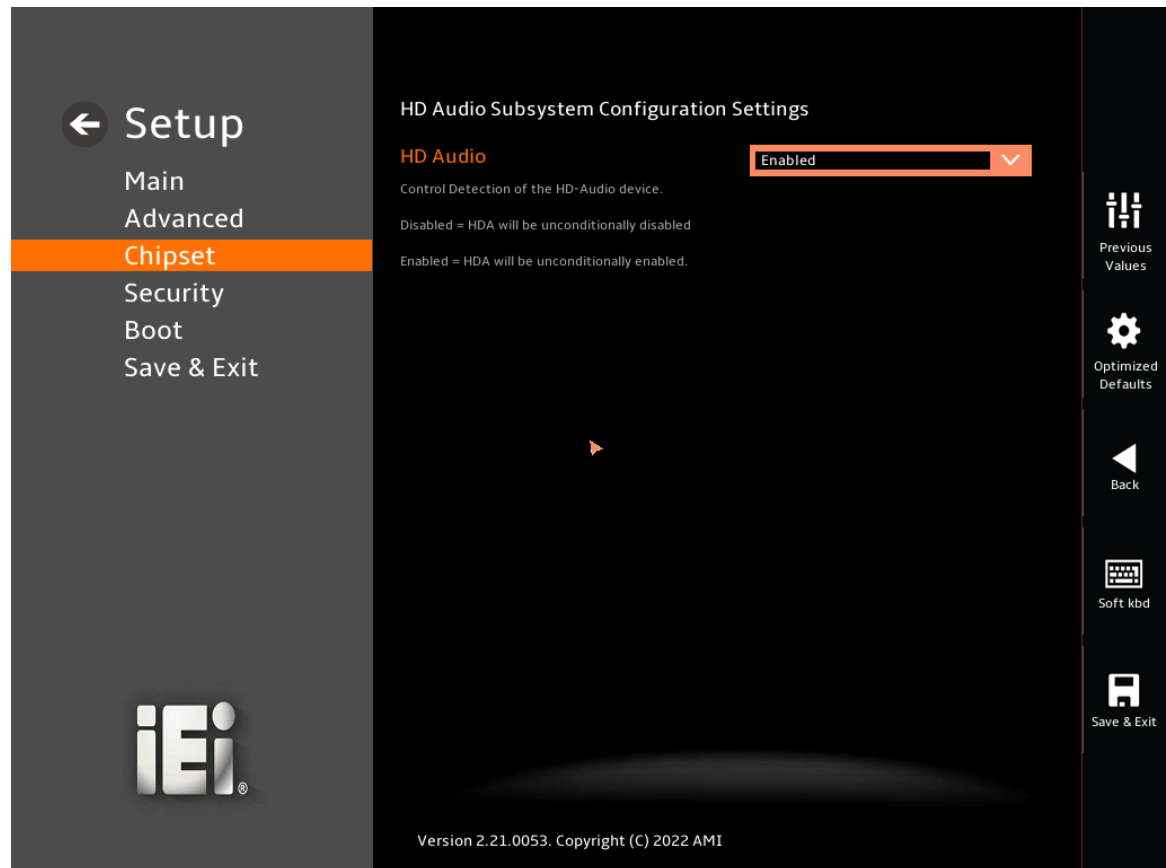

#### BIOS Menu 24: HD Audio Configuration

##### → HD Audio [Enabled]

Use the **HD Audio** option to enable or disable the High Definition Audio controller.

- **Disabled**                      The onboard High Definition Audio controller is disabled.
- **Enabled**    **DEFAULT**      The onboard High Definition Audio controller is enabled.

## 5.5 Security

Use the **Security** menu (**BIOS Menu 25**) to set system and user passwords.



### BIOS Menu 25: Security

#### → Administrator Password

Use the **Administrator Password** to set or change a administrator password.


#### → User Password

Use the **User Password** to set or change a user password.

## DRPC-W-EHL

## 5.6 Boot

Use the **Boot** menu (**BIOS Menu 26**) to configure system boot options.

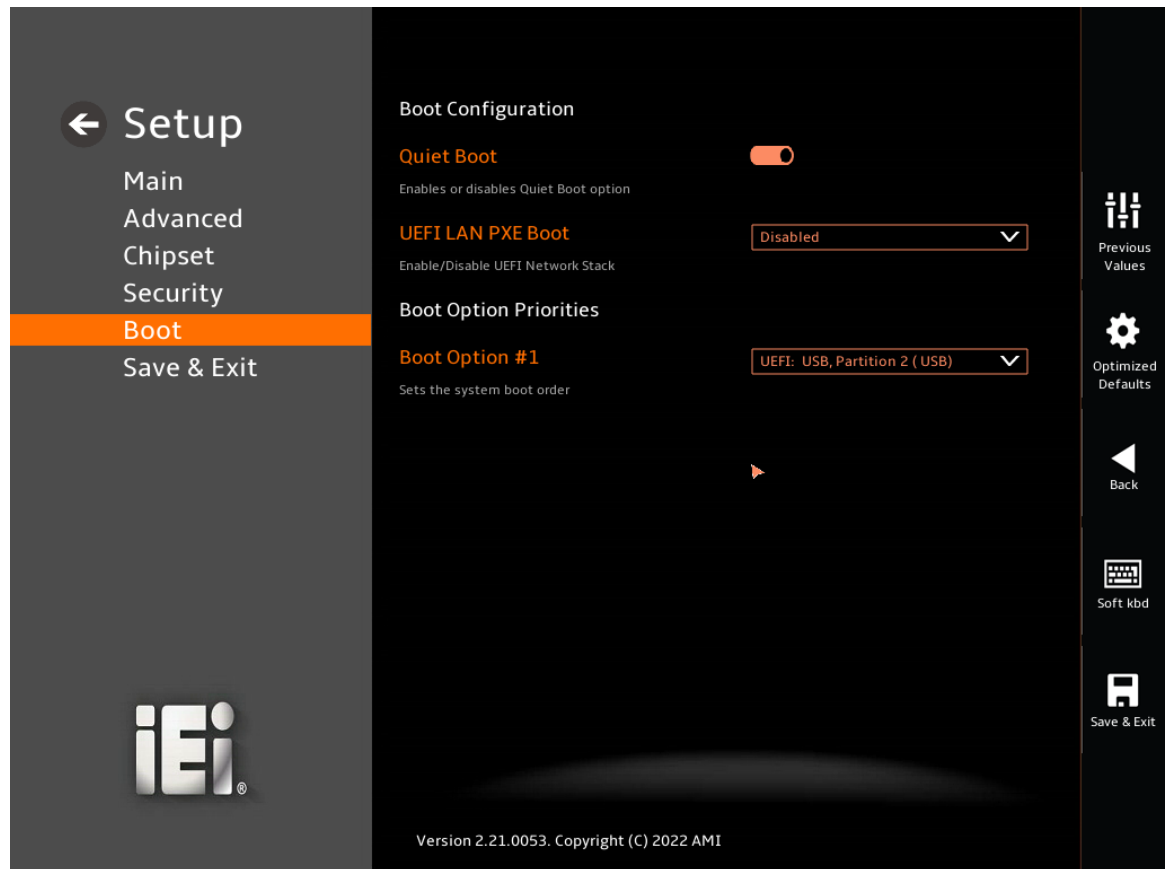

## BIOS Menu 26: Boot

## 5.6.1 Boot Configuration

## → Quiet Boot [Enabled]

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

- |   |                 |                |   |
|---|-----------------|----------------|---|
| → | <b>Disabled</b> |                | Normal POST messages displayed              |
| → | <b>Enabled</b>  | <b>DEFAULT</b> | OEM Logo displayed instead of POST messages |

## 5.6.2 Boot Option Priorities

Use the Boot Option # N to choose the system boots from the peripherals you selected. The following Boot Options are listed as an example.

### → Boot Option #1

Sets the system boot order **ADATA SP580** as the first priority.

- **Windows Boot Manager (P1: ADATA SSD SP580 240GB)**
- **Disabled**


### → Boot Option #2

Sets the system boot order **USB Partition 1** as the second priority.

- **UEFI: USB, Partition 1**
- **Disabled**

## 5.7 Save & Exit

Use the **Save & Exit** menu (**BIOS Menu 27**) to load default BIOS values, optimal failsafe values and to save configuration changes.

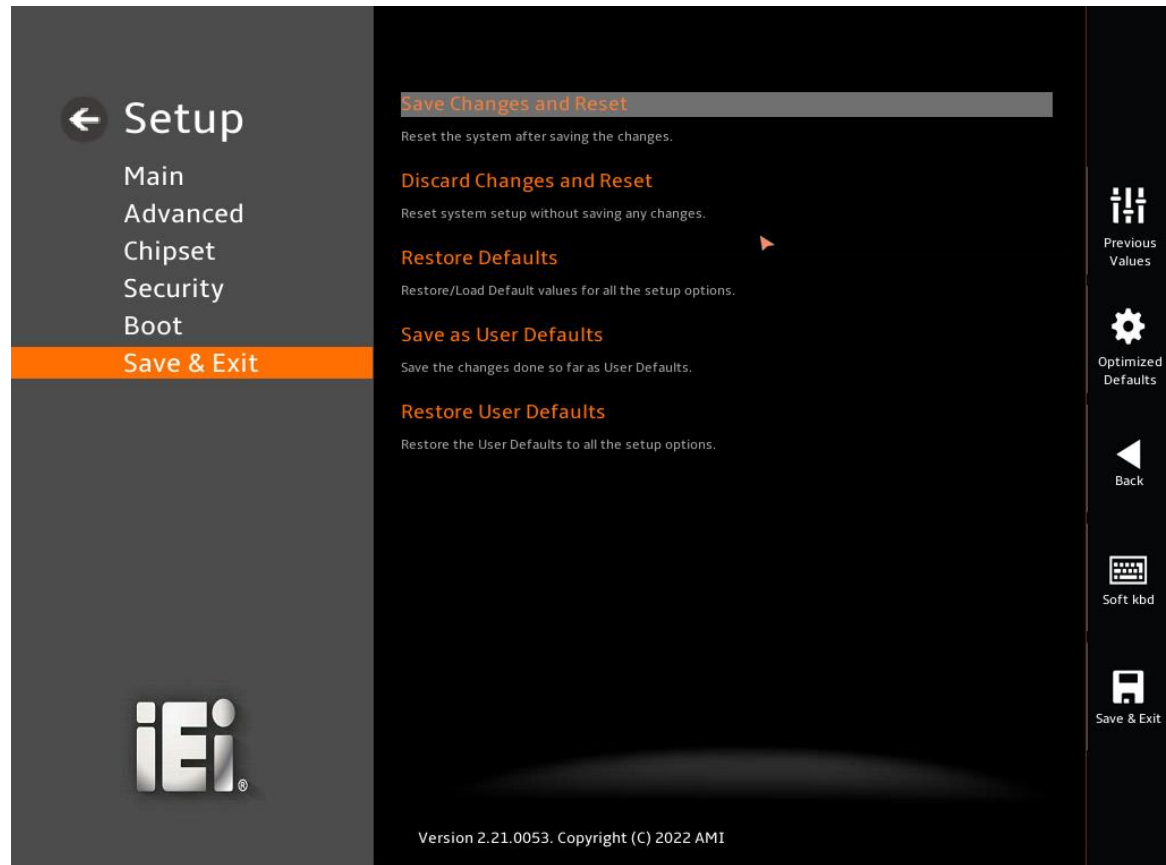

### BIOS Menu 27: Save & Exit

#### → Save Changes and Reset

Use the **Save Changes and Reset** option to save the changes made to the BIOS options and reset the system.

#### → Discard Changes and Reset

Use the **Discard Changes and Reset** option to exit the system without saving the changes made to the BIOS configuration setup program.

→ **Restore Defaults**

Use the **Restore Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F3 key can be used for this operation.**

→ **Save as User Defaults**

Use the **Save as User Defaults** option to save the changes done so far as user defaults.

→ **Restore User Defaults**

Use the **Restore User Defaults** option to restore the user defaults to all the setup options.

Appendix

**A**

# Regulatory Compliance

---



## DECLARATION OF CONFORMITY



This equipment has been tested and found to comply with specifications for CE marking. If the user modifies and/or installs other devices in the equipment, the CE conformity declaration may no longer apply.

## FCC WARNING



This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Appendix

**B**

# Product Disposal

---

**CAUTION:**

Risk of fire or explosion or defeat the safeguard of equipment if the battery is replaced by an incorrect type. Replace only with the same or equivalent type.


Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.

High or low extreme temperatures or low air pressure at high altitude that the battery can be subjected to during use, storage or transportation.

Leaving the battery in an extremely high temperature and/or low air pressure surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.

Outside the European Union–If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority so as to comply with the correct disposal method.

Within the European Union–The device that produces less waste and is easier to recycle is classified as electronic device in terms of the European Directive 2012/19/EU (WEEE), and must not be disposed of as domestic garbage.

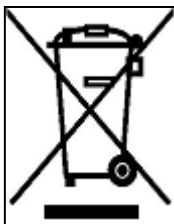

EU-wide legislation, as implemented in each Member State, requires that waste electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes monitors and electrical accessories, such as signal cables or power cords. When you need to dispose of your device, please follow the guidance of your local authority, or ask the shop where you purchased the product. The mark on electrical and electronic products only applies to the current European Union Member States.

Please follow the national guidelines for electrical and electronic product disposal.

Appendix

C

# BIOS Options

---

Below is a list of BIOS configuration options in the BIOS chapter.

- ➔ BIOS Information .....68
- ➔ Compute Die Information .....69
- ➔ PCH Information.....69
- ➔ System Date [xx/xx/xx] .....69
- ➔ System Time [xx:xx:xx] .....69
- ➔ Intel (VMX) Virtualization Technology [Enabled] .....73
- ➔ Active Processor Cores [All] .....73
- ➔ EIST [Enable] .....74
- ➔ C states [Disabled].....74
- ➔ Tcc Activation Offset [Enabled].....74
- ➔ Turbo Mode [Enabled] .....74
- ➔ Power Limit 1 .....75
- ➔ Power Limit 1 Time Window .....75
- ➔ Power Limit 2.....75
- ➔ TPM Support [Enable] .....76
- ➔ Pending Operation [None] .....76
- ➔ Serial Port [Enabled].....78
- ➔ Device Settings .....78
- ➔ Device Mode .....79
- ➔ Serial Port [Enabled].....80
- ➔ Device Settings .....80
- ➔ Device Mode .....81
- ➔ PC Health Status .....82
- ➔ Smart Fan Control [Manual Mode] .....83
- ➔ Manual Mode PWM .....83
- ➔ Console Redirection [Disabled].....84
- ➔ Terminal Type [ANSI].....85
- ➔ Bits per second [115200].....86
- ➔ Data Bits [8] .....86
- ➔ Parity [None].....86
- ➔ Stop Bits [1] .....87
- ➔ VT-d [Enabled].....89
- ➔ Primary Display [Auto] .....91

## DRPC-W-EHL

→ Internal Graphics [Enabled] .....	92
→ DVMT Pre-Allocated [160M] .....	92
→ DVMT Total Gfx Mem [256M].....	92
→ LCD Control .....	93
→ iDPM Slot Control[Auto Detect Module(EDP/LVDS/VGA)].....	93
→ LVDS Backlight PWM mode[Invert] .....	93
→ Auto Power Button Function [Disabled(ATX)] .....	94
→ Restore AC Power Loss [Last State] .....	95
→ Power Saving Function(EUP) [Disabled].....	95
→ USB Power SW1 [+5V DUAL] .....	95
→ USB Power SW2 [+5V DUAL] .....	95
→ PCIe Speed [Auto].....	97
→ Detect Non-Compliance Device [Disabled] .....	98
→ PCIe Speed [Auto].....	错误!未定义书签。
→ Detect Non-Compliance Device [Disabled] .....	错误!未定义书签。
→ PCIe Speed [Auto].....	错误!未定义书签。
→ Detect Non-Compliance Device [Disabled] .....	错误!未定义书签。
→ SATA Controller(s) [Enabled] .....	99
→ SATA Mode Selection [AHCI].....	99
→ Hot Plug [Disabled] .....	100
→ HD Audio [Enabled] .....	101
→ Administrator Password .....	102
→ User Password .....	102
→ Quiet Boot [Enabled] .....	103
→ Boot Option #1 .....	104
→ Boot Option #2 .....	104
→ Save Changes and Reset .....	105
→ Discard Changes and Reset .....	105
→ Restore Defaults .....	106
→ Save as User Defaults .....	106
→ Restore User Defaults .....	106

Appendix

**D**

# Watchdog Timer

---

**NOTE:**

The following discussion applies to DOS environment. Contact IEI support or visit the IEI website for specific drivers for other operating systems.

The Watchdog Timer is provided to ensure that standalone systems can always recover from catastrophic conditions that cause the CPU to crash. This condition may have occurred by external EMI's or a software bug. When the CPU stops working correctly, Watchdog Timer either performs a hardware reset (cold boot) or a Non-Maskable Interrupt (NMI) to bring the system back to a known state.

A BIOS function call (INT 15H) is used to control the Watchdog Timer.

INT 15H:

<b>AH – 6FH Sub-function:</b>	
AL – 2:	Sets the Watchdog Timer's period.
BL:	Time-out value (Its unit-second is dependent on the item "Watchdog Timer unit select" in CMOS setup).

**Table D-1: AH-6FH Sub-function**

Call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer starts counting down. When the timer value reaches zero, the system resets. To ensure that this reset condition does not occur, calling sub-function 2 must periodically refresh the Watchdog Timer. However, the watchdog timer is disabled if the time-out value is set to zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.



**NOTE:**

When exiting a program it is necessary to disable the Watchdog Timer, otherwise the system resets.

**EXAMPLE PROGRAM:**

**; INITIAL TIMER PERIOD COUNTER**

;

**W\_LOOP:**

;

```
MOV     AX, 6F02H      ;setting the time-out value
MOV     BL, 30         ;time-out value is 48 seconds
INT     15H
```

;

**; ADD THE APPLICATION PROGRAM HERE**

;

```
CMP     EXIT_AP, 1     ;is the application over?
JNE     W_LOOP        ;No, restart the application
```

```
MOV     AX, 6F02H      ;disable Watchdog Timer
MOV     BL, 0         ;
INT     15H
```

;

**; EXIT ;**

Appendix

**E**

# Error Beep Code

---

### E.1 PEI Beep Codes

Number of Beeps	Description
1	Memory not Installed
1	Memory was installed twice (InstallPeiMemory routine in PEI Core called twice)
2	Recovery started
3	DXE IPL was not found
3	DXE Core Firmware Volume was not found
4	Recovery failed
4	S3 Resume failed
7	Reset PPI is not available

### E.2 DXE Beep Codes

Number of Beeps	Description
1	Invalid password
4	Some of the Architectural Protocols are not available
5	No Console Output Devices are found
5	No Console Input Devices are found
6	Flash update is failed
7	Reset protocol is not available
8	Platform PCI resource requirements cannot be met



**NOTE:**

If you have any question, please contact IEI for further assistance.

Appendix

F

# Hazardous Materials Disclosure

---

### F.1 RoHS II Directive (2015/863/EU)

The details provided in this appendix are to ensure that the product is compliant with the RoHS II Directive (2015/863/EU). The table below acknowledges the presences of small quantities of certain substances in the product, and is applicable to RoHS II Directive (2015/863/EU).

Please refer to the following table.

Part Name	Toxic or Hazardous Substances and Elements									
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBBs)	Polybrominated Diphenyl Ethers (PBDEs)	Bis(2-ethylhexyl) phthalate (DEHP)	Butyl benzyl phthalate (BBP)	Dibutyl phthalate (DBP)	Diisobutyl phthalate (DIBP)
Housing	O	O	O	O	O	O	O	O	O	O
Printed Circuit Board	O	O	O	O	O	O	O	O	O	O
Metal Fasteners	O	O	O	O	O	O	O	O	O	O
Cable Assembly	O	O	O	O	O	O	O	O	O	O
Fan Assembly	O	O	O	O	O	O	O	O	O	O
Power Supply Assemblies	O	O	O	O	O	O	O	O	O	O
Battery	O	O	O	O	O	O	O	O	O	O

O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in Directive (EU) 2015/863.

X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in Directive (EU) 2015/863.

## DRPC-W-EHL

## F.2 China RoHS

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有“环境友好使用期限”的标签，此期限是估算这些物质“不会有泄漏或突变”的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
壳体	○	○	○	○	○	○
印刷电路板	○	○	○	○	○	○
金属螺帽	○	○	○	○	○	○
电缆组装	○	○	○	○	○	○
风扇组装	○	○	○	○	○	○
电力供应组装	○	○	○	○	○	○
电池	○	○	○	○	○	○

○: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T11364-2014 與 GB/T26572-2011 标准规定的限量要求以下。

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11364-2014 與 GB/T26572-2011 标准规定的限量要求。