

**MODEL:
PCIE-H610**

Full-Size PICMG 1.3 CPU Card Supports 32nm LGA1155 Intel® Core™ i7/i5/i3/Pentium®/Celeron® CPU, Intel® H61 Chipset, DDR3, VGA, DVI-D, Dual Realtek PCIe GbE, USB 2.0, SATA 3Gb/s, HD Audio and RoHS

User Manual

Revision

Date	Version	Changes
November 16, 2015	1.05	Updated Section 1.7: Technical Specifications
August 25, 2015	1.04	Modified Section 3.2.15: Serial Port Connectors, RS-232
November 5, 2014	1.03	Modified LAN pinouts Updated Chapter 2: Packing List
November 14, 2013	1.02	Updated Section 1.7: Technical Specifications
January 21, 2013	1.01	Updated the LPT cable P/N and RS-422/485 connector pinouts
February 17, 2012	1.00	Initial release

Copyright

COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Manual Conventions



WARNING

Warnings appear where overlooked details may cause damage to the equipment or result in personal injury. Warnings should be taken seriously.



CAUTION

Cautionary messages should be heeded to help reduce the chance of losing data or damaging the product.



NOTE

These messages inform the reader of essential but non-critical information. These messages should be read carefully as any directions or instructions contained therein can help avoid making mistakes.



HOT SURFACE

This symbol indicates a hot surface that should not be touched without taking care.

Table of Contents

1 INTRODUCTION.....	1
1.1 INTRODUCTION.....	2
1.2 MODEL VARIATIONS	2
1.3 FEATURES.....	3
1.4 CONNECTORS	3
1.5 DIMENSIONS.....	4
1.6 DATA FLOW	6
1.7 TECHNICAL SPECIFICATIONS	7
2 PACKING LIST.....	10
2.1 ANTI-STATIC PRECAUTIONS	11
2.2 UNPACKING PRECAUTIONS.....	11
2.3 PACKING LIST.....	12
2.4 OPTIONAL ITEMS	13
3 CONNECTORS	16
3.1 PERIPHERAL INTERFACE CONNECTORS.....	17
3.1.1 PCIE-H610 Layout	17
3.1.2 Peripheral Interface Connectors	17
3.1.3 External Interface Panel Connectors.....	18
3.2 INTERNAL PERIPHERAL CONNECTORS	19
3.2.1 Audio Kit Connector	19
3.2.2 Battery Connector.....	20
3.2.3 CPU Power Input Connector.....	21
3.2.4 DDR3 DIMM Slots.....	21
3.2.5 Digital I/O Connector	22
3.2.6 DVI-D Connector (DVI Model Only)	23
3.2.7 Fan Connector (CPU).....	24
3.2.8 Floppy Disk Drive Connector.....	25
3.2.9 Front Panel Connector	26

3.2.10 I2C Connector.....	27
3.2.11 Infrared Interface Connector	27
3.2.12 Keyboard/Mouse Connector	28
3.2.13 Parallel Port Connector	29
3.2.14 SATA 3Gb/s Drive Connectors.....	30
3.2.15 Serial Port Connectors, RS-232.....	31
3.2.16 Serial Port Connector, RS-422/485.....	32
3.2.17 SMBus Connector	33
3.2.18 SPI ROM Connector	33
3.2.19 TPM Connector.....	34
3.2.20 USB Connectors.....	35
3.3 EXTERNAL PERIPHERAL INTERFACE CONNECTOR PANEL	36
3.3.1 Ethernet Connectors	36
3.3.2 USB Connectors.....	37
3.3.3 VGA Connector.....	37
4 INSTALLATION	39
4.1 ANTI-STATIC PRECAUTIONS	40
4.2 INSTALLATION CONSIDERATIONS.....	40
4.2.1 Socket LGA1155 CPU Installation	42
4.2.2 Socket LGA1155 Cooling Kit Installation.....	45
4.2.3 DIMM Installation	46
4.3 JUMPER SETTINGS	47
4.3.1 AT/ATX Power Select Jumper.....	47
4.3.2 Clear CMOS Jumper.....	48
4.3.3 Wake-on LAN Jumper	49
4.4 CHASSIS INSTALLATION.....	50
4.4.1 Airflow.....	50
4.4.2 CPU Card Installation.....	50
4.5 INTERNAL PERIPHERAL DEVICE CONNECTIONS.....	50
4.5.1 Dual RS-232 Cable with Slot Bracket.....	51
4.5.2 DVI-D/USB Kit Installation (DVI Model Only).....	52
4.5.3 SATA Drive Connection	53
4.5.4 USB Cable (Dual Port) with Slot Bracket	54
4.6 EXTERNAL PERIPHERAL INTERFACE CONNECTION	55

PCIE-H610 PICMG 1.3 CPU Card

4.6.1 LAN Connection.....	55
4.6.2 USB Device Connection (Single Connector).....	56
4.6.3 VGA Monitor Connection	57
5 BIOS.....	59
5.1 INTRODUCTION.....	60
5.1.1 Starting Setup.....	60
5.1.2 Using Setup	60
5.1.3 Getting Help.....	61
5.1.4 Unable to Reboot after Configuration Changes	61
5.1.5 BIOS Menu Bar.....	61
5.2 MAIN.....	62
5.3 ADVANCED.....	63
5.3.1 ACPI Settings	64
5.3.2 Trusted Computing.....	65
5.3.3 CPU Configuration.....	65
5.3.3.1 CPU Information.....	66
5.3.4 SATA Configuration	68
5.3.5 Intel TXT(LT) Configuration.....	69
5.3.6 USB Configuration.....	70
5.3.7 Super IO Configuration	71
5.3.7.1 Floppy Disk Controller Configuration.....	72
5.3.7.2 Serial Port n Configuration	73
5.3.7.3 Parallel Port Configuration	77
5.3.8 H/W Monitor	78
5.3.8.1 FAN 1 Configuration	80
5.3.9 Serial Port Console Redirection	81
5.3.10 iEi Feature	84
5.4 CHIPSET	85
5.4.1 Northbridge Configuration	86
5.4.2 Southbridge Configuration	88
5.4.3 Integrated Graphics.....	90
5.5 BOOT.....	91
5.6 SECURITY.....	93
5.7 EXIT	94

6 SOFTWARE DRIVERS	96
6.1 AVAILABLE SOFTWARE DRIVERS	97
6.2 SOFTWARE INSTALLATION	97
6.3 CHIPSET DRIVER INSTALLATION.....	99
6.4 GRAPHICS DRIVER INSTALLATION.....	102
6.5 LAN DRIVER INSTALLATION	105
6.6 AUDIO DRIVER INSTALLATION	107
A REGULATORY COMPLIANCE	109
B BIOS OPTIONS	111
C TERMINOLOGY	114
D DIGITAL I/O INTERFACE.....	118
D.1 INTRODUCTION.....	119
D.2 ASSEMBLY LANGUAGE SAMPLE 1.....	120
D.3 ASSEMBLY LANGUAGE SAMPLE 2.....	120
E WATCHDOG TIMER.....	121
F HAZARDOUS MATERIALS DISCLOSURE.....	124
F.1 HAZARDOUS MATERIALS DISCLOSURE TABLE FOR IPB PRODUCTS CERTIFIED AS ROHS COMPLIANT UNDER 2002/95/EC WITHOUT MERCURY	125

List of Figures

Figure 1-1: PCIE-H610	2
Figure 1-2: Connectors	3
Figure 1-3: PCIE-H610 Dimensions (mm).....	4
Figure 1-4: External Interface Panel Dimensions (mm).....	5
Figure 1-5: Data Flow Diagram.....	6
Figure 3-1: Connectors and Jumpers.....	17
Figure 3-2: Audio Connector Location	19
Figure 3-3: Battery Connector Location.....	20
Figure 3-4: ATX Power Connector Pinout Location.....	21
Figure 3-5: DDR3 DIMM Slot Locations	22
Figure 3-6: Digital I/O Connector Location	22
Figure 3-7: DVI-D Connector Location	23
Figure 3-8: CPU Fan Connector Location	24
Figure 3-9: Floppy Disk Location.....	25
Figure 3-10: Front Panel Connector Location	26
Figure 3-11: I2C Connector Location.....	27
Figure 3-12: Infrared Connector Location.....	28
Figure 3-13: Keyboard/Mouse Connector Location	28
Figure 3-14: Parallel Port Connector Location	29
Figure 3-15: SATA 3Gb/s Drive Connector Location	30
Figure 3-16: Serial Port Connector Location	31
Figure 3-17: RS-422/485 Connector Location.....	32
Figure 3-18: SMBus Connector Location	33
Figure 3-19: SPI Connector Location	34
Figure 3-20: TPM Connector Location.....	34
Figure 3-21: USB Connector Pinout Locations	35
Figure 3-22: External Peripheral Interface Connector	36
Figure 3-23: Ethernet Connector.....	36
Figure 3-24: VGA Connector	38
Figure 4-1: Disengage the CPU Socket Load Lever.....	42

Figure 4-2: Remove Protective Cover.....	43
Figure 4-3: Insert the Socket LGA1155 CPU.....	44
Figure 4-4: Close the Socket LGA1155	44
Figure 4-5: Cooling Kit Support Bracket.....	45
Figure 4-6: DIMM Installation.....	46
Figure 4-7: AT/ATX Power Mode Jumper Location.....	48
Figure 4-8: Clear BIOS Jumper Location	49
Figure 4-9: Wake-on LAN Jumper Location.....	49
Figure 4-10: Dual RS-232 Cable Installation	51
Figure 4-11: DVI-D/USB Kit Installation	52
Figure 4-12: SATA Drive Cable Connection.....	53
Figure 4-13: SATA Power Drive Connection.....	54
Figure 4-14: Dual USB Cable Connection	55
Figure 4-15: LAN Connection	56
Figure 4-16: USB Device Connection	57
Figure 4-17: VGA Connector	58
Figure 6-1: Introduction Screen	98
Figure 6-2: Available Drivers.....	98
Figure 6-3: Chipset Driver Screen.....	99
Figure 6-4: Chipset Driver Welcome Screen.....	100
Figure 6-5: Chipset Driver License Agreement	100
Figure 6-6: Chipset Driver Read Me File	101
Figure 6-7: Chipset Driver Setup Operations	101
Figure 6-8: Chipset Driver Installation Finish Screen.....	102
Figure 6-9: Graphics Driver Welcome Screen	103
Figure 6-10: Graphics Driver License Agreement.....	103
Figure 6-11: Graphics Driver Setup Operations	104
Figure 6-12: Graphics Driver Installation Finish Screen	104
Figure 6-13: LAN Driver Welcome Screen	105
Figure 6-14: LAN Driver Installation	106
Figure 6-15: LAN Driver Installation Complete.....	106
Figure 6-16: Audio Driver – Extracting Files.....	107
Figure 6-17: Audio Driver Installation Welcome Screen.....	108
Figure 6-18: Audio Driver Installation.....	108
Figure 6-19: Audio Driver Installation Complete	108

List of Tables

Table 1-1: PCIE-H610 Model Variations.....	2
Table 1-2: PCIE-H610 Specifications	9
Table 2-1: Packing List.....	13
Table 2-2: Optional Items	15
Table 3-1: Peripheral Interface Connectors	18
Table 3-2: Rear Panel Connectors	18
Table 3-3: Audio Connector Pinouts	19
Table 3-4: Battery Connector Pinouts	20
Table 3-5: ATX Power Connector Pinouts	21
Table 3-6: Digital I/O Connector Pinouts.....	23
Table 3-7: DVI-D Connector Pinouts.....	24
Table 3-8: CPU Fan Connector Pinouts.....	24
Table 3-9: Floppy Disk Pinouts	26
Table 3-10: Front Panel Connector Pinouts.....	26
Table 3-11: I2C Connector Pinouts	27
Table 3-12: Infrared Connector Pinouts	28
Table 3-13: Keyboard/Mouse Connector Pinouts	29
Table 3-14: Parallel Port Connector Pinouts	30
Table 3-15: SATA 3Gb/s Drive Connector Pinouts.....	31
Table 3-16: Serial Port Connector Pinouts	31
Table 3-17: RS-422/485 Connector Pinouts	32
Table 3-18: DB-9 RS-422/485 Pinouts.....	32
Table 3-19: SMBus Connector Pinouts	33
Table 3-20: SPI Connector Pinouts.....	34
Table 3-21: TPM Connector Pinouts.....	35
Table 3-22: USB Port Connector Pinouts.....	35
Table 3-23: LAN Pinouts	36
Table 3-24: Connector LEDs.....	37
Table 3-25: USB Port Pinouts.....	37
Table 3-26: VGA Connector Pinouts.....	38

Table 4-1: Jumpers	47
Table 4-2: AT/ATX Power Mode Jumper Settings	48
Table 4-3: Clear BIOS Jumper Settings.....	48
Table 4-4: Wake-on LAN Jumper Settings	49
Table 4-5: Wake-on LAN Jumper Pinouts	50
Table 5-1: BIOS Navigation Keys	61

BIOS Menus

BIOS Menu 1: Main	62
BIOS Menu 2: Advanced	63
BIOS Menu 3: ACPI Configuration	64
BIOS Menu 4: TPM Configuration	65
BIOS Menu 5: CPU Configuration	66
BIOS Menu 6: CPU Configuration	67
BIOS Menu 7: SATA Configuration	68
BIOS Menu 8: Intel TXT(LT) Configuration	69
BIOS Menu 9: USB Configuration	70
BIOS Menu 10: Super IO Configuration.....	71
BIOS Menu 11: Serial Port n Configuration Menu	72
BIOS Menu 12: Serial Port n Configuration Menu	73
BIOS Menu 13: Parallel Port Configuration Menu	77
BIOS Menu 14: H/W Monitor	79
BIOS Menu 15: FAN 1 Configuration	80
BIOS Menu 16: Serial Port Console Redirection	82
BIOS Menu 17: IEI Feature	84
BIOS Menu 18: Chipset	85
BIOS Menu 19:Northbridge Chipset Configuration.....	86
BIOS Menu 20: Southbridge Chipset Configuration	88
BIOS Menu 21: Integrated Graphics	90
BIOS Menu 22: Boot	91
BIOS Menu 23: Security	93
BIOS Menu 24:Exit.....	94

Chapter

1

Introduction

1.1 Introduction

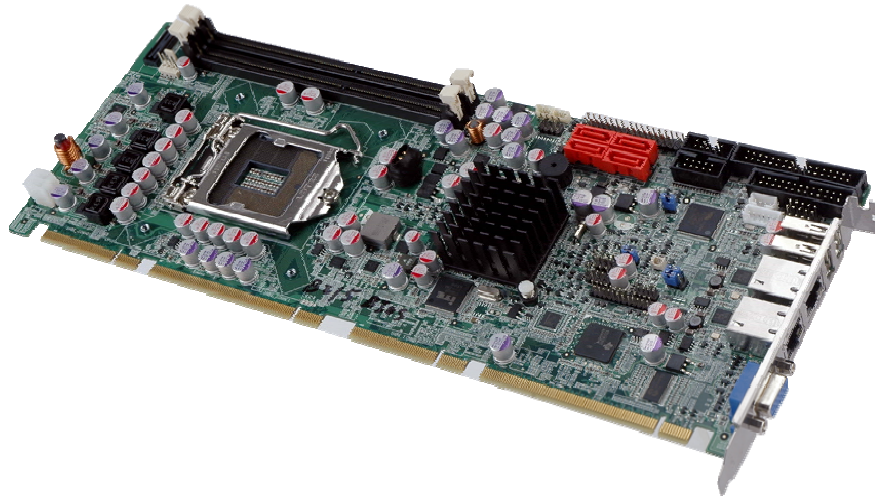


Figure 1-1: PCIE-H610

The PCIE-H610 PICMG 1.3 CPU card is a Socket LGA1155 32nm Intel® Core™ i3/i5/i7/Pentium®/Celeron® processor platform that supports two 240-pin 1066/1333 MHz dual-channel DDR3/DDR3L DIMM modules up to 16.0 GB.

The PCIE-H610 supports two GbE interfaces through the Realtek RTL8111E PCIe Ethernet controllers. The integrated Intel® H61 chipset supports four SATA 3Gb/s drives. Two USB 2.0 on the rear panel, four USB 2.0 by pin header and four USB 2.0 by backplane pin header (via golden fingers) provide flexible expansion options. High Definition Audio (HDA) support ensures HDA devices can be easily implemented on the PCIE-H610.

1.2 Model Variations

The model variations of the PCIE-H610 are listed below.

Model No.	CPU Supported	DVI-D by 26-pin header
PCIE-H610-DVI-R10	LGA1155 Intel® Core™ i7/i5/i3/Pentium®/Celeron®	Yes
PCIE-H610-R10	LGA1155 Intel® Core™ i7/i5/i3/Pentium®/Celeron®	No

Table 1-1: PCIE-H610 Model Variations

PCIE-H610 PICMG 1.3 CPU Card

1.3 Features

Some of the PCIE-H610 motherboard features are listed below:

- PICMG 1.3 full-size graphics grade solution
- LGA1155 CPU socket
- Intel® H61 chipset
- Dual-channel DDR3/DDR3L DIMMs support up to 16.0 GB
- Dual independent display by VGA and DVI-D (DVI model only)
- Two Realtek PCIe Gigabit Ethernet connectors (LAN1 with ASF 2.0 support)
- Four SATA 3Gb/s connectors
- TPM V1.2 hardware security function supported by the TPM module
- High Definition Audio
- RoHS compliant

1.4 Connectors

The connectors on the PCIE-H610 are shown in the figure below.

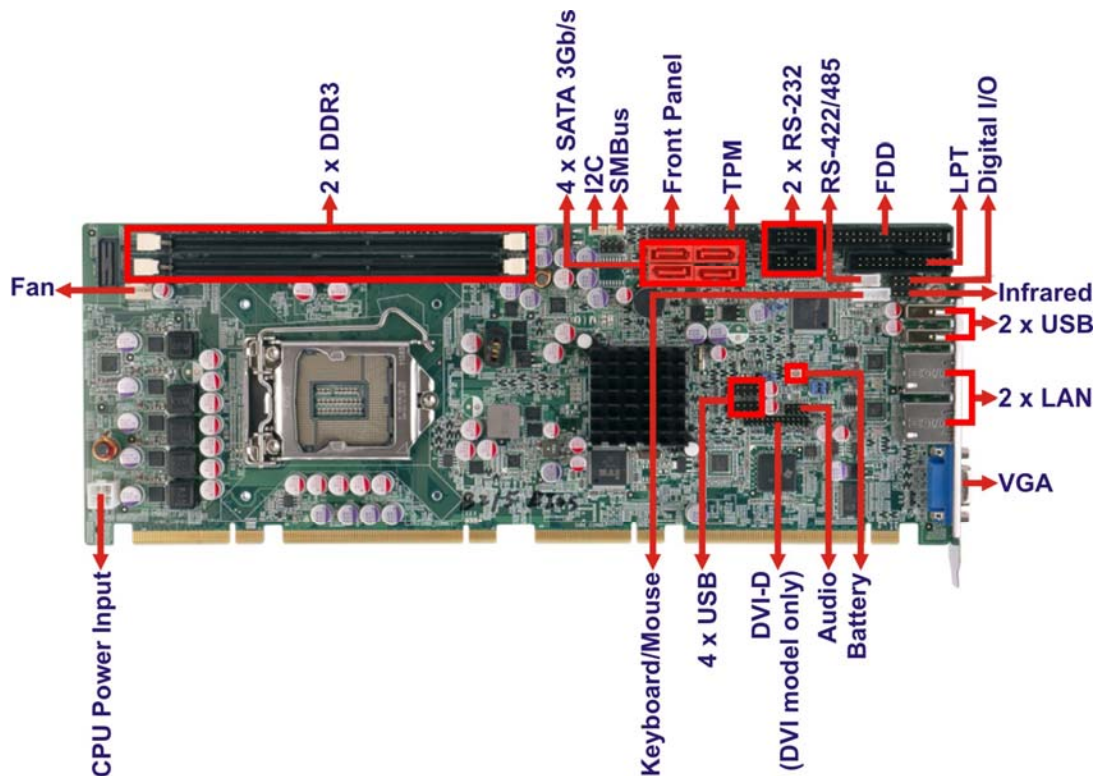


Figure 1-2: Connectors

1.5 Dimensions

The main dimensions of the PCIE-H610 are shown in the diagram below.

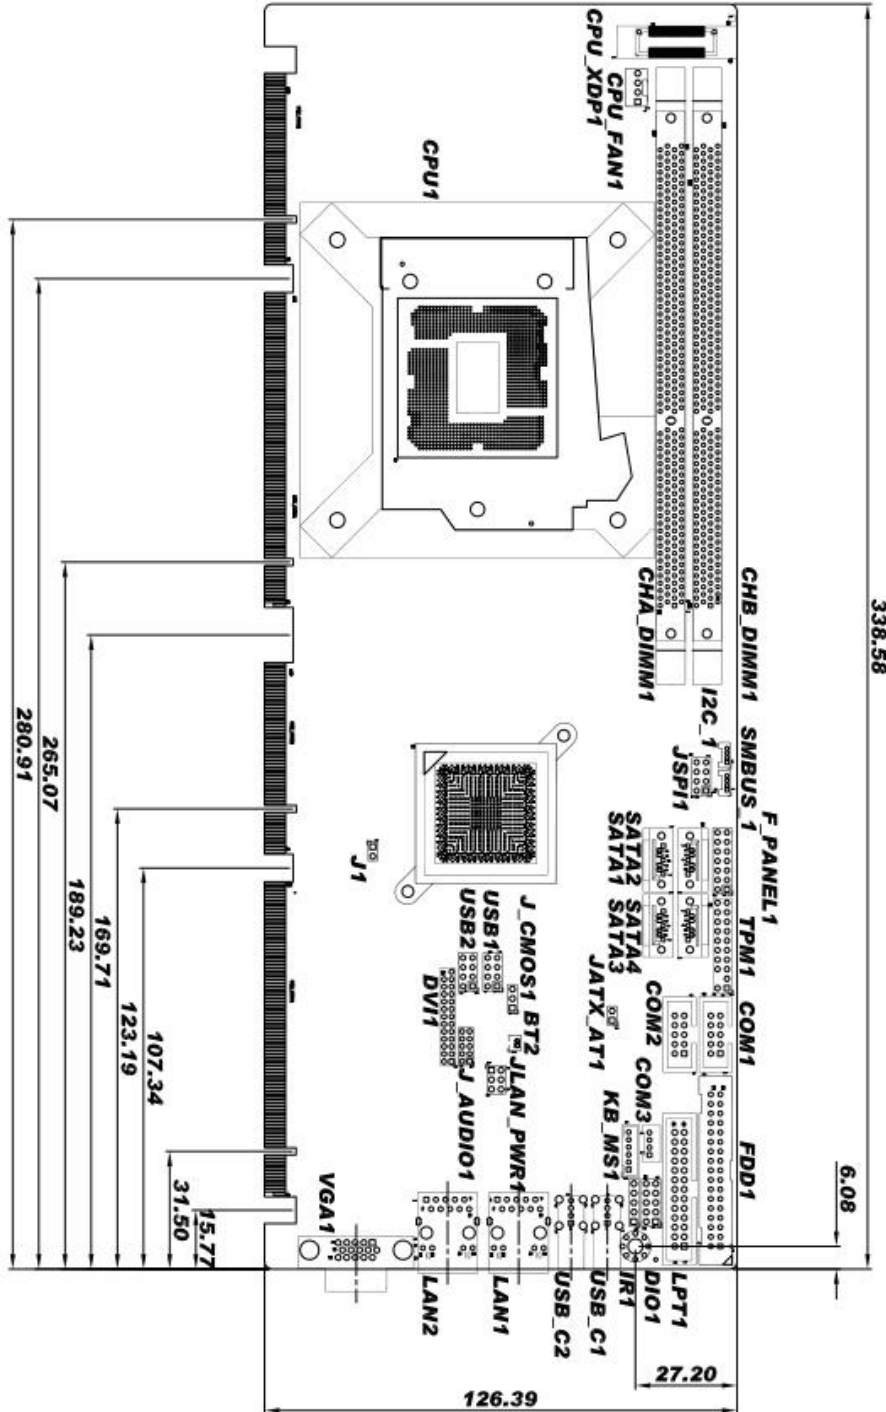


Figure 1-3: PCIE-H610 Dimensions (mm)

PCIE-H610 PICMG 1.3 CPU Card

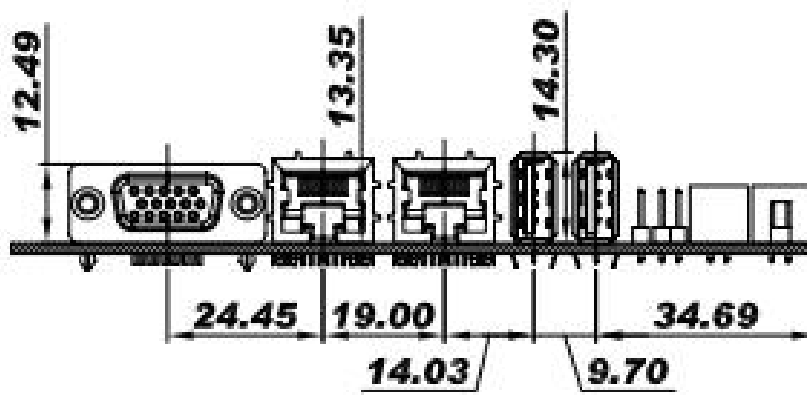


Figure 1-4: External Interface Panel Dimensions (mm)

1.6 Data Flow

Figure 1-5 shows the data flow between the system chipset, the CPU and other components installed on the motherboard.

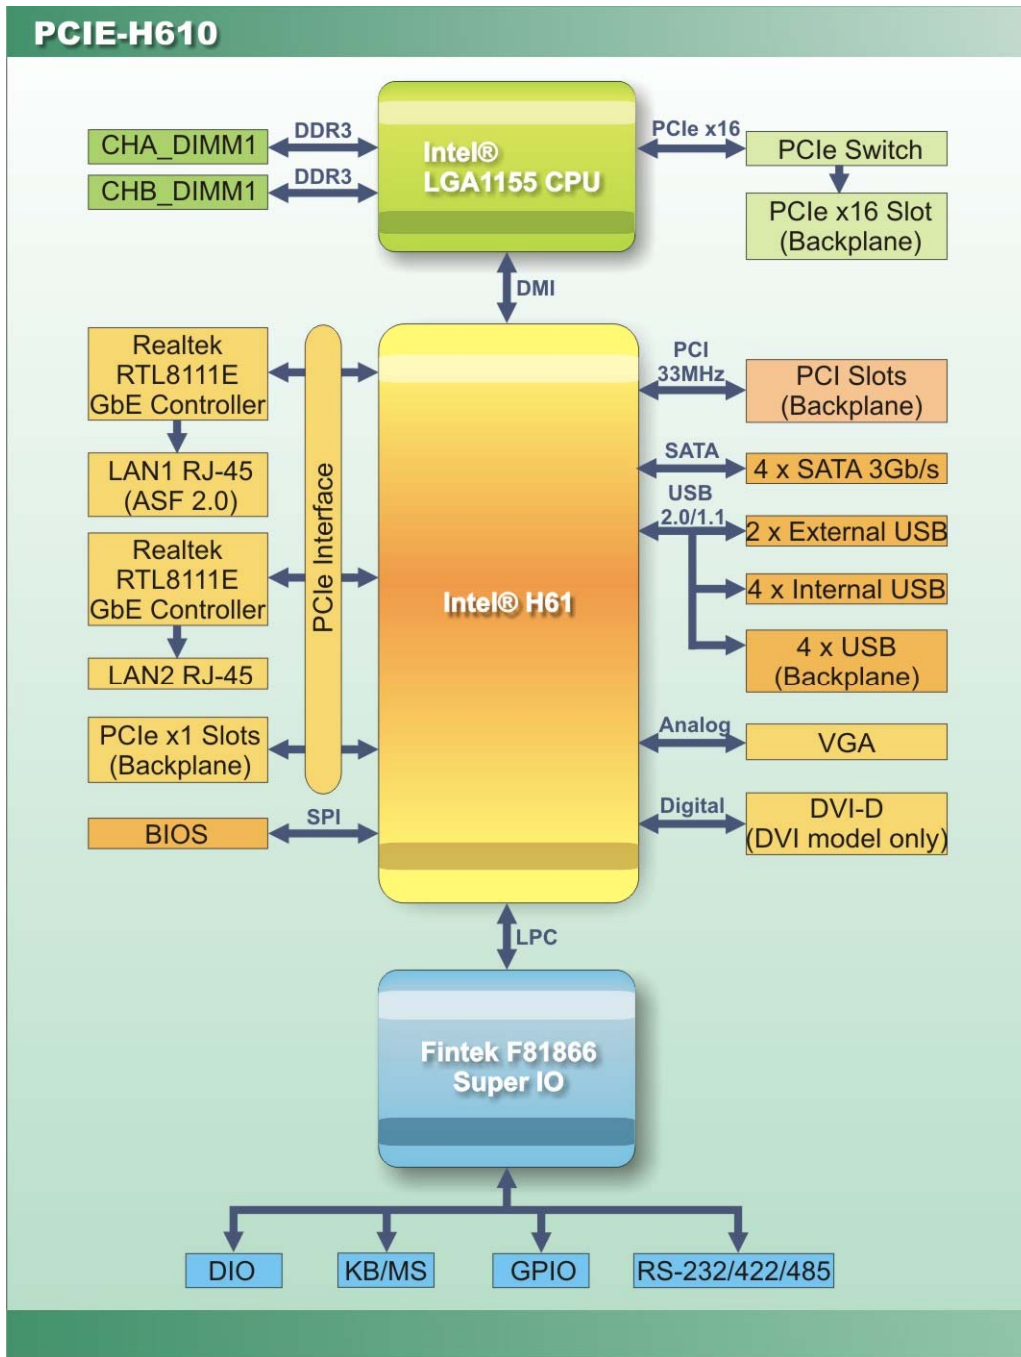


Figure 1-5: Data Flow Diagram

PCIE-H610 PICMG 1.3 CPU Card

1.7 Technical Specifications

The PCIE-H610 technical specifications are listed below.

Specification/Model	PCIE-H610
Form Factor	PICMG 1.3
CPU Supported	LGA1155 Intel® Core™ i7/i5/i3/Pentium®/Celeron® CPU
PCH	Intel® H61
Memory	Two 240-pin 1333/1066 MHz dual-channel unbuffered DDR3/DDR3L (1.35V) SDRAM DIMMs support (system max. 16.0 GB)
Graphics Engine	Intel® HD Graphics 2000/3000 Supports DirectX 10.1 and OpenGL 3.0 Full MPEG2, VC1, AVC Decode
Audio	Supports IEI AC-KIT-892HD audio kit
BIOS	UEFI BIOS B222ARxx supports four PCIe x1 slots (default) V34QARxx supports one PCIe x4 slot
Ethernet Controllers	Dual Realtek RTL8111E PCIe GbE Ethernet controller (LAN1 with ASF 2.0 support)
Super I/O Controller	Fintek F81866
Watchdog Timer	Software programmable supports 1~255 sec. system reset
Expansions	4 x PCI link via golden finger 16-lane PCIe link from CPU via golden finger: Support one PCIe x16 slot on the backplane 4-lane PCIe link from PCH via golden finger: Support either one PCIe x4 slot or four PCIe x1 slots on the backplane For installing the PCIe x4 device on the backplane, the user must update BIOS to the version which supports one PCIe x4 slot
I/O Interface Connectors	
Audio Connector	One internal audio connector (10-pin header)
Digital I/O	8-bit digital I/O

Display Output	One VGA integrated in the Intel® H61 (rear I/O) One DVI-D integrated in the Intel® H61 (via 26-pin header to the DVI-D/USB kit; DVI model only)
Ethernet	Two RJ-45 GbE ports
Fan	One 4-pin wafer connector
FDD	One 34-pin floppy disk drive connector
Front Panel	One 14-pin header (power LED, HDD LED, speaker, power button, reset button)
I2C	One 4-pin wafer connector
Infrared	One via 5-pin header
Keyboard/Mouse	One 6-pin wafer connector
Parallel Port	One parallel port via internal 26-pin box header
Serial ATA	Four SATA 3Gb/s connectors
Serial Ports	Two RS-232 via internal box headers One RS-422/485 via internal 4-pin wafer connector
SMBus	One 4-pin wafer connector
TPM	One via 20-pin header
USB Ports	Two external USB 2.0 ports on rear IO Four internal USB 2.0 ports by two pin headers Four USB 2.0 ports by backplane pin headers via golden fingers
Environmental and Power Specifications	
Power Supply	5V/12V, AT/ATX power supported
Power Consumption	5V@4.41A , 12V@0.21A, Vcore_12V@7.72A, 5VSB@0.16A (3.40 GHz Intel® Core™ i7-2600K CPU with two 2GB 1333 MHz DDR3 memory)
Operating Temperature	-10°C ~ 60°C
Storage Temperature	-20°C ~ 70°C
Humidity	5% ~ 95% (non-condensing)
Physical Specifications	

PCIE-H610 PICMG 1.3 CPU Card

Dimensions	338 mm x 126 mm
Weight (GW/NW)	1200 g / 420 g

Table 1-2: PCIE-H610 Specifications

Chapter

2

Packing List

PCIE-H610 PICMG 1.3 CPU Card

2.1 Anti-static Precautions



WARNING!

Static electricity can destroy certain electronics. Make sure to follow the ESD precautions to prevent damage to the product, and injury to the user.

Make sure to adhere to the following guidelines:

- ***Wear an anti-static wristband:*** Wearing an anti-static wristband can prevent electrostatic discharge.
- ***Self-grounding:*** Touch a grounded conductor every few minutes to discharge any excess static buildup.
- ***Use an anti-static pad:*** When configuring any circuit board, place it on an anti-static mat.
- ***Only handle the edges of the PCB:*** Don't touch the surface of the motherboard. Hold the motherboard by the edges when handling.

2.2 Unpacking Precautions

When the PCIE-H610 is unpacked, please do the following:

- Follow the anti-static guidelines above.
- Make sure the packing box is facing upwards when opening.
- Make sure all the packing list items are present.







2.3 Packing List



NOTE:

If any of the components listed in the checklist below are missing, do not proceed with the installation. Contact the IEI reseller or vendor the PCIE-H610 was purchased from or contact an IEI sales representative directly by sending an email to sales@ieiworld.com.

The PCIE-H610 is shipped with the following components:

Quantity	Item and Part Number	Image
1	PCIE-H610 CPU card	
4	SATA cable (P/N: 32000-062800-RS)	
1	Dual RS-232 cable (P/N: 19800-000051-RS)	
1	Dual USB cable with bracket (P/N: 19800-003100-300-RS)	
1	Mini jumper pack	
1	DVI-D/USB kit (DVI model only) (P/N: IO-KIT-001-R20)	

PCIE-H610 PICMG 1.3 CPU Card









Quantity	Item and Part Number	Image
1	One Key Recovery CD	
1	Utility CD	
1	Quick Installation Guide	

Table 2-1: Packing List

2.4 Optional Items

The following are optional components which may be separately purchased:

Item and Part Number	Image
RS-422/485 cable, 200 mm (P/N: 32205-003800-300-RS)	
KB/MS cable with bracket (P/N: 19800-000075-RS)	
SATA to IDE/CF converter board (P/N: SAIDE-KIT01-R10)	
SATA power cable (P/N: 32102-000100-200-RS)	
FDD flat cable (P/N: 32200-000017-RS)	

Item and Part Number	Image
LPT cable (P/N: 19800-000049-RS)	
7.1-channel HD audio kit with Realtek ALC892 audio codec supporting dual audio stream (P/N: AC-KIT-892HD-R10)	
Infineon TPM module (P/N: TPM-IN01-R11)	
LGA1155/LGA1156 cooler kit (1U chassis compatible, 73W) (P/N: CF-1156A-RS-R11)	
LGA1155/LGA1156 cooler kit (1U chassis compatible, 45W) (P/N: CF-1156C-RS)	
LGA1155/LGA1156 cooler kit (1U chassis compatible, 65W) (P/N: CF-1156D-RS)	
High-performance LGA1155/LGA1156 cooler kit (95W) (P/N: CF-1156E-R11)	
Intel® Core™ i5-2500T processor (LGA1155, quad core 2.3 GHz, 6M cache, 45W, compatible with CF-1156C-RS CPU cooler kit) (P/N: CPU-DT-i5-2500T)	

PCIE-H610 PICMG 1.3 CPU Card

Item and Part Number	Image
Intel® Core™ i5-2390T processor (LGA1155, dual core 2.7 GHz, 3M cache, 35W, compatible with CF-1156C-RS CPU cooler kit) (P/N: CPU-DT-i5-2390T)	
Intel® Core™ i3-2120T processor (LGA1155, dual core 2.6 GHz, 3M cache, 35W, compatible with CF-1156C-RS CPU cooler kit) (P/N: CPU-DT-i3-2120T)	
Intel® Pentium® G630T processor (LGA1155, dual core 2.3 GHz, 3M cache, 35W, compatible with CF-1156C-RS CPU cooler kit) (P/N: CPU-DT-P-G630T)	
Intel® Celeron® G440 processor (LGA1155, single core 1.6 GHz, 1M cache, 35W, compatible with CF-1156C-RS CPU cooler kit) (P/N: CPU-DT-C-G440)	

Table 2-2: Optional Items

Chapter

3

Connectors

PCIE-H610 PICMG 1.3 CPU Card

3.1 Peripheral Interface Connectors

This chapter details all the jumpers and connectors.

3.1.1 PCIE-H610 Layout

The figures below show all the connectors and jumpers.

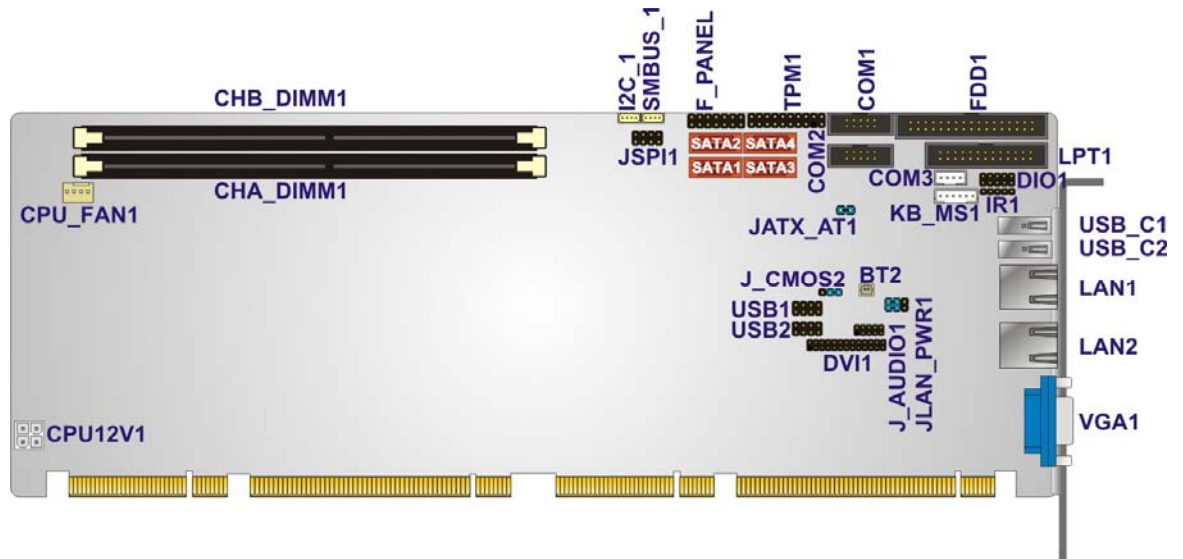


Figure 3-1: Connectors and Jumpers

3.1.2 Peripheral Interface Connectors

The table below lists all the connectors on the board.

Connector	Type	Label
Audio kit connector	10-pin header	J_AUDIO1
Battery connector	2-pin wafer	BT2
CPU power input connector	4-pin Molex power connector	CPU12V1
DDR3 DIMM sockets	240-pin socket	CHA_DIMM1 CHB_DIMM1
Digital I/O connector	10-pin header	DIO1
DVI-D connector (DVI model only)	26-pin header	DVI1

Connector	Type	Label
Fan connector (CPU)	4-pin wafer	CPU_FAN1
Floppy disk drive connector	34-pin box header	FDD1
Front panel connector	14-pin header	F_PANEL1
I2C connector	4-pin wafer	I2C_1
Infrared connector	5-pin header	IR1
Keyboard and mouse connector	6-pin wafer	KB_MS1
Parallel port connector	26-pin box header	LPT1
SATA 3Gb/s drive connector	7-pin SATA connector	SATA1, SATA2, SATA3, SATA4
Serial port, RS-422/485	4-pin wafer	COM3
Serial port, RS-232	10-pin box header	COM1, COM2
SMBus connector	4-pin wafer	SMBUS_1
SPI ROM connector	8-pin header	JSPI1
TPM connector	20-pin header	TPM1
USB connectors	8-pin header	USB1, USB2

Table 3-1: Peripheral Interface Connectors

3.1.3 External Interface Panel Connectors

The table below lists the connectors on the external I/O panel.

Connector	Type	Label
Ethernet connector	RJ-45	LAN1
Ethernet connector	RJ-45	LAN2
USB port	USB	USB_C1
USB port	USB	USB_C2
VGA connector	15-pin female	VGA1

Table 3-2: Rear Panel Connectors

PCIE-H610 PICMG 1.3 CPU Card

3.2 Internal Peripheral Connectors

The section describes all of the connectors on the PCIE-H610.

3.2.1 Audio Kit Connector

- CN Label:** J_AUDIO1
- CN Type:** 10-pin header
- CN Location:** See **Figure 3-2**
- CN Pinouts:** See **Table 3-3**

This connector connects to an external audio kit.

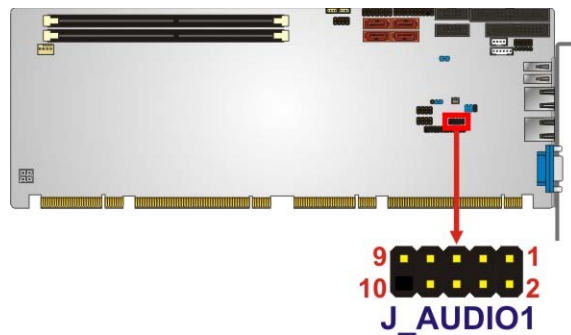


Figure 3-2: Audio Connector Location

Pin	Description	Pin	Description
1	ACZ_SYNC	2	ACZ_BITCLK
3	ACZ_SDOUT	4	ACZ_PCBEEP
5	ACZ_SDIN	6	ACZ_RST#
7	ACZ_VCC	8	ACZ_GND
9	ACZ_12V	10	ACZ_GND

Table 3-3: Audio Connector Pinouts

3.2.2 Battery Connector



CAUTION:

Risk of explosion if battery is replaced by an incorrect type. Only certified engineers should replace the on-board battery.

Dispose of used batteries according to instructions and local regulations.

- CN Label:** BT2
- CN Type:** 2-pin wafer
- CN Location:** See **Figure 3-3**
- CN Pinouts:** See **Table 3-4**

This is connected to the system battery. The battery provides power to the system clock to retain the time when power is turned off.

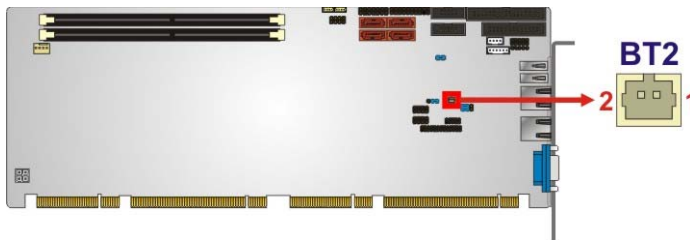


Figure 3-3: Battery Connector Location

Pin	Description
1	Battery+
2	GND

Table 3-4: Battery Connector Pinouts

PCIE-H610 PICMG 1.3 CPU Card

3.2.3 CPU Power Input Connector

- CN Label:** CPU12V1
- CN Type:** 4-pin Molex power connector
- CN Location:** See **Figure 3-4**
- CN Pinouts:** See **Table 3-5**

The connector supports the 12V power supply.

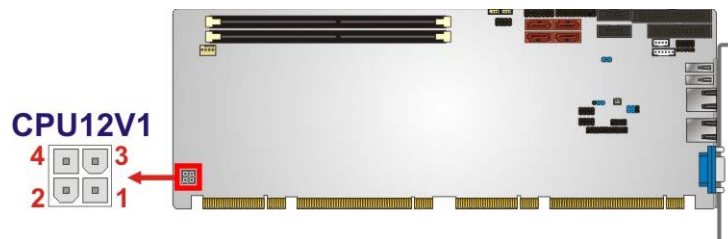


Figure 3-4: ATX Power Connector Pinout Location

Pin	Description	Pin	Description
1	GND	2	GND
3	+12V	4	+12V

Table 3-5: ATX Power Connector Pinouts

3.2.4 DDR3 DIMM Slots

- CN Label:** CHA_DIMM1, CHB_DIMM1
- CN Type:** DDR3 DIMM slot
- CN Location:** See **Figure 3-5**

The DIMM slots are for DDR3 DIMM memory modules.

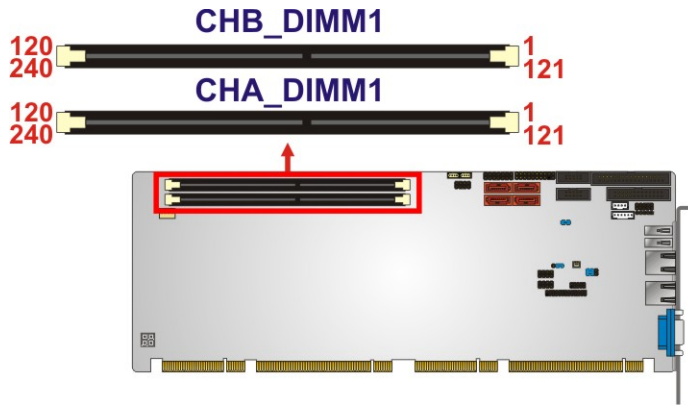


Figure 3-5: DDR3 DIMM Slot Locations

3.2.5 Digital I/O Connector

- CN Label:** DIO1
- CN Type:** 10-pin header
- CN Location:** See **Figure 3-6**
- CN Pinouts:** See **Table 3-6**

The digital I/O connector provides programmable input and output for external devices.

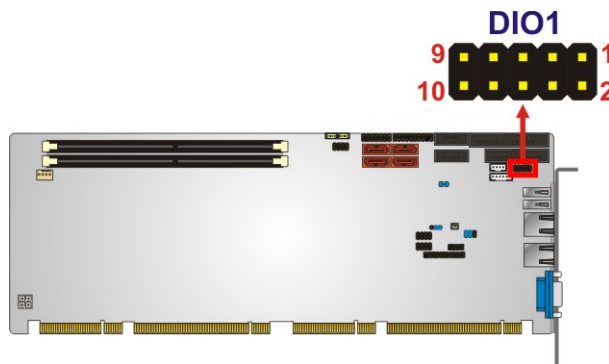


Figure 3-6: Digital I/O Connector Location

Pin	Description	Pin	Description
1	GND	2	VCC
3	Output 3	4	Output 2
5	Output 1	6	Output 0

PCIE-H610 PICMG 1.3 CPU Card

Pin	Description	Pin	Description
7	Input 3	8	Input 2
9	Input 1	10	Input 0

Table 3-6: Digital I/O Connector Pinouts

3.2.6 DVI-D Connector (DVI Model Only)

- CN Label:** DVI1
- CN Type:** 26-pin header
- CN Location:** See **Figure 3-7**
- CN Pinouts:** See **Table 3-7**

The DVI-D connector connects to a monitor that supports DVI video input via the DVI-D/USB kit.

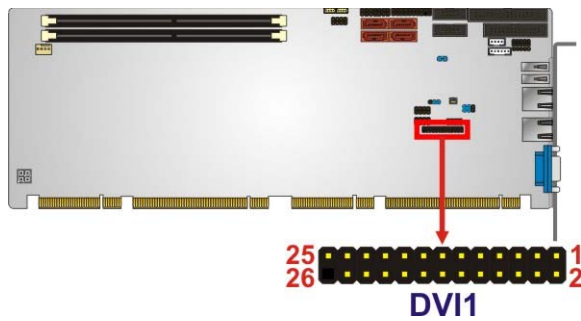


Figure 3-7: DVI-D Connector Location

Pin	Description	Pin	Description
1	CK_DVI_DATA2#	2	DVI_VCC
3	CK_DVI_DATA2	4	GND
5	GND	6	HP_DET
7	NC	8	CK_DVI_DATA0#
9	NC	10	CK_DVI_DATA0
11	DVI_SCL	12	GND
13	DVI_SDA	14	NC
15	NC	16	NC
17	CK_DVI_DATA1#	18	GND

Pin	Description	Pin	Description
19	CK_DVI_DATA1	20	CK_DVI_CLK#
21	GND	22	CK_DVI_CLK
23	NC	24	GND
25	NC		

Table 3-7: DVI-D Connector Pinouts

3.2.7 Fan Connector (CPU)

- CN Label:** CPU_FAN1
- CN Type:** 4-pin wafer
- CN Location:** See **Figure 3-8**
- CN Pinouts:** See **Table 3-8**

The fan connector attaches to a CPU cooling fan.

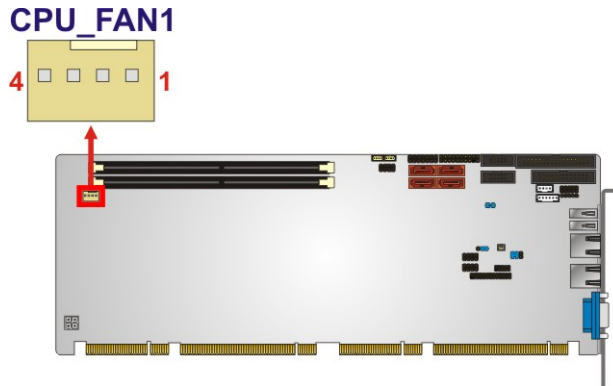


Figure 3-8: CPU Fan Connector Location

Pin	Description
1	GND
2	+12 V
3	Rotation Signal
4	PWM Control Signal

Table 3-8: CPU Fan Connector Pinouts

PCIE-H610 PICMG 1.3 CPU Card

3.2.8 Floppy Disk Drive Connector

- CN Label:** FDD1
- CN Type:** 34-pin header
- CN Location:** See **Figure 3-9**
- CN Pinouts:** See **Table 3-9**

The floppy disk drive connector is connected to a floppy disk drive.

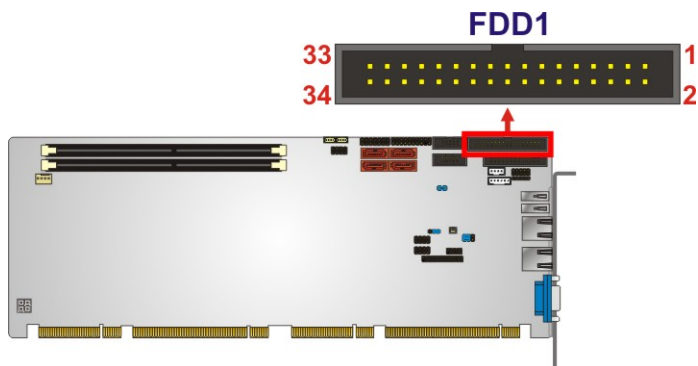


Figure 3-9: Floppy Disk Location

Pin	Description	Pin	Description
1	GND	2	DENSEL
3	GND	4	NC
5	NC	6	NC
7	GND	8	INDEX-
9	GND	10	MOTEA-
11	GND	12	NC
13	GND	14	DRVA-
15	GND	16	NC
17	GND	18	DIR-
19	GND	20	STEP-
21	GND	22	WDATA-
23	GND	24	WGATE-
25	GND	26	TK00-
27	GND	28	WPT-

Pin	Description	Pin	Description
29	GND	30	RDATA-
31	GND	32	SIDE1-
33	GND	34	DSKCHG-

Table 3-9: Floppy Disk Pinouts

3.2.9 Front Panel Connector

- CN Label:** F_PANEL1
- CN Type:** 14-pin header
- CN Location:** See **Figure 3-10**
- CN Pinouts:** See **Table 3-10**

The front panel connector connects to the indicator LEDs and buttons on the computer's front panel.

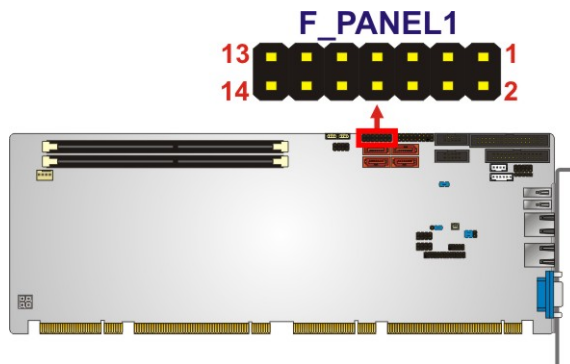


Figure 3-10: Front Panel Connector Location

Function	Pin	Description	Function	Pin	Description
Power LED	1	+5V	Speaker	2	+5V
	3	N/C		4	N/C
	5	GROUND		6	N/C
Power Button	7	PWR_BTN+	Reset	8	Speaker
	9	PWR_BTN-		10	N/C
HDD LED	11	+5V		12	RESET-
	13	HDD_LED-		14	GROUND

Table 3-10: Front Panel Connector Pinouts

PCIE-H610 PICMG 1.3 CPU Card

3.2.10 I2C Connector

- CN Label:** I2C_1
CN Type: 4-pin wafer
CN Location: See **Figure 3-11**
CN Pinouts: See **Table 3-11**

The I2C connector is for system debug.

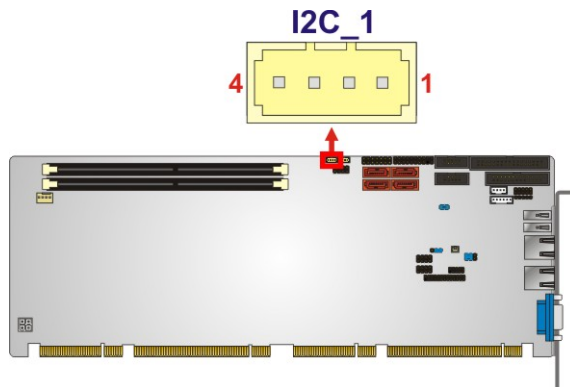


Figure 3-11: I2C Connector Location

Pin	Description
1	+5VS
2	PCH_GP38_PU
3	PCH_GP39_PU
4	GND

Table 3-11: I2C Connector Pinouts

3.2.11 Infrared Interface Connector

- CN Label:** IR1
CN Type: 5-pin header
CN Location: See **Figure 3-12**
CN Pinouts: See **Table 3-12**

The infrared connector attaches to an infrared receiver for use with remote controls.

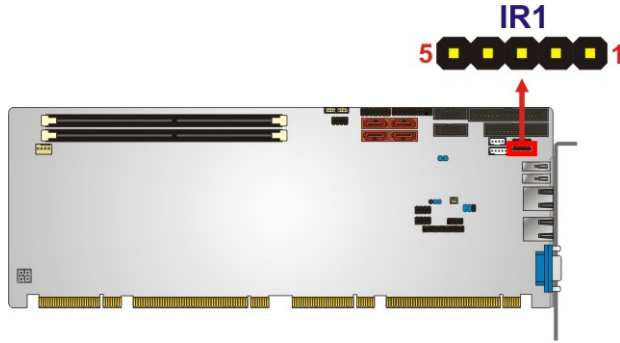


Figure 3-12: Infrared Connector Location

Pin	Description
1	VCC
2	NC
3	IR-RX
4	GND
5	IR-TX

Table 3-12: Infrared Connector Pinouts

3.2.12 Keyboard/Mouse Connector

CN Label: KB_MS1

CN Type: 6-pin wafer

CN Location: See **Figure 3-13**

CN Pinouts: See **Table 3-13**

The keyboard/mouse connector connects to a PS/2 Y-cable that can be connected to a PS/2 keyboard and mouse.

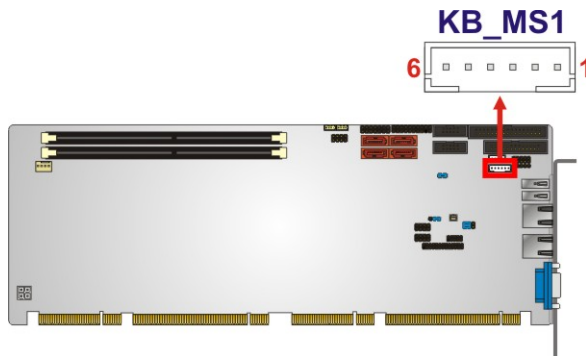


Figure 3-13: Keyboard/Mouse Connector Location

PCIE-H610 PICMG 1.3 CPU Card

Pin	Description
1	+5 VCC
2	Mouse Data
3	Mouse Clock
4	Keyboard Data
5	Keyboard Clock
6	GROUND

Table 3-13: Keyboard/Mouse Connector Pinouts

3.2.13 Parallel Port Connector

- CN Label:** LPT1
- CN Type:** 26-pin box header
- CN Location:** See **Figure 3-14**
- CN Pinouts:** See **Table 3-14**

The parallel port connector connects to a parallel port connector interface or some other parallel port device such as a printer.

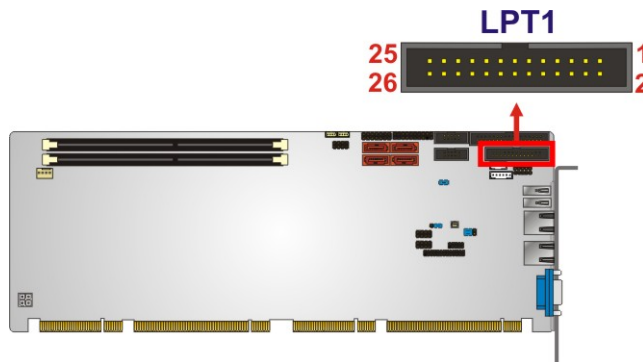


Figure 3-14: Parallel Port Connector Location

Pin	Description	Pin	Description
1	STB	2	AFD
3	PPD0	4	ERROR
5	PPD1	6	INIT
7	PPD2	8	SLIN

Pin	Description	Pin	Description
9	PPD3	10	GND
11	PPD4	12	GND
13	PPD5	14	GND
15	PPD6	16	GND
17	PPD7	18	GND
19	ACK	20	GND
21	BUSY	22	GND
23	PE	24	GND
25	SLCT		

Table 3-14: Parallel Port Connector Pinouts

3.2.14 SATA 3Gb/s Drive Connectors

CN Label: SATA1, SATA2, SATA3, SATA4

CN Type: 7-pin SATA drive connector

CN Location: See Figure 3-15

CN Pinouts: See Table 3-15

The SATA drive connectors can be connected to SATA drives and support up to 3Gb/s data transfer rate.

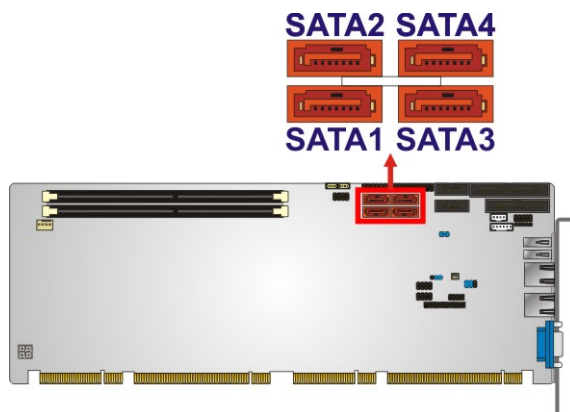


Figure 3-15: SATA 3Gb/s Drive Connector Location

PCIE-H610 PICMG 1.3 CPU Card

Pin	Description	Pin	Description
1	GND	2	TX+
3	TX-	4	GND
5	RX-	6	RX+
7	GND		

Table 3-15: SATA 3Gb/s Drive Connector Pinouts

3.2.15 Serial Port Connectors, RS-232

CN Label: COM1, COM2

CN Type: 10-pin box header

CN Location: See **Figure 3-16**

CN Pinouts: See **Table 3-16**

Each of these connectors provides RS-232 connections.

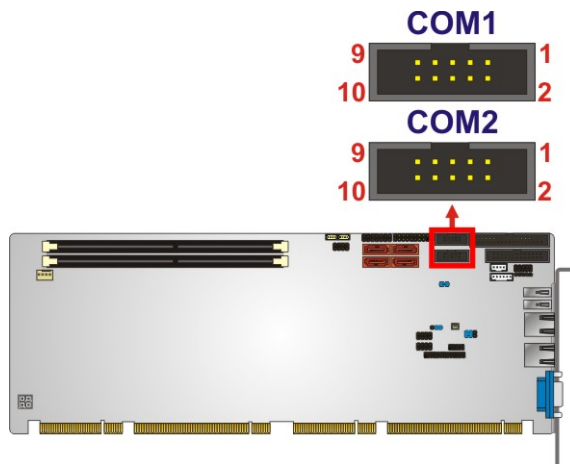


Figure 3-16: Serial Port Connector Location

Pin	Description	Pin	Description
1	DATA CARRIER DETECT (DCD)	2	DATA SET READY (DSR)
3	RECEIVE DATA (RXD)	4	REQUEST TO SEND (RTS)
5	TRANSMIT DATA (TXD)	6	CLEAR TO SEND (CTS)
7	DATA TERMINAL READY (DTR)	8	RING INDICATOR (RI)
9	GND	10	GND

Table 3-16: Serial Port Connector Pinouts

3.2.16 Serial Port Connector, RS-422/485

- CN Label:** COM3
- CN Type:** 4-pin wafer
- CN Location:** See **Figure 3-17**
- CN Pinouts:** See **Table 3-17**

This connector provides RS-422 or RS-485 communications.

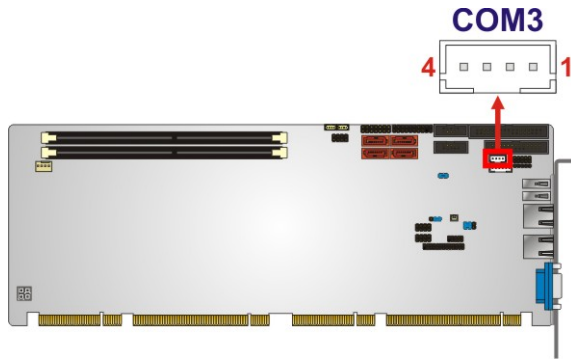


Figure 3-17: RS-422/485 Connector Location

Pin	Description
1	RXD422-
2	RXD422+
3	TXD422+/TXD485+
4	TXD422-/TXD485-

Table 3-17: RS-422/485 Connector Pinouts

Use the optional RS-422/485 cable to connect to a serial device. The pinouts of the DB-9 connector are listed below.

RS-422 Pinouts	RS-485 Pinouts

Table 3-18: DB-9 RS-422/485 Pinouts

PCIE-H610 PICMG 1.3 CPU Card

3.2.17 SMBus Connector

- CN Label:** SMBUS_1
- CN Type:** 4-pin wafer
- CN Location:** See **Figure 3-18**
- CN Pinouts:** See **Table 3-19**

The SMBus (System Management Bus) connector provides low-speed system management communications.

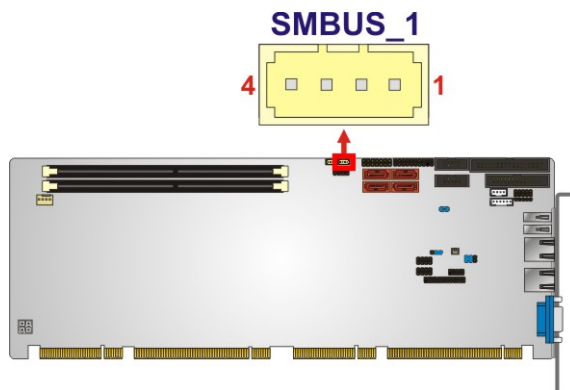


Figure 3-18: SMBus Connector Location

Pin	Description
1	+5VS
2	SMB_CLK
3	SMB_DATA
4	GND

Table 3-19: SMBus Connector Pinouts

3.2.18 SPI ROM Connector

- CN Label:** JSPI1
- CN Type:** 8-pin header
- CN Location:** See **Figure 3-19**
- CN Pinouts:** See **Table 3-20**

The SPI connector is used to flash the BIOS.

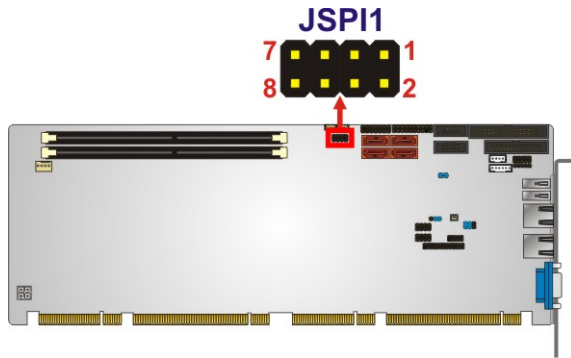


Figure 3-19: SPI Connector Location

Pin	Description	Pin	Description
1	SPI_VCC	2	GND
3	SPI_CS0	4	SPI_CLK
5	SPI_MISO	6	SPI_MOSI
7	NC	8	NC

Table 3-20: SPI Connector Pinouts

3.2.19 TPM Connector

- CN Label:** TPM1
- CN Type:** 20-pin header
- CN Location:** See **Figure 3-20**
- CN Pinouts:** See **Table 3-21**

The TPM connector connects to a TPM module.

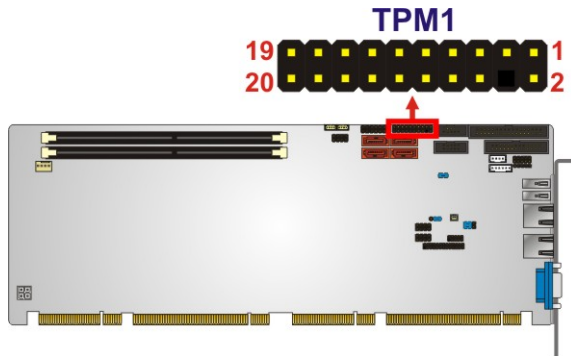


Figure 3-20: TPM Connector Location

PCIE-H610 PICMG 1.3 CPU Card

Pin	Description	Pin	Description
1	CLK	2	GND
3	ERAME#	4	NC
5	RESRT#	6	+5V
7	AD3	8	AD2
9	+3V	10	AD1
11	AD0	12	GND
13	SMB_CLK	14	SMB_DATA
15	SB3V	16	SERIRQ
17	GND	18	+3V
19	PM_SUS_STAT#	20	DRQ#

Table 3-21: TPM Connector Pinouts

3.2.20 USB Connectors

CN Label: USB1, USB2

CN Type: 8-pin header

CN Location: See Figure 3-21

CN Pinouts: See Table 3-22

The USB connectors connect to USB devices. Each pin header provides two USB ports.

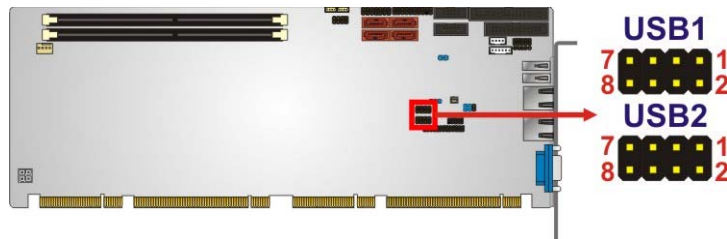


Figure 3-21: USB Connector Pinout Locations

Pin	Description	Pin	Description
1	VCC	2	GND
3	DATA-	4	DATA+
5	DATA+	6	DATA-
7	GND	8	VCC

Table 3-22: USB Port Connector Pinouts

3.3 External Peripheral Interface Connector Panel

The figure below shows the external peripheral interface connector (EPIC) panel. The EPIC panel consists of the following:

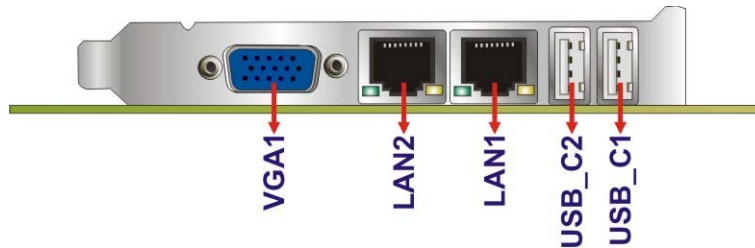


Figure 3-22: External Peripheral Interface Connector

3.3.1 Ethernet Connectors

- CN Label:** LAN1 and LAN2
- CN Type:** RJ-45
- CN Location:** See **Figure 3-22**
- CN Pinouts:** See **Figure 3-23** and **Table 3-23**

The PCIE-H610 is equipped with two built-in RJ-45 Ethernet controllers. Each controller can connect to the LAN through one RJ-45 LAN connector.

Pin	Description	Pin	Description
1	MDIA3-	5	MDIA2+
2	MDIA3+	6	MDIA1+
3	MDIA1-	7	MDIA0-
4	MDIA2-	8	MDIA0+

Table 3-23: LAN Pinouts

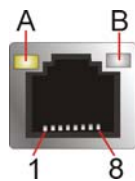


Figure 3-23: Ethernet Connector

PCIE-H610 PICMG 1.3 CPU Card

LED	Description	LED	Description
A	on: linked blinking: data is being sent/received	B	off: 10 Mb/s green: 100 Mb/s orange: 1000 Mb/s

Table 3-24: Connector LEDs

3.3.2 USB Connectors

CN Label: USB_C1 and USB_C2

CN Type: USB port

CN Location: See **Figure 3-22**

CN Pinouts: See **Table 3-25**

The PCIE-H610 has two external USB 2.0 ports. The ports connect to both USB 2.0 and USB 1.1 devices.

Pin	Description
1	VCC
2	DATA-
3	DATA+
4	GROUND

Table 3-25: USB Port Pinouts

3.3.3 VGA Connector

CN Label: VGA1

CN Type: 15-pin Female

CN Location: See **Figure 3-22**

CN Pinouts: See **Figure 3-24** and **Table 3-26**

The VGA connector connects to a monitor that accepts a standard VGA input.

Pin	Description	Pin	Description
1	RED	2	GREEN
3	BLUE	4	NC
5	GND	6	GND
7	GND	8	GND
9	VGAVCC	10	GND
11	NC	12	DDCDAT
13	HSYNC	14	VSYNC
15	DDCCLK		

Table 3-26: VGA Connector Pinouts

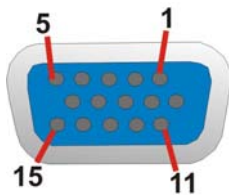


Figure 3-24: VGA Connector

Chapter

4

Installation

4.1 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the installation of the PCIE-H610 may result in permanent damage to the PCIE-H610 and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the PCIE-H610. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the PCIE-H610 or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** - Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- **Self-grounding:**- Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- **Use an anti-static pad:** When configuring the PCIE-H610, place it on an anti-static pad. This reduces the possibility of ESD damaging the PCIE-H610.
- **Only handle the edges of the PCB:-** When handling the PCB, hold the PCB by the edges.

4.2 Installation Considerations



NOTE:

The following installation notices and installation considerations should be read and understood before installation. All installation notices must be strictly adhered to. Failing to adhere to these precautions may lead to severe damage and injury to the person performing the installation.

PCIE-H610 PICMG 1.3 CPU Card



WARNING:

The installation instructions described in this manual should be carefully followed in order to prevent damage to the components and injury to the user.

Before and during the installation please **DO** the following:

- Read the user manual:
 - The user manual provides a complete description of the PCIE-H610 installation instructions and configuration options.
- Wear an electrostatic discharge cuff (ESD):
 - Electronic components are easily damaged by ESD. Wearing an ESD cuff removes ESD from the body and helps prevent ESD damage.
- Place the PCIE-H610 on an anti-static pad:
 - When installing or configuring the motherboard, place it on an anti-static pad. This helps to prevent potential ESD damage.
- Turn all power to the PCIE-H610 off:
 - When working with the PCIE-H610, make sure that it is disconnected from all power supplies and that no electricity is being fed into the system.

Before and during the installation of the PCIE-H610 **DO NOT:**

- Remove any of the stickers on the PCB board. These stickers are required for warranty validation.
- Use the product before verifying all the cables and power connectors are properly connected.
- Allow screws to come in contact with the PCB circuit, connector pins, or its components.

4.2.1 Socket LGA1155 CPU Installation

**WARNING:**

CPUs are expensive and sensitive components. When installing the CPU please be careful not to damage it in anyway. Make sure the CPU is installed properly and ensure the correct cooling kit is properly installed.

DO NOT touch the pins at the bottom of the CPU. When handling the CPU, only hold it on the sides.

To install the CPU, follow the steps below.

Step 1: **Disengage the load lever** by pressing the lever down and slightly outward to clear the retention tab. Fully open the lever. See **Figure 4-1**.

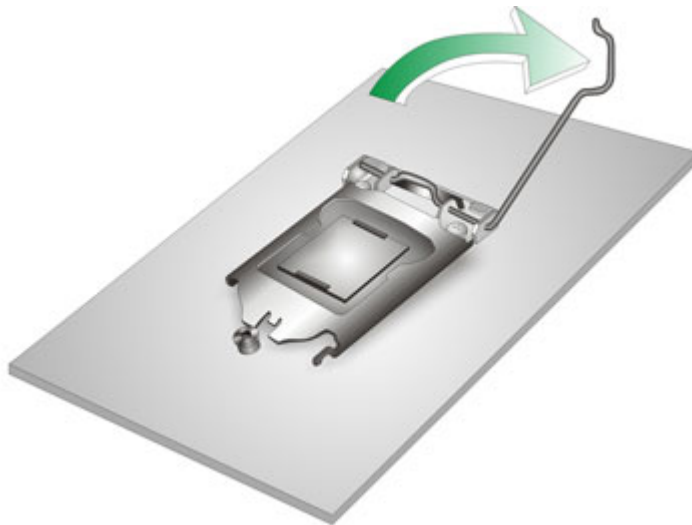


Figure 4-1: Disengage the CPU Socket Load Lever

Step 2: **Open the socket and remove the protective cover.** The black protective cover can be removed by pulling up on the tab labeled "Remove". See **Figure 4-2**.

PCIE-H610 PICMG 1.3 CPU Card

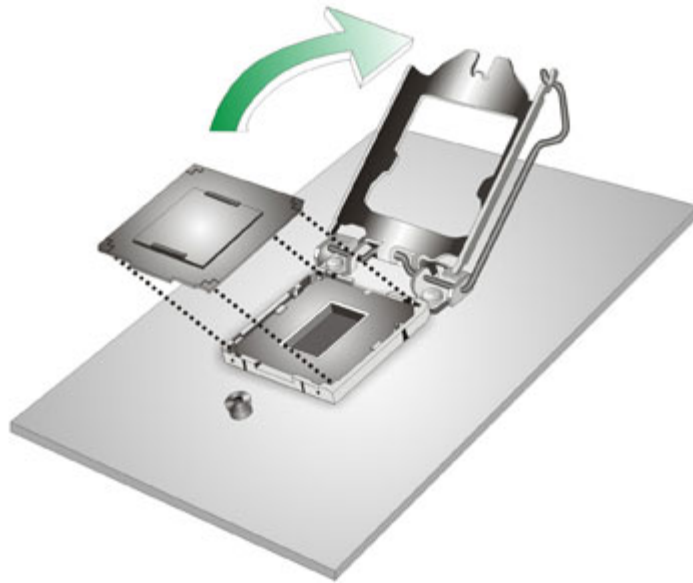


Figure 4-2: Remove Protective Cover

- Step 3: Inspect the CPU socket.** Make sure there are no bent pins and make sure the socket contacts are free of foreign material. If any debris is found, remove it with compressed air.
- Step 4: Orientate the CPU properly.** The contact array should be facing the CPU socket.
- Step 5: Correctly position the CPU.** Match the Pin 1 mark with the cut edge on the CPU socket.
- Step 6: Align the CPU pins.** Locate pin 1 and the two orientation notches on the CPU. Carefully match the two orientation notches on the CPU with the socket alignment keys.
- Step 7: Insert the CPU.** Gently insert the CPU into the socket. If the CPU pins are properly aligned, the CPU should slide into the CPU socket smoothly. See **Figure 4-3**.

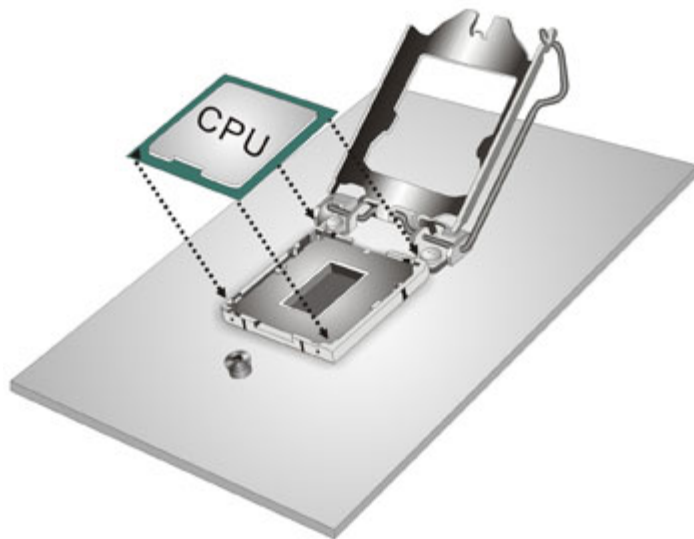


Figure 4-3: Insert the Socket LGA1155 CPU

Step 8: Close the CPU socket. Close the load plate and pull the load lever back a little to have the load plate be able to secure to the knob. Engage the load lever by pushing it back to its original position (**Figure 4-4**). There will be some resistance, but will not require extreme pressure.

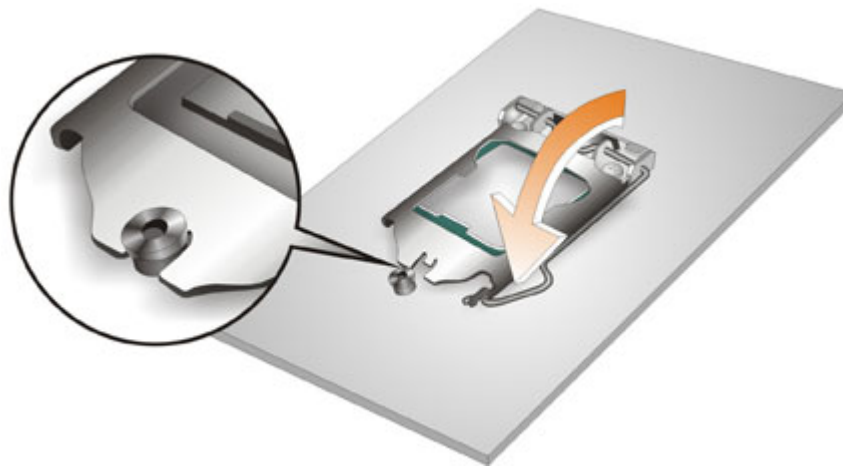


Figure 4-4: Close the Socket LGA1155

Step 9: Connect the 12 V power to the board. Connect the 12 V power from the power supply to the board.

PCIE-H610 PICMG 1.3 CPU Card

4.2.2 Socket LGA1155 Cooling Kit Installation

The cooling kit can be bought from IEI. The cooling kit has a heatsink and fan.



WARNING:

Do not wipe off (accidentally or otherwise) the pre-sprayed layer of thermal paste on the bottom of the heat sink. The thermal paste between the CPU and the heat sink is important for optimum heat dissipation.

To install the cooling kit, follow the instructions below.

Step 1: A cooling kit bracket is pre-installed on the rear of the motherboard. See **Figure 4-5**.

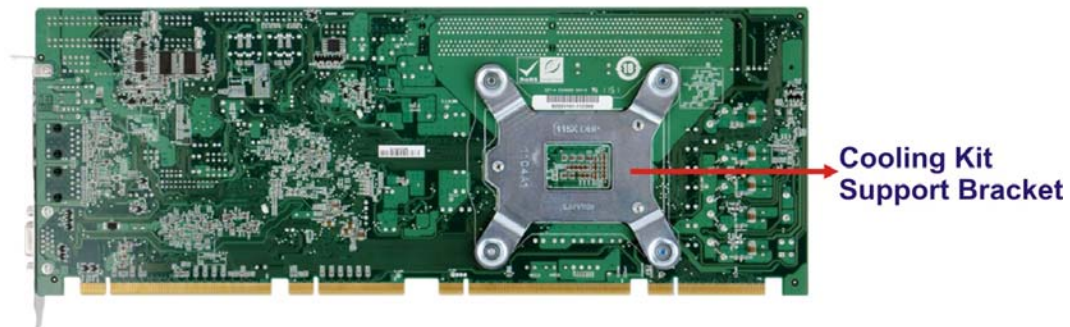


Figure 4-5: Cooling Kit Support Bracket

- Step 2:** Place the cooling kit onto the socket LGA1155 CPU. Make sure the CPU cable can be properly routed when the cooling kit is installed.
- Step 3:** Mount the cooling kit. Gently place the cooling kit on top of the CPU. Make sure the four threaded screws on the corners of the cooling kit properly pass through the holes of the cooling kit bracket.
- Step 4:** Secure the cooling kit by fastening the four retention screws of the cooling kit.

Step 5: Connect the fan cable. Connect the cooling kit fan cable to the fan connector on the PCIE-H610. Carefully route the cable and avoid heat generating chips and fan blades.

4.2.3 DIMM Installation

To install a DIMM, please follow the steps below and refer to **Figure 4-6**.

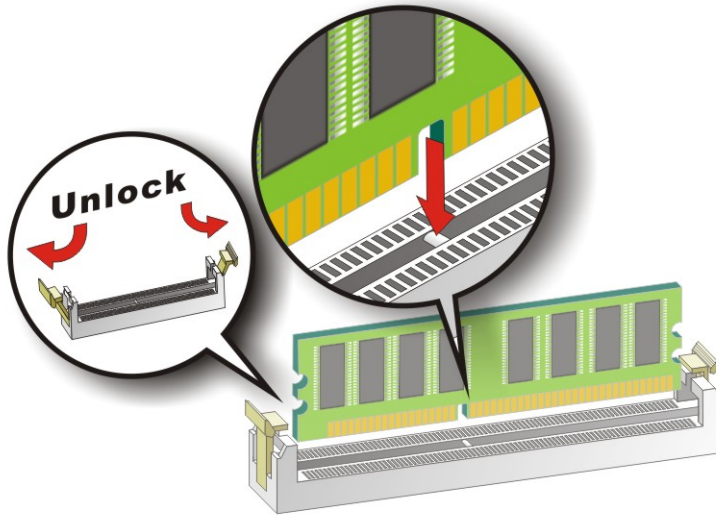


Figure 4-6: DIMM Installation


- Step 1: Open the DIMM socket handles.** Open the two handles outwards as far as they can. See **Figure 4-6**.
- Step 2: Align the DIMM with the socket.** Align the DIMM so the notch on the memory lines up with the notch on the memory socket. See **Figure 4-6**.
- Step 3: Insert the DIMM.** Once aligned, press down until the DIMM is properly seated. Clip the two handles into place. See **Figure 4-6**.
- Step 4: Removing a DIMM.** To remove a DIMM, push both handles outward. The memory module is ejected by a mechanism in the socket.

4.3 Jumper Settings



NOTE:

A jumper is a metal bridge used to close an electrical circuit. It consists of two or three metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To CLOSE/SHORT a jumper means connecting the pins of the jumper with the plastic clip and to OPEN a jumper means removing the plastic clip from a jumper.

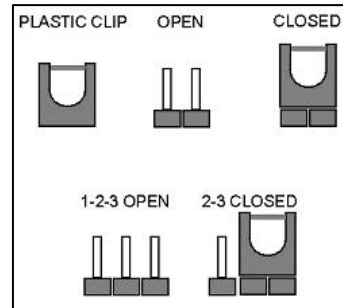

The hardware jumpers must be set before installation. Jumpers are shown in **Table 4-1**.

Description	Label	Type
AT/ATX power select	JATX_AT1	2-pin header
Clear CMOS jumper	J_CMOS1	3-pin header
Wake-on LAN	JLAN_PWR1	6-pin header

Table 4-1: Jumpers

4.3.1 AT/ATX Power Select Jumper

- Jumper Label:** JATX_AT1
- Jumper Type:** 2-pin header
- Jumper Settings:** See **Table 4-2**
- Jumper Location:** See **Figure 4-7**

The AT/ATX Power Select jumper specifies the systems power mode as AT or ATX.

Setting	Description
Closed	ATX power (Default)
Open	AT power

Table 4-2: AT/ATX Power Mode Jumper Settings

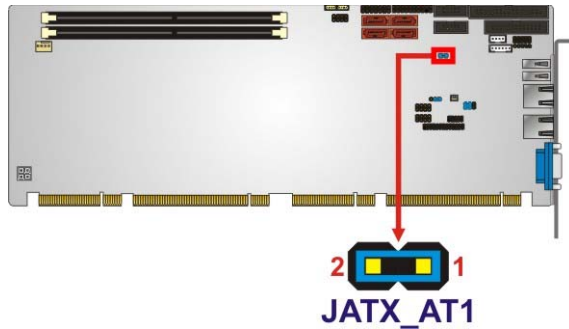


Figure 4-7: AT/ATX Power Mode Jumper Location

4.3.2 Clear CMOS Jumper

- Jumper Label:** J_CMOS1
- Jumper Type:** 3-pin header
- Jumper Settings:** See Table 4-3
- Jumper Location:** See Figure 4-8

To reset the BIOS, move the jumper to the "Clear BIOS" position for 3 seconds or more, and then move back to the default position.

Setting	Description
Short 1-2	Normal
Short 2-3	Clear BIOS

Table 4-3: Clear BIOS Jumper Settings

PCIE-H610 PICMG 1.3 CPU Card

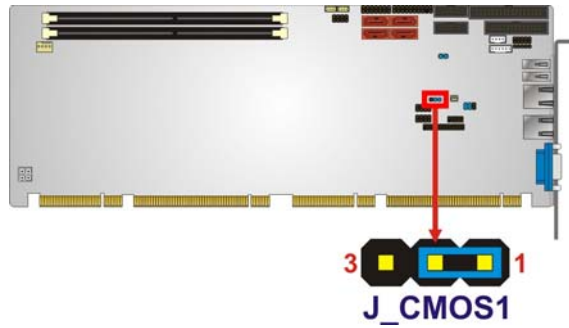


Figure 4-8: Clear BIOS Jumper Location

4.3.3 Wake-on LAN Jumper

- CN Label:** JLAN_PWR1
- CN Type:** 6-pin header
- CN Location:** See Figure 4-9
- CN Pinouts:** See Table 4-4

The Wake-on LAN jumper allows the user to enable or disable the Wake-on LAN (WOL) function.

Setting	Description
Short 1-3	Enable LAN 2 Wake-on LAN (Default)
Short 2-4	Enable LAN 1 Wake-on LAN (Default)
Short 3-5	Disable LAN 2 Wake-on-LAN
Short 4-6	Disable LAN 1 Wake-on LAN

Table 4-4: Wake-on LAN Jumper Settings

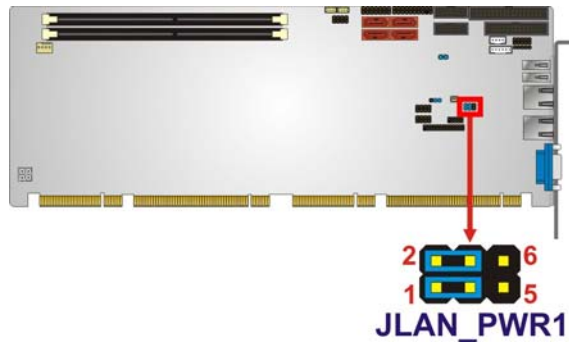


Figure 4-9: Wake-on LAN Jumper Location

Pin	Description	Pin	Description
1	+3.3V_DUAL	2	+3.3V_DUAL
3	+V3.3LAN2	4	+V3.3LAN1
5	+3.3V	6	+3.3V

Table 4-5: Wake-on LAN Jumper Pinouts

4.4 Chassis Installation

4.4.1 Airflow



WARNING:

Airflow is critical to the cooling of the CPU and other onboard components. The chassis in which the PCIE-H610 must have air vents to allow cool air to move into the system and hot air to move out.

The PCIE-H610 must be installed in a chassis with ventilation holes on the sides allowing airflow to travel through the heat sink surface. In a system with an individual power supply unit, the cooling fan of a power supply can also help generate airflow through the board surface.

4.4.2 CPU Card Installation

To install the CPU card onto the backplane, carefully align the CPU card edge connector with the CPU card socket on the backplane. To do this, please refer to the reference material that came with the backplane. Next, secure the CPU card to the chassis. To do this, please refer to the reference material that came with the chassis.

4.5 Internal Peripheral Device Connections

This section outlines the installation of peripheral devices to the onboard connectors.

PCIE-H610 PICMG 1.3 CPU Card

4.5.1 Dual RS-232 Cable with Slot Bracket

The dual RS-232 cable slot connector consists of two connectors attached to two independent cables. Each cable is then attached to a D-sub 9 male connector that is mounted onto a slot. To install the dual RS-232 cable, please follow the steps below.

Step 1: Locate the connectors. The locations of the RS-232 connectors are shown in **Chapter 3**.

Step 2: Insert the cable connectors. Insert one connector into each serial port box headers (**Figure 4-10**). A key on the front of the cable connectors ensures the connector can only be installed in one direction.

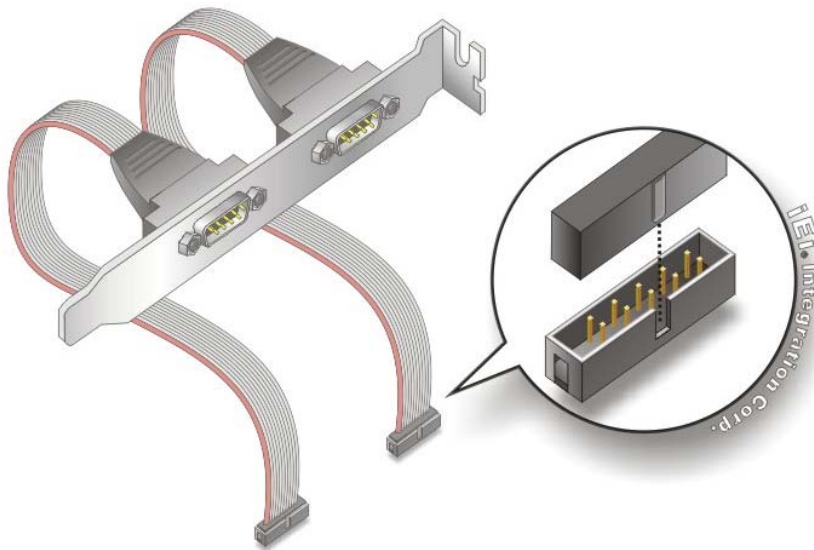


Figure 4-10: Dual RS-232 Cable Installation

Step 3: Secure the bracket. The dual RS-232 connector has two D-sub 9 male connectors secured on a bracket. To secure the bracket to the chassis please refer to the reference material that came with the chassis.

4.5.2 DVI-D/USB Kit Installation (DVI Model Only)

The DVI-D/USB kit, consisting of one DVI-D and four USB ports, connects to the DVI-D and USB connectors on the PCIE-H610. To install the DVI-D/USB kit, please follow the steps below.

Step 1: Connect the cables to the DVI-D/USB kit. Connect the included cables to the DVI-D/USB kit.

Step 2: Connect the cables to the board. Connect the other ends of the included cables to the board.

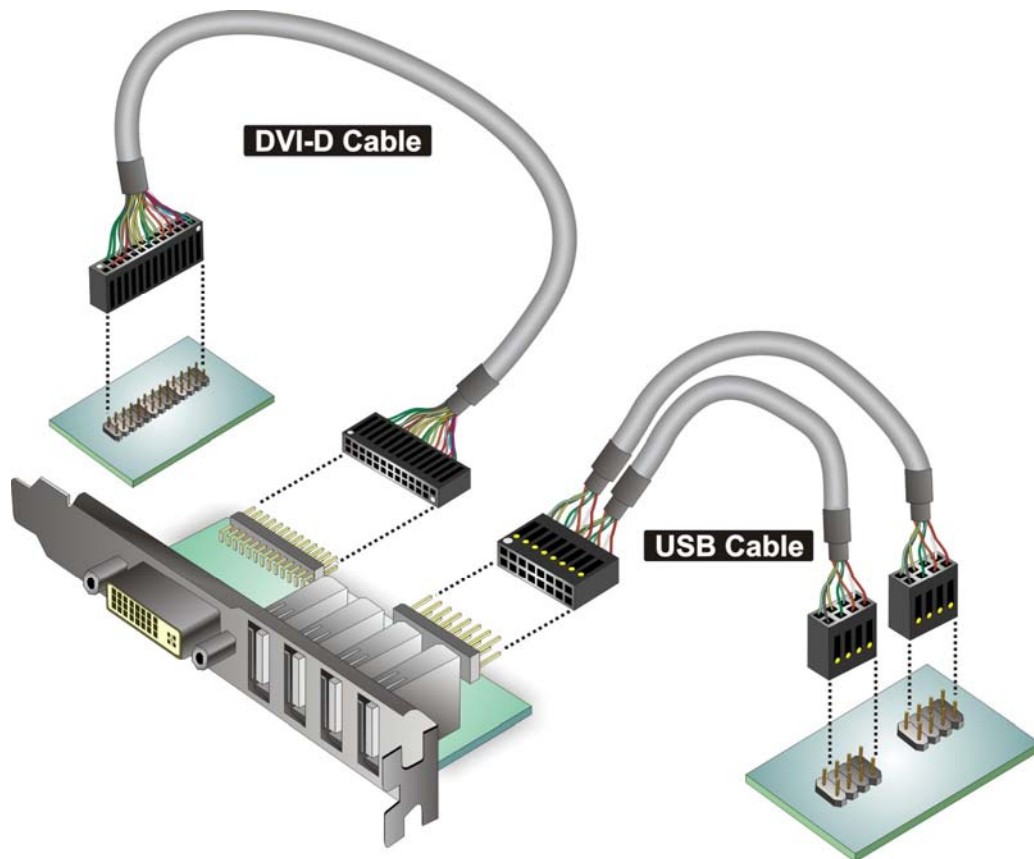


Figure 4-11: DVI-D/USB Kit Installation

Step 3: Mount the DVI-D/USB kit onto the chassis. Once the DVI-D/USB kit is connected to the board, secure the DVI-D/USB kit bracket to the system chassis.

PCIE-H610 PICMG 1.3 CPU Card

4.5.3 SATA Drive Connection

The PCIE-H610 is shipped with four SATA drive cables. To connect the SATA drives to the connectors, please follow the steps below.

Step 1: Locate the connectors. The locations of the SATA drive connectors are shown in **Chapter 3**.

Step 2: Insert the cable connector. Insert the cable connector into the on-board SATA drive connector until it clips into place. See **Figure 4-12**.

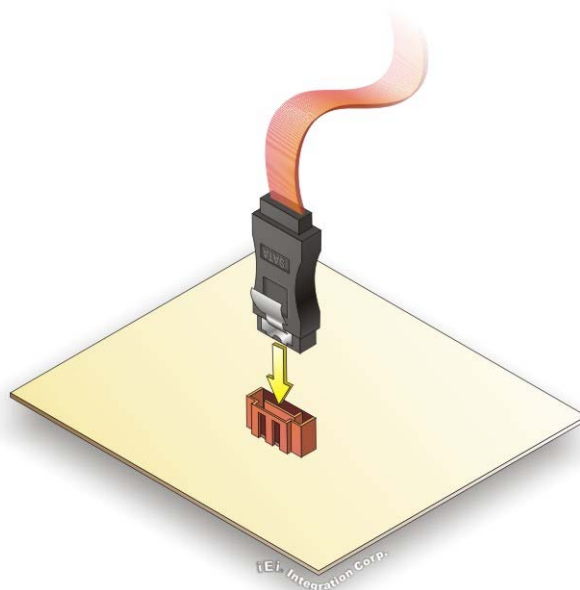


Figure 4-12: SATA Drive Cable Connection

Step 3: Connect the cable to the SATA disk. Connect the connector on the other end of the cable to the connector at the back of the SATA drive. See **Figure 4-13**.

Step 4: Connect the SATA power cable (optional). Connect the SATA power connector to the back of the SATA drive. See **Figure 4-13**.

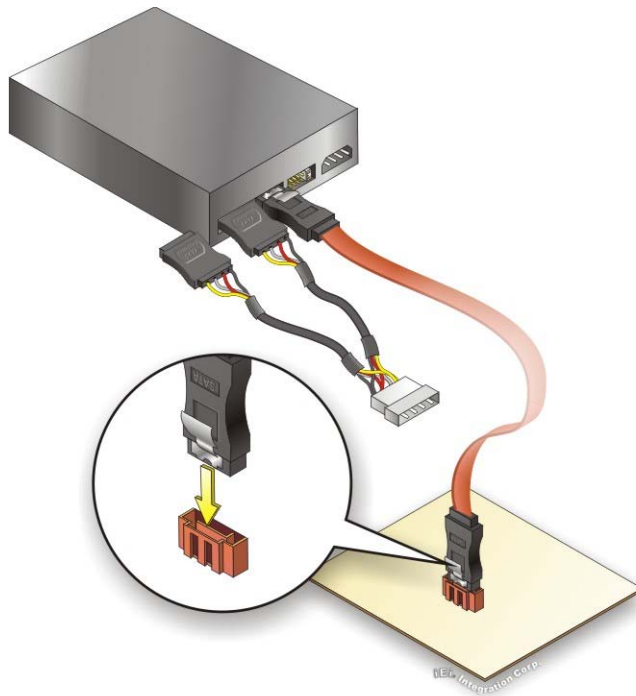


Figure 4-13: SATA Power Drive Connection

4.5.4 USB Cable (Dual Port) with Slot Bracket

The PCIE-H610 is shipped with a dual port USB 2.0 cable. To connect the USB cable connector, please follow the steps below.

Step 1: **Locate the connectors.** The locations of the USB connectors are shown in **Chapter 3.**



WARNING:

If the USB pins are not properly aligned, the USB device can burn out.

Step 2: **Align the connectors.** The cable has two connectors. Correctly align pin 1 on each cable connector with pin 1 on the PCIE-H610 USB connector.

PCIE-H610 PICMG 1.3 CPU Card

Step 3: Insert the cable connectors Once the cable connectors are properly aligned with the USB connectors on the PCIE-H610, connect the cable connectors to the on-board connectors. See **Figure 4-14**.

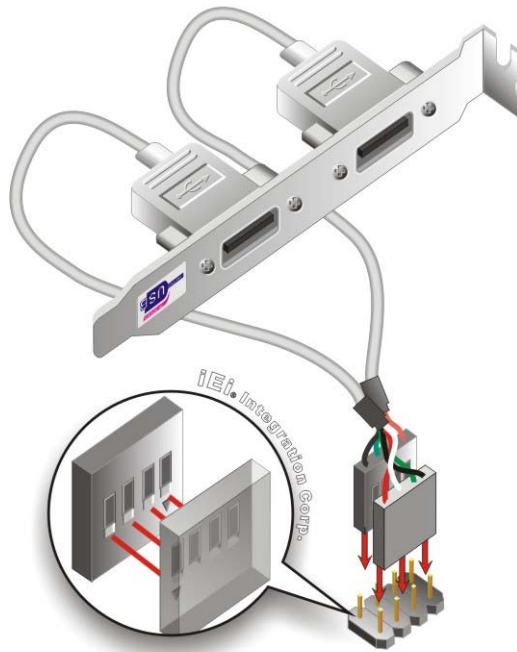


Figure 4-14: Dual USB Cable Connection

Step 4: Attach the bracket to the chassis. The USB 2.0 connectors are attached to a bracket. To secure the bracket to the chassis please refer to the installation instructions that came with the chassis.

4.6 External Peripheral Interface Connection

This section describes connecting devices to the external connectors on the PCIE-H610.

4.6.1 LAN Connection

There are two external RJ-45 LAN connectors. The RJ-45 connectors enable connection to an external network. To connect a LAN cable with an RJ-45 connector, please follow the instructions below.

Step 1: Locate the RJ-45 connectors. The locations of the RJ-45 connectors are shown in **Chapter 3**.

Step 2: Align the connectors. Align the RJ-45 connector on the LAN cable with one of the RJ-45 connectors on the PCIE-H610. See **Figure 4-15**.

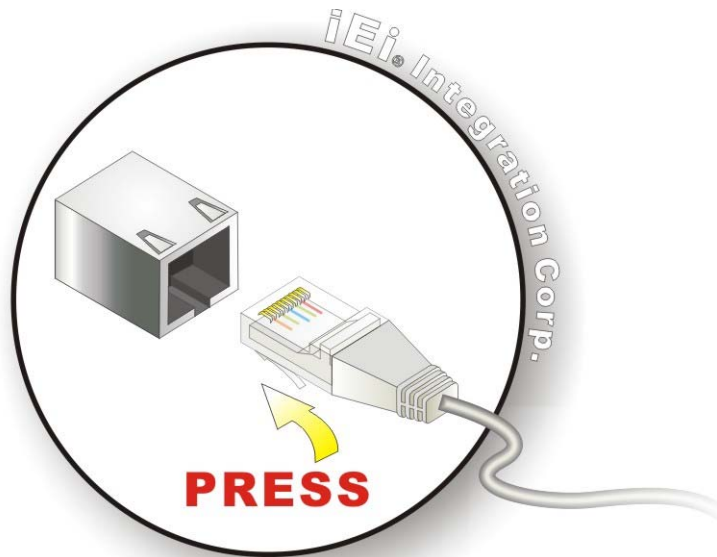


Figure 4-15: LAN Connection

Step 3: Insert the LAN cable RJ-45 connector. Once aligned, gently insert the LAN cable RJ-45 connector into the on-board RJ-45 connector.

4.6.2 USB Device Connection (Single Connector)

There is one external USB 2.0 connector. The connector is perpendicular to the PCIE-H610. To connect a USB 2.0 or USB 1.1 device, please follow the instructions below.

Step 1: Located the USB connector. The location of the USB connector is shown in **Chapter 3**.

Step 2: Align the connectors. Align the USB device connector with the connector on the PCIE-H610. See **Figure 4-16**.

PCIE-H610 PICMG 1.3 CPU Card

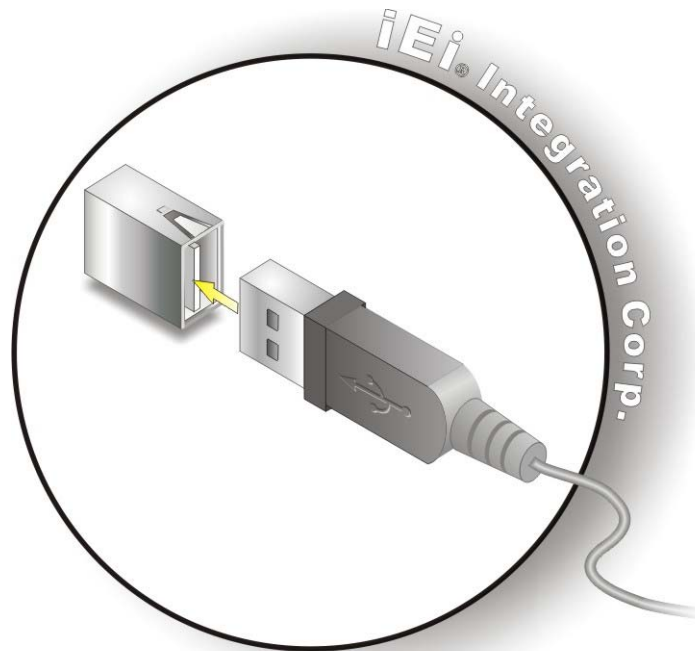


Figure 4-16: USB Device Connection

Step 3: **Insert the device connector.** Once aligned, gently insert the USB device connector into the on-board connector.

4.6.3 VGA Monitor Connection

The PCIE-H610 has a single female DB-15 connector on the external peripheral interface panel. The DB-15 connector is connected to a CRT or VGA monitor. To connect a monitor to the PCIE-H610, please follow the instructions below.

- Step 1:** **Locate the female DB-15 connector.** The location of the female DB-15 connector is shown in **Chapter 3**.
- Step 2:** **Align the VGA connector.** Align the male DB-15 connector on the VGA screen cable with the female DB-15 connector on the external peripheral interface.
- Step 3:** **Insert the VGA connector** Once the connectors are properly aligned with the insert the male connector from the VGA screen into the female connector on the PCIE-H610. See **Figure 4-17**.

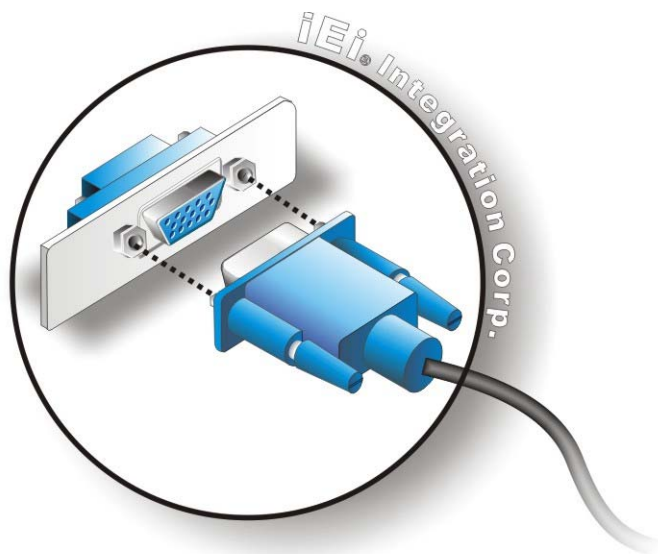


Figure 4-17: VGA Connector

Step 4: Secure the connector. Secure the DB-15 VGA connector from the VGA monitor to the external interface by tightening the two retention screws on either side of the connector.

Chapter

5

BIOS

5.1 Introduction

The BIOS is programmed onto the BIOS chip. The BIOS setup program allows changes to certain system settings. This chapter outlines the options that can be changed.



NOTE:

Some of the BIOS options may vary throughout the life cycle of the product and are subject to change without prior notice.

5.1.1 Starting Setup

The UEFI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. Press the **DEL** or **F2** key as soon as the system is turned on or
2. Press the **DEL** or **F2** key when the “**Press DEL or F2 to enter SETUP**” message appears on the screen.

If the message disappears before the **DEL** or **F2** key is pressed, restart the computer and try again.

5.1.2 Using Setup

Use the arrow keys to highlight items, press **ENTER** to select, use the PageUp and PageDown keys to change entries, press **F1** for help and press **ESC** to quit. Navigation keys are shown in the following table.

Key	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
+	Increase the numeric value or make changes
-	Decrease the numeric value or make changes

PCIE-H610 PICMG 1.3 CPU Card

Key	Function
Page Up key	Increase the numeric value or make changes
Page Dn key	Decrease the numeric value or make changes
Esc key	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
F1	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2	Previous values
F3	Load optimized defaults
F4	Save changes and Exit BIOS

Table 5-1: BIOS Navigation Keys

5.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window press **Esc** or the **F1** key again.

5.1.4 Unable to Reboot after Configuration Changes

If the computer cannot boot after changes to the system configuration is made, CMOS defaults. Use the jumper described in Chapter 4.

5.1.5 BIOS Menu Bar

The **menu bar** on top of the BIOS screen has the following main items:

- Main – Changes the basic system configuration.
- Advanced – Changes the advanced system settings.
- Chipset – Changes the chipset settings.
- Boot – Changes the system boot configuration.
- Security – Sets User and Supervisor Passwords.
- Save & Exit – Selects exit options and loads default settings

The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.

5.2 Main

The **Main** BIOS menu (**BIOS Menu 1**) appears when the **BIOS Setup** program is entered. The **Main** menu gives an overview of the basic system information.

```

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.
Main  Advanced  Chipset  Boot  Security  Save & Exit

BIOS Information
BIOS Vendor          American Megatrends
Core Version         4.6.4.0 0.03
Compliancy           UEFI 2.0
Project Version      B222AR06.ROM
Build Date and Time  01/02/2012 14:17:42

Memory Information
Total Memory         1024 MB (DDR3 1333)

System Date          [Thu 02/02/2012]
System Time          [15:10:27]

Access Level         Administrator

Set the Date. Use Tab to
switch between Data
elements.

-----
-><: Select Screen
↑ ↓: Select Item
EnterSelect
+/-: Change Opt.
F1:  General Help
F2:  Previous Values
F3:  Optimized Defaults
F4:  Save & Exit
ESC: Exit

Version 2.11.1210. Copyright (C) 2011 American Megatrends, Inc.
    
```

BIOS Menu 1: Main

→ System Overview

The **BIOS Information** lists a brief summary of the BIOS. The fields in **BIOS Information** cannot be changed. The items shown in the system overview include:

- **BIOS Vendor:** Installed BIOS vendor
- **Core Version:** Current BIOS version
- **Project Version:** the board version
- **Build Date and Time:** Date and time the current BIOS version was made

→ Memory Information

The **Memory Information** lists a brief summary of the on-board memory. The fields in **Memory Information** cannot be changed.

- **Total Memory:** Displays the auto-detected system memory size and type.

PCIE-H610 PICMG 1.3 CPU Card

The System Overview field also has two user configurable fields:

→ **System Date [xx/xx/xx]**

Use the **System Date** option to set the system date. Manually enter the day, month and year.

→ **System Time [xx:xx:xx]**

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.

5.3 Advanced

Use the **Advanced** menu (**BIOS Menu 2**) to configure the CPU and peripheral devices through the following sub-menus:



WARNING!

Setting the wrong values in the sections below may cause the system to malfunction. Make sure that the settings made are compatible with the hardware.

```

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.
Main  Advanced  Chipset  Boot  Security  Save & Exit
-----
> ACPI Settings
> Trusted Computing
> CPU Configuration
> SATA Configuration
> Intel TXT(LT) Configuration
> USB Configuration
> Super IO Configuration
> H/M Monitor
> Serial Port Console Redirection
> iEi Feature


System ACPI Parameters
-----
→←: Select Screen
↑ ↓: Select Item
Enter>Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.11.1210. Copyright (C) 2011 American Megatrends, Inc.
    
```

BIOS Menu 2: Advanced

5.3.1 ACPI Settings

The **ACPI Settings** menu (**BIOS Menu 3**) configures the Advanced Configuration and Power Interface (ACPI) options.

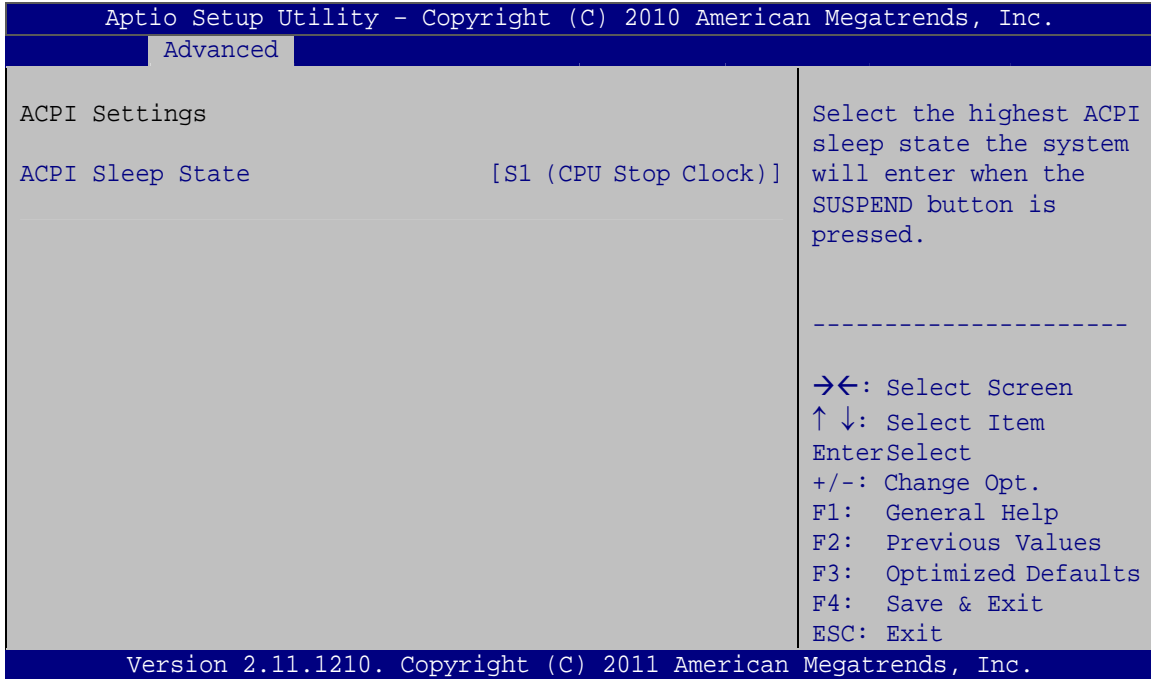

BIOS Menu 3: ACPI Configuration

→ **ACPI Sleep State [S1 (CPU Stop Clock)]**


Use the **ACPI Sleep State** option to specify the sleep state the system enters when it is not being used.

- **S1 (CPU Stop Clock) DEFAULT** The system enters S1 (POS) sleep state. The system appears off. The CPU is stopped; RAM is refreshed; the system is running in a low power mode.
- **S3 (Suspend to RAM)** The caches are flushed and the CPU is powered off. Power to the RAM is maintained. The computer returns slower to a working state, but more power is saved.

PCIE-H610 PICMG 1.3 CPU Card

5.3.2 Trusted Computing

Use the **Trusted Computing** menu (**BIOS Menu 4**) to configure settings related to the Trusted Computing Group (TCG) Trusted Platform Module (TPM).

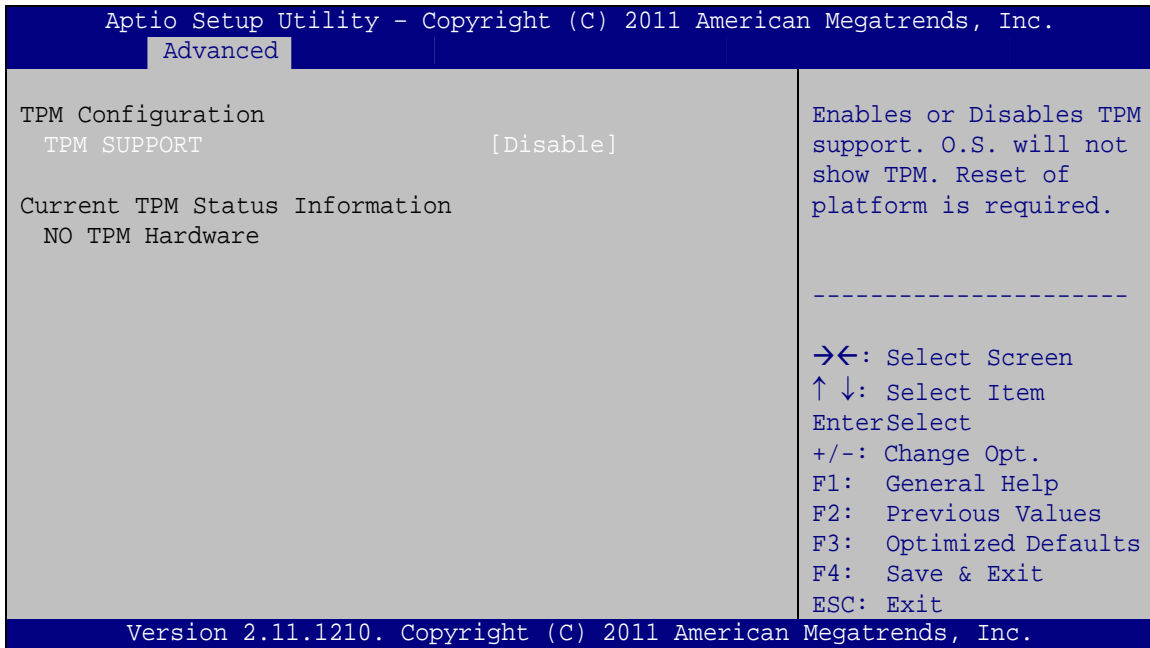

BIOS Menu 4: TPM Configuration


→ TPM Support [Disable]

Use the **TPM Support** option to configure support for the TPM.

- **Disable** **DEFAULT** TPM support is disabled.
- **Enable** TPM support is enabled.

5.3.3 CPU Configuration

Use the **CPU Configuration** menu (**BIOS Menu 5**) to enter the **CPU Information** submenu or enable Intel Virtualization Technology.

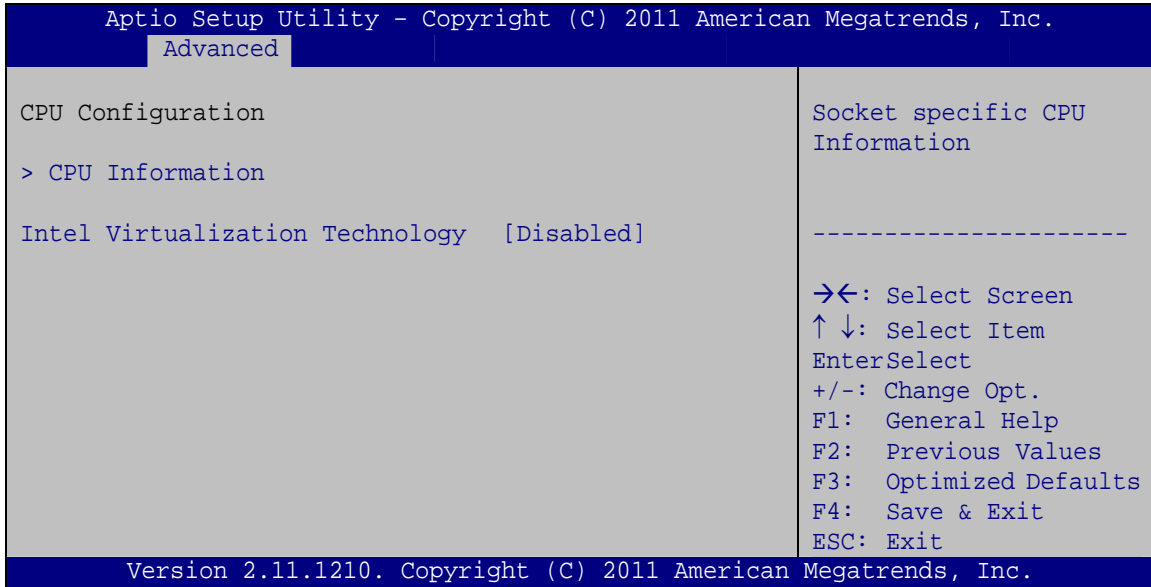

BIOS Menu 5: CPU Configuration

→ **Intel Virtualization Technology [Disabled]**

Use the **Intel Virtualization Technology** option to enable or disable virtualization on the system. When combined with third party software, Intel® Virtualization technology allows several OSs to run on the same system at the same time.

- **Disabled** **DEFAULT** Disables Intel Virtualization Technology.
- **Enabled** Enables Intel Virtualization Technology.

5.3.3.1 CPU Information

Use the **CPU Information** submenu (**BIOS Menu 6**) to view detailed CPU specifications and configure the CPU.

PCIE-H610 PICMG 1.3 CPU Card

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.

Advanced

CPU Information	
Intel(R) Core(TM) i5-2400 CPU 0 @ 3.10GHz	
CPU Signature	206a7
Microcode Patch	14
Max CPU Speed	3100 MHz
Min CPU Speed	1600 MHz
Processor Cores	4
Intel HT Technology	Not Supported
Intel VT-x Technology	Supported
Intel SMX Technology	Supported
L1 Data Cache	32 kB x 2
L1 Code Cache	32 kB x 2
L2 Cache	256 kB x 2
L3 Cache	6144 kB

→←: Select Screen
 ↑ ↓: Select Item
 Enter>Select
 +/-: Change Opt.
 F1: General Help
 F2: Previous Values
 F3: Optimized Defaults
 F4: Save & Exit
 ESC: Exit

Version 2.11.1210. Copyright (C) 2011 American Megatrends, Inc.


BIOS Menu 6: CPU Configuration

The CPU Configuration menu (**BIOS Menu 6**) lists the following CPU details:

- Processor Type: Lists the brand name of the CPU being used
- CPU Signature: Lists the CPU signature value.
- Microcode Patch: Lists the microcode patch being used.
- Max CPU Speed: Lists the maximum CPU processing speed.
- Min CPU Speed: Lists the minimum CPU processing speed.
- Processor Cores: Lists the number of the processor core
- Intel HT Technology: Indicates if Intel HT Technology is supported by the CPU.
- Intel VT-x Technology: Indicates if Intel VT-x Technology is supported by the CPU.
- Intel SMX Technology: Indicates if Intel SMX Technology is supported by the CPU.
- L1 Data Cache: Lists the amount of data storage space on the L1 cache.
- L1 Code Cache: Lists the amount of code storage space on the L1 cache.
- L2 Cache: Lists the amount of storage space on the L2 cache.
- L3 Cache: Lists the amount of storage space on the L3 cache.

5.3.4 SATA Configuration

Use the **SATA Configuration** menu (**BIOS Menu 7**) to change and/or set the configuration of the SATA devices installed in the system.

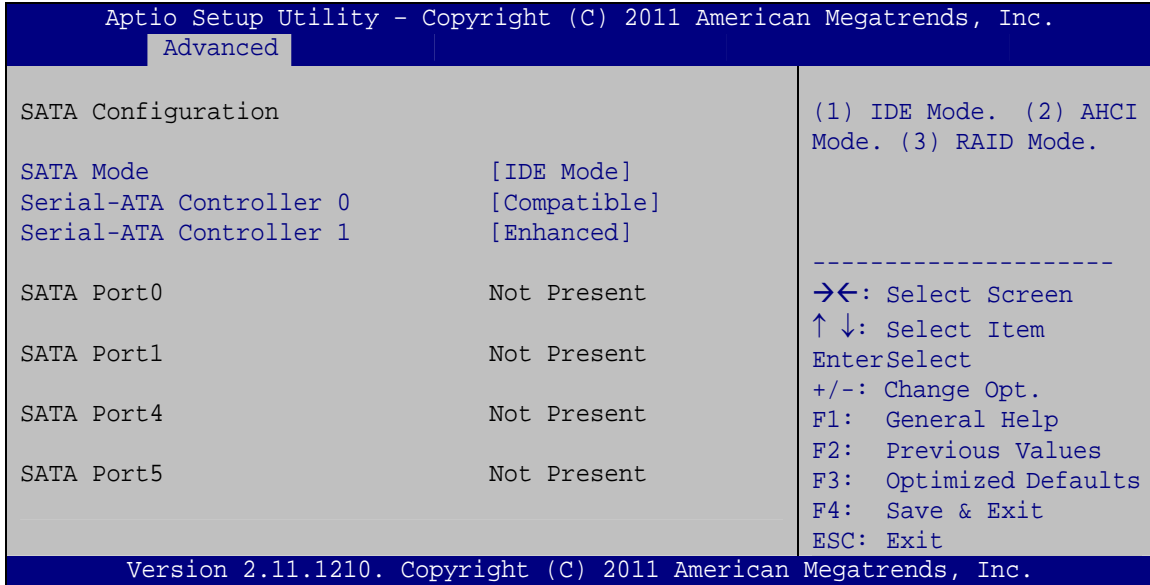

BIOS Menu 7: SATA Configuration

→ SATA Mode [IDE Mode]

Use the **SATA Mode** option to configure SATA devices as normal IDE devices.

- **Disabled** Disables SATA devices.
- **IDE Mode** **DEFAULT** Configures SATA devices as normal IDE device.

→ Serial-ATA Controller 0 [Compatible]

Use the **Serial-ATA Controller 0** option to configure the serial ATA controller 0.

- **Disabled** Disables the on-board ATA controller.
- **Enhanced** Configures the on-board ATA controller to be in Enhanced mode. In this mode, IDE channels and SATA channels are separated. This mode supports up to 6 storage devices. Some legacy OS do not support this mode.

PCIE-H610 PICMG 1.3 CPU Card

- **Compatible** **DEFAULT** Configures the on-board ATA controller to be in compatible mode. In this mode, a SATA channel will replace one of the IDE channels. This mode supports up to 4 storage devices.

→ **Serial-ATA Controller 1 [Enhanced]**

Use the **Serial-ATA Controller 1** option to configure the serial ATA controller 1.

- **Disabled** Disables the on-board ATA controller.
- **Enhanced** **DEFAULT** Configures the on-board ATA controller to be in Enhanced mode. In this mode, IDE channels and SATA channels are separated.

5.3.5 Intel TXT(LT) Configuration

Use the **Intel TXT(LT) Configuration** menu to configure Intel Trusted Execution Technology support.

```

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.
-----
Advanced
-----
Intel Trusted Execution Technology Configuration

Intel TXT support only can be enabled/disabled if SMX
is enabled. VT and VT-d support must also be enabled prior
to TXT.

Secure Mode Extensons (SMX)            Enabled
Intel TXT(LT) Support                    [Disabled]


-----
-><: Select Screen
↑↓: Select Item
Enter>Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
-----
Version 2.11.1210. Copyright (C) 2011 American Megatrends, Inc.

```

BIOS Menu 8: Intel TXT(LT) Configuration

5.3.6 USB Configuration

Use the **USB Configuration** menu (**BIOS Menu 9**) to read USB configuration information and configure the USB settings.

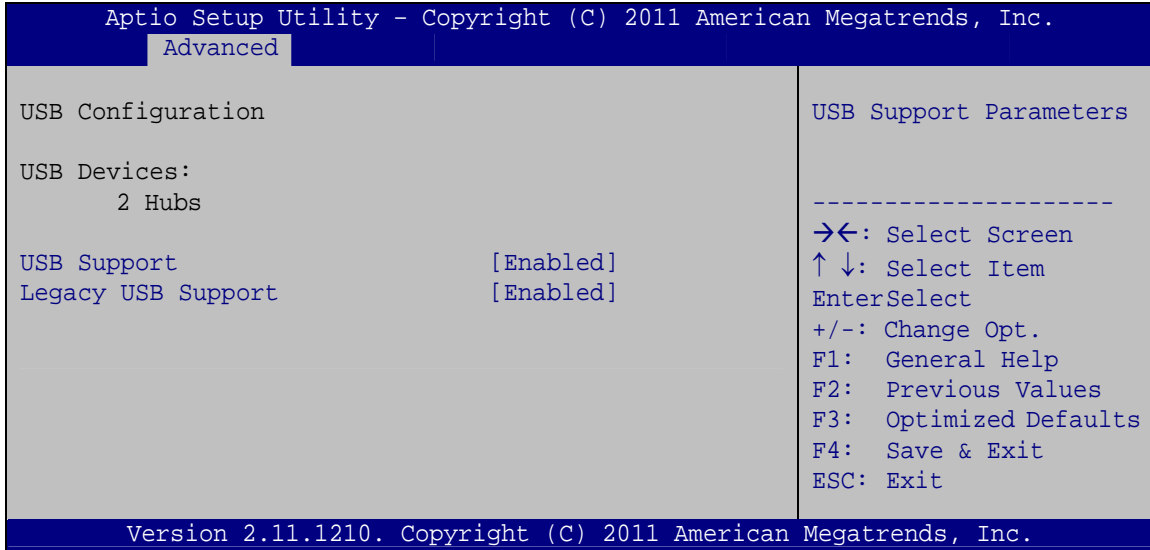

BIOS Menu 9: USB Configuration

→ USB Devices

The **USB Devices Enabled** field lists the USB devices that are enabled on the system

→ USB Support [Enabled]

Use the **USB Support** option to enable or disable USB support on the system.

→ **Disabled** USB support disabled

→ **Enabled** **DEFAULT** USB support enabled

→ Legacy USB Support [Enabled]

Use the **Legacy USB Support** BIOS option to enable USB mouse and USB keyboard support. Normally if this option is not enabled, any attached USB mouse or USB keyboard does not become available until a USB compatible operating system is fully booted with all USB drivers loaded. When this option is enabled, any attached USB mouse or USB

PCIE-H610 PICMG 1.3 CPU Card

keyboard can control the system even when there is no USB driver loaded onto the system.

- ➔ **Enabled** **DEFAULT** Legacy USB support enabled
- ➔ **Disabled** Legacy USB support disabled

5.3.7 Super IO Configuration

Use the **Super IO Configuration** menu (**BIOS Menu 10**) to set or change the configurations for the FDD controllers, parallel ports and serial ports.

```

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.
  Advanced
-----
Super IO Configuration                               Set Parameters of Floppy
                                                    Disk Controller (FDC)
Super IO Chip                                     Fintek F81866
> Floppy Disk Controller Configuration
> Serial Port 1 Configuration
> Serial Port 2 Configuration
> Serial Port 3 Configuration
> Serial Port 6 Configuration
> Parallel Port Configuration
Power Saving Function                               [Disabled]
-----
Version 2.11.1210. Copyright (C) 2011 American Megatrends, Inc.
-----
-><: Select Screen
↑↓: Select Item
Enter>Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
  
```

BIOS Menu 10: Super IO Configuration


- ➔ **Power Saving Function [Disabled]**

Use the **Power Saving Function** BIOS option to enable or reduce power consumption in the S5 state. When enabled, the system can only be powered-up using the power button.

- ➔ **Disabled** **DEFAULT** Power Saving Function support disabled
- ➔ **Enabled** Power Saving Function support enabled

5.3.7.1 Floppy Disk Controller Configuration

Use the **Floppy Disk Controller Configuration** menu (**BIOS Menu 12**) to configure the floppy disk controller.

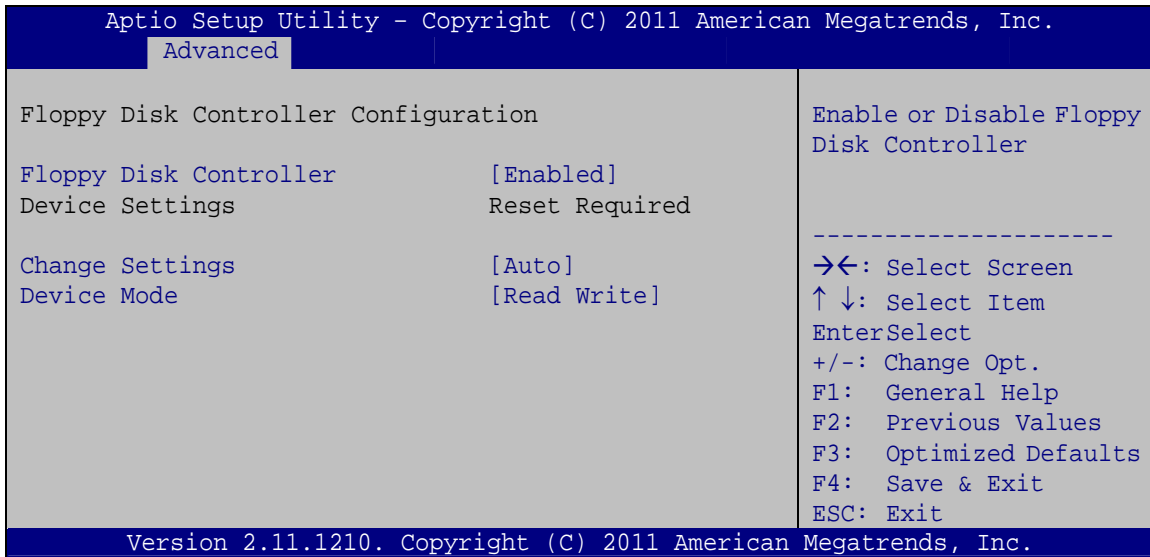

BIOS Menu 11: Serial Port n Configuration Menu

→ Floppy Disk Controller [Enabled]

Use the **Floppy Disk Controller** option to enable or disable the floppy disk controller.

- **Disabled** Floppy disk controller disabled
- **Enabled** **DEFAULT** Floppy disk controller enabled

→ Change Settings [Auto]

Use the **Change Settings** option to change the super IO device address and interrupt address.

- **Auto** **DEFAULT** The super IO device address and interrupt address are automatically detected.
- **IO=3F8h;**
IRQ=6;
DMA=2 The super IO device address is 3F8h, interrupt address is IRQ6 and DMA channel is DMA2

PCIE-H610 PICMG 1.3 CPU Card


→ Device Mode [Read Write]

Use the **Device Mode** option to select the floppy disk controller mode.

- **Rear Write** **DEFAULT** Selects this option for normal operation.
- **Write** Selects this mode for read only operation.
- Portect**

5.3.7.2 Serial Port n Configuration

Use the **Serial Port n Configuration** menu (**BIOS Menu 12**) to configure the serial port n.

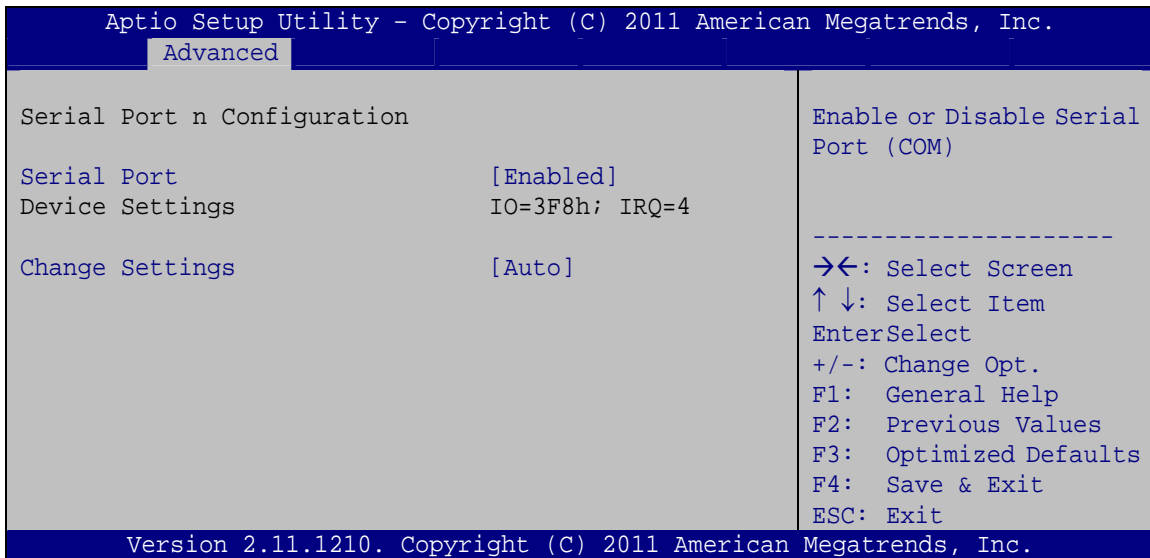

BIOS Menu 12: Serial Port n Configuration Menu

5.3.7.2.1 Serial Port 1 Configuration

→ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled** Disable the serial port
- **Enabled** **DEFAULT** Enable the serial port

→ **Change Settings [Auto]**

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- **Auto** **DEFAULT** The serial port IO port address and interrupt address are automatically detected.
- **IO=3F8h;**
IRQ=4 Serial Port I/O port address is 3F8h and the interrupt address is IRQ4
- **IO=3F8h;**
IRQ=3, 4 Serial Port I/O port address is 3F8h and the interrupt address is IRQ3, 4
- **IO=2F8h;**
IRQ=3, 4 Serial Port I/O port address is 2F8h and the interrupt address is IRQ3, 4
- **IO=2C0h;**
IRQ=3, 4 Serial Port I/O port address is 2C0h and the interrupt address is IRQ3, 4
- **IO=2C8h;**
IRQ=3, 4 Serial Port I/O port address is 2C8h and the interrupt address is IRQ3, 4

5.3.7.2.2 Serial Port 2 Configuration

→ **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled** Disable the serial port
- **Enabled** **DEFAULT** Enable the serial port

→ **Change Settings [Auto]**

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- **Auto** **DEFAULT** The serial port IO port address and interrupt address are automatically detected.

PCIE-H610 PICMG 1.3 CPU Card

- **IO=2F8h;**
IRQ=3 Serial Port I/O port address is 2F8h and the interrupt address is IRQ3
- **IO=3F8h;**
IRQ=3, 4 Serial Port I/O port address is 3F8h and the interrupt address is IRQ3, 4
- **IO=2F8h;**
IRQ=3, 4 Serial Port I/O port address is 2F8h and the interrupt address is IRQ3, 4
- **IO=2C0h;**
IRQ=3, 4 Serial Port I/O port address is 2C0h and the interrupt address is IRQ3, 4
- **IO=2C8h;**
IRQ=3, 4 Serial Port I/O port address is 2C8h and the interrupt address is IRQ3, 4

5.3.7.2.3 Serial Port 3 Configuration

→ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled** Disable the serial port
- **Enabled DEFAULT** Enable the serial port

→ Change Settings [Auto]

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- **Auto DEFAULT** The serial port IO port address and interrupt address are automatically detected.
- **IO=2E8h;**
IRQ=10 Serial Port I/O port address is 2E8h and the interrupt address is IRQ10
- **IO=3E8h;**
IRQ=10, 11 Serial Port I/O port address is 3E8h and the interrupt address is IRQ10, 11
- **IO=2E8h;**
IRQ=10, 11 Serial Port I/O port address is 2E8h and the interrupt address is IRQ10, 11

- ➔ **IO=2D0h;**
IRQ=10, 11 Serial Port I/O port address is 2D0h and the interrupt address is IRQ10, 11
- ➔ **IO=2D8h;**
IRQ=10, 11 Serial Port I/O port address is 2D8h and the interrupt address is IRQ10, 11

➔ **Device Mode [RS422/485]**

Use the **Device Mode** option to select the serial port mode.

- ➔ **RS422/485 DEFAULT** Enables serial port RS-422/485 support.

5.3.7.2.4 Serial Port 6 Configuration

➔ **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the serial port.

- ➔ **Disabled** Disable the serial port
- ➔ **Enabled DEFAULT** Enable the serial port

➔ **Change Settings [Auto]**

Use the **Change Settings** option to change the serial port IO port address and interrupt address.


- ➔ **Auto DEFAULT** The serial port IO port address and interrupt address are automatically detected.
- ➔ **IO=2E0h;**
IRQ=10 Serial Port I/O port address is 2E0h and the interrupt address is IRQ10
- ➔ **IO=2C0h;**
IRQ=10, 11 Serial Port I/O port address is 2C0h and the interrupt address is IRQ10, 11
- ➔ **IO=2C8h;**
IRQ=10, 11 Serial Port I/O port address is 2C8h and the interrupt address is IRQ10, 11

PCIE-H610 PICMG 1.3 CPU Card

- ➔ **IO=2D0h;** Serial Port I/O port address is 2D0h and the interrupt address is IRQ10, 11
IRQ=10, 11
- ➔ **IO=2D8h;** Serial Port I/O port address is 2D8h and the interrupt address is IRQ10, 11
IRQ=10, 11
- ➔ **IO=2E0h;** Serial Port I/O port address is 2E0h and the interrupt address is IRQ10, 11
IRQ=10, 11

5.3.7.3 Parallel Port Configuration

Use the **Parallel Port Configuration** menu (**BIOS Menu 12**) to configure the serial port n.

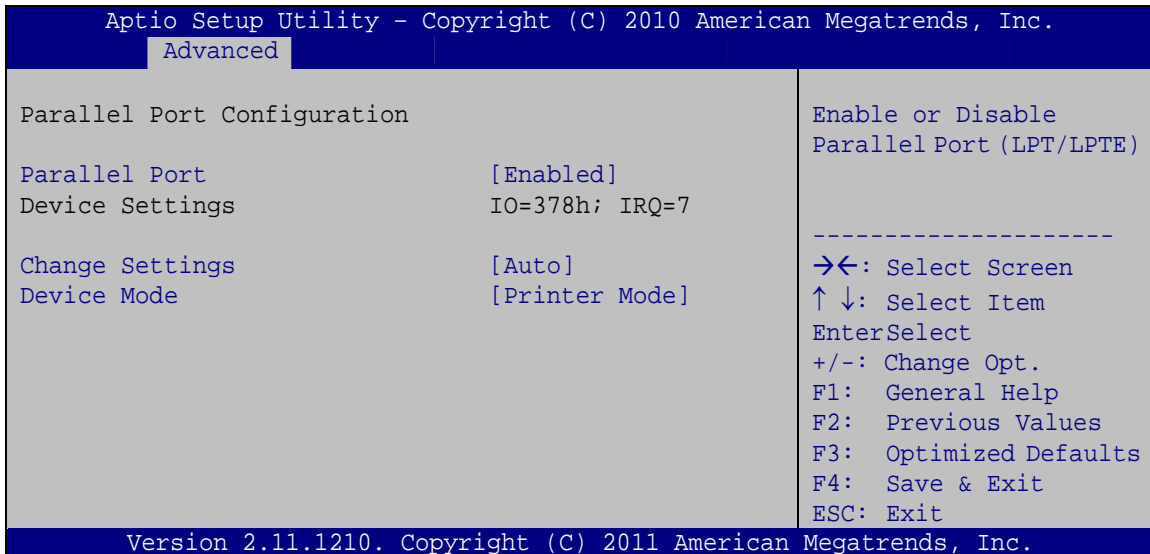

BIOS Menu 13: Parallel Port Configuration Menu

➔ **Parallel Port [Enabled]**

Use the **Parallel Port** option to enable or disable the parallel port.

- ➔ **Disabled** Disable the parallel port
- ➔ **Enabled DEFAULT** Enable the parallel port

➔ **Change Settings [Auto]**

Use the **Change Settings** option to change the parallel port IO port address and interrupt address.

- | | | | |
|---|---------------------------|----------------|---|
| → | Auto | DEFAULT | The parallel port IO port address and interrupt address are automatically detected. |
| → | IO=378h;
IRQ=7 | | Parallel Port I/O port address is 378h and the interrupt address is IRQ7 |
| → | IO=278h;
IRQ=7 | | Parallel Port I/O port address is 278h and the interrupt address is IRQ7 |
| → | IO=3BCh;
IRQ=7 | | Parallel Port I/O port address is 3BCh and the interrupt address is IRQ7 |

→ Device Mode [Printer Mode]

Use the **Device Mode** option to select the mode the parallel port operates in. Configuration options are listed below.

- | | | |
|---|----------------------|----------------|
| ▪ | Printer Mode | Default |
| ▪ | SPP Mode | |
| ▪ | EPP-1.9 and SPP Mode | |
| ▪ | EPP-1.7 and SPP Mode | |
| ▪ | ECP Mode | |
| ▪ | ECP and EPP 1.9 Mode | |
| ▪ | ECP and EPP 1.7 Mode | |

5.3.8 H/W Monitor

The H/W Monitor menu (**BIOS Menu 14**) contains the fan configuration submenus and displays operating temperature, fan speeds and system voltages.

PCIE-H610 PICMG 1.3 CPU Card

```

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.
Advanced
PC Health Status
CPU Temperature           :+54 C
SYS Temperature          :+35 C
CPU FAN Speed            :2255 RPM
VCC3V                    :+3.344 V
V_core                   :+1.248 V
+1.05V                   :+1.048 V
VDDR                     :+1.632 V
VSB3V                    :+3.392 V
VBAT                     :+3.120 V
5VSB                     :+4.920 V
> FAN 1 Configuration

Smart FAN Configuration
-----
-><: Select Screen
↑↓: Select Item
EnterSelect
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.11.1210. Copyright (C) 2011 American Megatrends, Inc.

```

BIOS Menu 14: H/W Monitor


→ PC Health Status

The following system parameters and values are shown. The system parameters that are monitored are:

- System Temperatures:
 - CPU Temperature
 - System Temperature
- Fan Speeds:
 - CPU Fan Speed
- Voltages:
 - VCC3V
 - V_core
 - +1.05V
 - VDDR
 - VSB3V
 - VBAT
 - 5VSB

5.3.8.1 FAN 1 Configuration

Use the **FAN 1 Configuration submenu (BIOS Menu 15)** to configure fan 1 temperature and speed settings.

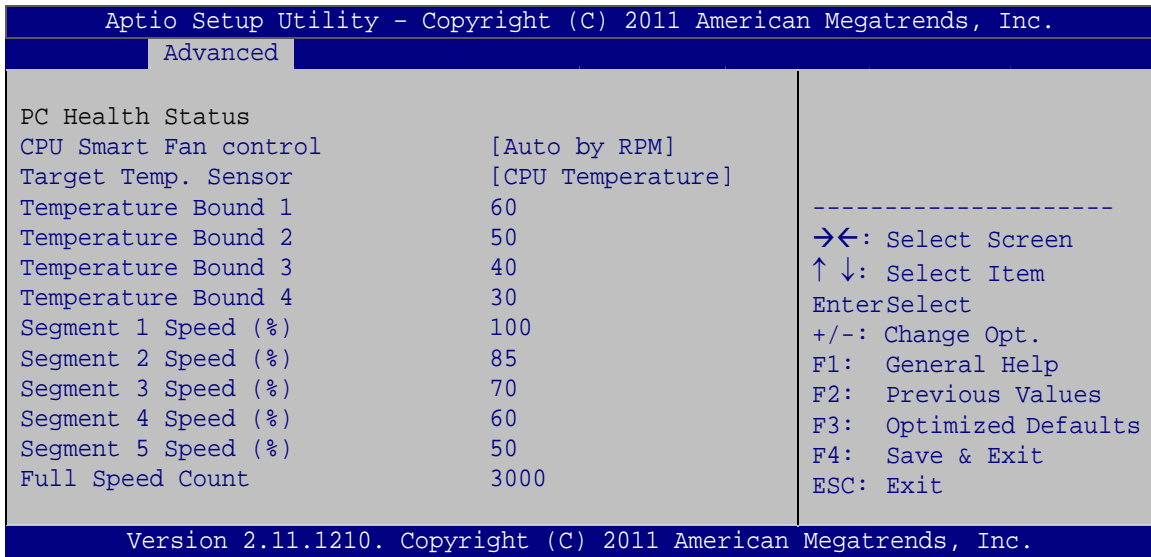

BIOS Menu 15: FAN 1 Configuration

→ CPU Smart Fan control [Auto by RPM]

Use the **CPU Smart Fan control** option to configure the CPU Smart Fan.

- **Auto by RPM** **DEFAULT** The fan adjusts its speed using Auto by RPM settings
- **Auto by Duty-Cycle** The fan adjusts its speed using Auto by Duty-Cycle settings
- **Manual by RPM** The fan spins at the speed set in Manual by RPM settings
- **Manual by Duty-Cycle** The fan spins at the speed set in Manual by Duty Cycle settings

→ Target Temp. Sensor [CPU Temperature]

Use the **Target Temp. Sensor** option to set the target CPU temperature.

PCIE-H610 PICMG 1.3 CPU Card

- | | | | |
|---|----------------------------|----------------|--|
| → | CPU Temperature | DEFAULT | Sets the target temperature sensor to the CPU temperature. |
| → | System Temperature1 | | Sets the target temperature sensor to the System Temperature1 setting. |
| → | System Temperature2 | | Sets the target temperature sensor to the System Temperature2 setting. |

→ Temperature Bound n

Use the + or – key to change the fan **Temperature Bound n** value. Enter a decimal number between 0 and 127.

→ Segment n Speed (%)


Use the + or – key to change the fan **Segment n Speed** value in percentage. Enter a decimal number between 0 and 100.

→ Full Speed Count

Use the + or – key to change the fan **Full Speed Count** value. Enter a decimal number between 500 and 15000.

5.3.9 Serial Port Console Redirection

The **Serial Port Console Redirection** menu (**BIOS Menu 16**) allows the console redirection options to be configured. Console redirection allows users to maintain a system remotely by re-directing keyboard input and text output through the serial port.

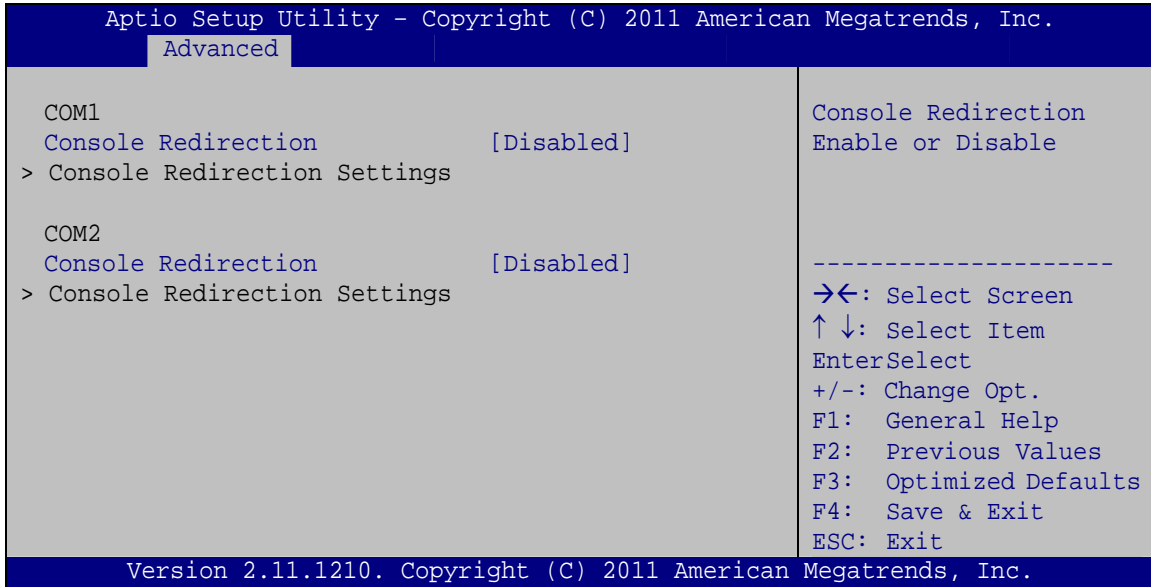

BIOS Menu 16: Serial Port Console Redirection

→ **Console Redirection [Disabled]**

Use **Console Redirection** option to enable or disable the console redirection function.

- **Disabled** **DEFAULT** Disabled the console redirection function
- **Enabled** Enabled the console redirection function

→ **Terminal Type [ANSI]**

Use the **Terminal Type** option to specify the remote terminal type.

- **VT100** The target terminal type is VT100
- **VT100+** The target terminal type is VT100+
- **VT-UTF8** The target terminal type is VT-UTF8
- **ANSI** **DEFAULT** The target terminal type is ANSI

→ **Bits per second [115200]**

Use the **Bits per second** option to specify the serial port transmission speed. The speed must match the other side. Long or noisy lines may require lower speeds.

PCIE-H610 PICMG 1.3 CPU Card

- **9600** Sets the serial port transmission speed at 9600.
- **19200** Sets the serial port transmission speed at 19200.
- **38400** Sets the serial port transmission speed at 38400.
- **57600** Sets the serial port transmission speed at 57600.
- **115200** **DEFAULT** Sets the serial port transmission speed at 115200.

→ Data Bits [8]

Use the **Data Bits** option to specify the number of data bits.

- **7** Sets the data bits at 7.
- **8** **DEFAULT** Sets the data bits at 8.

→ Parity [None]

Use the **Parity** option to specify the parity bit that can be sent with the data bits for detecting the transmission errors.

- **None** **DEFAULT** No parity bit is sent with the data bits.
- **Even** The parity bit is 0 if the number of ones in the data bits is even.
- **Odd** The parity bit is 0 if the number of ones in the data bits is odd.
- **Mark** The parity bit is always 1. This option does not provide error detection.
- **Space** The parity bit is always 0. This option does not provide error detection.

→ Stop Bits [1]

Use the **Stop Bits** option to specify the number of stop bits used to indicate the end of a serial data packet. Communication with slow devices may require more than 1 stop bit.

- 1 **DEFAULT** Sets the number of stop bits at 1.
- 2 Sets the number of stop bits at 2.


→ **Flow Control [None]**

Use the **Flow Control** option to report the flow control method for the console redirection application.

- **None** **DEFAULT** No control flow.
- **Hardware**
 RTS/CTS Hardware is set as the console redirection.

5.3.10 iEi Feature

Use the **iEi Feature** menu (**BIOS Menu 17**) to configure One Key Recovery function.

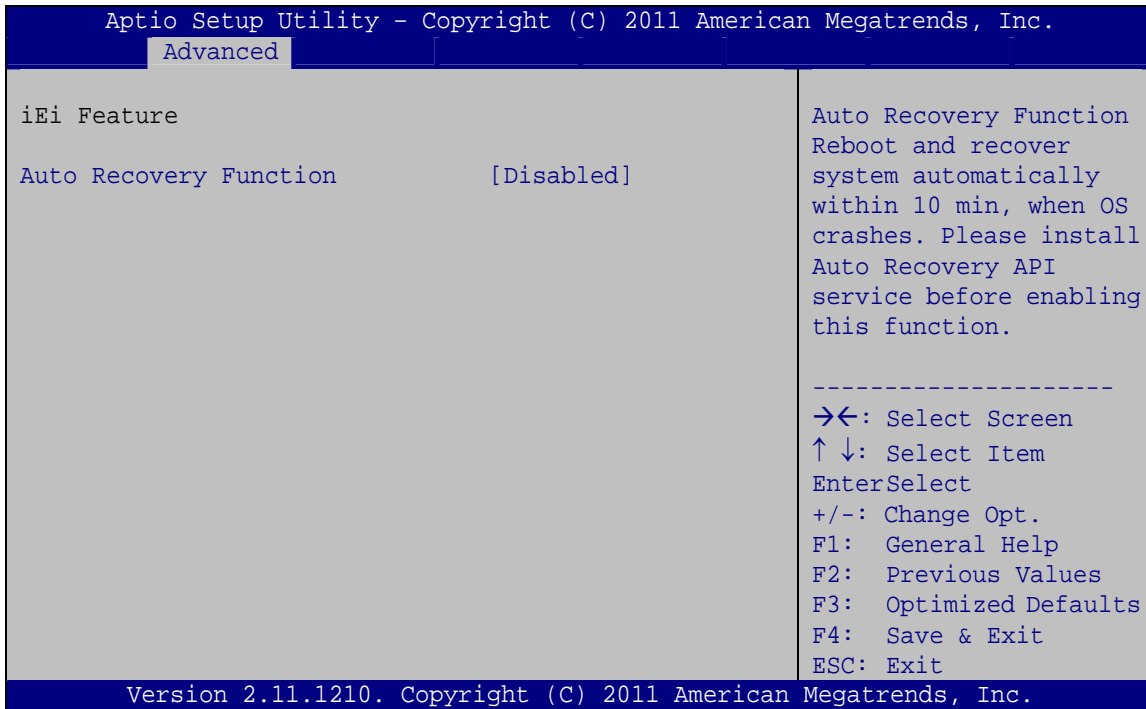

BIOS Menu 17: IEI Feature

PCIE-H610 PICMG 1.3 CPU Card

→ Auto Recovery Function [Disabled]

Use the **Auto Recovery Function** BIOS option to enable or disable the auto recovery function of the IEI One Key Recovery.

- **Disabled** **DEFAULT** Auto recovery function disabled
- **Enabled** Auto recovery function enabled

5.4 Chipset

Use the **Chipset** menu (**BIOS Menu 18**) to access the Northbridge, Southbridge, Integrated Graphics, and ME Subsystem configuration menus.



WARNING!

Setting the wrong values for the Chipset BIOS selections in the Chipset BIOS menu may cause the system to malfunction.

```

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.
Main   Advanced  Chipset   Boot   Security  Save & Exit
-----
> North Bridge
> South Bridge
> Integrated Graphics

North Bridge Parameters
-----
→←: Select Screen
↑ ↓: Select Item
Enter>Select
+/-: Change Opt.
F1:  General Help
F2:  Previous Values
F3:  Optimized Defaults
F4:  Save & Exit
ESC: Exit

Version 2.11.1210. Copyright (C) 2011 American Megatrends, Inc.
    
```

BIOS Menu 18: Chipset

PCIE-H610 PICMG 1.3 CPU Card

→ 96M	96 MB of memory used by internal graphics device
→ 128M	128 MB of memory used by internal graphics device
→ 160M	160 MB of memory used by internal graphics device
→ 192M	192 MB of memory used by internal graphics device
→ 224M	224 MB of memory used by internal graphics device
→ 256M	256 MB of memory used by internal graphics device
→ 288M	288 MB of memory used by internal graphics device
→ 320M	320 MB of memory used by internal graphics device
→ 352M	352 MB of memory used by internal graphics device
→ 384M	384 MB of memory used by internal graphics device
→ 416M	416 MB of memory used by internal graphics device
→ 448M	448 MB of memory used by internal graphics device
→ 480M	480 MB of memory used by internal graphics device
→ 512M	512 MB of memory used by internal graphics device


→ **VT-d [Disabled]**

Use the **VT-d** option to enable or disable VT-d support.

- **Disabled** **DEFAULT** Disables VT-d support.
- **Enabled** Enables VT-d support.

5.4.2 Southbridge Configuration

Use the **South Bridge** menu (**BIOS Menu 20**) to configure the Southbridge chipset.

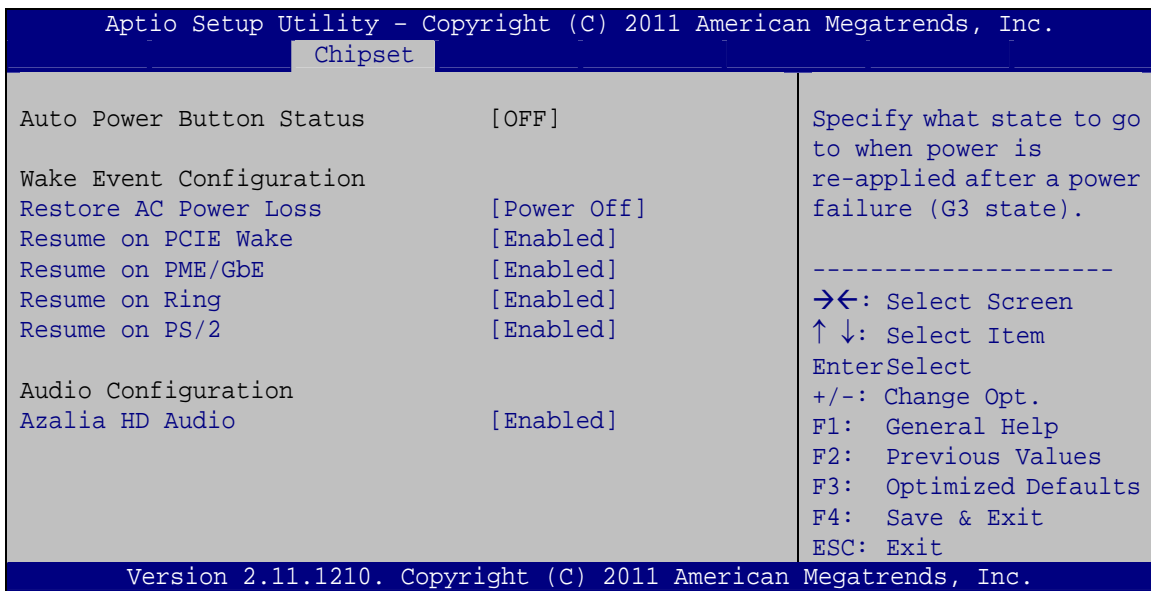

BIOS Menu 20: Southbridge Chipset Configuration

→ **Restore on AC Power Loss [Power Off]**

Use the **Restore on AC Power Loss** BIOS option to specify what state the system returns to if there is a sudden loss of power to the system.

- **Power Off** **DEFAULT** The system remains turned off
- **Power On** The system turns on
- **Last State** The system returns to its previous state. If it was on, it turns itself on. If it was off, it remains off.

PCIE-H610 PICMG 1.3 CPU Card

→ Resume on PCIE Wake [Enabled]

Use the **Resume on PCIE Wake** option to enable or disable resuming from the PCIe wake message and WAKE# signal.

→ **Disabled** Disables Resume on PCIe Wake option

→ **Enabled** **DEFAULT** Enables Resume on PCIe Wake option

→ Resume on PME/GbE [Enabled]

Use the **Resume on PME/GbE** option to enable or disable resuming from PCI PME# or GbE signal.

→ **Disabled** Disables Resume on PCI PME/GbE option

→ **Enabled** **DEFAULT** Enables Resume on PCI PME/GbE option

→ Resume on Ring [Enabled]

Use the **Resume on Ring** option to enable or disable resuming from RI# signal.

→ **Disabled** Disables Resume on Ring option

→ **Enabled** **DEFAULT** Enables Resume on Ring option

→ Resume on PS/2 [Enabled]

Use the **Resume on PS/2** option to enable or disable resuming from PS/2 activation.

→ **Disabled** Disables Resume on PS/2 option

→ **Enabled** **DEFAULT** Enables Resume on PS/2 option

→ Azalia HD Audio [Enabled]


Use the **Azalia HD Audio** option to enable or disable the High Definition Audio controller.

→ **Disabled** The onboard High Definition Audio controller is disabled

→ **Enabled** **DEFAULT** The onboard High Definition Audio controller is detected automatically and enabled

5.4.3 Integrated Graphics

Use the **Integrated Graphics** menu (**BIOS Menu 21**) to configure the video device connected to the system.

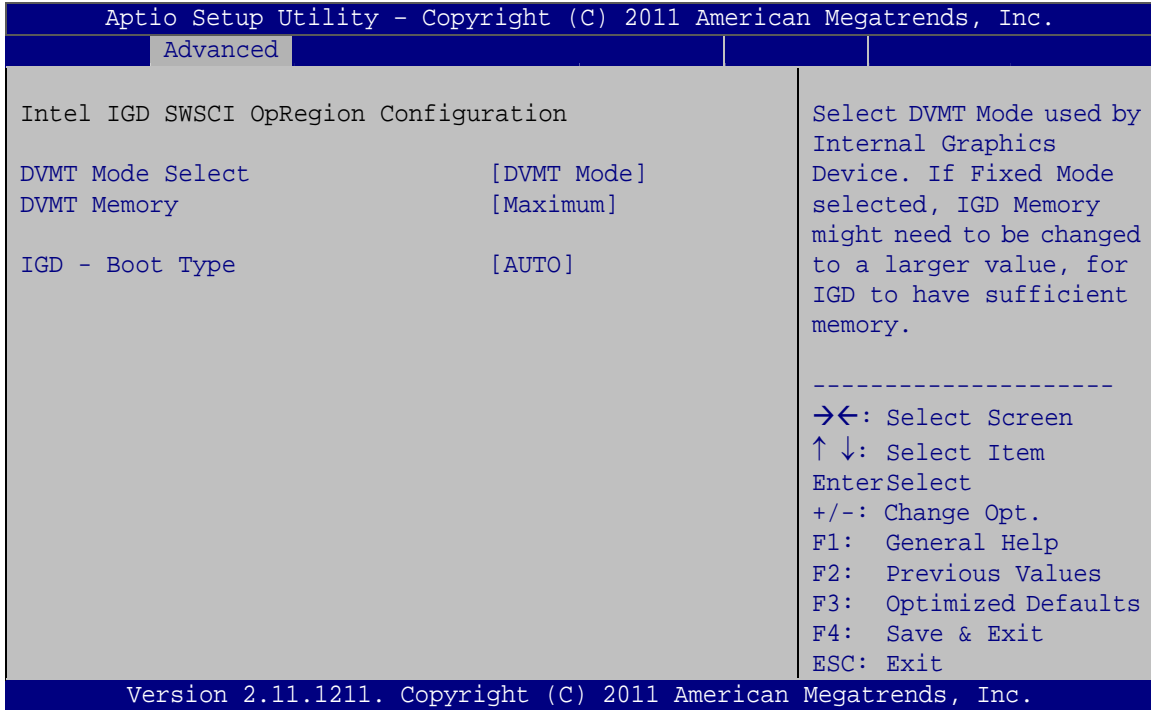

BIOS Menu 21: Integrated Graphics

➔ DVMT Mode Select [DVMT Mode]

Use the **DVMT Mode Select** option to select the Intel Dynamic Video Memory Technology (DVMT) operating mode.

- ➔ **Fixed Mode** A fixed portion of graphics memory is reserved as graphics memory.
- ➔ **DVMT Mode** **DEFAULT** Graphics memory is dynamically allocated according to the system and graphics needs.

➔ DVMT Memory [Maximum]

Use the **DVMT Memory** option to specify the maximum amount of memory that can be allocated as graphics memory. Configuration options are listed below.

PCIE-H610 PICMG 1.3 CPU Card

- 128 MB
- 256 MB
- Maximum **DEFAULT**


→ IGD - Boot Type [AUTO]

Use the **IGD - Boot Type** option to select the display device used by the system when it boots. For dual display support, select “Auto.” Configuration options are listed below.

- AUTO **DEFAULT**
- CRT
- DVI

5.5 Boot

Use the **Boot** menu (**BIOS Menu 22**) to configure system boot options.

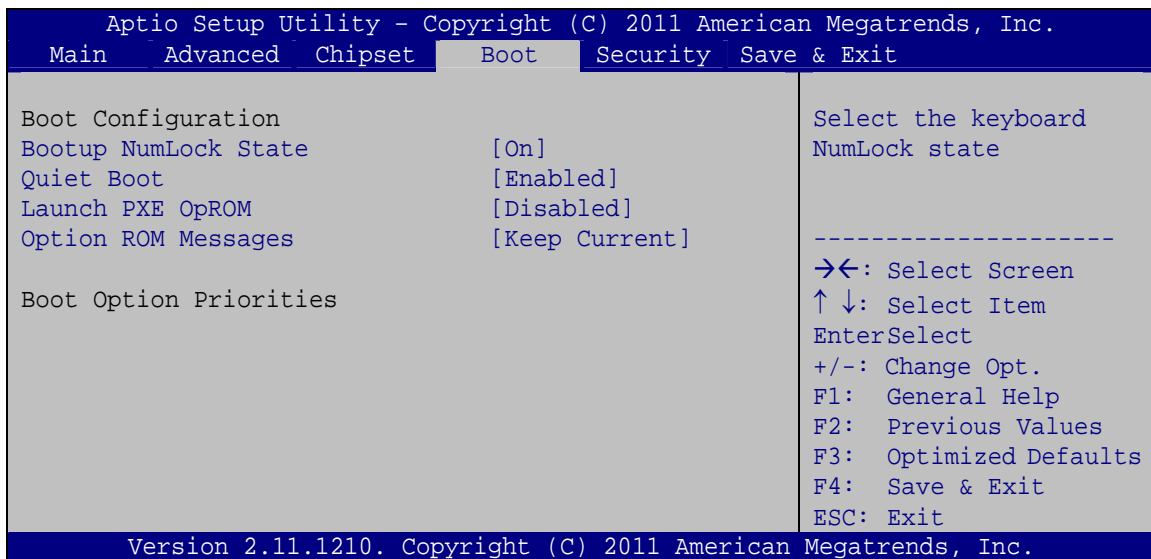

BIOS Menu 22: Boot

→ Bootup NumLock State [On]

Use the **Bootup NumLock State** BIOS option to specify if the number lock setting must be modified during boot up.

- **On** **DEFAULT** Allows the Number Lock on the keyboard to be enabled automatically when the computer system boots up. This allows the immediate use of the 10-key numeric keypad located on the right side of the keyboard. To confirm this, the Number Lock LED light on the keyboard is lit.

- **Off** Does not enable the keyboard Number Lock automatically. To use the 10-keys on the keyboard, press the Number Lock key located on the upper left-hand corner of the 10-key pad. The Number Lock LED on the keyboard lights up when the Number Lock is engaged.

→ **Quiet Boot [Enabled]**

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

- **Disabled** Normal POST messages displayed

- **Enabled** **DEFAULT** OEM Logo displayed instead of POST messages

→ **Launch PXE OpROM [Disabled]**

Use the **Launch PXE OpROM** option to enable or disable boot option for legacy network devices.

- **Disabled** **DEFAULT** Ignore all PXE Option ROMs

- **Enabled** Load PXE Option ROMs.

→ **Option ROM Messages [Keep Current]**

Use the **Option ROM Messages** option to set the Option ROM display mode.

- **Force BIOS** Sets display mode to force BIOS.

- **Keep Current** **DEFAULT** Sets display mode to current.

PCIE-H610 PICMG 1.3 CPU Card

5.6 Security

Use the **Security** menu (**BIOS Menu 23**) to set system and user passwords.

```

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.
Main   Advanced  Chipset  Boot   Security  Save & Exit
-----
Password Description
If ONLY the Administrator's password is set,
then this only limits access to Setup and is
only asked for when entering Setup.
If ONLY the User's password is set, then this
is a power on password and must be entered to
boot or enter Setup. In Setup the User will
have Administrator rights.
The password must be 3 to 20 characters long.

Administrator Password
User Password

Set Setup Administrator
Password

-----
-><: Select Screen
↑↓: Select Item
Enter/Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.11.1210. Copyright (C) 2011 American Megatrends, Inc.

```

BIOS Menu 23: Security

→ Administrator Password

Use the **Administrator Password** to set or change a administrator password.

→ User Password

Use the **User Password** to set or change a user password.

5.7 Exit

Use the **Exit** menu (**BIOS Menu 24**) to load default BIOS values, optimal failsafe values and to save configuration changes.

```
Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.
Main   Advanced  Chipset  Boot   Security  Save & Exit
-----
Save Changes and Reset
Discard Changes and Reset

Restore Defaults
Save as User Defaults
Restore User Defaults

Exit the system after
saving the changes.

-----
-><: Select Screen
↑ ↓: Select Item
Enter>Select
+/-: Change Opt.
F1:  General Help
F2:  Previous Values
F3:  Optimized Defaults
F4:  Save & Exit
ESC: Exit

Version 2.11.1210. Copyright (C) 2011 American Megatrends, Inc.
```

BIOS Menu 24:Exit

→ Save Changes and Reset

Use the **Save Changes and Reset** option to save the changes made to the BIOS options and reset the system.

→ Discard Changes and Reset

Use the **Discard Changes and Reset** option to exit the system without saving the changes made to the BIOS configuration setup program.

→ Restore Defaults

Use the **Restore Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F3 key can be used for this operation.**

PCIE-H610 PICMG 1.3 CPU Card

→ **Save as User Defaults**

Use the **Save as User Defaults** option to save the changes done so far as user defaults.

→ **Restore User Defaults**

Use the **Restore User Defaults** option to restore the user defaults to all the setup options.

Chapter

6

Software Drivers

PCIE-H610 PICMG 1.3 CPU Card

6.1 Available Software Drivers

**NOTE:**

The content of the CD may vary throughout the life cycle of the product and is subject to change without prior notice. Visit the IEI website or contact technical support for the latest updates.

The following drivers can be installed on the system:

- Chipset
- Graphics
- LAN
- Audio
- Intel® AMT
 - Intel® Management Engine Components driver
 - Intel® IT Director application

Installation instructions are given below.

6.2 Software Installation

All the drivers for the PCIE-H610 are on the CD that came with the system. To install the drivers, please follow the steps below.

Step 1: Insert the CD into a CD drive connected to the system.

**NOTE:**

If the installation program doesn't start automatically:
Click "Start->My Computer->CD Drive->autorun.exe"

Step 2: The driver main menu appears (**Figure 6-1**).

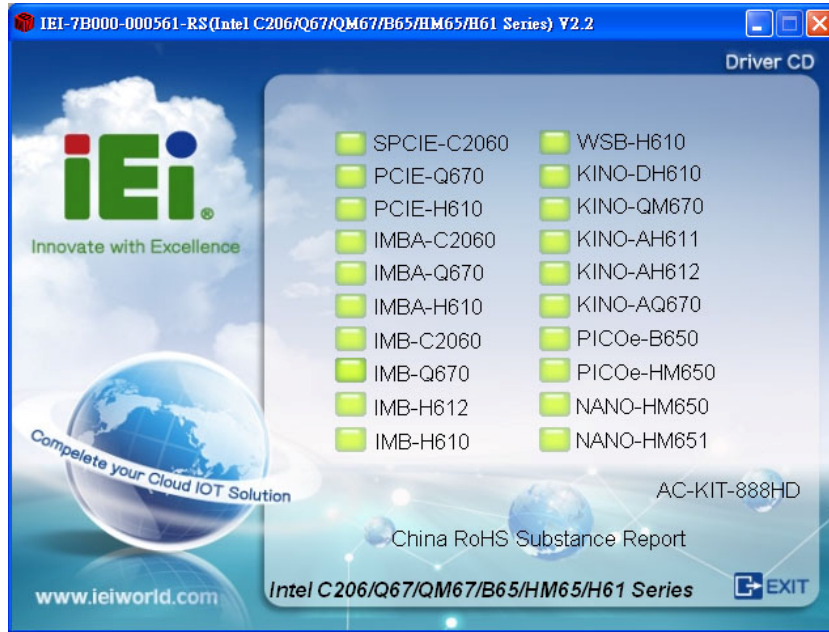


Figure 6-1: Introduction Screen

Step 3: Click PCIE-H610.

Step 4: A new screen with a list of available drivers appears (**Figure 6-2**).



Figure 6-2: Available Drivers

PCIE-H610 PICMG 1.3 CPU Card

Step 5: Install all of the necessary drivers in this menu.

6.3 Chipset Driver Installation

To install the chipset driver, please do the following.

Step 1: Access the driver list. (See **Section 6.2**)

Step 2: Click “Chipset”.

Step 3: Locate the setup file and double click on it.

Step 4: The setup files are extracted as shown in **Figure 6-3**.

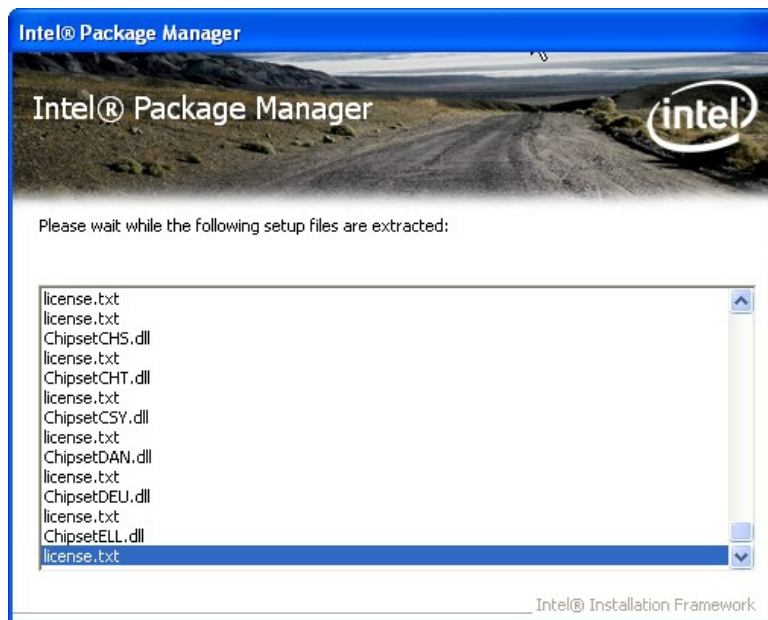


Figure 6-3: Chipset Driver Screen

Step 5: When the setup files are completely extracted the **Welcome Screen** in **Figure 6-4** appears.

Step 6: Click **Next** to continue.



Figure 6-4: Chipset Driver Welcome Screen

Step 7: The license agreement in **Figure 6-5** appears.

Step 8: Read the **License Agreement**.

Step 9: Click **Yes** to continue.



Figure 6-5: Chipset Driver License Agreement

Step 10: The **Read Me** file in **Figure 6-6** appears.

PCIE-H610 PICMG 1.3 CPU Card

Step 11: Click **Next** to continue.



Figure 6-6: Chipset Driver Read Me File

Step 12: **Setup Operations** are performed as shown in **Figure 6-7**.

Step 13: Once the **Setup Operations** are complete, click **Next** to continue.



Figure 6-7: Chipset Driver Setup Operations

Step 14: The **Finish** screen in **Figure 6-8** appears.

Step 15: Select “**Yes, I want to restart this computer now**” and click **Finish**.



Figure 6-8: Chipset Driver Installation Finish Screen

6.4 Graphics Driver Installation

To install the Graphics driver, please do the following.

Step 1: Access the driver list. (See **Section 6.2**)

Step 2: Click “**VGA**” and select the folder which corresponds to the operating system.

Step 3: Double click the setup file.

Step 4: The **Welcome Screen** in **Figure 6-9** appears.

Step 5: Click **Next** to continue.

PCIE-H610 PICMG 1.3 CPU Card

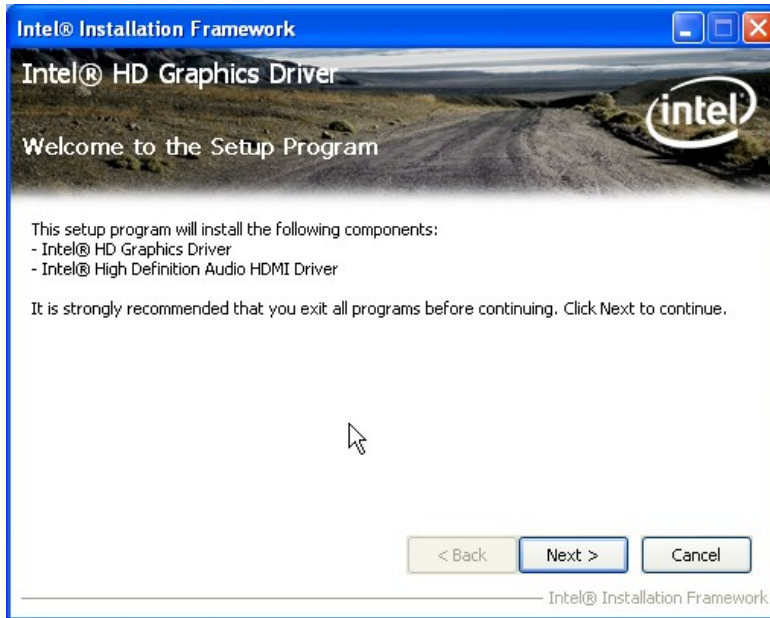


Figure 6-9: Graphics Driver Welcome Screen

Step 6: The License Agreement in Figure 6-10 appears.

Step 7: Click Yes to accept the agreement and continue.



Figure 6-10: Graphics Driver License Agreement

Step 8: Setup Operations are performed as shown in Figure 6-11.

Step 9: Once the **Setup Operations** are complete, click **Next** to continue.

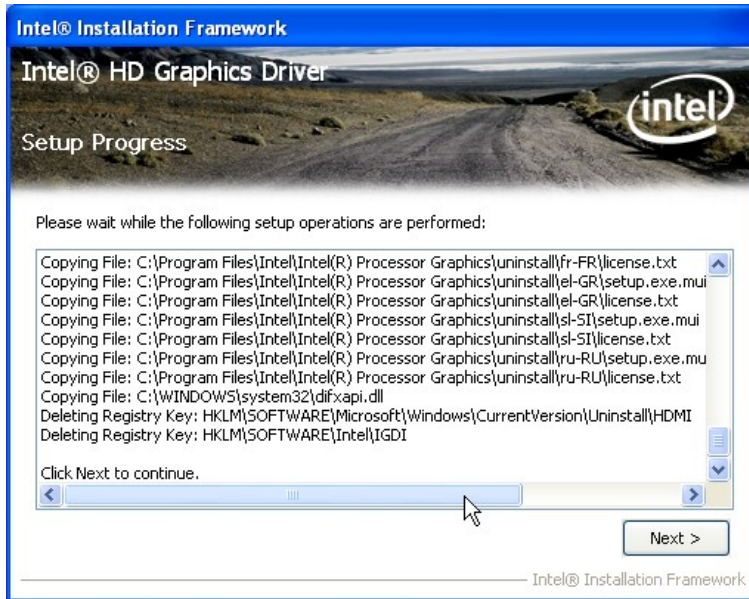


Figure 6-11: Graphics Driver Setup Operations

Step 10: The **Finish** screen in **Figure 6-12** appears.

Step 11: Select “**Yes, I want to restart this computer now**” and click **Finish**.

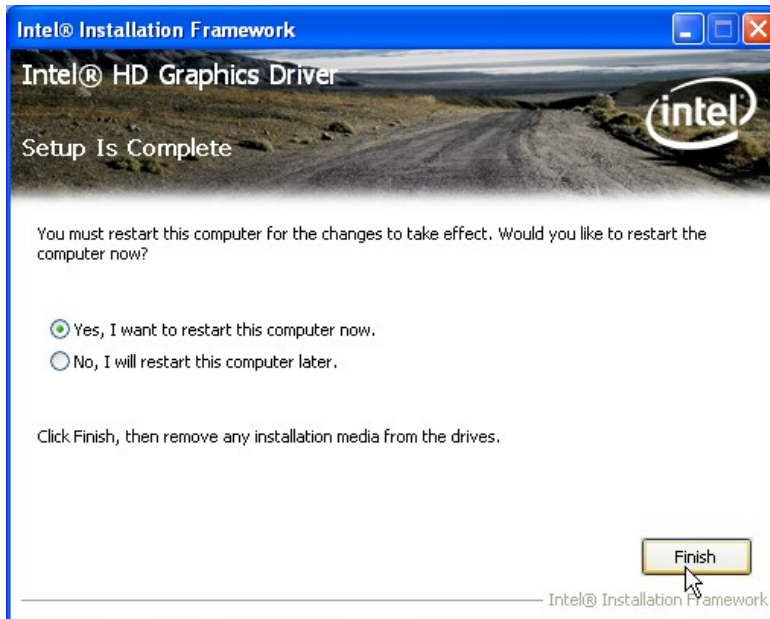


Figure 6-12: Graphics Driver Installation Finish Screen

PCIE-H610 PICMG 1.3 CPU Card

6.5 LAN Driver Installation

To install the LAN driver, please do the following.

Step 1: Access the driver list. (See **Section 6.2**)

Step 2: Click “LAN”.

Step 3: Locate the Autorun file and double click it.

Step 4: The **Welcome** screen in **Figure 6-13** appears.

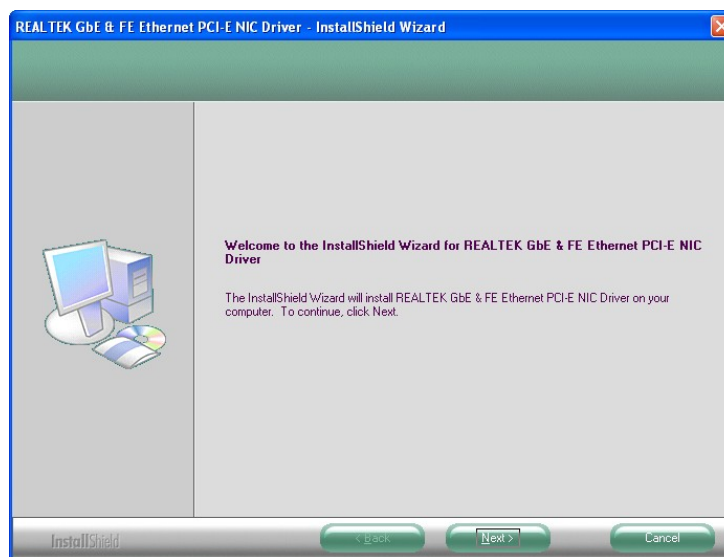


Figure 6-13: LAN Driver Welcome Screen

Step 5: Click **Next** to continue.

Step 6: The **Ready to Install the Program** screen in **Figure 6-14** appears.

Step 7: Click **Install** to proceed with the installation.

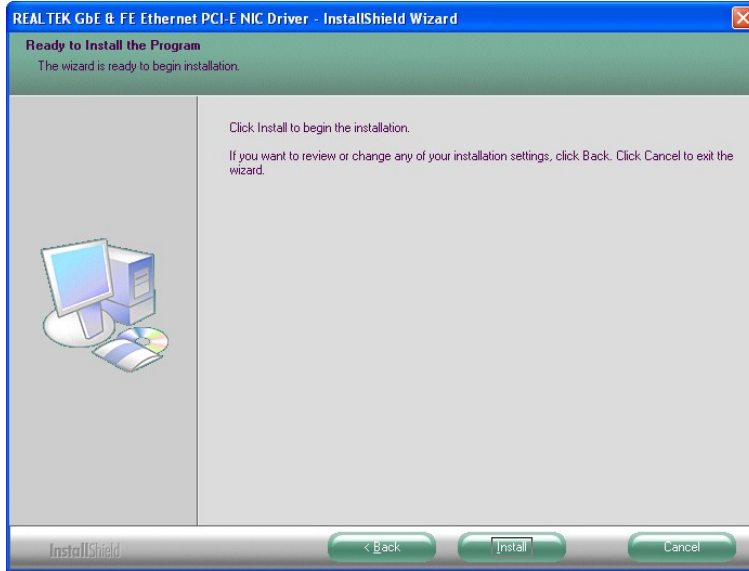


Figure 6-14: LAN Driver Installation

Step 8: The program begins to install.

Step 9: When the driver installation is complete, the screen in **Figure 6-15** appears.

Step 10: Click **Finish** to exit.

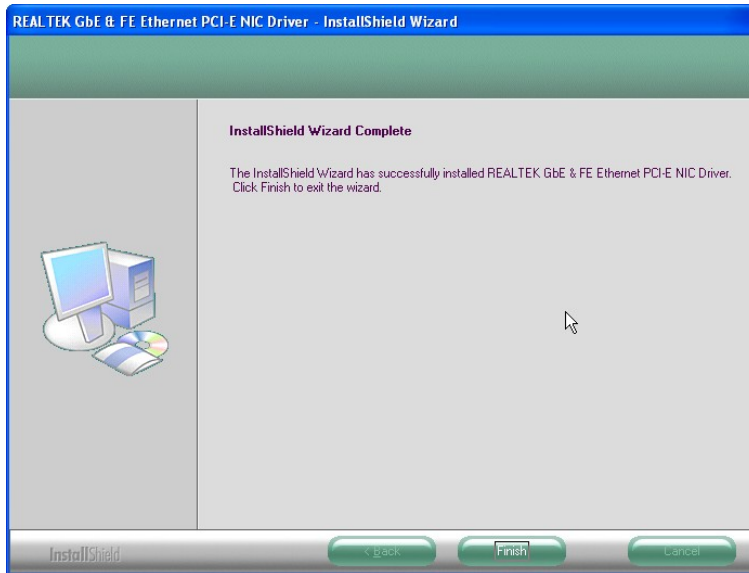


Figure 6-15: LAN Driver Installation Complete

PCIE-H610 PICMG 1.3 CPU Card

6.6 Audio Driver Installation

To install the audio driver, please do the following.

Step 1: Access the driver list. (See **Section 6.2**)

Step 2: Click **“Audio”** and select the folder which corresponds to the operating system.

Step 3: Double click the setup file.

Step 4: The InstallShield Wizard starts to extracting files (**Figure 6-16**).



Figure 6-16: Audio Driver – Extracting Files

Step 5: The Audio Driver Installation screen in **Figure 6-17** appears.

Step 6: Click **Yes** to install the audio driver.



Figure 6-17: Audio Driver Installation Welcome Screen

Step 7: The driver installation begins. See **Figure 6-18**.

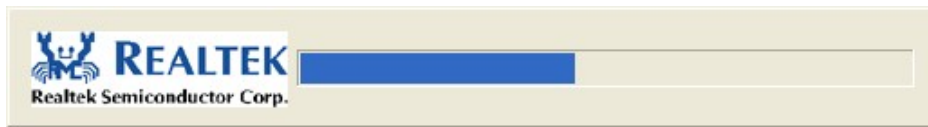


Figure 6-18: Audio Driver Installation

Step 8: When the driver is installed, the driver installation finish screen in **Figure 6-19** appears.

Step 9: Select “**Yes, I wish to restart my computer now**” and click **Finish**.



Figure 6-19: Audio Driver Installation Complete

Step 10: The system reboots.

Appendix

A

Regulatory Compliance

DECLARATION OF CONFORMITY

This equipment has been tested and found to comply with specifications for CE marking. If the user modifies and/or installs other devices in the equipment, the CE conformity declaration may no longer apply.

FCC WARNING

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Appendix

B

BIOS Options

Below is a list of BIOS configuration options in the BIOS chapter.

System Overview	62
Memory Information	62
System Date [xx/xx/xx]	63
System Time [xx:xx:xx]	63
ACPI Sleep State [S1 (CPU Stop Clock)]	64
TPM Support [Disable]	65
Intel Virtualization Technology [Disabled]	66
SATA Mode [IDE Mode]	68
Serial-ATA Controller 0 [Compatible]	68
Serial-ATA Controller 1 [Enhanced]	69
USB Devices	70
USB Support [Enabled]	70
Legacy USB Support [Enabled]	70
Power Saving Function [Disabled]	71
Floppy Disk Controller [Enabled]	72
Change Settings [Auto]	72
Device Mode [Read Write]	73
Serial Port [Enabled]	73
Change Settings [Auto]	74
Serial Port [Enabled]	74
Change Settings [Auto]	74
Serial Port [Enabled]	75
Change Settings [Auto]	75
Device Mode [RS422/485]	76
Serial Port [Enabled]	76
Change Settings [Auto]	76
Parallel Port [Enabled]	77
Change Settings [Auto]	77
Device Mode [Printer Mode]	78
PC Health Status	79
CPU Smart Fan control [Auto by RPM]	80
Target Temp. Sensor [CPU Temperature]	80
Temperature Bound n	81

PCIE-H610 PICMG 1.3 CPU Card

Segment n Speed (%)	81
Full Speed Count	81
Console Redirection [Disabled]	82
Terminal Type [ANSI].....	82
Bits per second [115200].....	82
Data Bits [8]	83
Parity [None].....	83
Stop Bits [1].....	83
Flow Control [None].....	84
Auto Recovery Function [Disabled].....	85
Initiate Graphic Adapter [PEG(PCI)/IGD]	86
IGD Memory [64M]	86
VT-d [Disabled].....	88
Restore on AC Power Loss [Power Off]	88
Resume on PCIE Wake [Enabled]	89
Resume on PME/GbE [Enabled].....	89
Resume on Ring [Enabled]	89
Resume on PS/2 [Enabled]	89
Azalia HD Audio [Enabled].....	89
DVMT Mode Select [DVMT Mode].....	90
DVMT Memory [Maximum].....	90
IGD - Boot Type [AUTO]	91
Bootup NumLock State [On].....	91
Quiet Boot [Enabled]	92
Launch PXE OpROM [Disabled].....	92
Option ROM Messages [Keep Current]	92
Administrator Password	93
User Password	93
Save Changes and Reset	94
Discard Changes and Reset	94
Restore Defaults	94
Save as User Defaults	95
Restore User Defaults	95

▪

Appendix

C

Terminology

PCIE-H610 PICMG 1.3 CPU Card

AC '97	Audio Codec 97 (AC'97) refers to a codec standard developed by Intel® in 1997.
ACPI	Advanced Configuration and Power Interface (ACPI) is an OS-directed configuration, power management, and thermal management interface.
AHCI	Advanced Host Controller Interface (AHCI) is a SATA Host controller register-level interface.
ATA	The Advanced Technology Attachment (ATA) interface connects storage devices including hard disks and CD-ROM drives to a computer.
ARMD	An ATAPI Removable Media Device (ARMD) is any ATAPI device that supports removable media, besides CD and DVD drives.
ASKIR	Amplitude Shift Keyed Infrared (ASKIR) is a form of modulation that represents a digital signal by varying the amplitude (“volume”) of the signal. A low amplitude signal represents a binary 0, while a high amplitude signal represents a binary 1.
BIOS	The Basic Input/Output System (BIOS) is firmware that is first run when the computer is turned on and can be configured by the end user
CODEC	The Compressor-Decompressor (CODEC) encodes and decodes digital audio data on the system.
CMOS	Complimentary metal-oxide-conductor is an integrated circuit used in chips like static RAM and microprocessors.
COM	COM refers to serial ports. Serial ports offer serial communication to expansion devices. The serial port on a personal computer is usually a male DB-9 connector.
DAC	The Digital-to-Analog Converter (DAC) converts digital signals to analog signals.
DDR	Double Data Rate refers to a data bus transferring data on both the rising and falling edges of the clock signal.
DMA	Direct Memory Access (DMA) enables some peripheral devices to bypass the system processor and communicate directly with the system memory.

DIMM	Dual Inline Memory Modules are a type of RAM that offer a 64-bit data bus and have separate electrical contacts on each side of the module.
DIO	The digital inputs and digital outputs are general control signals that control the on/off circuit of external devices or TTL devices. Data can be read or written to the selected address to enable the DIO functions.
EHCI	The Enhanced Host Controller Interface (EHCI) specification is a register-level interface description for USB 2.0 Host Controllers.
EIDE	Enhanced IDE (EIDE) is a newer IDE interface standard that has data transfer rates between 4.0 MBps and 16.6 MBps.
EIST	Enhanced Intel® SpeedStep Technology (EIST) allows users to modify the power consumption levels and processor performance through application software. The application software changes the bus-to-core frequency ratio and the processor core voltage.
FSB	The Front Side Bus (FSB) is the bi-directional communication channel between the processor and the Northbridge chipset.
GbE	Gigabit Ethernet (GbE) is an Ethernet version that transfers data at 1.0 Gbps and complies with the IEEE 802.3-2005 standard.
GPIO	General purpose input
HDD	Hard disk drive (HDD) is a type of magnetic, non-volatile computer storage device that stores digitally encoded data.
ICH	The Input/Output Control Hub (ICH) is an Intel® Southbridge chipset.
IrDA	Infrared Data Association (IrDA) specify infrared data transmission protocols used to enable electronic devices to wirelessly communicate with each other.
L1 Cache	The Level 1 Cache (L1 Cache) is a small memory cache built into the system processor.
L2 Cache	The Level 2 Cache (L2 Cache) is an external processor memory cache.
LCD	Liquid crystal display (LCD) is a flat, low-power display device that consists of two polarizing plates with a liquid crystal panel in between.

PCIE-H610 PICMG 1.3 CPU Card

LVDS	Low-voltage differential signaling (LVDS) is a dual-wire, high-speed differential electrical signaling system commonly used to connect LCD displays to a computer.
POST	The Power-on Self Test (POST) is the pre-boot actions the system performs when the system is turned-on.
RAM	Random Access Memory (RAM) is volatile memory that loses data when power is lost. RAM has very fast data transfer rates compared to other storage like hard drives.
SATA	Serial ATA (SATA) is a serial communications bus designed for data transfers between storage devices and the computer chipsets. The SATA bus has transfer speeds up to 1.5 Gbps and the SATA II bus has data transfer speeds of up to 3.0 Gbps.
S.M.A.R.T	Self Monitoring Analysis and Reporting Technology (S.M.A.R.T) refers to automatic status checking technology implemented on hard disk drives.
UART	Universal Asynchronous Receiver-transmitter (UART) is responsible for asynchronous communications on the system and manages the system's serial communication (COM) ports.
UHCI	The Universal Host Controller Interface (UHCI) specification is a register-level interface description for USB 1.1 Host Controllers.
USB	The Universal Serial Bus (USB) is an external bus standard for interfacing devices. USB 1.1 supports 12Mbps data transfer rates and USB 2.0 supports 480Mbps data transfer rates.
VGA	The Video Graphics Array (VGA) is a graphics display system developed by IBM.

Appendix

D

Digital I/O Interface

PCIE-H610 PICMG 1.3 CPU Card

D.1 Introduction

The DIO connector on the PCIE-H610 is interfaced to GPIO ports on the Super I/O chipset. The DIO has both 4-bit digital inputs and 4-bit digital outputs. The digital inputs and digital outputs are generally control signals that control the on/off circuit of external devices or TTL devices. Data can be read or written to the selected address to enable the DIO functions.



NOTE:

For further information, please refer to the datasheet for the Super I/O chipset.

The BIOS interrupt call **INT 15H** controls the digital I/O.

INT 15H:

AH – 6FH	
<u>Sub-function:</u>	
AL – 8	: Set the digital port as INPUT
AL	: Digital I/O input value

D.2 Assembly Language Sample 1

```
MOV     AX, 6F08H      ;setting the digital port as input
INT     15H           ;
```

AL low byte = value

AH – 6FH
<u>Sub-function:</u>
AL – 9 : Set the digital port as OUTPUT
BL : Digital I/O input value

D.3 Assembly Language Sample 2

```
MOV     AX, 6F09H      ;setting the digital port as output
MOV     BL, 09H        ;digital value is 09H
INT     15H           ;
```

Digital Output is 1001b

Appendix

E

Watchdog Timer



NOTE:

The following discussion applies to DOS environment. Contact IEI support or visit the IEI website for specific drivers for other operating systems.

The Watchdog Timer is provided to ensure that standalone systems can always recover from catastrophic conditions that cause the CPU to crash. This condition may have occurred by external EMIs or a software bug. When the CPU stops working correctly, Watchdog Timer either performs a hardware reset (cold boot) or a Non-Maskable Interrupt (NMI) to bring the system back to a known state.

A BIOS function call (INT 15H) is used to control the Watchdog Timer.

INT 15H:

AH – 6FH Sub-function:	
AL – 2:	Sets the Watchdog Timer’s period.
BL:	Time-out value (Its unit-second is dependent on the item “Watchdog Timer unit select” in CMOS setup).

Table E-1: AH-6FH Sub-function

Call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer starts counting down. When the timer value reaches zero, the system resets. To ensure that this reset condition does not occur, calling sub-function 2 must periodically refresh the Watchdog Timer. However, the watchdog timer is disabled if the time-out value is set to zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.

PCIE-H610 PICMG 1.3 CPU Card

**NOTE:**

When exiting a program it is necessary to disable the Watchdog Timer, otherwise the system resets.

EXAMPLE PROGRAM:

; INITIAL TIMER PERIOD COUNTER

;

W_LOOP:

;

```

MOV      AX, 6F02H      ;setting the time-out value
MOV      BL, 30         ;time-out value is 48 seconds
INT      15H

```

;

; ADD THE APPLICATION PROGRAM HERE

;

```

CMP      EXIT_AP, 1     ;is the application over?
JNE      W_LOOP        ;No, restart the application

```

```

MOV      AX, 6F02H      ;disable Watchdog Timer
MOV      BL, 0          ;
INT      15H

```

;

; EXIT ;

Appendix

F

Hazardous Materials Disclosure

F.1 Hazardous Materials Disclosure Table for IPB Products Certified as RoHS Compliant Under 2002/95/EC Without Mercury

The details provided in this appendix are to ensure that the product is compliant with the Peoples Republic of China (China) RoHS standards. The table below acknowledges the presences of small quantities of certain materials in the product, and is applicable to China RoHS only.

A label will be placed on each product to indicate the estimated “Environmentally Friendly Use Period” (EFUP). This is an estimate of the number of years that these substances would “not leak out or undergo abrupt change.” This product may contain replaceable sub-assemblies/components which have a shorter EFUP such as batteries and lamps. These components will be separately marked.

Please refer to the table on the next page.

Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Housing	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Display	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Printed Circuit Board	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Metal Fasteners	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Cable Assembly	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Fan Assembly	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Power Supply Assemblies	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Battery	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in SJ/T11363-2006

X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in SJ/T11363-2006

PCIE-H610 PICMG 1.3 CPU Card

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有“环境友好使用期限”的标签，此期限是估算这些物质“不会有泄漏或突变”的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯 醚 (PBDE)
壳体	○	○	○	○	○	○
显示	○	○	○	○	○	○
印刷电路板	○	○	○	○	○	○
金属螺帽	○	○	○	○	○	○
电缆组装	○	○	○	○	○	○
风扇组装	○	○	○	○	○	○
电力供应组装	○	○	○	○	○	○
电池	○	○	○	○	○	○

○: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。
X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。